


# iBOX-210

## Quick Installation Guide


### Inside View

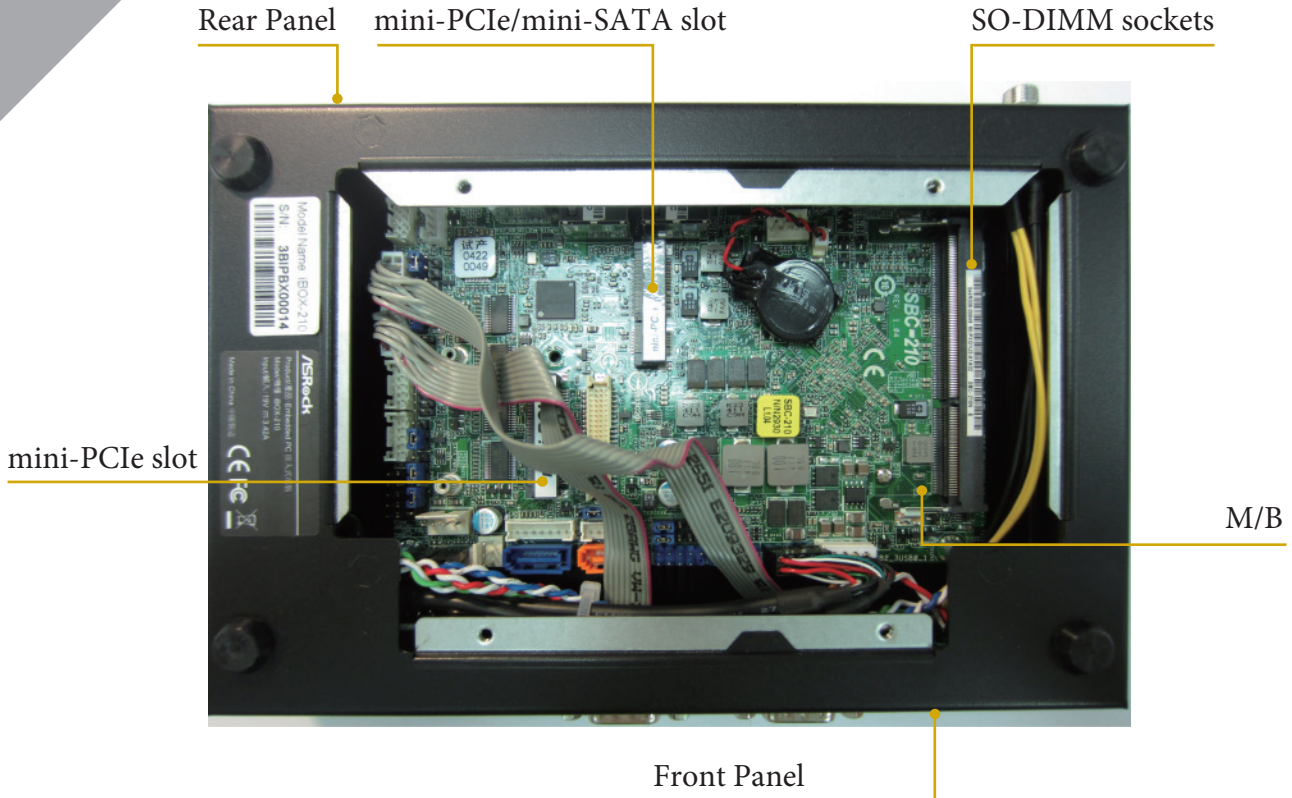

### Front View



### Rear View

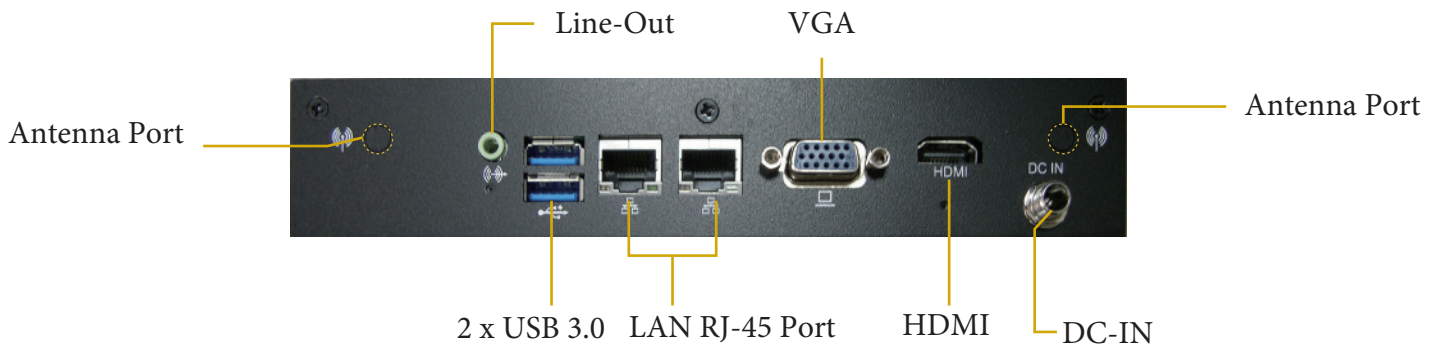



## 1. Removing the Bottom Cover

1. Remove the four screws on the bottom case.



2. Lift up and remove the top cover.

## 2. Installing the SO-DIMM

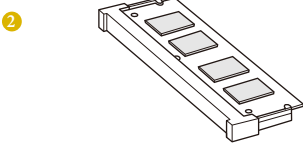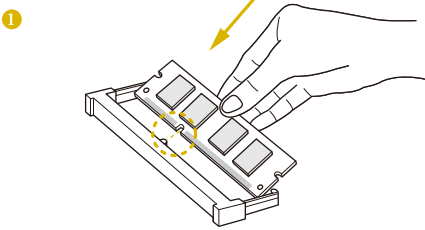

\* Please install the SO-DIMM module into the DDR3\_A2 for the first priority.

## 3. Installing the Hard Drive

1. Attach the HDD onto the bottom cover with the printed circuit board side facing down. Carefully align the mounting holes in the hard drive and the bottom cover.




2. Secure the hard drive into the place using the four screws.



3. Attach one end of the SATA 1 to 1 Power Cable to the hard drive.



4. Attach the SATA data cable and power cable to the motherboard.

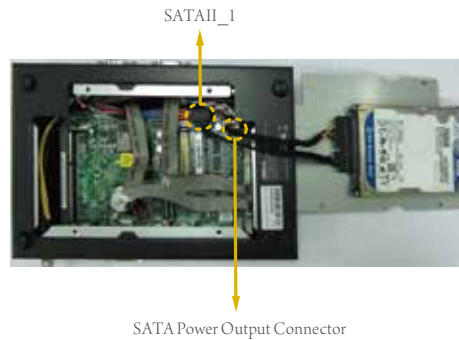

## 4. Installing the WiFi module

\*This step is optional.

1. Insert the WiFi Module Card into the mini PCI Express slot (MINI\_PCIE1).



2. Tighten the screw that holds the card in place.



## 5. Installing the WiFi antennas

\*This step is optional.

- 1 Attach the SMA Wi-Fi Antenna Cables to the WiFi Module.



2. Insert the RP-SMA Wi-Fi Antenna Connectors to the antenna ports on the rear panel. Then fasten the screw nuts to secure the antenna connectors.



2. Connect the two WiFi 2.4/5 GHz Antennas to the antenna connectors. Turn the antenna clockwise until it is securely connected.



3. Set the WiFi 2.4/5 GHz Antenna at 90-degree angle.

\*You may need to adjust the direction of the antenna for a stronger signal.



## 6. Replacing the Bottom Cover

1. Replace the top cover.
2. Secure the four screws at the bottom.



## Note

For more details on the hardware installation, please refer to the User Manual in the support CD.

The terms HDMI™ and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE