

The ASRock logo is positioned in the top left corner. It features the brand name 'ASRock' in a bold, green, sans-serif font, with a registered trademark symbol (®) to the upper right of the 'k'.

ASRock®

—Industrial—



iBOX Ultra 200 Series

User Manual

Version 1.0

Published January, 2026

Copyright©2026 ASRock Industrial Inc. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Industrial Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Industrial. ASRock Industrial assumes no responsibility for any errors or omissions that may appear in this documentation.

To the extent permitted by law, with respect to the contents of this documentation, ASRock Industrial does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASRock Industrial, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Industrial has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRockInd Tel : +886-2-28965588 ext.123 (Standard International call charges apply)

Replaceable batteries

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

This product is intended to be supplied by a Listed Power Adapter or DC power source marked "L.P.S." (or "Limited Power Source"), rated 19 Vdc, 6.32 A minimum, Tma = 45 degree C minimum. All interior servicing is to be performed by qualified skilled personnel only.

Button Battery Safety Notice

 WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	


- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2032
- Battery voltage: 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- This product contains an irreplaceable battery.
- This icon indicates that a swallowed button battery can cause serious injury or death. Please keep batteries out of sight or reach of children.



CAUTION (or Warning)

Hot surface!
Do not touch!

The equipment should only be installed in a restricted access area.

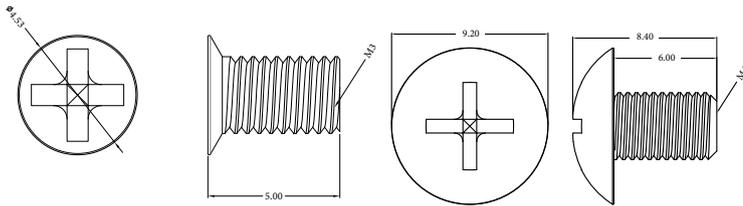

DIN Rail/Wall Mount: M3x5mm Screws (for securing the mounting bracket(s) to the chassis)

VESA Mount: M4x6mm Screws (for securing the VESA bracket to the monitor)

The maximum allowable load for the VESA mount is 4 kg.

This product should be connected by means of a power cord to a socket-outlet with earthing connection.



The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



ASRockInd follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRockInd product is in line with global environmental regulations. In addition, ASRockInd disclose the relevant information based on regulation requirements.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Contact Information

If you need to contact ASRock Industrial or want to know more about ASRock Industrial, you're welcome to visit ASRock Industrial's website at <https://www.asrockind.com>; or you may contact your dealer for further information.

ASRock Industrial Incorporation

Email: Info_ipc@asrockind.com

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Product Specifications	2
1.3 Block Diagram	4
Chapter 2 Product Overview	5
2.1 Front View	5
2.2 Rear View	6
2.3 Inside View	7
Chapter 3 Hardware Installation	8
3.1 How to Remove the Bottom Case	8
3.2 How to Install the Memory Modules	9
3.3 How to Install the WiFi Module	10
3.4 How to Install the M.2 SSD (Type 2280)	11
3.5 How to Remove Type 2280 and Install Type 2242	12
3.6 How to Install the M.2 SSD (Type 2242)	13
3.7 How to Install the 2.5-inch Hard Drive	14
3.8 How to the Membranes	16
3.9 How to Install the VESA Bracket	17
3.10 How to Install the Wall Mounting Brackets	18
3.11 How to Install the Din Rail Mounting Bracket	19
3.12 How to Install the Rubber Feet	20
3.13 Positions	21

Chapter 4 Motherboard	22
4.1 Motherboard Layout	22
4.2 Onboard Headers and Connectors	24
4.3 Expansion Slots (M.2 Slots)	28
Chapter 5 UEFI SETUP UTILITY	29
5.1 Introduction	29
5.1.1 Entering BIOS Setup	29
5.1.2 UEFI Menu Bar	30
5.1.3 Navigation Keys	31
5.2 Main Screen (Advanced Mode)	32
5.3 Advanced Screen	33
5.3.1 CPU Configuration	34
5.3.2 Chipset Configuration	37
5.3.3 Storage Configuration	39
5.3.4 Super IO Configuration	41
5.3.5 AMT Configuration	42
5.3.6 ACPI Configuration	43
5.3.7 USB Configuration	44
5.3.8 Power Configuration	45
5.3.9 Trusted Computing	46
5.4 Hardware Health Event Monitoring Screen	48
5.5 Security Screen	49
5.6 Boot Screen	50
5.7 Exit Screen	51

Chapter 6 Software Support

52

6.1 Install Operating System

52

Chapter 1 Introduction



Because the hardware specifications might be updated, the content of this documentation will be subject to change without notice.

1.1 Package Contents

- 1 x iBOX Ultra 200 Series
- 1 x 19V Power Adapter
- 1 x SATA Cable
- 1 x M.2 Screw & Standoff
- 1 x Wall Mount Kits
- 1 x Rubber Foot Kits
- 1 x HDD Bracket Kits
- Quick Installation Guide
- Power cord (by request)
- Cooling kit (by request)
- Din Rail Kit & screw package (by request)



If any items are missing or appear damaged, contact your authorized dealer.



The barebone system does not include memory, WiFi module, hard drive and SSD.

1.2 Product Specifications

Processor System

CPU	Intel® Core™ Ultra processors (Arrow Lake-H) iBOX-255H (Ultra 7 255H, 6P+8E) iBOX-225H (Ultra 5 225H, 4P+8E)
Chipset	MCP
BIOS	AMI SPI 256 Mbit

Memory

Technology	Dual Channel DDR5 6400MHz
Capacity	96GB (48GB per DIMM)
Socket	2 x 262-pin SO-DIMM

Graphics

Controller	Intel® Graphics
HDMI	HDMI 2.1 TMDS Max resolution up to 4096x2160@60Hz
DisplayPort	DisplayPort 2.1/ 1.4a, DP++ Max resolution up to 4096x2160@60Hz
MultiDisplay	Quad-Display (Included 2 outputs from Type-C)

Expansion Slot

M.2	1 x M.2 (Key E, 2230) with PCIe x1, USB 2.0 and CNVi for Wireless
-----	---

Audio

Interface	Realtek ALC256, High Definition Audio
-----------	---------------------------------------

Ethernet

Controller/ Speed	LAN1: Intel® I226L_M with 10/100/1000/2500 Mbps, supports vPro LAN2: Intel® I226V with 10/100/1000/2500 Mbps
Connector	2 x RJ-45

Storage

M.2	1 x M.2 (KEY M, 2242) with PCIe Gen4 x4 for SSD 1 x M.2 (KEY M, 2242/2280) with PCIe Gen4 x4 for SSD
SATA	1 x SATA3.0 (6.0 Gb/s)
RAID	Intel® VMD RAID 0/1 **supported by identical interface (PCIe) PCIe interface: 2* M.2 Key M

Front I/O

USB	1 x USB 3.2 Gen2 (Type-A) 1 x USB4/Thunderbolt™ 4 (5V/3A, Supports DP 2.1 display output) 1 x USB3.2 Gen2 x2 (Type-C, 5V/3A, Supports DP1.4a display output) 2 x USB 2.0 *For Thunderbolt support, please refer to support list.
Audio	1 (headphone & microphone jack)
COM	1 x COM (RS-232/422/485)

Rear I/O

HDMI	2 x HDMI 2.1 TMDS
Ethernet	2 x 2.5 Gigabit LAN
USB	2 x USB 3.2 Gen2 (Type-A)
DC Jack	1
OOB	Supports Remote Power On/Off/Reset (BOM Optional)

Watchdog Timer

Output Interval	From Super I/O to drag RESETCON# 256 Segments, 0, 1, 2, ...255sec
-----------------	--

Power Requirements

Input PWR	12V~24V DC-In Jack
Power On	AT/ATX Supported - AT : Directly PWR on as power input ready - ATX : Press button to PWR on after power input ready

Environment

Operating Temp	-20°C ~ 50°C with air flow 0.5~0.8 m/s (with extended temp. peripherals)
Storage Temp	-40° C – 85° C
Operating Humidity	5% ~ 90%
Storage Humidity	5% ~ 90%


Mechanical

Construction	Aluminum housing
Mounting	VESA mount/Wall mount/Din-rail
Dimensions (L x W x H)	200 x 176.6 x 53.6mm (7.87" x 6.95" x 2.11")
Weight	Net Weight: 3Kg

Others

OS Support	Windows 10/11
TPM	Intel® PTT
Certifications	CE, FCC
Packing List	1 x 19V Power Adapter 1 x Wall mount kit


1.3 Block Diagram

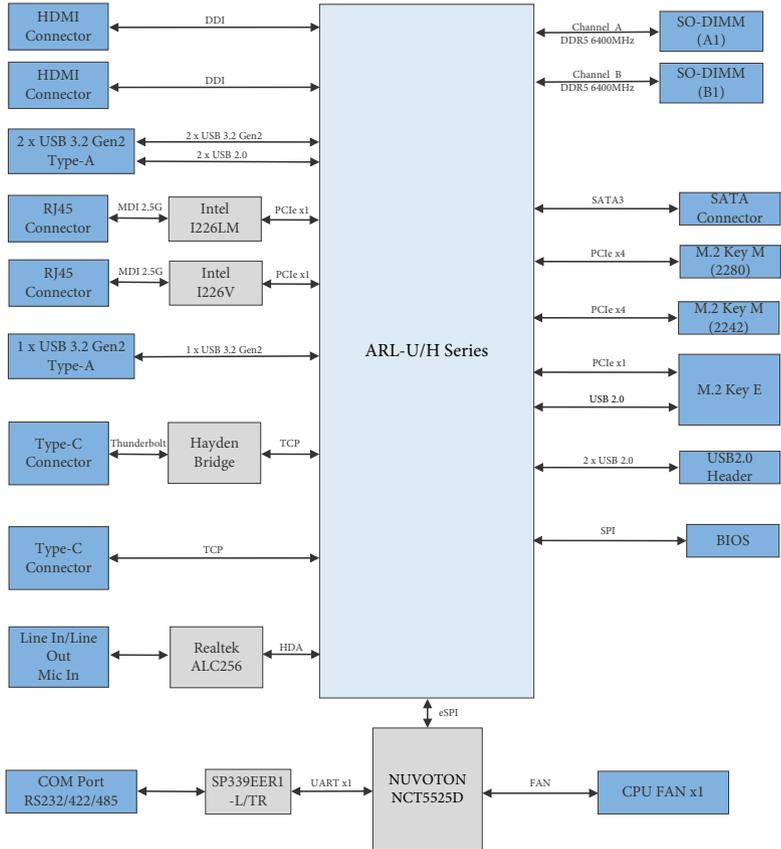

Chapter 2 Product Overview

This chapter provides diagrams showing the location of important components of the iBOX Ultra 200 Series.

2.1 Front View

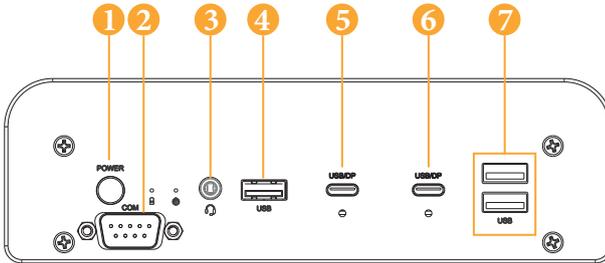

No.	Description
1	Power Button
2	COM Port (RS-232/422/485)*
3	Audio (Mic-in/headphone)
4	USB 3.2 Gen2 (Type-A)
5	USB4/Thunderbolt™ (5V/3A, supports DP2.1a display output)
6	USB 3.2 Gen2 x2 (Type-C, 5V/3A, supports DP1.4a display output)
7	2 x USB 2.0 (Type-A)




*The iBOX Ultra 200 Series supports RS232/422/485 on COM port. Please refer to the table below for the pin definition. In addition, COM port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our manual for details.

COM Port Pin Definition


Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	NA
4	DTR	RX-	NA
5	GND	GND	GND
6	DSR	NA	NA
7	RTS	NA	NA
8	CTS	NA	NA
9	NA	NA	NA

2.2 Rear View

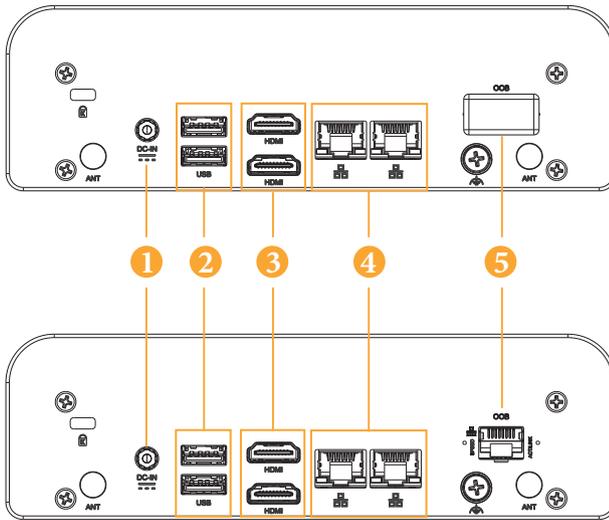



No.	Description
1	DC Jack
2	2 x USB 3.2 Gen2 (Type-A)
3	2 x HDMI (2.1 TMDS)
4	2 x RJ-45 (2.5G LAN)**
5	Out-of-Band Management (Optional)

** There are two LEDs on the LAN port. Please refer to the table below for the LAN port LED indications.

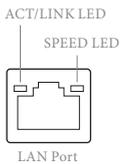

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps/1Gbps connection
On	Link	Green	2.5Gbps connection

2.3 Inside View

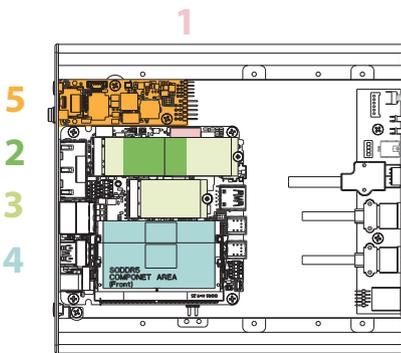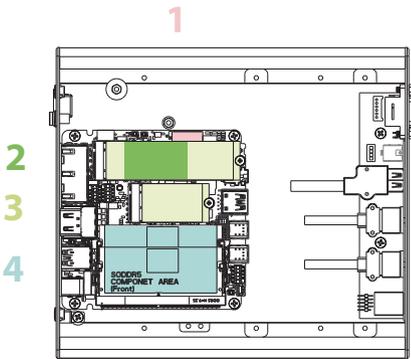

No.	Description
1	SATA 3.0 Connector
2	Wifi Module Slot (2230)
3	M.2 Slots (2242/2280)
4	SO-DIMM Slots
5	Out-of-Band Management (Optional)




SO-DIMM memory, hard drive and mSATA SSD are not included with this system.

Chapter 3 Hardware Installation

This chapter helps you install or remove important components.

3.1 How to Remove the Bottom Case

1. Remove the four screws from the bottom case.
2. Then lift up and remove the bottom case.

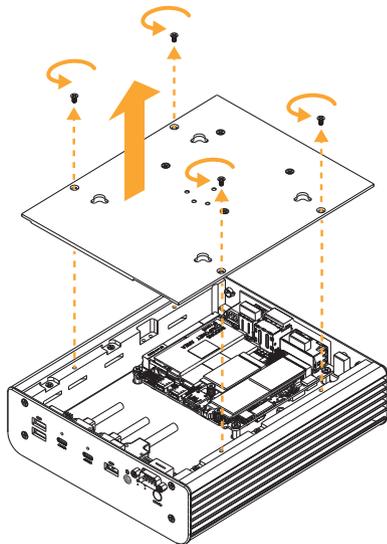

3.2 How to Install the Memory Modules




1. The iBOX Ultra 200 Series requires DDR5 SO-DIMM (1.1V).
2. For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR5 SO-DIMM pairs.




The SO-DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.


1. Carefully insert the SO-DIMM memory modules into the slot at a 30-degree angle.

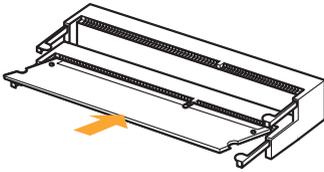

2. Push down until the module snaps into place.
3. Attach the thermal pad to the module and remove the membranes.

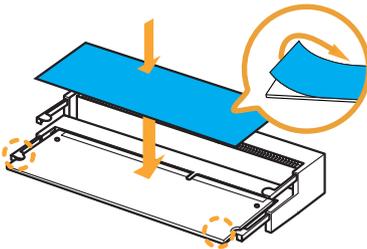


4. Reinsert the module by repeating steps 1 and 2.

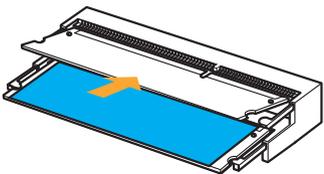


3.3 How to Install the WiFi Module


1. Locate the WiFi Module slot on the motherboard.

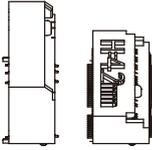


2. Carefully insert the WiFi Module into the slot at a 30-degree angle.

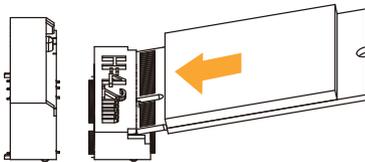


3. Tighten the screw to secure the WiFi Module to the motherboard.

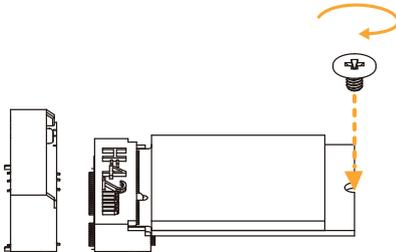


3.4 How to Install the M.2 SSD (Type 2280)

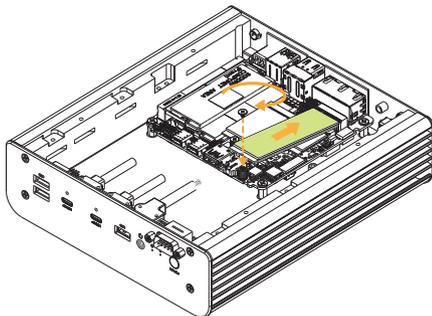


1. Locate the M.2 slot on the motherboard.

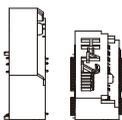

2. Carefully insert the M.2 SSD (Type 2280) into the slot at a 30-degree angle.

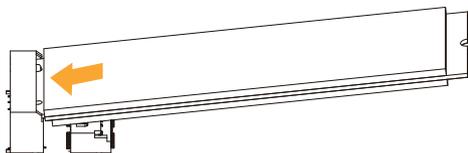


3. Tighten the screw to secure the M.2 SSD (Type 2280) to the motherboard.

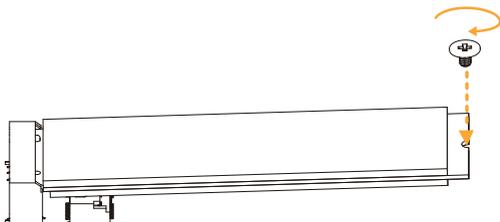


3.5 How to Remove Type 2280 and Install Type 2242


1. Release the screw and carefully remove the M.2 SSD (Type 2280) at a 30-degree angle.

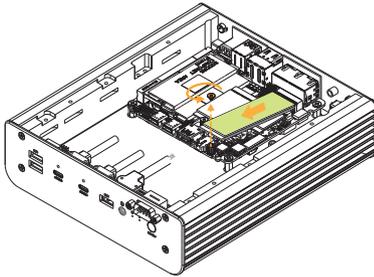


2. Locate the M.2 slot on the motherboard. Install the standoff.

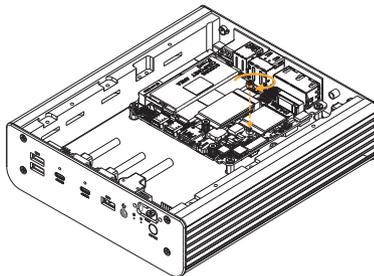

3. Carefully insert the M.2 SSD (Type 2242) into the slot at a 30-degree angle and tighten the screw to secure the M.2 SSD to the motherboard.

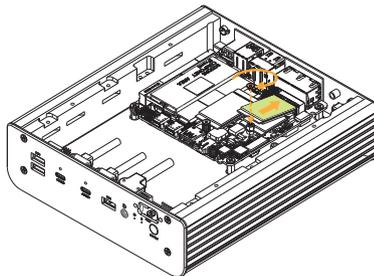


3.6 How to Install the M.2 SSD (Type 2242)

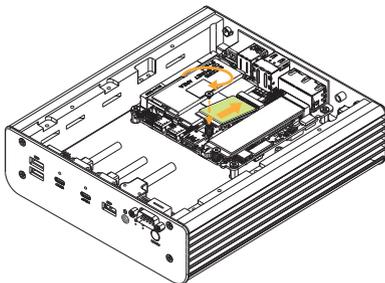


1. Locate the M.2 slot on the motherboard.



2. Carefully insert the M.2 SSD (Type 2242) into the slot at a 30-degree angle.

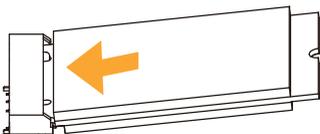


3. Tighten the screw to secure the M.2 SSD (Type 2242) to the motherboard.

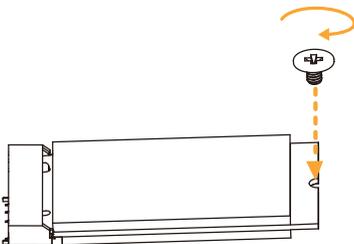


3.7 How to Install the 2.5-inch Hard Drive


1. Remove the four screws from the bottom case. Then lift up and remove the bottom case.

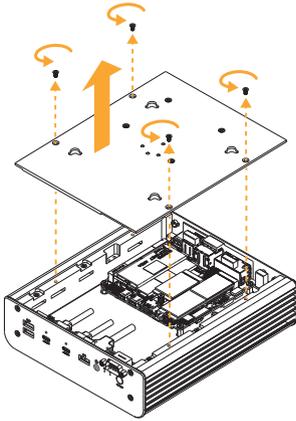


2. Connect the SATA data and power cables to the HDD. Secure the bracket and the Mylar sheet to the drive using four screws.

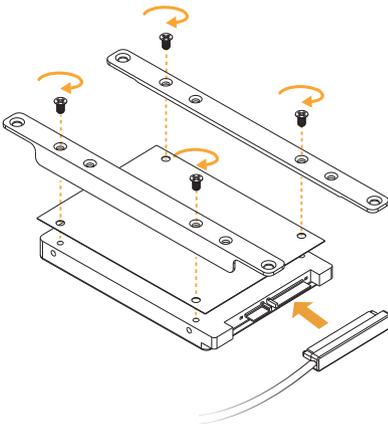

- Secure the HDD cage to the iBOX Ultra 200 Series using four screws.
- Connect the SATA Cable to the connector.

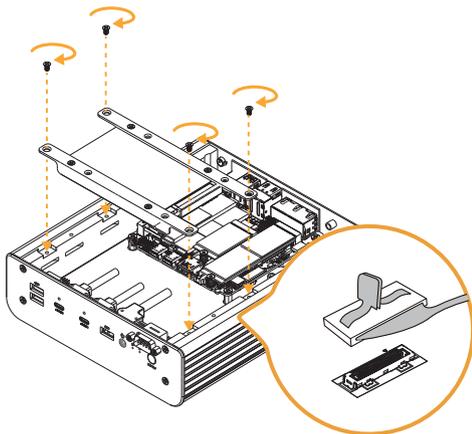


- Then reinstall the bottom case.

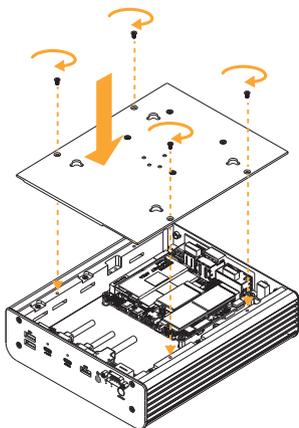

3.8 How to the Membranes


Please note to remove the membranes from the heatsinks before reinstall the bottom case.

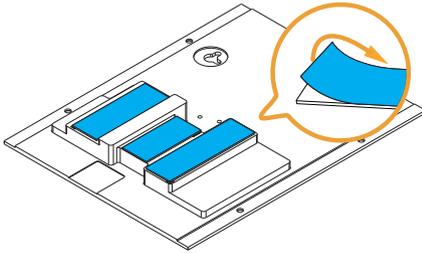

3.9 How to Install the VESA Bracket

Secure four screws to the rear of the compatible display. Then mount the iBOX Ultra 200 Series by sliding it into place.


*Choose mounting holes depending on the mounting hole pattern of your LCD screen (75 mm × 75 mm or 100 mm × 100 mm).

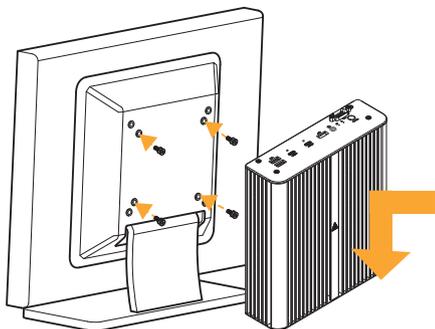


The maximum allowable load for the VESA mount is 4 kg.

3.10 How to Install the Wall Mounting Brackets


1. Remove the four screws from the base of the iBOX Ultra 200 Series.

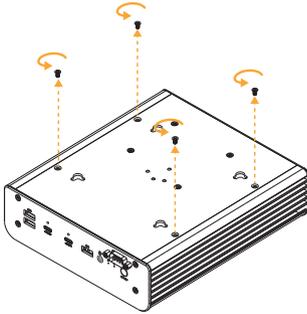

2. Attach the wall mounting brackets to the base of the iBOX Ultra 200 Series and secure them with screws.

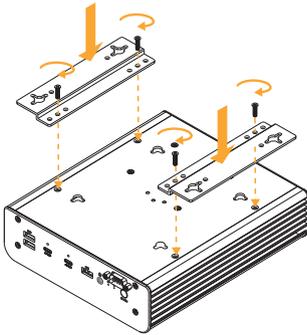


Dimension of the iBOX Ultra 200 Series with Wall Mounting Brackets Installed

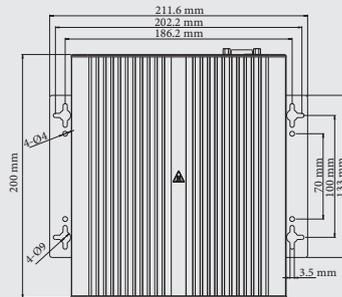

3.11 How to Install the Din Rail Mounting Bracket


1. Attach the Din Rail Bracket to the base of the iBOX Ultra 200 Series.
2. Secure it with two screws.

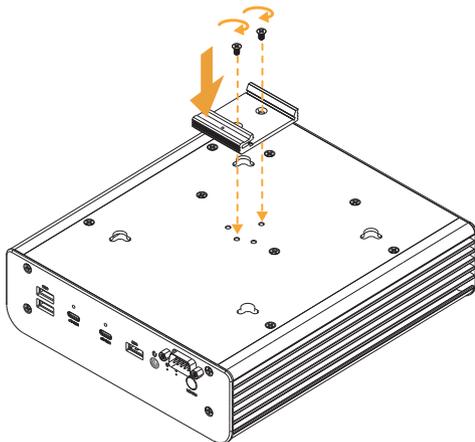


*Din Rail Bracket is not provided by default.
Please purchase it separately if needed.*

3.12 How to Install the Rubber Feet

1. Remove the four screws from the base of the iBOX Ultra 200 Series.

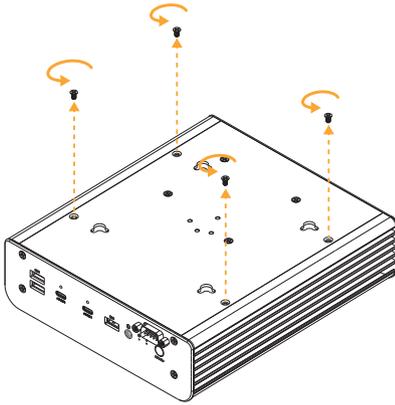


2. Attach rubber feet to the base of the iBOX Ultra 200 Series and secure them with four screws.

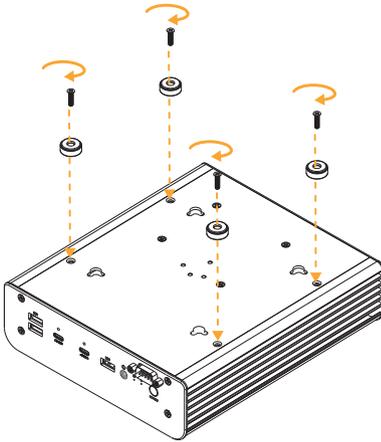

3.13 Positions

 
The iBOX Ultra 200 Series can be placed in vertical or horizontal position.



Horizontal position



Vertical position

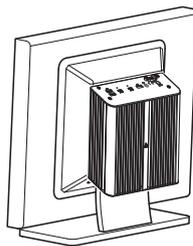

VESA-mounted




Please note that keeping the iBOX Ultra 200 Series in a vertical position will ensure better cooling performance.

Chapter 4 Motherboard


4.1 Motherboard Layout

Top:

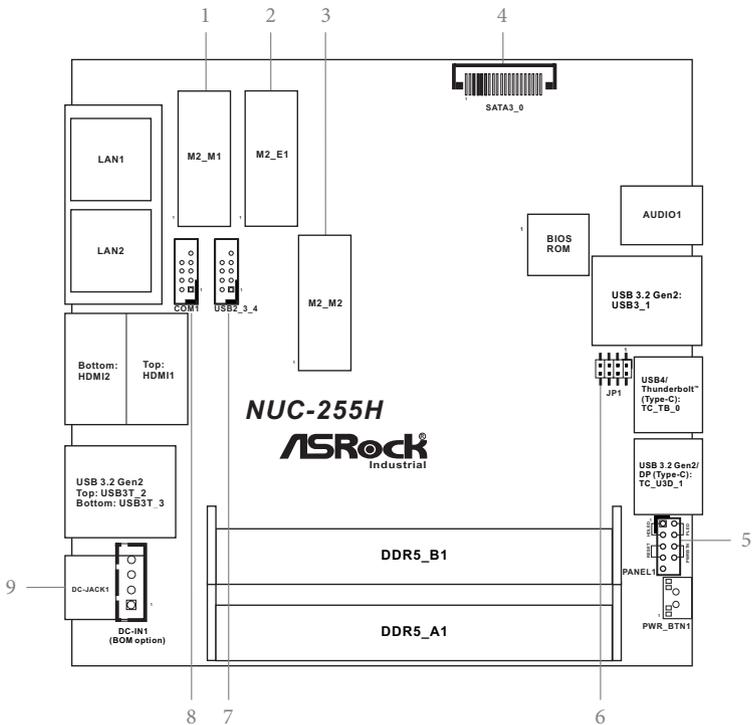

- 1 : M.2 Key-M Socket (M2_M1)
- 2 : M.2 Key-E Socket (M2_E1)
- 3 : M.2 Key-M Socket (M2_M2)
- 4 : SATA3 Port (SATA3_0)
- 5 : System Panel Header (PANEL1)
- 6 : JP1 Header (JP1)
- 7 : USB 2.0 Connector (USB2_3_4)
- 8 : COM Port Header (COM1) (RS232/422/485)
- 9 : 4-pin DC-in Wafer (DC_IN1) (BOM option)

Back:

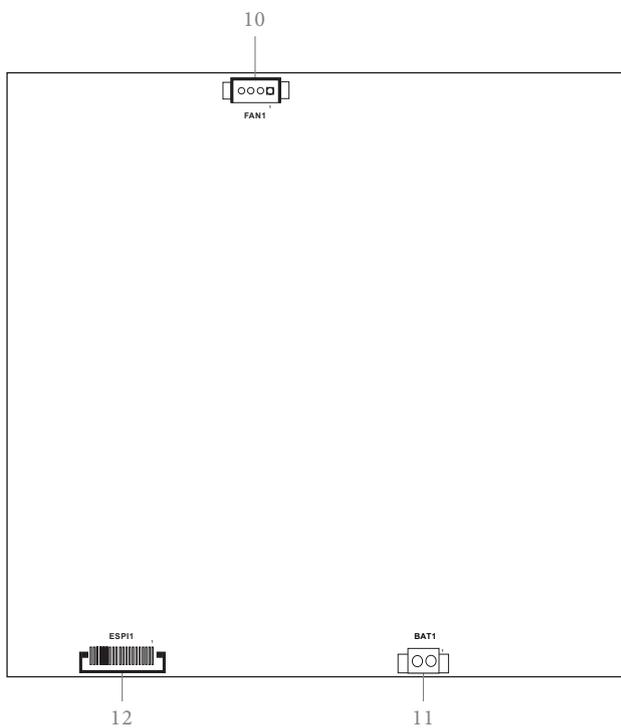

Back Side :

10 : Fan Connector (FAN1)

11 : Battery Connector (BAT1)

12 : ESPI Connector (ESPI)

4.2 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard!

SATA3 Port

(SATA3_0)

(see p. 22, No. 4)




Pin	Signal Name
1	GND
2	SATA_A+
3	SATA_A-
4	GND
5	GND
6	SATA_B-
7	SATA_B+
8	GND
9	GND
10	GND
11	NA
12	+5V
13	+5V
14	+5V
15	+5V
16	+5V
17	NA
18	GND
19	GND
20	GND

The Serial ATA3 (SATA3) connector supports SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

System Panel Header

(9-pin PANEL1)

 (see p. 22, No. 5)



Pin	Signal Name	Signal Name	Pin
1	HDLED+	PLED+	2
3	HDLED-	PLED-	4
5	GND	PWRBTN#	6
7	RESET#	GND	8
9	GND		10

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S3 sleep state. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

 
Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

JP1 Header

(8-pin JP1)

(see p. 22, No. 6)




Pin	Signal Name
JP1_13	Reserved JP for AT (Default)
JP1_68	Reserved JP for Clear CMOS (Default)
JP1_12	SIO AT Mode
JP1_46	Clear CMOS
JP1_57	DACC* (Default)

* Auto clear CMOS when system boot improperly.

USB 2.0 Connector

(9-pin USB2_3_4)

 (see p. 22, No. 7)




Pin	Signal Name	Signal Name	Pin
1	USB_PWR	USB_PWR	2
3	-A	-B	4
5	+A	+B	6
7	GND	GND	8
9	DUMMY		10

*Only support from R2.00 version.

COM Port Header (RS232/422/485)

(9-pin COM1)

 (see p. 22, No. 8)



Pin	Signal Name	Signal Name	Pin
1	DDCD#1	RRXD1	2
3	TTXD1	DDTR#1	4
5	GND	DDSR#1	6
7	RRTS#1	CCTS#1	8
9	DUMMY		10

*Only support from R2.00 version.



This motherboard supports RS232/422/485 on COM1 port. Please refer to the table below for the pin definition. In addition, COM1 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to page 31 for details.


COM1 Port Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	NA
4	DTR	RX-	NA
5	GND	GND	GND
6	DSR	NA	NA
7	RTS	NA	NA
8	CTS	NA	NA
9	NA	NA	NA

4-pin DC-In Wafer (BOM option)

(4-pin DC-IN1)

 (see p. 22, No. 9)




Pin	Signal Name
1	GND
2	DC Input
3	DC Input
4	GND

Back Side :**Fan Connector**

(4-pin FAN1)

 (see p. 23, No. 10)



Pin	Signal Name
1	GND
2	+5V
3	FAN_SPEED
4	FAN_SPEED_CONTROL

Battery Connector

(2-pin BAT1)

(see p. 23, No. 11)



Pin	Signal Name
1	+BAT
2	GND

ESPI Connector

(20-pin ESP1)

(see p. 23, No. 12)



Pin	Signal Name
1	GND
2	ESPI_CLK
3	GND
4	ESPI_CS#
5	ESPI_RESET#
6	GND
7	+3V
8	GND
9	Internal use
10	Internal use
11	ESPI_IO0
12	ESPI_IO1
13	ESPI_IO2
14	ESPI_IO3
15	GND
16	+3VSB
17	Internal use
18	Internal use
19	ESPI_ALERT#
20	GND

4.3 Expansion Slots (M.2 Slots)

There are three M.2 sockets on the ASRockInd *NUC-255H / NUC-225H* motherboard.

M.2 sockets:

- 1 x M.2 (Key E, 2230) with PCIe x1, USB 2.0 and CNVi for Wireless
- 1 x M.2 (KEY M, 2242) with PCIe Gen4 x4 for SSD
- 1 x M.2 (KEY M, 2242/2280) with PCIe Gen4 x4 for SSD

M.2 Key-E Socket
(M2_E1)

Pin	Signal	Signal	Pin
1	GND	+3.3V	2
3	USB_D+	+3.3V	4
5	USB_D-	NA	6
7	GND	NA	8
9	NA	NA	10
11	NA	NA	12
13	NA	NA	14
15	NA	NA	16
17	NA	GND	18
19	NA	NA	20
21	NA	NA	22
23	NA		
		NA	32
33	GND	NA	34
35	PETp	NA	36
37	PETn	NA	38
39	GND	NA	40
41	PERp	NA	42
43	PERn	NA	44
45	GND	NA	46
47	PEFCLKp	NA	48
49	PEFCLKn	SUSCLK	50
51	GND	PERST0#	52
53	CLKREQ#	W_DISABLE1#	54
55	NA	W_DISABLE2#	56
57	GND	NA	58
59	NA	NA	60
61	NA	NA	62
63	GND	NA	64
65	NA	NA	66
67	NA	NA	68
69	GND	NA	70
71	NA	+3.3V	72
73	NA	+3.3V	74
75	GND		

M.2 Key-M Socket
(M2_M1)

Pin	Signal	Signal	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PERn3	NA	6
7	PERp3	NA	8
9	GND	SATA_LED	10
11	PETn3	+3.3V	12
13	PETp3	+3.3V	14
15	GND	+3.3V	16
17	PERn2	+3.3V	18
19	PERp2	NA	20
21	GND	NA	22
23	PETn2	NA	24
25	PETp2	NA	26
27	GND	NA	28
29	PERn1	NA	30
31	PERp1	GND	32
33	GND	USB_D+	34
35	PETn1	USB_D-	36
37	PETp1	GND	38
39	GND	NA	40
41	PERn0	NA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETp0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	NA	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

M.2 Key-M Socket
(M2_M2)

Pin	Signal	Signal	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PERn3	NA	6
7	PERp3	NA	8
9	GND	SATA_LED	10
11	PETn3	+3.3V	12
13	PETp3	+3.3V	14
15	GND	+3.3V	16
17	PERn2	+3.3V	18
19	PERp2	NA	20
21	GND	NA	22
23	PETn2	NA	24
25	PETp2	NA	26
27	GND	NA	28
29	PERn1	NA	30
31	PERp1	GND	32
33	GND	NA	34
35	PETn1	NA	36
37	PETp1	GND	38
39	GND	NA	40
41	PERn0	NA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETp0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	NA	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	NA	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

* Pin34 and Pin36 are defined as USB 2.0 signal to support Key-M to Key-B extension card.

Chapter 5 UEFI SETUP UTILITY

5.1 Introduction

ASRock Industrial UEFI (Unified Extensible Firmware Interface) is a BIOS utility which offers tweak-friendly options in an advanced viewing interface. The UEFI system works with a USB mouse and offers users a faster, sleeker experience.

This BIOS utility can perform the Power-On Self-Test (POST) during system startup, record hardware parameters of the system, load operating system, and so on. The battery on the motherboard supplies the power needed to the CMOS when the system power is turned off, and the values configured in the UEFI utility are kept in the CMOS.

Please note that inadequate BIOS settings may cause system instability, malfunction or boot failure. We strongly recommend that you do not alter the UEFI default configurations or change the settings only with the assistance of a trained service person.

If the system becomes unstable or fails to boot after you change the setting, try to clear the CMOS values and reset the board to default values. See your motherboard manual for instructions.

5.1.1 Entering BIOS Setup

You may run the UEFI Setup Utility by pressing <F2> or <Delete> right after you power on the computer; otherwise, the Power-On-Self-Test (POST) will continue with its test routines. If you wish to enter the UEFI Setup Utility after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.

This setup guide explains how to use the UEFI Setup Utility to configure all the supported system. The screenshots in this manual are for reference only. UEFI Settings and options may vary owing to different BIOS release versions or CPU installed. Please refer to the actual BIOS version of the motherboard you purchased for detailed screens, settings and options.

5.1.2 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	For setting system time/date information
Advanced	For advanced system configurations
H/W Monitor	Displays current hardware status
Security	For security settings
Boot	For configuring boot settings and boot priority
Exit	Exit the current screen or the UEFI Setup Utility



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions for reference purpose only, and may vary from the latest BIOS and do not exactly match what you see on your screen.

5.1.3 Navigation Keys


Use <←> key or <→> key to choose among the selections on the menu bar, and use <↑> key or <↓> key to move the cursor up or down to select items, then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.

Please check the following table for the descriptions of each navigation key.

Navigation Key(s)	Description
+ / -	To change option for the selected items
<Tab>	Switch to next function
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

5.2 Main Screen (Advanced Mode)

When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

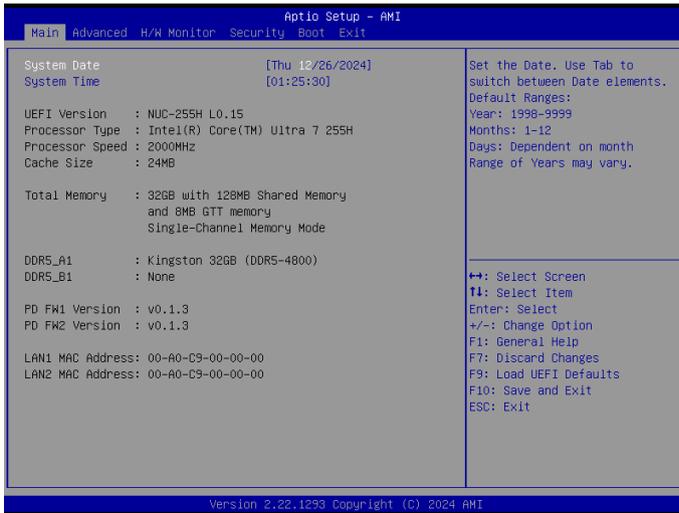

Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen. Options may also vary depending on the features of your motherboard.

5.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Super IO Configuration, AMT Configuration, ACPI Configuration, USB Configuration, Power Configuration and Trusted Computing.




Setting wrong values in this section may cause the system to malfunction.

Instant Flash (BIOS)

Instant Flash (BIOS) is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MSDOS or Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, and then you can update your UEFI in only a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash (BIOS) utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

5.3.1 CPU Configuration

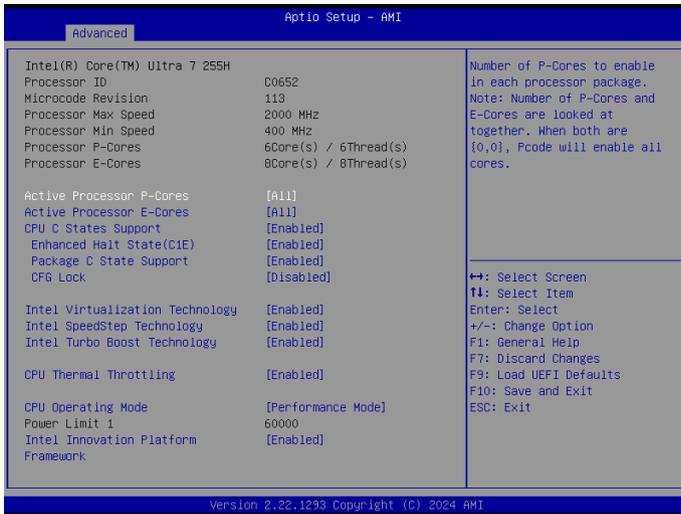

Active Processor P-Cores

This allows you to select the number of cores to enable in each processor package.

Active Processor E-Cores

This allows you to select the number of E-Cores to enable in each processor package.

NOTE: Number of P-Cores and E-Cores are looked at together. When both are {0,0}, Pcode will enable all cores.

CPU C States Support

This allows you to enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Configuration options: [Enabled] [Disabled]

Enhanced Halt State (C1E)

The option allows you to enable Enhanced Halt State (C1E) for lower power consumption.

Configuration options: [Enabled] [Disabled]

Package C State Support

The option allows you to enable CPU, PCIe, Memory, Graphics C State Support for power saving.

Configuration options: [Auto] [Enabled] [Disabled]

CFG Lock

The option allows you to enable or disable the CFG Lock.

Configuration options: [Enabled] [Disabled]

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Configuration options: [Enabled] [Disabled]

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology is set to [Disabled].

Configuration options: [Enabled] [Disabled].

If you install Windows® 10 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state. The default value is [Enabled].

Configuration options: [Enabled] [Disabled]

CPU Thermal Throttling

CPU Thermal Throttling allows you to enable CPU internal thermal control mechanisms to keep the CPU from overheating.

Configuration options: [Enabled] [Disabled]

CPU Operating Mode

If working at [Normal Mode], M/B works with the default Smart Fan Setting and can provide better cooler experience. If [Performance Mode] is selected, CPU can provide optimal performance, but the CPU fan speed will work at higher speed.

Configuration options: [Normal Mode] [Performance Mode]

Power Limit 1


Power Limit 1 in Milli Watts. BIOS will round to the nearest 1/8W when programming. 0=no custom override. For 12.50W, enter 12500. Overclocking SKU: Value must be between Max and Min Power Limits (specified by PACKAGE_POWER_SKU_MSR). Other SKUs: This value must be between Min Power Limit and Processor Base Power (TDP) Limit.

Intel innovation Platform Framework

Enable/Disable Intel innovation Platform Thermal Framework. Utilize the Intel DTT to monitor package temperature and dynamically tune Power Limit 1 to optimize performance based on thermal headroom. You must install Intel Dynamic Tuning Technology driver (Windows Only) to trigger this function, otherwise the system will be at risk of overheating.

*If you are using a Linux system, you should disable the Intel Innovation Platform Thermal Framework, as it is only supported on Windows systems.

5.3.2 Chipset Configuration

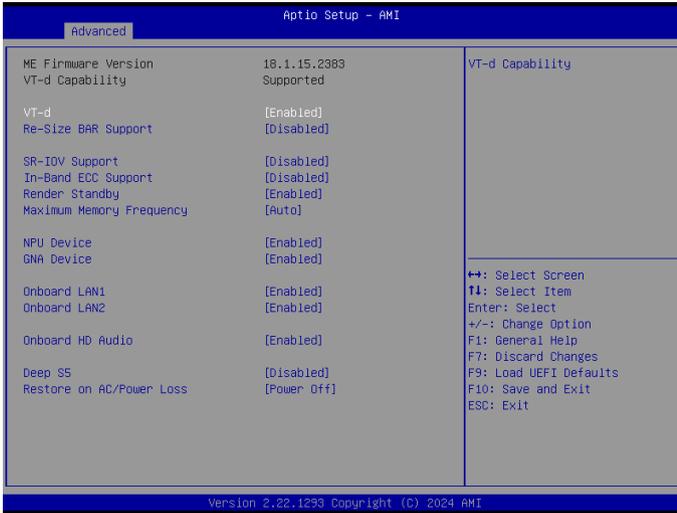

VT-d

Intel® Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

Configuration options: [Enabled] [Disabled]

Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR Support.

Configuration options: [Enabled] [Disabled]

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.

Configuration options: [Enabled] [Disabled]

In-Band ECC Support

Enable/Disable In-Band ECC. Will be enabled if memory has symmetric configuration.

Render Standby

Power down the render unit when the GPU is idle for lower power consumption.

Configuration options: [Enabled] [Disabled]

Maximum Memory frequency

Maximum Memory Frequency Selections in MHz.

NPU Device

This allows you to enable or disable NPU (Neural Processing Unit) Device.

Configuration options: [Enabled] [Disabled]

GNA Device

This allows you to enable or disable GNA Device.

Configuration options: [Enabled] [Disabled]

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Configuration options: [Enabled] [Disabled]

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Configuration options: [Enabled] [Disabled]

Onboard HD Audio

This allows you to enable or disable the onboard HD audio.

Configuration options: [Enabled] [Disabled]

Deep S5

Mobile platforms support Deep S5 in DC only and desktop platforms support Deep S5 in AC only. The default value is [Disabled].

Configuration options: [Auto] [Disabled]


Restore on AC/Power Loss

The option allows you to select the power state after a power failure.

[Power Off] sets the power to remain off when the power recovers.

[Power On] sets the system to start to boot up when the power recovers.

5.3.3 Storage Configuration

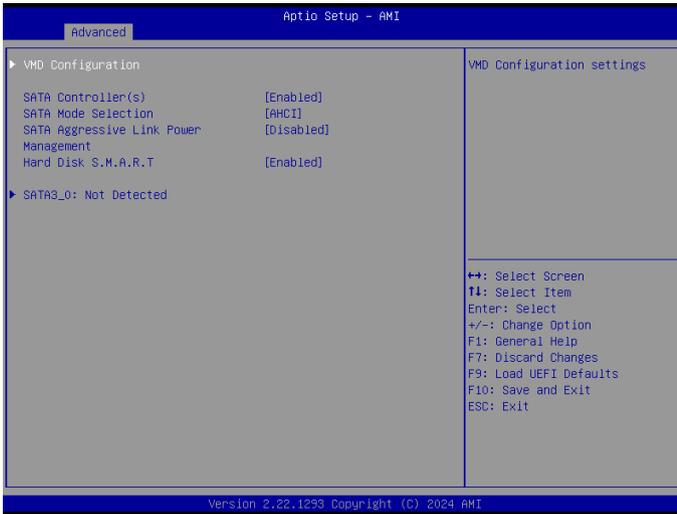

VMD Configuration

Press [Enter] to view the followings items for VMD configurations.

SATA Controller(s)

The option allows you to enable or disable the SATA controllers.

Configuration options: [Enabled] [Disabled]

SATA Mode Selection

AHCI supports new features that improve performance.

Configuration option: [AHCI]



AHCI (Advanced Host Controller Interface) supports NCQ and other new features that will improve SATA disk performance.

SATA Aggressive Link Power Management

SATA Aggressive Link Power Management allows SATA devices to enter a low power state during periods of inactivity to save power. It is supported only by AHCI mode.


Configuration options: [Enabled] [Disabled]

Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

Configuration options: [Enabled] [Disabled]

5.3.4 Super IO Configuration

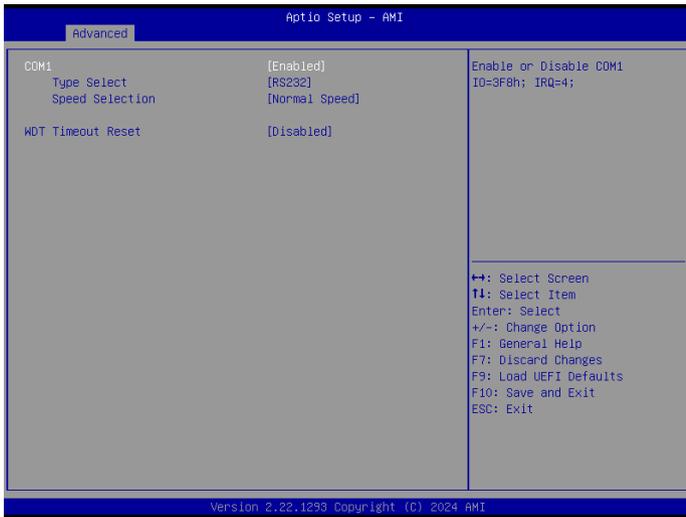

COM1

Use this to set parameters of COM1.

Type Select


Use this to set COM1 port type: [RS232], [RS422] or [RS485].

WDT Timeout Reset

Use this to set the Watch Dog Timer.

Configuration options: [Enabled] [Disabled]

5.3.5 AMT Configuration

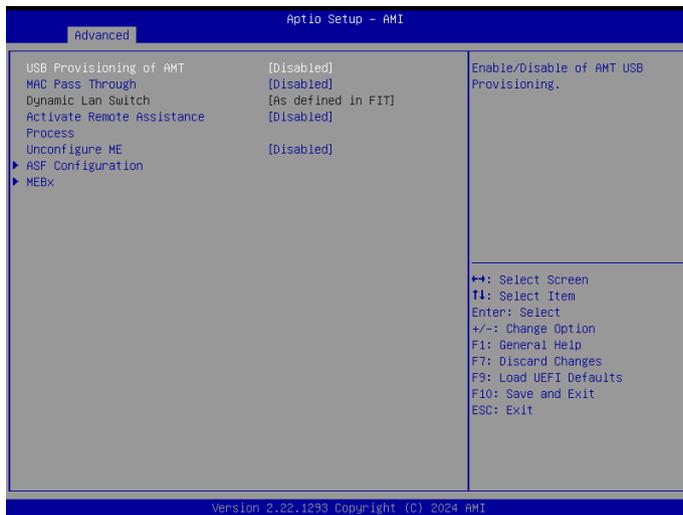

USB Provisioning of AMT

Use this to enable or disable AMT USB Provisioning. The default is [Disabled].

MAC Pass Through

The option enables or disables MAC Pass Through function.

Dynamic Lan Switch

This allows switching AMT support from Integrated LAN to Discrete LAN.

Activate Remote Assistance Process

Trigger CIRA boot. The default is [Disabled].

Un-Configure ME

Un-Configure ME without password. The default is [Disabled].


ASF Configuration

The option allows you to configure Alert Standard Format parameters.

MEBx

This Formset contains forms for configuring MEBx.

5.3.6 ACPI Configuration

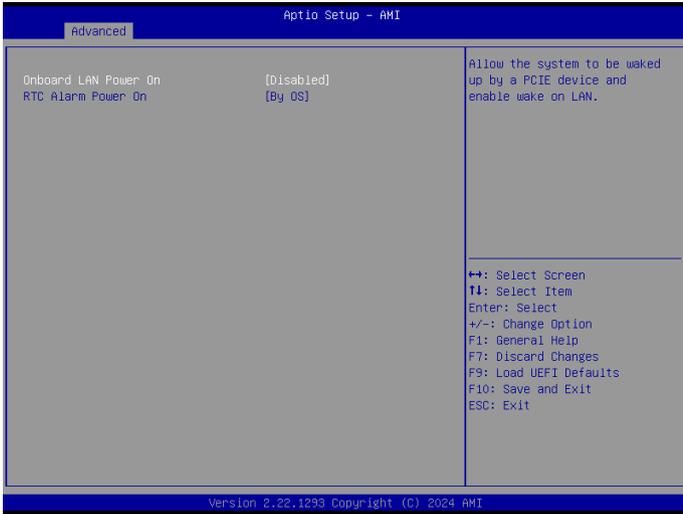

Onboard LAN Power On

Use this item to enable or disable onboard LAN to turn on the system from the power-soft-off mode.


Configuration options: [Enabled] [Disabled]

RTC Alarm Power On

RTC Alarm Power On allows the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.

Configuration options: [Enabled] [Disabled] [By OS]

5.3.7 USB Configuration

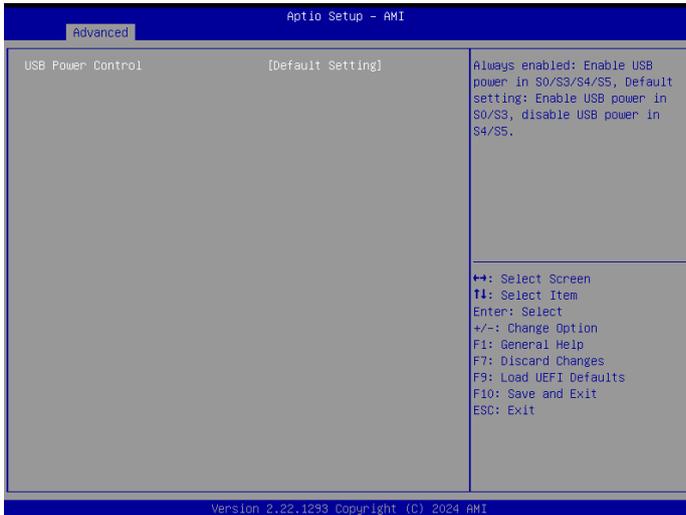


USB Power Control

Use this option to control USB power.

Configuration options: [Always Enabled] [Default Setting]

5.3.8 Power Configuration

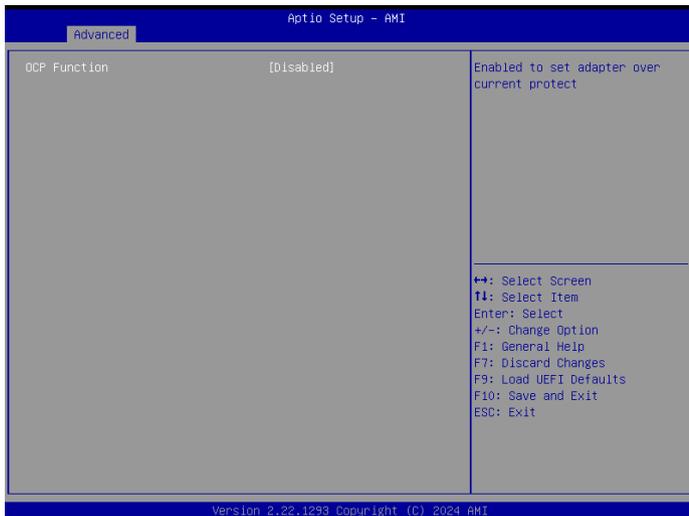

OCP Function

Enabled to set adapter over current protect.

5.3.9 Trusted Computing



NOTE: Options vary depending on the version of your connected TPM module.

Security Device Support

Security Device Support allows you to enable or disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Configuration options: [Enabled] [Disabled]

Active PCR banks

This item displays active PCR Banks.

Available PCR Banks

This item displays available PCR Banks.

SHA256 PCR Bank

SHA256 PCR Bank allows you to enable or disable SHA256 PCR Bank.

Configuration options: [Enabled] [Disabled]

SHA384 PCR Bank

SHA384 PCR Bank allows you to enable or disable SHA384 PCR Bank.

Configuration options: [Enabled] [Disabled]

SM3_256 PCR Bank

SM3_256 PCR Bank allows you to enable or disable SM3_256 PCR Bank.

Configuration options: [Enabled] [Disabled]

Pending Operation

Pending Operation allows you to schedule an Operation for the Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Configuration options: [None] [TPM Clear]

Platform Hierarchy

This item allows you to enable or disable Platform Hierarchy.

Configuration options: [Enabled] [Disabled]

Storage Hierarchy

This item allows you to enable or disable Storage Hierarchy.

Configuration options: [Enabled] [Disabled]

Endorsement Hierarchy

This item allows you to enable or disable Endorsement Hierarchy.

Configuration options: [Enabled] [Disabled]

Physical Presence Spec Version

Select this item to tell OS to support PPI spec version 1.2 or 1.3. Please note that some HCK tests might not support version 1.3.

Configuration options: [1.2] [1.3]

TPM 2.0 InterfaceType

This item allows you to view the Communication Interface to TPM 2.0 Device: CRB or ITS.

Device Select

This item allows you to select the TPM device to be supported.


[TPM 1.2] restricts support to TPM 1.2 devices.

[TPM 2.0] restricts support to TPM 2.0 devices.

[Auto] supports both TPM 1.2 and TPM 2.0 devices with the default set to TPM 2.0 devices. If TPM 2.0 devices are not found, TPM 1.2 devices will be enumerated.

5.4 Hardware Health Event Monitoring Screen

This section allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, fan speed, and the critical voltage.

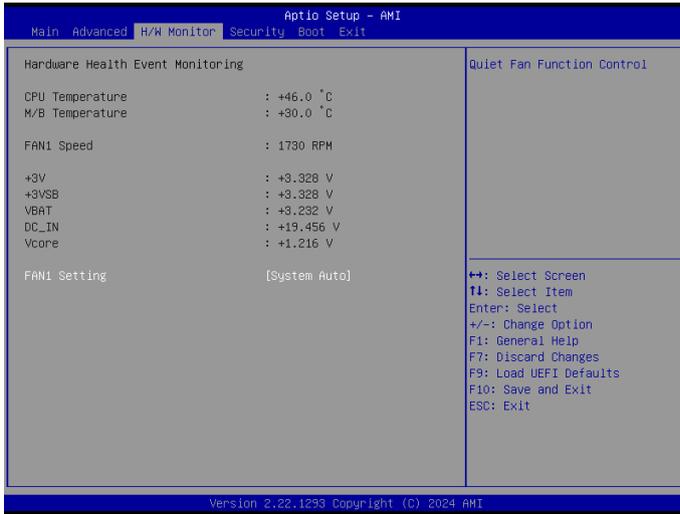

NOTE: Options vary depending on the features of your motherboard.

Fan1 Setting

This allows you to set FAN1's speed. The default value is [System Auto].

Configuration options: [System Auto] [Full On] [Automatic Mode].

5.5 Security Screen

In this section you may set or change the supervisor/user password for the system. You may also clear the user password.



Supervisor Password

Set or change the password for the administrator account. Only the administrator has the authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Press [Enter] to configure the Secure Boot Settings. The feature protects the system from unauthorized access and malwares during POST.

Intel(R) Platform Trust Technology

Enable/disable Intel PTT in ME. Disable this option to use discrete TPM Module.

5.6 Boot Screen

This section displays the available devices on your system for you to configure the boot settings and the boot priority.



Boot From Onboard LAN

The item allows the system to be waked up by the onboard LAN.

Configuration options: [Enabled] [Disabled]

Setup Prompt Timeout

The item allows you to configure the number of seconds to wait for the UEFI setup utility.

Configuration options: [1] - [65535]

Bootup Num-Lock

The item allows you to select whether Num Lock should be turned on or off when the system boots up.


Configuration options: [On] [Off]

Full Screen Logo

[Enabled] Select this item to display the boot logo.

[Disabled] Select this item to show normal POST messages.

5.7 Exit Screen

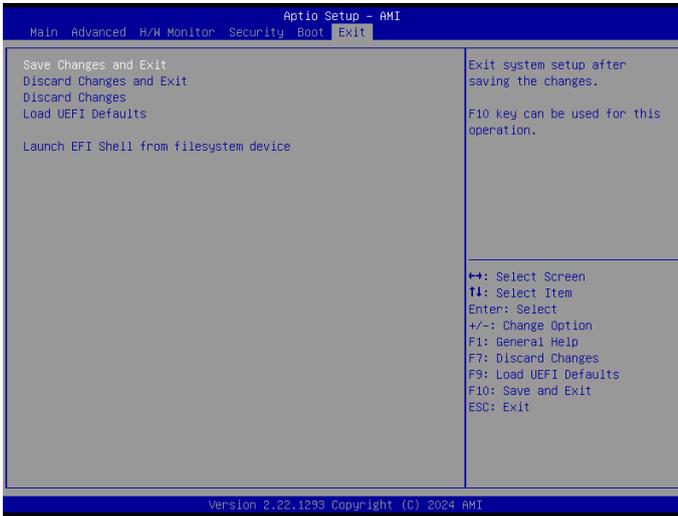

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop out. Select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop out. Select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop out. Select [Yes] to discard all the changes.

Load UEFI Defaults

The item allows you to load UEFI default values for all options. The F9 key can be used for this operation.

Launch EFI Shell from filesystem device

The item allows you to copy shellx64.efi to the root directory to launch EFI Shell.

Chapter 6 Software Support

6.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 10 64-bit/11 64-bit. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer your OS documentation for more information.