



EN2C606-4L/D12

EN2C602-4L/D12

EN2C602/D12

EN2C606-4L

EN2C602-4L

EN2C602

User Manual

Version 1.0

Published Jan 2013

Copyright©2013 ASRock INC. All rights reserved.

Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see

www.dtsc.ca.gov/hazardouswaste/perchlorate"

ASRock Website: <http://www.asrock.com>

Contents

1 Introduction	5
1.1 Package Contents.....	5
1.2 Specifications.....	6
1.3 Motherboard Layout.....	14
1.4 I/O Panel	32
1.5 Block Diagram.....	38
2 Installation	44
2.1 Pre-installation Precautions	44
2.2 Screw Holes.....	44
2.3 CPU Installation	45
2.4 Installation of Heatsink and CPU fan	48
2.5 Installation of Memory Modules (DIMM)	49
2.6 Expansion Slots (PCI and PCI Express Slots)....	51
2.7 Jumpers Setup	53
2.8 Onboard Headers and Connectors	54
2.9 Driver Installation Guide.....	63
2.10 Hot Plug for Hard Disk Drives	64

3 UEFI SETUP UTILITY.....	65
3.1 Introduction	65
3.1.1 UEFI Menu Bar.....	65
3.1.2 Navigation Keys	66
3.2 Main Screen	67
3.3 Advanced Screen	68
3.3.1 ACPI Configuration.....	69
3.3.2 WHEA Configuration	71
3.3.3 CPU Configuration	72
3.3.4 North Bridge Configuration.....	74
3.3.5 South Bridge Configuration	78
3.3.6 USB Configuration.....	79
3.3.7 Intel ME Subsystem	80
3.3.8 Clock Generator Configuration.....	81
3.3.8 Storage Configuration	82
3.3.10 Super IO Configuration.....	84
3.3.11 Serial Port Console Redirection	85
3.3.12 Voltage Control.....	86
3.4 Hardware Health Event Monitoring Screen.....	87
3.5 Server Management.....	89
3.6 Boot Screen	90
3.7 Security Screen.....	92
3.8 Exit Screen.....	93
3.9 Event Logs	94
4 Software Support	95
4.1 Install Operating System	95
4.2 Support CD Information	95
4.2.1 Running Support CD	95
4.2.2 Drivers Menu	95
4.2.3 Utilities Menu.....	95
4.2.4 Contact Information	95
5 Troubleshooting	96
5.1 Troubleshooting Procedures	96
5.2 Technical Support Procedures	98
5.3 Returning Merchandise for Service.....	98

Chapter 1: Introduction

Thank you for purchasing ASRock **EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12 / EN2C606-4L / EN2C602-4L / EN2C602** motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains the introduction of the motherboard and step-by-step hardware installation guide. Chapter 3 and 4 contains the configuration guide of BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock's website without further notice. You may find the latest VGA cards and CPU support list on ASRock's website as well. ASRock website <http://www.asrock.com>

If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.

www.asrock.com/support/index.asp

1.1 Package Contents

ASRock **EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12** Motherboard (SSI CEB Form Factor: 12.0-in x 13-in, 30.5 cm x 33 cm)

or

ASRock **EN2C606-4L / EN2C602-4L / EN2C602** Motherboard (SSI CEB Form Factor: 12.0-in x 10.5-in, 30.5 cm x 26.7 cm)

Quick Installation Guide

Support CD

5 x Serial ATA (SATA) Data Cables (Optional)

1 x I/O Panel Shield

1.2 Specifications

EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12:

Physical Status	Form Factor	SSI EEB
	Dimension	12" x 13" (30.5 cm x 33 cm)
Processor System	CPU	- Supports Intel® Xeon® E5-2400/1400* Series Processors - Supports Hyper-Threading Technology * E5-1400 only supports single socket.
	Socket	Dual Socket B2 (LGA1356)
	Power Phase	4 +1 Power Phase Design
	Chipset	EN2C606-4L/D12
		Intel® C606
		EN2C602-4L/D12 / EN2C602/D12
		Intel® C602
System Memory	Capacity	- 12 x 240-pin DDR3 DIMM slots - Support up to 192GB DDR3 R DIMM ; 96GB ECC/non-ECC unbuffered UDIMM
	Type	- Triple Channel DDR3 memory technology - Supports DDR3 1600/1333/1066 R/LR ECC and UDIMM
	Voltage	- 1.5V, 1.35V
Expansion Slot	PCIe 3.0 x 16	3 slots - 2 x PCIe3 & PCIe6: x16 mode - 1 x PCIe5: x 8 mode
	PCIe 3.0 x 4	1 slots
	PCIe 2.0 x 1	1 slots
	PCI	2 slots
BMC	Controller	ASPEED AST2300
Graphics	Controller	ASPEED AST2300
	VRAM	DDR3 16MB
	Output	Supports D-Sub with max. resolution up to 1920x1200 @ 60Hz

Ethernet	Interface	Gigabit LAN 10/100/1000 Mb/s
	IPMI dedicated GLAN	1 x Realtek RTL8211E for dedicated management GLAN
	LAN Controller	EN2C606-4L/D12 / EN2C602-4L/D12
		<ul style="list-style-type: none"> - 4 x Intel® 82574L - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Quad LAN with Teaming function - Supports PXE
		EN2C602/D12
		<ul style="list-style-type: none"> - 2 x Intel® 82574L - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Quad LAN with Teaming function - Supports PXE
Storage	SATA controller	EN2C606-4L/D12
		Intel C606 : 2 x SATA3 6.0 Gb/s , 4 x SATA2 3.0 Gb/s, support RAID 0, 1, 5, 10 and Intel Rapid Storage 3.0
Storage	SATA controller	EN2C602-4L/D12 / EN2C602/D12
		Intel C602 : 2 x SATA3 6.0 Gb/s , 8 x SATA2 3.0 Gb/s, support RAID 0, 1, 5, 10 and Intel Rapid Storage 3.0
	Additional SATA controller	Marvell SE9230: 4 x SATA3 6.0 Gb/s , support RAID 0 , 1 , 5, 10, NCQ, AHCI and "Hot Plug" functions
	SAS controller	EN2C606-4L/D12
		Intel C606 : 8 x SATA2/SAS 3Gb/s, support RAID 0,1, 5,10
		EN2C602-4L/D12 / EN2C602/D12
		N/A

Rear Panel I/O	PS/2 KB	1
	PS/2 mouse	1
	VGA port	D-sub x 1
	USB 2.0 port	2
	Lan port	EN2C606-4L/D12 / EN2C602-4L/D12
		- 4 x RJ45 Gigabit Ethernet LAN ports - 1 x RJ45 Dedicated IPMI LAN port - LAN Ports with LED (ACT/LINK LED and SPEED LED)
		EN2C602/D12
		- 2 x RJ45 Gigabit Ethernet LAN ports - 1 x RJ45 Dedicated IPMI LAN port - LAN Ports with LED (ACT/LINK LED and SPEED LED)
	Serial port	1 (COM1)
Internal Connector	Type A USB 2.0 port	1
	USB 2.0 header	2 (Each support 2 USB 2.0)
	1x COM from BMC	1 (COM2)
	80 debug port LED	1
	Auxiliary panel header	1 (include chassis intrusion , location button & LED , front LAN LED)
	Front panel	1
	Speaker	1 (4 pin)
	Buzzer	1
	TPM	1
	Thermal sensor header	1
	IPMB	1
	Fan header	8 (8 x 4-pin, 2 x 3-pin) *CPU fan header have 3-pin and 4-pin ones. Two types couldn't be used at the same time.

Internal Connector	PSUSMB header	1
	Dr. Debug with LED	1
	ATX power	1 (24-pin) + 2 (8-pin)
System BIOS	BIOS type	<ul style="list-style-type: none"> - Plug and Play (PnP) - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - SMBIOS 2.3.1 Support - DRAM Voltage Multi-adjustment
Hardware Monitor	Temperature	<ul style="list-style-type: none"> - CPU Temperature Sensing - System Temperature Sensing
	Fan	<ul style="list-style-type: none"> - CPU/Rear/Front Fan Tachometer - CPU Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature) - CPU/Rear/Front Fan Multi-Speed Control
	Voltage	Voltage Monitoring: CPU1/2, DRAM1/2, VTT1/2, VCCSA1/2, 3V/5V/12V, +1.05V_PCH, +BAT, 3VSB, 5VSB
Support OS	OS	Microsoft® Windows® Server 2008 / 2008 R2 / Linux compliant
Enviroment	Temperature	Operation temperature: 10°C ~ 35°C / Non operation temperature: -40°C ~ 70°C
	Humidity	Non operation humidity: 20% ~ 90% (Non condensing)

* For detailed product information, please visit our website: <http://www.asrock.com>

EN2C606-4L / EN2C602-4L / EN2C602:

Physical Status	Form Factor	SSI EEB
	Dimension	12" x 10.5" (30.5 cm x 26.7 cm)
Processor System	CPU	- Supports Intel® Xeon® E5-2400/1400* Series Processors - Supports Hyper-Threading Technology * E5-1400 only supports single socket.
	Socket	Dual Socket B2 (LGA1356)
	Power Phase	4 +1 Power Phase Design
	Chipset	EN2C606-4L
		Intel® C606
		EN2C602-4L / EN2C602
		Intel® C602
System Memory	Capacity	- 8x 240-pin DDR3 DIMM slots - Support up to 128GB DDR3 R DIMM ; 64GB ECC/non-ECC unbuffered UDIMM
	Type	- Triple Channel DDR3 memory technology - Supports DDR3 1600/1333/1066 R/LR ECC and UDIMM
	Voltage	- 1.5V, 1.35V
Expansion Slot	PCIe 3.0 x 16	3 slots - 1 x PCIe6: x16 mode - 2 x PCIe4/PCIe2: x16/x0 mode or x8/x8 mode
	PCIe 3.0 x 4	1 slots
	PCIe 2.0 x 1	1 slots
	PCI	1 slots
BMC	Controller	ASPEED AST2300
Graphics	Controller	ASPEED AST2300
	VRAM	DDR3 16MB
	Output	Supports D-Sub with max. resolution up to 1920x1200 @ 60Hz

Ethernet	Interface	Gigabit LAN 10/100/1000 Mb/s
	IPMI dedicated GLAN	1 x Realtek RTL8211E for dedicated management GLAN
	LAN Controller	EN2C606-4L / EN2C602-4L
		<ul style="list-style-type: none"> - 4 x Intel® 82574L - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Quad LAN with Teaming function - Supports PXE
		EN2C602
		<ul style="list-style-type: none"> - 2 x Intel® 82574L - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Quad LAN with Teaming function - Supports PXE
Storage	SATA controller	EN2C606-4L
		Intel C606 : 2 x SATA3 6.0 Gb/s , 4 x SATA2 3.0 Gb/s, support RAID 0, 1, 5, 10 and Intel Rapid Storage 3.0
Storage	SATA controller	EN2C602-4L / EN2C602
		Intel C602 : 2 x SATA3 6.0 Gb/s , 8 x SATA2 3.0 Gb/s, support RAID 0, 1, 5, 10 and Intel Rapid Storage 3.0
	Additional SATA controller	Marvell SE9220: 2 x SATA3 6.0 Gb/s , support RAID 0 , 1 , NCQ, AHCI and "Hot Plug" functions
	SAS controller	EN2C606-4L
		Intel C606 : 8 x SATA2/SAS 3Gb/s, support RAID 0,1,5,10
		EN2C602-4L / EN2C602
		N/A

Rear Panel I/O	PS/2 KB	1
	PS/2 mouse	1
	VGA port	D-sub x 1
	USB 2.0 port	2
	Lan port	EN2C606-4L /EN2C602-4L
		- 4 x RJ45 Gigabit Ethernet LAN ports - 1 x RJ45 Dedicated IPMI LAN port - LAN Ports with LED (ACT/LINK LED and SPEED LED)
		EN2C602
		- 2 x RJ45 Gigabit Ethernet LAN ports - 1 x RJ45 Dedicated IPMI LAN port - LAN Ports with LED (ACT/LINK LED and SPEED LED)
	Serial port	1 (COM1)
Internal Connector	Type A USB 2.0 port	1
	USB 2.0 header	2 (Each support 2 USB 2.0)
	1x COM from BMC	1 (COM2)
	80 debug port LED	1
	Auxiliary panel header	1 (include chassis intrusion , location button & LED , front LAN LED)
	Front panel	1
	Speaker	1 (4 pin)
	Buzzer	1
	TPM	1
	Thermal sensor header	1
	IPMB	1
	Fan header	8 (8 x 4-pin, 2 x 3-pin) *CPU fan header have 3-pin and 4-pin ones. Two types couldn't be used at the same time.

Internal Connector	PSUSMB header	1
	Dr. Debug with LED	1
	ATX power	1 (24-pin) + 2 (8-pin)
System BIOS	BIOS type	<ul style="list-style-type: none"> - Plug and Play (PnP) - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - SMBIOS 2.3.1 Support - DRAM Voltage Multi-adjustment
Hardware Monitor	Temperature	<ul style="list-style-type: none"> - CPU Temperature Sensing - System Temperature Sensing
	Fan	<ul style="list-style-type: none"> - CPU/Rear/Front Fan Tachometer - CPU Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature) - CPU/Rear/Front Fan Multi-Speed Control
	Voltage	Voltage Monitoring: CPU1/2, DRAM1/2, VTT1/2, VCCSA1/2, 3V/5V/12V, +1.05V_PCH, +BAT, 3VSB, 5VSB
Support OS	OS	Microsoft® Windows® Server 2008 / 2008 R2 / Linux compliant
Enviroment	Temperature	Operation temperature: 10°C ~ 35°C / Non operation temperature: -40°C ~ 70°C
	Humidity	Non operation humidity: 20% ~ 90% (Non condensing)

* For detailed product information, please visit our website: <http://www.asrock.com>


EN2C606-4L/D12



1	ATX 12V Power Connector (ATX12V2)
2	CPU Fan Connector (CPU_FAN1_2)
3	CPU Fan Connector (CPU_FAN1_1)
4	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E1, Blue)
6	ATX Power Connector (ATXPWR1)
7	ATX 12V Power Connector (ATX12V1)
8	Front Fan Connector (FRNT_FAN1)
9	3 x 240-pin DDR3 DIMM Slots (DDR3_A2, DDR3_B2, DDR3_C2, White)
10	CPU Fan Connector (CPU_FAN2_2)
11	CPU Fan Connector (CPU_FAN2_1)
12	1356-Pin CPU Socket (CPU_BSP1)
13	PSU Jumpers (PSU_CLK_SEL1, PSU_DATA_SEL2, PSU_ALT_SEL3)
14	PSU SMBus (PSUSMB1)
15	Intel C606 Chipset
16	Front Fan Connector (FRNT_FAN3)
17	Front Fan Connector (FRNT_FAN4)
18	SATA3 Connector (SATAIII_M0_M1, White)
19	SATA3 Connector (SATAIII_M2_M3, White)
20	SATA3 Connector (SATAIII_0_1, White)
21	SATA2 Connector (SATAII_2_3, Blue)
22	SATA2 Connector (SATAII_4_5, Blue)
23	Front Fan Connector (FRNT_FAN2)
24	SCU Connector (SCU_PORT_6_7, Black)
25	SCU Connector (SCU_PORT_4_5, Black)
26	SCU Connector (SCU_PORT_2_3, Black)
27	SCU Connector (SCU_PORT_0_1, Black)
28	SATA SGPIO Connector (SATA_SGPIO2)
29	SCU SGPIO Connector (SCU_SGPIO1)
30	SATA SGPIO Connector (SATA_SGPIO1)
31	SCU SGPIO Connector (SCU_SGPIO2)

32	System Panel Header (PANEL1)
33	Front Lan LED Connector (FRONT_LED_LAN34)
34	USB 2.0 Ports (USB_2_3)
35	ME Recovery Jumper (ME_RECOVERY1)
36	Speaker Header (SPEAKER1)
37	USB 2.0 Ports (USB_4_5)
38	Auxiliary panel header (AUX_PANEL1)
39	Non Maskable Interrupt Button (NMI_BTN1)
40	Intelligent Platform Management Bus header (IPMB_1)
41	TPM Header (TPM1)
42	COM Port Header (COM2)
43	UP ROM Header (UP_ROM1)
44	BMC ROM
45	USB 2.0 Ports (USB_6)
46	PCI Slot (PCI1, White)
47	Dr. Debug
48	PCI Slot (PCI2, White)
49	PCI Express 3.0 x16 Slot (PCIE3, Blue) from CPU_AP1
50	Thermal Sensor header (TR1)
51	Clear CMOS Pad (CLRCMOS2)
52	PCI Express 2.0 x1 Slot (PCIE4, White) from PCH
53	Rear Fan Connector (REAR_FAN1)
54	PCI Express 3.0 x16 Slot (PCIE5, Blue) from CPU_AP1
55	Buzzer (BUZZER1)
56	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_BSP1
57	SPI Flash Memory (64Mb)
58	PCI Express 3.0 x4 Slot (PCIE7, White) from CPU_BSP1
59	Rear Fan Connector (REAR_FAN2)
60	3 x 240-pin DDR3 DIMM Slots (DDR3_G2, DDR3_F2, DDR3_E2,White)
61	1356-Pin CPU Socket (CPU_AP1)


EN2C602-4L/D12

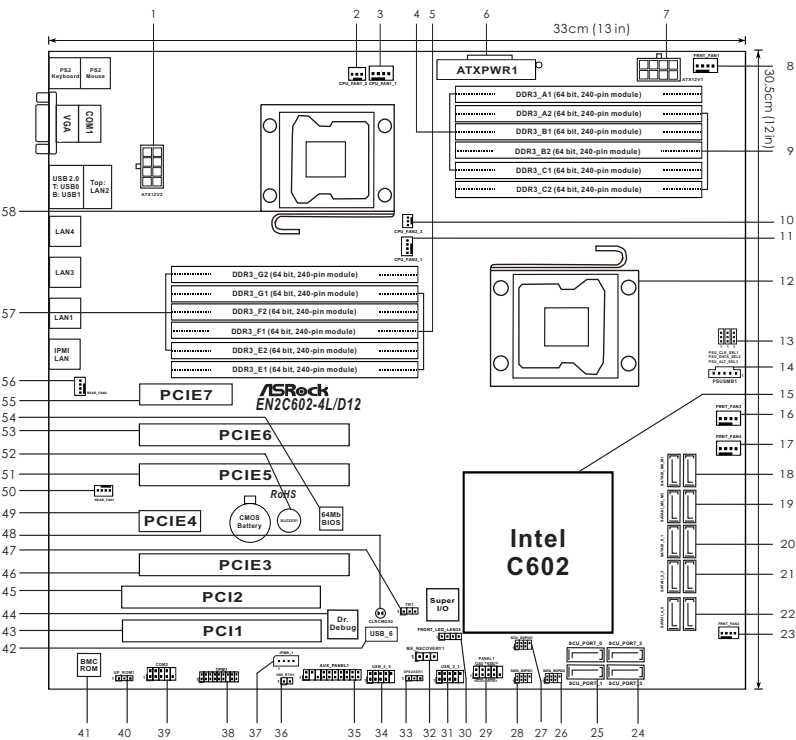

1	ATX 12V Power Connector (ATX12V2)
2	CPU Fan Connector (CPU_FAN1_2)
3	CPU Fan Connector (CPU_FAN1_1)
4	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E1, Blue)
6	ATX Power Connector (ATXPWR1)
7	ATX 12V Power Connector (ATX12V1)
8	Front Fan Connector (FRNT_FAN1)
9	3 x 240-pin DDR3 DIMM Slots (DDR3_A2, DDR3_B2, DDR3_C2, White)
10	CPU Fan Connector (CPU_FAN2_2)
11	CPU Fan Connector (CPU_FAN2_1)
12	1356-Pin CPU Socket (CPU_BSP1)
13	PSU Jumpers (PSU_CLK_SEL1, PSU_DATA_SEL2, PSU_ALT_SEL3)
14	PSU SMBus (PSUSMB1)
15	Intel C602 Chipset
16	Front Fan Connector (FRNT_FAN3)
17	Front Fan Connector (FRNT_FAN4)
18	SATA3 Connector (SATAIII_M0_M1, White)
19	SATA3 Connector (SATAIII_M2_M3, White)
20	SATA3 Connector (SATAIII_0_1, White)
21	SATA2 Connector (SATAII_2_3, Blue)
22	SATA2 Connector (SATAII_4_5, Blue)
23	Front Fan Connector (FRNT_FAN2)
24	SCU Connector (SCU_PORT_2_3, Blue)
25	SCU Connector (SCU_PORT_0_1, Blue)
26	SATA SGPIO Connector (SATA_SGPIO2)
27	SCU SGPIO Connector (SCU_SGPIO1)
28	SATA SGPIO Connector (SATA_SGPIO1)
29	System Panel Header (PANEL1)
30	Front Lan LED Connector (FRONT_LED_LAN34)
31	USB 2.0 Ports (USB_2_3)

32	ME Recovery Jumper (ME_RECOVERY1)
33	Speaker Header (SPEAKER1)
34	USB 2.0 Ports (USB_4_5)
35	Auxiliary panel header (AUX_PANEL1)
36	Non Maskable Interrupt Button (NMI_BTN1)
37	Intelligent Platform Management Bus header (IPMB_1)
38	TPM Header (TPM1)
39	COM Port Header (COM2)
40	UP ROM Header (UP_ROM1)
41	BMC ROM
42	USB 2.0 Ports (USB_6)
43	PCI Slot (PCI1, White)
44	Dr. Debug
45	PCI Slot (PCI2, White)
46	PCI Express 3.0 x16 Slot (PCIE3, Blue) from CPU_AP1
47	Thermal Sensor header (TR1)
48	Clear CMOS Pad (CLRCMOS2)
49	PCI Express 2.0 x1 Slot (PCIE4, White) from PCH
50	Rear Fan Connector (REAR_FAN1)
51	PCI Express 3.0 x16 Slot (PCIE5, Blue) from CPU_AP1
52	Buzzer (BUZZER1)
53	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_BSP1
54	SPI Flash Memory (64Mb)
55	PCI Express 3.0 x4 Slot (PCIE7, White) from CPU_BSP1
56	Rear Fan Connector (REAR_FAN2)
57	3 x 240-pin DDR3 DIMM Slots (DDR3_G2, DDR3_F2, DDR3_E2, White)
58	1356-Pin CPU Socket (CPU_AP1)


EN2C602/D12

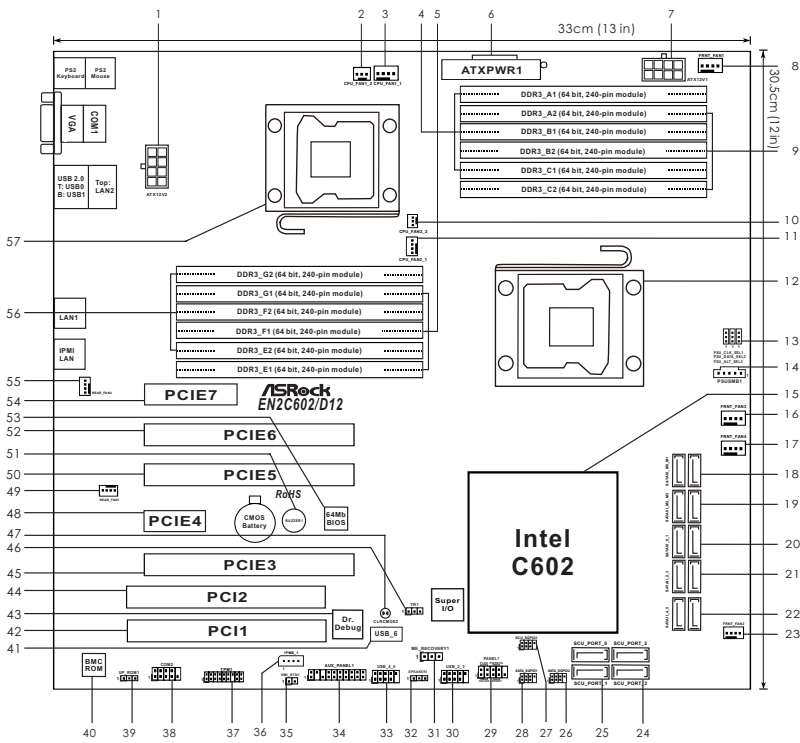

1	ATX 12V Power Connector (ATX12V2)
2	CPU Fan Connector (CPU_FAN1_2)
3	CPU Fan Connector (CPU_FAN1_1)
4	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E1, Blue)
6	ATX Power Connector (ATXPWR1)
7	ATX 12V Power Connector (ATX12V1)
8	Front Fan Connector (FRNT_FAN1)
9	3 x 240-pin DDR3 DIMM Slots (DDR3_A2, DDR3_B2, DDR3_C2, White)
10	CPU Fan Connector (CPU_FAN2_2)
11	CPU Fan Connector (CPU_FAN2_1)
12	1356-Pin CPU Socket (CPU_BSP1)
13	PSU Jumpers (PSU_CLK_SEL1, PSU_DATA_SEL2, PSU_ALT_SEL3)
14	PSU SMBus (PSUSMB1)
15	Intel C602 Chipset
16	Front Fan Connector (FRNT_FAN3)
17	Front Fan Connector (FRNT_FAN4)
18	SATA3 Connector (SATAIII_M0_M1, White)
19	SATA3 Connector (SATAIII_M2_M3, White)
20	SATA3 Connector (SATAIII_0_1, White)
21	SATA2 Connector (SATAII_2_3, Blue)
22	SATA2 Connector (SATAII_4_5, Blue)
23	Front Fan Connector (FRNT_FAN2)
24	SCU Connector (SCU_PORT_2_3, Blue)
25	SCU Connector (SCU_PORT_0_1, Blue)
26	SATA SGPIO Connector (SATA_SGPIO2)
27	SCU SGPIO Connector (SCU_SGPIO1)
28	SATA SGPIO Connector (SATA_SGPIO1)
29	System Panel Header (PANEL1)
30	USB 2.0 Ports (USB_2_3)
31	ME Recovery Jumper (ME_RECOVERY1)

32	Speaker Header (SPEAKER1)
33	USB 2.0 Ports (USB_4_5)
34	Auxiliary panel header (AUX_PANEL1)
35	Non Maskable Interrupt Button (NMI_BTN1)
36	Intelligent Platform Management Bus header (IPMB_1)
37	TPM Header (TPM1)
38	COM Port Header (COM2)
39	UP ROM Header (UP_ROM1)
40	BMC ROM
41	USB 2.0 Ports (USB_6)
42	PCI Slot (PCI1, White)
43	Dr. Debug
44	PCI Slot (PCI2, White)
45	PCI Express 3.0 x16 Slot (PCIE3, Blue) from CPU_AP1
46	Thermal Sensor header (TR1)
47	Clear CMOS Pad (CLRCMOS2)
48	PCI Express 2.0 x1 Slot (PCIE4, White) from PCH
49	Rear Fan Connector (REAR_FAN1)
50	PCI Express 3.0 x16 Slot (PCIE5, Blue) from CPU_AP1
51	Buzzer (BUZZER1)
52	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_BSP1
53	SPI Flash Memory (64Mb)
54	PCI Express 3.0 x4 Slot (PCIE7, White) from CPU_BSP1
55	Rear Fan Connector (REAR_FAN2)
56	3 x 240-pin DDR3 DIMM Slots (DDR3_G2, DDR3_F2, DDR3_E2,White)
57	1356-Pin CPU Socket (CPU_AP1)


EN2C606-4L

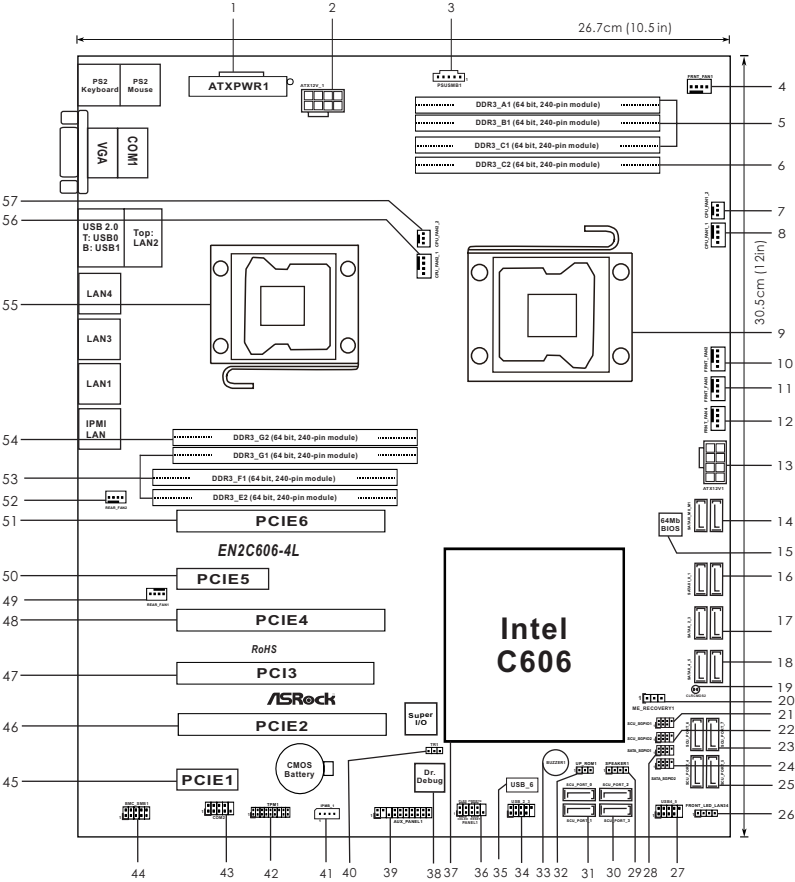

1	ATX Power Connector (ATXPWR1)
2	ATX 12V Power Connector (ATX12V_1)
3	PSU SMBus (PSUSMB1)
4	Front Fan Connector (FRNT_FAN1)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
6	1 x 240-pin DDR3 DIMM Slots (DDR3_C2, White)
7	CPU Fan Connector (CPU_FAN1_2)
8	CPU Fan Connector (CPU_FAN1_1)
9	1356-Pin CPU Socket (CPU_BSP1)
10	Front Fan Connector (FRNT_FAN2)
11	Front Fan Connector (FRNT_FAN3)
12	Front Fan Connector (FRNT_FAN4)
13	ATX 12V Power Connector (ATX12V1)
14	SATA3 Connector (SATAIII_M0_M1, White)
15	SPI Flash Memory (64Mb)
16	SATA3 Connector (SATAIII_0_1, White)
17	SATA2 Connector (SATAII_2_3, Blue)
18	SATA2 Connector (SATAII_4_5, Blue)
19	Clear CMOS Pad (CLRCMOS2)
20	ME Recovery Jumper (ME_RECOVERY1)
21	SCU SGPIO Connector (SCU_SGPIO1)
22	SCU SGPIO Connector (SCU_SGPIO2)
23	SCU Connector (SCU_PORT_6_7, Black)
24	SATA SGPIO Connector (SATA_SGPIO2)
25	SCU Connector (SCU_PORT_4_5, Black)
26	Front Lan LED Connector (FRONT_LED_LAN34)
27	USB 2.0 Ports (USB_4_5)
28	SATA SGPIO Connector (SATA_SGPIO1)
29	Speaker Header (SPEAKER1)
30	SCU Connector (SCU_PORT_2_3, Black)
31	SCU Connector (SCU_PORT_0_1, Black)
32	Up ROM header (UP_ROM1)
33	Buzzer (BUZZER1)
34	USB 2.0 Ports (USB_2_3)


35	USB 2.0 Ports (USB_6)
36	System Panel Header (PANEL1)
37	Intel C606 Chipset
38	Dr. Debug
39	Auxiliary panel header (AUX_PANEL1)
40	Thermal Sensor header (TR1)
41	Intelligent Platform Management Bus header (IPMB_1)
42	TPM Header (TPM1)
43	COM Port Header (COM2)
44	BMC SMB Header (BMC_SMB1)
45	PCI Express 2.0 x1 Slot (PCIE1, White) from PCH
46	PCI Express 3.0 x16 Slot (PCIE2, Blue) from CPU_BSP1
47	PCI Slot (PCI3, White) from PCH
48	PCI Express 3.0 x16 Slot (PCIE4, Blue) from CPU_BSP1
49	Rear Fan Connector (REAR_FAN1)
50	PCI Express 3.0 x 4 Slot (PCIE5, White) from CPU_BSP1
51	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_AP1
52	Rear Fan Connector (REAR_FAN2)
53	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E2, Blue)
54	1 x 240-pin DDR3 DIMM Slots (DDR3_G2,White)
55	1356-Pin CPU Socket (CPU_AP1)
56	CPU Fan Connector (CPU_FAN2_1)
57	CPU Fan Connector (CPU_FAN2_2)

EN2C602-4L

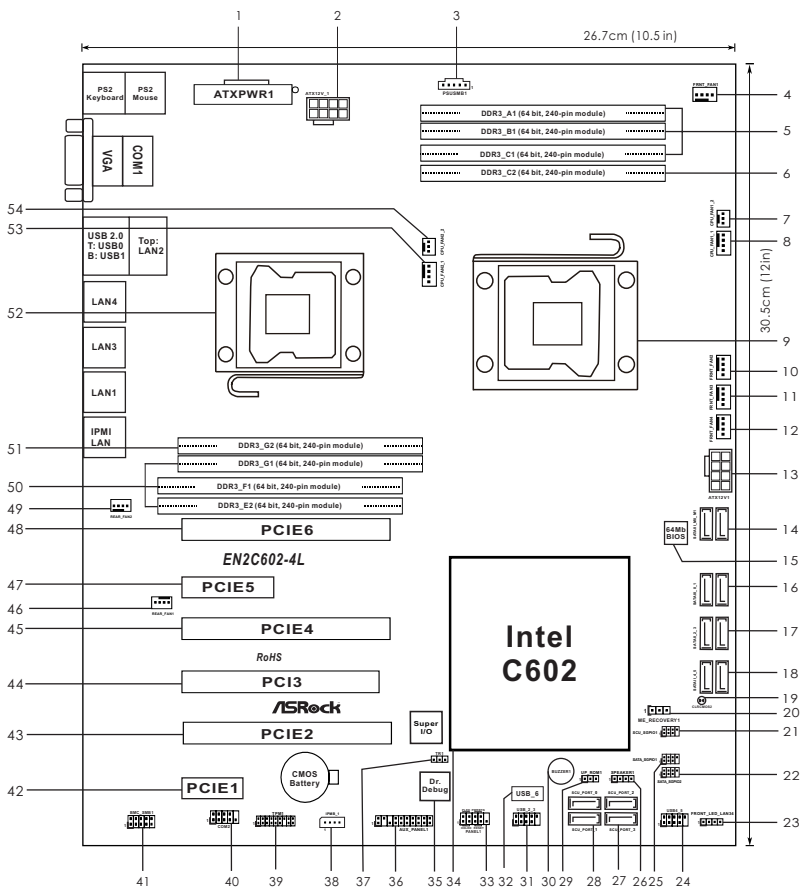

1	ATX Power Connector (ATXPWR1)
2	ATX 12V Power Connector (ATX12V_1)
3	PSU SMBus (PSUSMB1)
4	Front Fan Connector (FRNT_FAN1)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
6	1 x 240-pin DDR3 DIMM Slots (DDR3_C2, White)
7	CPU Fan Connector (CPU_FAN1_2)
8	CPU Fan Connector (CPU_FAN1_1)
9	1356-Pin CPU Socket (CPU_BSP1)
10	Front Fan Connector (FRNT_FAN2)
11	Front Fan Connector (FRNT_FAN3)
12	Front Fan Connector (FRNT_FAN4)
13	ATX 12V Power Connector (ATX12V1)
14	SATA3 Connector (SATAIII_M0_M1, White)
15	SPI Flash Memory (64Mb)
16	SATA3 Connector (SATAIII_0_1, White)
17	SATA2 Connector (SATAII_2_3, Blue)
18	SATA2 Connector (SATAII_4_5, Blue)
19	Clear CMOS Pad (CLRCMOS2)
20	ME Recovery Jumper (ME_RECOVERY1)
21	SCU SGPIO Connector (SCU_SGPIO1)
22	SATA SGPIO Connector (SATA_SGPIO2)
23	Front Lan LED Connector (FRONT_LED_LAN34)
24	USB 2.0 Ports (USB_4_5)
25	SATA SGPIO Connector (SATA_SGPIO1)
26	Speaker Header (SPEAKER1)
27	SCU Connector (SCU_PORT_2_3, Blue)
28	SCU Connector (SCU_PORT_0_1, Blue)
29	Up ROM header (UP_ROM1)
30	Buzzer (BUZZER1)
31	USB 2.0 Ports (USB_2_3)
32	USB 2.0 Ports (USB_6)
33	System Panel Header (PANEL1)
34	Intel C602 Chipset

35	Dr. Debug
36	Auxiliary panel header (AUX_PANEL1)
37	Thermal Sensor header (TR1)
38	Intelligent Platform Management Bus header (IPMB_1)
39	TPM Header (TPM1)
40	COM Port Header (COM2)
41	BMC SMB Header (BMC_SMB1)
42	PCI Express 2.0 x1 Slot (PCIE1, White) from PCH
43	PCI Express 3.0 x16 Slot (PCIE2, Blue) from CPU_BSP1
44	PCI Slot (PCI3, White) from PCH
45	PCI Express 3.0 x16 Slot (PCIE4, Blue) from CPU_BSP1
46	Rear Fan Connector (REAR_FAN1)
47	PCI Express 3.0 x4 Slot (PCIE5, White) from CPU_BSP1
48	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_AP1
49	Rear Fan Connector (REAR_FAN2)
50	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E2, Blue)
51	1 x 240-pin DDR3 DIMM Slots (DDR3_G2,White)
52	1356-Pin CPU Socket (CPU_AP1)
53	CPU Fan Connector (CPU_FAN2_1)
54	CPU Fan Connector (CPU_FAN2_2)

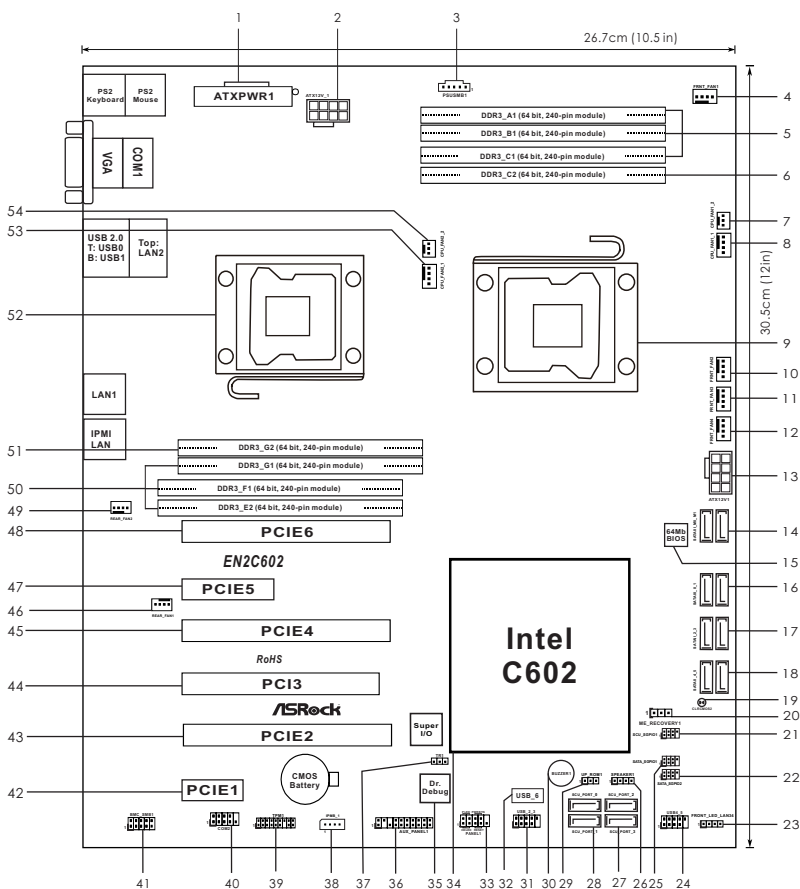
EN2C602

1	ATX Power Connector (ATXPWR1)
2	ATX 12V Power Connector (ATX12V_1)
3	PSU SMBus (PSUSMB1)
4	Front Fan Connector (FRNT_FAN1)
5	3 x 240-pin DDR3 DIMM Slots (DDR3_A1, DDR3_B1, DDR3_C1, Blue)
6	1 x 240-pin DDR3 DIMM Slots (DDR3_C2,White)
7	CPU Fan Connector (CPU_FAN1_2)
8	CPU Fan Connector (CPU_FAN1_1)
9	1356-Pin CPU Socket (CPU_BSP1)
10	Front Fan Connector (FRNT_FAN2)
11	Front Fan Connector (FRNT_FAN3)
12	Front Fan Connector (FRNT_FAN4)
13	ATX 12V Power Connector (ATX12V1)
14	SATA3 Connector (SATAIII_M0_M1, White)
15	SPI Flash Memory (64Mb)
16	SATA3 Connector (SATAIII_0_1, White)
17	SATA2 Connector (SATAII_2_3, Blue)
18	SATA2 Connector (SATAII_4_5, Blue)
19	Clear CMOS Pad (CLRCMOS2)
20	ME Recovery Jumper (ME_RECOVERY1)
21	SCU SGPIO Connector (SCU_SGPIO1)
22	SATA SGPIO Connector (SATA_SGPIO2)
23	Front Lan LED Connector (FRONT_LED_LAN34)
24	USB 2.0 Ports (USB_4_5)
25	SATA SGPIO Connector (SATA_SGPIO1)
26	Speaker Header (SPEAKER1)
27	SCU Connector (SCU_PORT_2_3, Blue)
28	SCU Connector (SCU_PORT_0_1, Blue)
29	Up ROM header (UP_ROM1)
30	Buzzer (BUZZER1)
31	USB 2.0 Ports (USB_2_3)
32	USB 2.0 Ports (USB_6)
33	System Panel Header (PANEL1)
34	Intel C602 Chipset

35	Dr. Debug
36	Auxiliary panel header (AUX_PANEL1)
37	Thermal Sensor header (TR1)
38	Intelligent Platform Management Bus header (IPMB_1)
39	TPM Header (TPM1)
40	COM Port Header (COM2)
41	BMC SMB Header (BMC_SMB1)
42	PCI Express 2.0 x1 Slot (PCIE1, White) from PCH
43	PCI Express 3.0 x16 Slot (PCIE2, Blue) from CPU_BSP1
44	PCI Slot (PCI3, White) from PCH
45	PCI Express 3.0 x16 Slot (PCIE4, Blue) from CPU_BSP1
46	Rear Fan Connector (REAR_FAN1) from CPU_BSP1
47	PCI Express 3.0 x4 Slot (PCIE5, White) from CPU_BSP1
48	PCI Express 3.0 x16 Slot (PCIE6, Blue) from CPU_AP1
49	Rear Fan Connector (REAR_FAN2)
50	3 x 240-pin DDR3 DIMM Slots (DDR3_G1, DDR3_F1, DDR3_E2, Blue)
51	1 x 240-pin DDR3 DIMM Slots (DDR3_G2,White)
52	1356-Pin CPU Socket (CPU_AP1)
53	CPU Fan Connector (CPU_FAN2_1)
54	CPU Fan Connector (CPU_FAN2_2)

1.5 I/O Panel

EN2C606-4L/D12

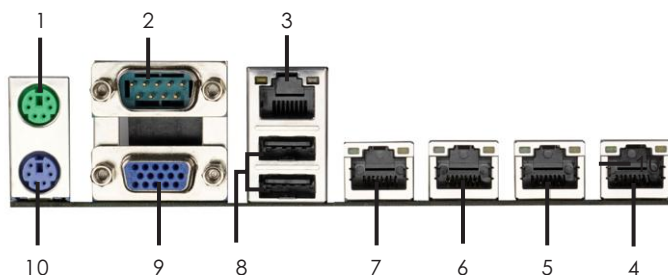

- 1 PS/2 Mouse Port (Green)
- 2 Serial Port (COM1)
- * 3 LAN RJ-45 Port (LAN2)
- * 4 IPMI LAN Port
- * 5 LAN RJ-45 Port (LAN1)
- * 6 LAN RJ-45 Port (LAN3)
- * 7 LAN RJ-45 Port (LAN4)
- 8 USB 2.0 Ports (USB01)
- 9 D-Sub Port (VGA)
- 10 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

ACT/LINK
LED SPEED
LED



LAN Port


LAN Port (LAN1, LAN3, LAN4, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

SPEED LED ACT/LINK
LED



LAN Port

EN2C602-4L/D12

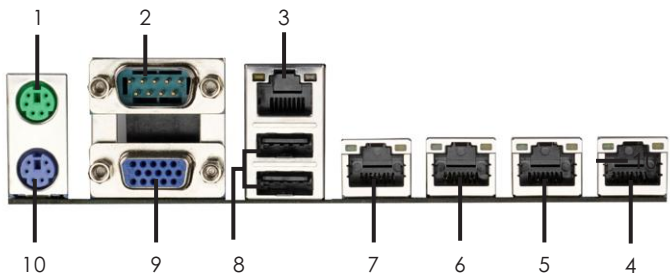

- 1 PS/2 Mouse Port (Green)**

2 Serial Port (COM1)

*** 3 LAN RJ-45 Port (LAN2)**

*** 4 IPMI LAN Port**

*** 5 LAN RJ-45 Port (LAN1)**
- * 6 LAN RJ-45 Port (LAN3)**

*** 7 LAN RJ-45 Port (LAN4)**

8 USB 2.0 Ports (USB01)

9 D-Sub Port (VGA)

10 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

ACT/LINK
LED

SPEED
LED



LAN Port

LAN Port (LAN1, LAN3, LAN4, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection


SPEED
LED

ACT/LINK
LED



LAN Port

EN2C602/D12

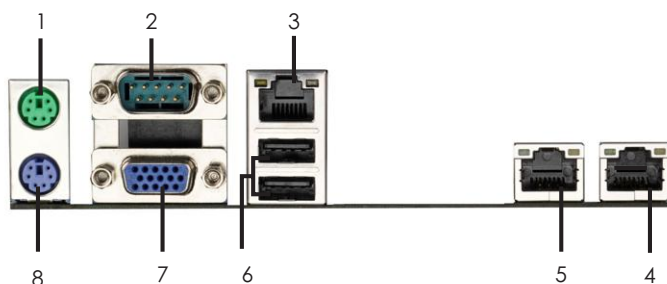

- 1 PS/2 Mouse Port (Green)
- 2 Serial Port (COM1)
- * 3 LAN RJ-45 Port (LAN2)
- * 4 IPMI LAN Port
- * 5 LAN RJ-45 Port (LAN1)
- 6 USB 2.0 Ports (USB01)
- 7 D-Sub Port (VGA)
- 8 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

ACT/LINK
LED SPEED
LED



LAN Port


LAN Port (LAN1, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

SPEED ACT/LINK
LED LED



LAN Port

EN2C606-4L

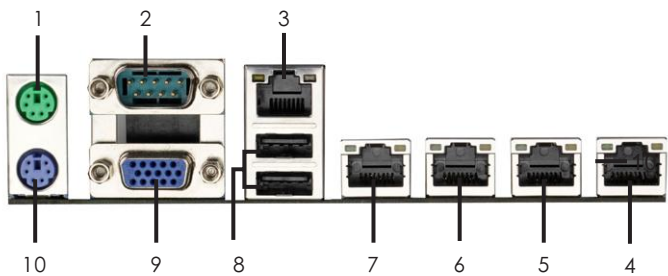

- 1 PS/2 Mouse Port (Green)

2 Serial Port (COM1)

* 3 LAN RJ-45 Port (LAN2)

* 4 IPMI LAN Port

* 5 LAN RJ-45 Port (LAN1)
- * 6 LAN RJ-45 Port (LAN3)

* 7 LAN RJ-45 Port (LAN4)

8 USB 2.0 Ports (USB01)


9 D-Sub Port (VGA)

10 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

 ACT/LINK
LED SPEED
LED



LAN Port


LAN Port (LAN1, LAN3, LAN4, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

SPEED ACT/LINK
LED LED



LAN Port

EN2C602-4L

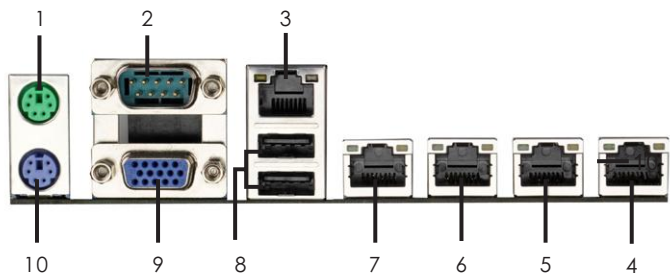

- 1 PS/2 Mouse Port (Green)

2 Serial Port (COM1)

* 3 LAN RJ-45 Port (LAN2)

* 4 IPMI LAN Port

* 5 LAN RJ-45 Port (LAN1)
- * 6 LAN RJ-45 Port (LAN3)

* 7 LAN RJ-45 Port (LAN4)

8 USB 2.0 Ports (USB01)


9 D-Sub Port (VGA)

10 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

 ACT/LINK
LED SPEED
LED



LAN Port


LAN Port (LAN1, LAN3, LAN4, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

SPEED ACT/LINK
LED LED



LAN Port

EN2C602

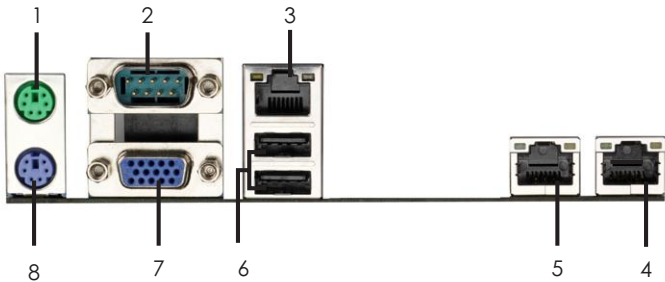

- 1 PS/2 Mouse Port (Green)**

2 Serial Port (COM1)

*** 3 LAN RJ-45 Port (LAN2)**

*** 4 IPMI LAN Port**
- * 5 LAN RJ-45 Port (LAN1)**

6 USB 2.0 Ports (USB01)

 
7 D-Sub Port (VGA)

8 PS/2 Keyboard Port (Purple)

* There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

LAN Port (LAN2) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Orange	100Mbps connection
On	100Mbps connection	Green	1Gbps connection

**ACT/LINK
LED** **SPEED
LED**



LAN Port

LAN Port (LAN1, LAN3, LAN4, IPMI LAN) LED Indications			
Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection
Blinking	Data Activity	Off	100Mbps connection
On	100Mbps connection	Green	1Gbps connection


**SPEED
LED** **ACT/LINK
LED**




LAN Port

1.6 Block Diagram


EN2C606-4L/D12

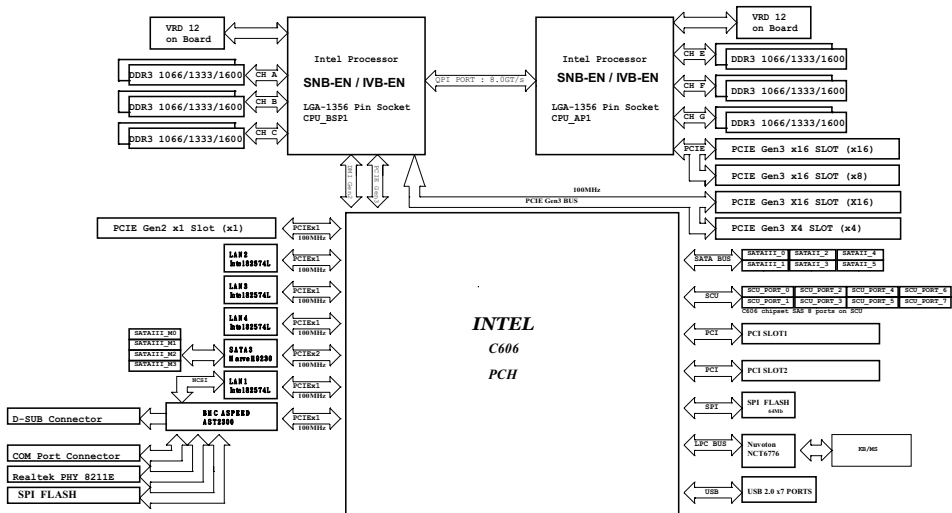



EN2C602/D12

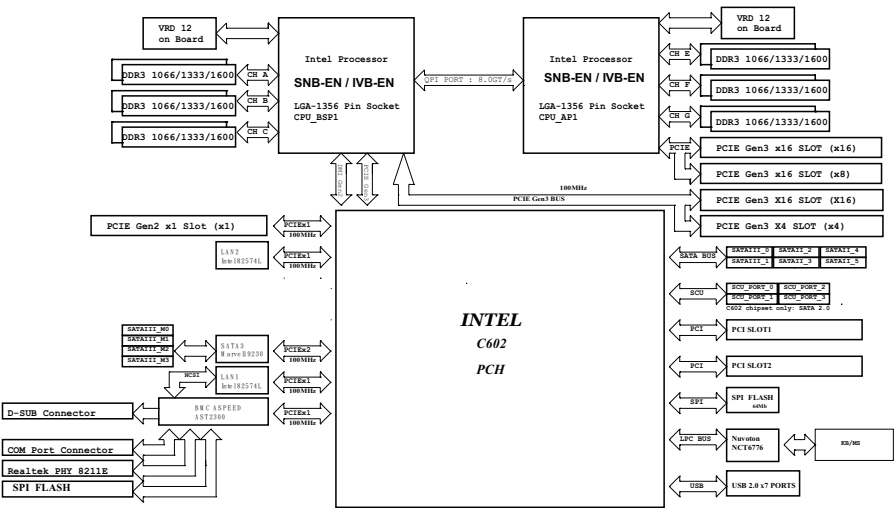

EN2C606-4L

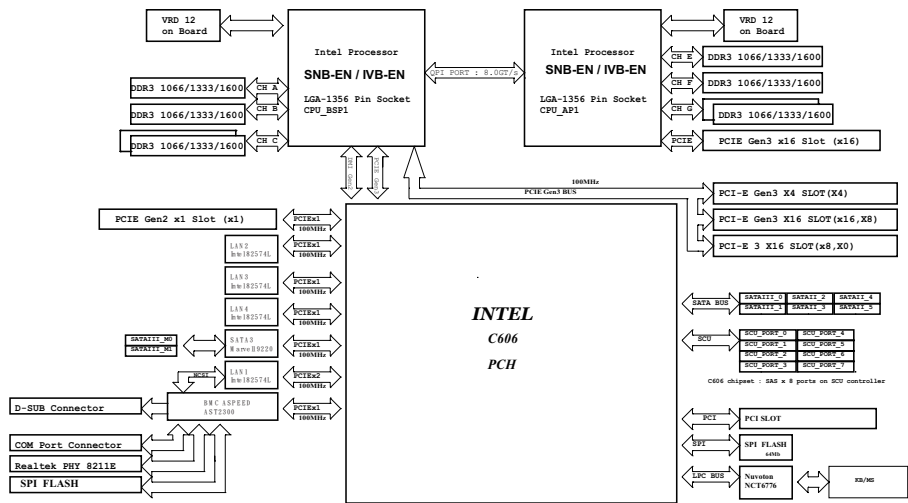

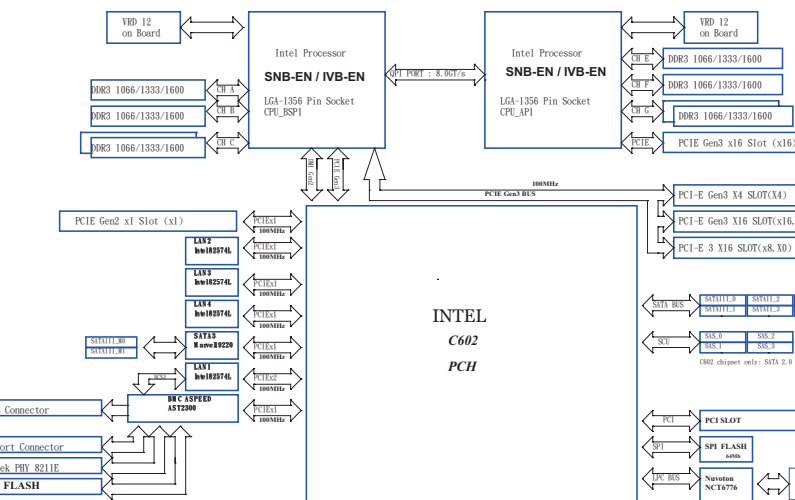

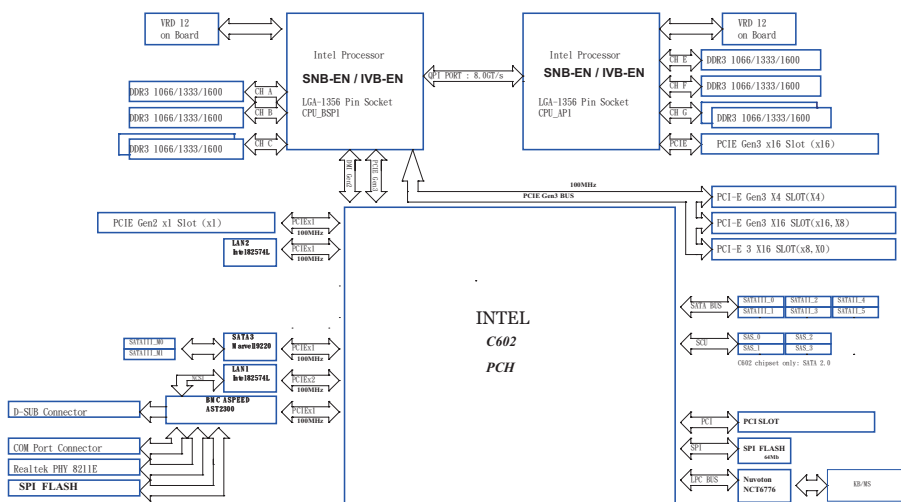EN2C602

Chapter 2: Installation

Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12 / EN2C606-4L / EN2C602-4L / EN2C602 are dual socket motherboards that support Intel® Xeon® E5-2400/1400 Series Processors. Please install a primary processor (BootStrap Processor) into “CPU_BSP1” socket and then install a non-Primary Processor (Application Processors) into “CPU_AP1” socket. *For a single CPU, please install it into “CPU_BSP1” socket (framed by a square).

2.1 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.


1. Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.
2. In order to avoid damage from static electricity to the motherboard's components, NEVER place your motherboard directly on a carpet. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any components, place them on a grounded anti-static pad or in the bag that comes with the components.
5. When placing screws to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.

2.3 CPU Installation

For the installation of Intel 1356-Pin CPU, please follow the steps below.

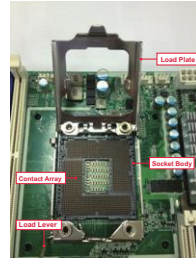

1356-Pin Socket Overview



Before you insert the 1356-Pin CPU into the socket, please check if the CPU surface is unclean or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.

Step 1. Open the socket:


Step 1-1. Disengage the lever by pressing it down and sliding it out of the hook.



Step 1-2. Keep the lever positioned at about 135 degrees in order to flip up the load plate.



Step 2. Remove the PnP Cap (Pick and Place Cap).

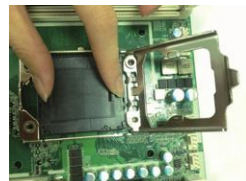





1. It is recommended to use the cap tab to handle and avoid kicking off the PnP cap.
2. This cap must be placed if returning the motherboard for after service.

Step 3. Insert the 1366-Pin CPU:

Step 3-1. Hold the CPU by the edge which is marked with a black line.



Step 3-2. Locate Pin1 and the two orientation key notches.

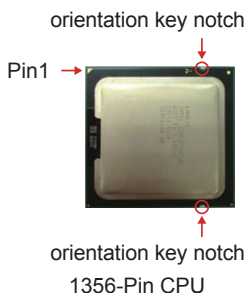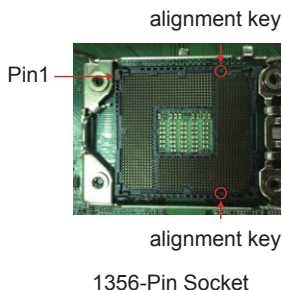

For proper inserting, please ensure to match the two orientation key notches of the CPU with the two alignment keys of the socket.

Step 3-3. Carefully place the CPU into the socket.

Step 3-4. Verify that the CPU is within the socket and properly mated to the orient keys.



Step 4. Close the socket:

Step 4-1. Flip the load plate onto the IHS.

Step 4-2. Press down the load lever, and
secure it with the load plate tab
under the retention tab.




2.4 Installation of CPU Fan and Heatsink

This motherboard is equipped with 1356-Pin socket that supports Intel 1356-Pin CPUs. Please adopt the type of heatsink and cooling fan compliant with Intel 1356-Pin CPU to dissipate heat. Before you install the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation. Ensure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU_FAN connector.

For proper installation, please kindly refer to the instruction manuals of your CPU fan and heatsink.

Below is an example to illustrate the installation of the heatsink for 1356-Pin CPUs.

- Step 1. Apply thermal interface material onto the center of the IHS on the socket's surface.
- Step 2. Place the heatsink onto the socket. Ensure that the fan cables are faced on the side closest to the CPU fan connector on the motherboard.

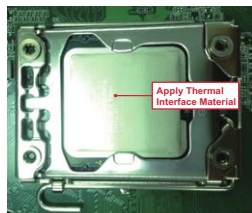

- Step 3. Align screws with the motherboard's holes.
- Step 4. Use a screw driver to install the screws.



If you press down the fasteners without rotating them clockwise, the heatsink cannot be secured on the motherboard.

- Step 5. Connect CPU fan connector with the fan header on the motherboard.
- Step 6. Secure redundant cable with tie-wrap to ensure that the cable does not interfere with the fan's operation or contact other components.

2.5 Installation of Memory Modules (DIMM)

This motherboard provides four 240-pin DDR3 (Double Data Rate 3) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install two identical (the same brand, speed, size and chip-type) memory modules in the DDR3 DIMM slots to activate Dual Channel Memory Technology. Otherwise, it will operate at single channel mode.




1. It is not allowed to install a DDR or DDR2 memory module into a DDR3 slot; otherwise, this motherboard and DIMM may be damaged.
2. If you install only one memory module or two non identical memory modules, it is unable to activate Dual Channel Memory Technology.
3. Some DDR3 1GB double-sided DIMMs with 16 chips may not work on this motherboard. It is not recommended to install them on this motherboard.
4. A single memory module should be installed in the blue socket.
5. If you install only one CPU (CPU_BSP1) on the motherboard, make sure to install DIMMs into DDR3_A, DDR3_B, or DDR3_C.

Installing a DIMM



Please make sure to disconnect the power supply before adding or removing DIMMs or system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

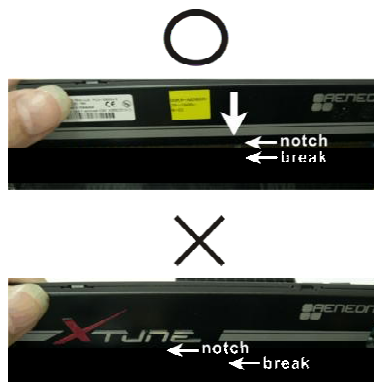

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

2.6 Expansion Slots (PCI and PCI Express Slots)

EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12:

There are 2 PCI slots and 5 PCI Express slots on the motherboard.

PCI slot: The PCI1 and PCI2 slot are used to install expansion cards that have 32-bit PCI interface.

PCIE slots:

PCIE7 (PCIE 3.0 x4 slot) is used for PCI Express x4 lane width cards.

PCIE4 (PCIE 2.0 x1 slot) is used for PCI Express x1 lane width cards, such as a Gigabit LAN card or SATA2 card, etc.

PCIE5 (PCIE 3.0 x16 slot) are used for PCI Express x8 lane width graphics cards.

PCIE3 and PCIE6 (PCIE 3.0 x16 slot) are used for PCI Express x16 lane width graphics cards.



Please note that PCIE3 and PCIE5 are available **ONLY** when the second CPU (CPU_AP1) is installed.

EN2C606-4L / EN2C602-4L / EN2C602

There are 1 PCI slot and 5 PCI Express slots on the motherboard.

PCI slot: The PCI slot is used to install expansion cards that have 32-bit PCI interface.

PCIE slots:

PCIE5 (PCIE 3.0 x4 slot) is used for PCI Express x4 lane width cards.

PCIE1 (PCIE 2.0 x1 slot) is used for PCI Express x1 lane width cards, such as a Gigabit LAN card or SATA2 card, etc.

PCIE6, (PCIE 3.0 x16 slot) is used for PCI Express x8 lane width graphics cards.

PCIE2 and PCIE4 (PCIE 3.0 x16 slot) are used for PCI Express x16 lane width graphics cards.




In single VGA card mode, it is recommended to install a PCI Express x16 graphics card on PCIe6 slot.

Installing an expansion card


- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

2.7 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “Short”. If no jumper cap is placed on pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when jumper cap is placed on these 2 pins.

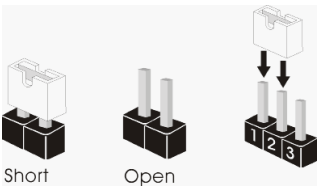

 ME Recovery Jumper
(3-pin ME_RECOVERY1)
(see p.13, 16,19,21,24,27)



1-2:
Default
2-3:
ME recovery mode

PSU Jumper
(9-pin PSU Jumper)
(see p.13, 16,19)



1-2:
PSU_SMBus loads the data
via PCH chip
2-3:
PSU_SMBus loads the data
via BMC chip (Default)

2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard!

 
Serial ATA2 Connectors

(SATAII_2_3)

(see p.15, 18, 21, 24, 27, 30)

(SATAII_4_5)

(see p.15, 18, 21, 24, 27, 30)



These four Serial ATA2 (SATA2) connectors support SATA data cables for internal storage devices. The current SATA2 interface allows up to 3.0 Gb/s data transfer rate.

Serial ATA3 Connectors

(SATAIII_0_1)

(see p.15, 18, 21, 24, 27, 30)

(SATAIII_M2_M3)

(see p.15, 18, 21)

(SATAIII_M0_M1)

(see p.15, 18, 21, 24, 27, 30)



These four Serial ATA3 (SATA3) connectors support SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

Serial ATA (SATA) Data Cable



Either end of the SATA data cable can be connected to SATA / SATA2 / SATA3 hard disks or the SATA2 / SATA3 connectors on this motherboard.

SCU Connectors

(SCU_PORT_0)

(SCU_PORT_1)

(SCU_PORT_2)

(SCU_PORT_3)

 
(SCU_PORT_4)

(SCU_PORT_5)

(SCU_PORT_6)

(SCU_PORT_7)

(see p.15, 18, 21)



These eight SCU connectors support SAS/SATA data cables for internal storage devices. The current SAS2/SATA3 interface allows up to 6.0 Gb/s data transfer rate. For connecting SAS HDDs, please contact SAS data cable dealers.

(SCU_PORT_0)

(SCU_PORT_1)

(SCU_PORT_2)

(SCU_PORT_3)


(SCU_PORT_4)

(SCU_PORT_5)

(SCU_PORT_6)

(SCU_PORT_7)

(see 24, 27, 30)

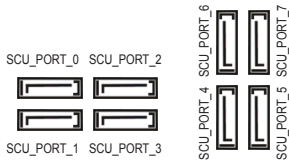


USB 2.0 Headers and Ports

(9-pin USB_2_3)

(see p.16,18, 21, 24, 27, 30)

(9-pin USB_4_5)

(see p.16,19, 22, 24, 27, 30)

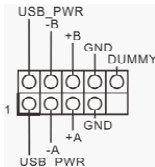

Besides two default USB 2.0 ports on the I/O panel, there are two USB 2.0 headers and one port on this motherboard. Each USB 2.0 header can support two USB 2.0 ports.

(USB_6)


(see p.16,19, 22, 25, 27, 30)



TPM Header

(17-pin TPM1)

(see p. 16, 19, 22, 25, 28, 31)

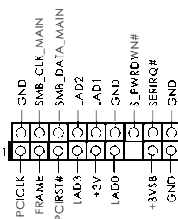


This connector supports Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

System Panel Header

(9-pin PANEL1)

(see p. 16, 18, 21, 25, 27, 30)

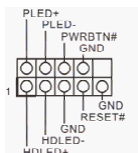

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):


Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S1/S3 sleep state. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Auxiliary Panel Header
(18-pin AUX_PANEL1)
(see p.16,19, 22, 25, 28, 31)

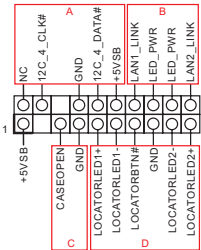

This header supports multiple functions on the front panel, including front panel SMB, internet status indicator and chassis intrusion pin.



A. Front panel SMBus connecting pin (6-pin FPSMB)

This header allows you to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

B. Internet status indicator (2-pin LAN1_LED, LAN2_LED)

These two 2-pin headers allow you to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.

C. Chassis intrusion pin (2-pin CHASSIS)

 
This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.

D. Locator LED (6-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

Speaker Header


(4-pin SPEAKER1)
(see p.16, 19, 22, 24, 27, 30)



Please connect the speaker to this header.


Front and Rear Fan Connectors

 (4-pin FRNT_FAN1)
(4-pin FRNT_FAN2)
(4-pin FRNT_FAN3)
(4-pin FRNT_FAN4)
(see p.15,18,21)




Please connect the fan cables to the fan connectors and match the black wire to the ground pin. All fans supports Fan Control.

 
(4-pin FRNT_FAN2)
(4-pin FRNT_FAN3)
(4-pin FRNT_FAN4)
(see p.24, 27, 30)



 
(4-pin REAR_FAN1)
(see p.16, 19, 22, 25, 28, 31)



(4-pin REAR_FAN2)
(see p.16,19, 22)

 


(4-pin REAR_FAN2)
(see p.25, 28, 31)

 

CPU Fan Connectors


(4-pin CPU_FAN1_1)

 (see p.15, 18, 21)




Please connect the CPU fan cable to the connector and match the black wire to the ground pin.

 (see p.24, 27, 30)




(4-pin CPU_FAN2_1)

 (see p.15, 18, 21)




(see p.25, 28, 31)

 

Though this motherboard provides a 4-Pin CPU fan (Quiet Fan) connector, 3-Pin CPU fans can still work successfully even without the fan speed control function. If you plan to connect a 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

 Pin 1-3 Connected




3-Pin Fan Installation

(3-pin CPU_FAN1_2)

(see p.15, 18, 21)




 (see p.24, 27, 30)




(3-pin CPU_FAN2_2)

 
(see p.12, 15, 18)



(see p.25, 28, 31)

 

 ATX Power Connector
(24-pin ATXPWR1)
(see p.15, 18, 21, 24, 27, 30)




Please connect an ATX power supply to this connector.



Though this motherboard provides a 24-pin ATX power connector, it can still work if you adopt a traditional 20-pin ATX power supply. To use a 20-pin ATX power supply, please plug your power supply along Pin 1 and Pin 13.

 20-Pin ATX Power Supply Installation



Though this motherboard provides an 8-pin ATX 12V power connector, it can still work if you adopt a traditional 4-pin ATX 12V power supply. To use a 4-pin ATX power supply, please plug your power supply along Pin 1 and Pin 5.

4-Pin ATX 12V Power Supply Installation

 


ATX 12V Power Connector
(For EN2C60xD12 Series)
(8-pin ATX12V2)
(see p.15, 18, 21)




Please connect an ATX 12V power supply to this connector.

(8-pin ATX12V1)
(see p.15, 18, 21)




 ATX 12V Power Connector
(For EN2C60x Series)
(8-pin ATX12V_1)
(see p.21, 24, 27)



Please connect an ATX 12V power supply to this connector.

 
(8-pin ATX12V1)
(see p.24, 27, 30)



Serial port Header

(9-pin COM2)

(see p.16, 19, 22, 25, 28, 31)

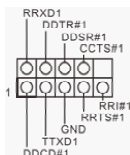


This COM2 header supports a serial port module.

Intelligent Platform Management Bus header

(4-pin IPMB_1)

 (see p.16, 19, 22, 25, 28, 31)



This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

Thermal Sensor header

(3-pin TR1)

(see p.16, 19, 22, 25, 28, 31)



Please connect the thermal sensor cable to either pin 1-2 or pin 2-3 and the other end to the device which you wish to monitor its temperature.

Clear CMOS Pad

(CLR CMOS2)

(see p.16, 19, 22, 24, 27, 30)



CLR CMOS2 allows you to clear the data in CMOS. To clear CMOS, take out the CMOS battery and short the Clear CMOS Pad.


Serial General Purpose Input/Output Header

(SCU_SGPIO1)

(see p.15, 18, 21, 24, 27, 30)

(SCU_SGPIO2)

(see p.15, 24)

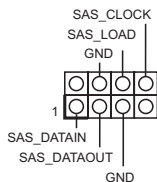


This header supports Serial
Link interface for onboard
SAS / SATA connections.

(SATA_SGPIO1)

(SATA_SGPIO2)

(see p.15, 18, 21, 24, 27, 30)

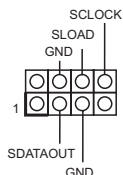


This header supports Serial
Link interface for onboard
SATA connections.

PSU SMBus

(PSUSMB1)

 (see p.15, 18, 21, 24, 27, 30)



PSU SMBus monitors the
status of the power supply,
fan and system temperature.

Non Maskable Interrupt Button Header

(NMI_BTN1)

(see p.16, 19, 22)

 


Please connect a NMI de-
vice to this header.

Front Lan LED Connector

(FRONT_LED_LAN34)

(see p.18, 24, 27, 30)



This 4-pin connector is used
for the front LAN status
indicator.

2.9 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from top to bottom to install those required drivers. Therefore, the drivers you install can work properly.

2.10 Hot Plug for Hard Disk Drives

This motherboard supports Hot Plug for HDDs in AHCI / RAID mode.



What is Hot Plug?

If the HDDs are NOT set for RAID, it is called "Hot Plug" for the action to insert and remove the HDDs while the system is still powered on and in working condition. However, please note that it cannot perform Hot Plug if the OS has been installed into the HDD.

Chapter 3: UEFI SETUP UTILITY

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure your system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. You may run the UEFI SETUP UTILITY when you start up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY, otherwise, POST will continue with its test routines.

If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

- | | |
|------------------------|---|
| Main | For setting system time/date information |
| Advanced | For advanced system configurations |
| H/W Monitor | Displays current hardware status |
| Boot | For configuring boot settings and boot priority |
| Security | For security settings |
| Save & Exit | Exit the current screen or the UEFI Setup Utility |
| Server Mgmt | For managing the server |
| Event Logs | For event log configuration |

3.1.2 Navigation Keys


Use < ← > key or < → > key to choose among the selections on the menu bar, and use < ↑ > key or < ↓ > key to move the cursor up or down to select items, then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.

Please check the following table for the descriptions of each navigation key.

Navigation Key(s)	Function Description
+ / -	To change option for the selected items
<Tab>	Switch to next function
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen


3.2 Main Screen

When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

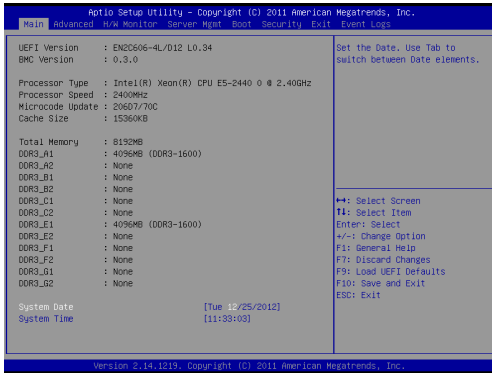

3.3 Advanced Screen

In this section, you may set the configurations for the following items: ACPI Configuration, WHEA Configuration, CPU Configuration, North Bridge Configuration, South Bridge Configuration, USB Configuration, ME Subsystem, Clock Generator Configuration, Storage Configuration, Super IO Configuration, Serial Port Console Redirection and Voltage Control.

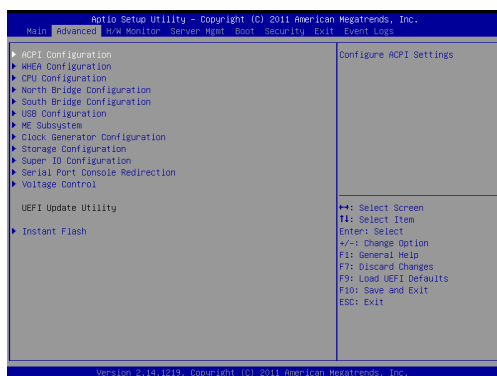


Setting wrong values in this section may cause the system to malfunction.

Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows®. Just save the new UEFI file to your USB flash drive, floppy disk or hard drive and launch this tool, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after the UEFI update process is completed.

3.3.1 ACPI Configuration

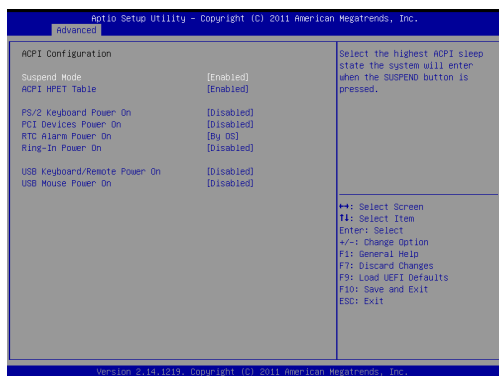

Suspend Mode

Use this item to enable or disable the highest ACPI Sleep state (S1). If enabled, the system enters S1 level when the SUSPEND button is pressed.

ACPI HPET Table

Use this item to enable or disable ACPI HPET Table. The default value is [Enabled].

PS/2 Keyboard Power On

Use this item to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

PCI Devices Power On

Use this item to enable or disable PCI devices to turn on the system from the power-soft-off mode.

Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.


USB Keyboard/Remote Power On

Use this item to enable or disable USB Keyboard/Remote to turn on the system from the power-soft-off mode.

USB Mouse Power On

Use this item to enable or disable USB Mouse to turn on the system from the power-soft-off mode.


3.3.2 WHEA Configuration

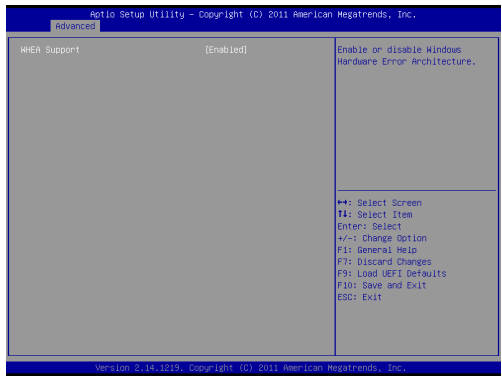

WHEA Support

Use this option to enable or disable Windows Hardware Error Architecture. The default value is [Enabled].

3.3.3 CPU Configuration

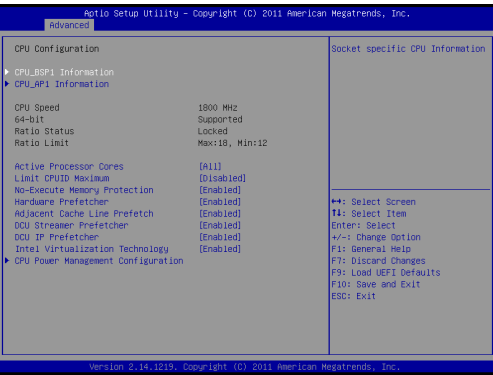

CPU_BSP1 Information

Display information regarding the primary processor (BootStrap Processor).

CPU_AP1 Information

Display information regarding the non-primary processor (Application Processors).

Intel Hyper Threading Technology

To enable this feature, a computer system with an Intel processor that supports Hyper-Threading technology and an operating system that includes optimization for this technology is required. This option will be hidden if the installed CPU does not support Hyper-Threading technology.

Active Processor Cores

Use this item to select the number of cores to enable in each processor package. The default value is [All].

Limit CPUID Maximum

This function allows you to limit CPUID maximum value. Unless the OS is Windows® NT, disable this function.

No-Execute Memory Protection

No-Execution (NX) Memory Protection Technology is an enhancement to the IA-32 Intel Architecture. An IA-32 processor with “No Execute (NX) Memory Protection” can prevent data pages from being used by malicious software to execute codes. This option will be hidden if the current CPU does not support No-Execute Memory Protection.

Hardware Prefetcher

Use this to turn on/off the MLC streamer prefetcher.

Adjacent Cache Line Prefetch

Use this to turn on/off prefetching of adjacent cache lines.

DCU Streamer Prefetcher

If enabled, the DCU (data cache unit) Streamer Prefetcher prefetches the next L1 Data line based upon multiple loads in same cache line. It is recommended to enable this option to enhance data processing capacity.


Intel Virtualization Technology

When this option is set to [Enabled], a VMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by Vanderpool Technology. This option will be hidden if the installed CPU does not support Intel Virtualization Technology.

CPU Power Management

Use this to configure CPU Power Management.

3.3.4 North Bridge Configuration

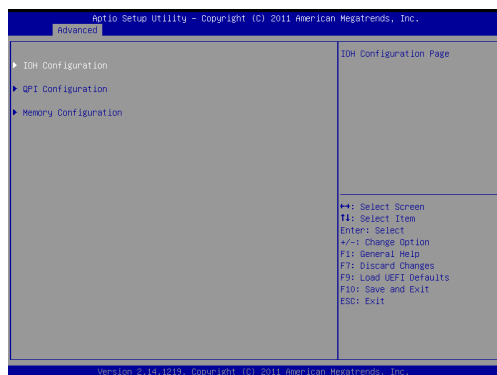

IOH (I/O hub) Configuration

Intel® VT-d

Use this to enable/disable Intel® Virtualization Technology for the Directed I/O.

Intel® I/OAT

Use this to enable/disable Intel® I/O Acceleration Technology.

Primary Graphics Adapter

This allows you to select a graphics device as the primary display.
The default value is [PCI Express].

Onboard VGA

Enable or disable the onboard VGA.

For EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12:

PCIE3 Link Speed

This allows you to select PCIE3 Link Speed.

PCIE5 Link Speed

This allows you to select PCIE5 Link Speed.

PCIE6 Link Speed

This allows you to select PCIE6 Link Speed.

PCIE7 Link Speed

This allows you to select PCIE7 Link Speed.

For EN2C606-4L / EN2C602-4L / EN2C602:

PCIE2 & PCIE4 Link Width

This allows you to select PCIE2 & PCIE4 Link Width.

PCIE2 & PCIE4 Link Speed

This allows you to select PCIE2 & PCIE4 Link Speed.

PCIE5 Link Speed

This allows you to select PCIE5 Link Speed.

PCIE6 Link Speed

This allows you to select PCIE6 Link Speed.

QPI (Intel Quickpath Interconnect) Configuration

Isoc

Use this to enable/disable Isoc. It is recommended to select [Enabled].

QPI Link Speed Mode

This allows you to select QPI Link Speed Mode. It is recommended to select [Auto].

QPI Link Frequency Select

This allows you to select QPI Link Frequency.

Memory Configuration

Memory Mode

Select the mode for memory initialization.

[Independent]:

Independent channel mode.

[Mirroring]:

The memory subsystem writes identical data to two channels simultaneously. Identical memory modules should be installed in the two channels closest to the processor.

[Lock Step]:

The two channels closest to the processor are combined to form a single channel. Memory modules must be identical in size, speed, and technology in corresponding slots.

[Sparing]:

This mode occurs when on-demand inactive memory is automatically activated by the system to temporarily replace failed memory until a service action can be performed.

DRAM RAPL BWLIMIT

This item sets the limits on the average power consumption and the bandwidth of a DRAM module. The options are Disabled, 0, 1 (Intel recommended value), 8 and 16.

Perform and DFX devices

This item can set the Perfmon and DFX devices hidden or unhidden.

DRAM RAPL (Running Average Power Limit) Mode

RAPL (Running Average Power Limit) provides mechanisms to enforce power consumption limits on supported processors. The default is [DRAM RAPL Mode 1].

Numa

Enable or disable the support of Non-Uniform Memory Access.

MPST Support

Enable or disable the support of Memory Power StateTable.

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assign the appropriate frequency automatically.

Channel Interleaving

It allows you to enable Channel Memory Interleaving. The default value is [Auto].

Rank Interleaving

It allows you to select a rank memory interleaving method. The default value is [Auto].

Patrol Scrub

Patrol Scrub is a background activity initiated by the processor to seek out and fix memory errors. The default value is [Enabled].

Demand Scrub

Fix the error when the CPU or I/O issues a demand-read command, and the read data from memory turns out to be a correctable error. The default value is [Disabled].

Data Scrambling

Enable this feature to ensure data security and integrity.

Device Tagging

The ability to replace a device with excessive corrected error. Once a device is tagged, errors can only be detected and not corrected.


Thermal Throttling

Use this automatic memory throttling feature to reduce power consumption. The default value is [CLTT] (Closed Loop Thermal Throttling).

DIMM Information

Display DIMM information.

3.3.5 South Bridge Configuration

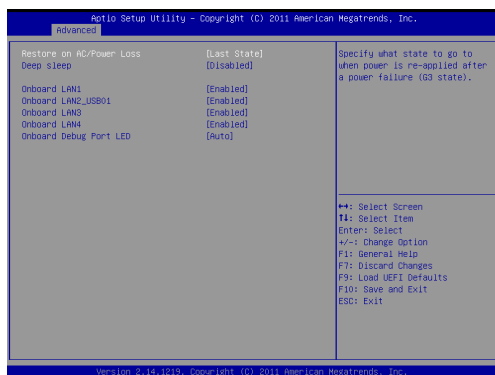

Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

Deep Sleep

Mobile platforms support Deep S4/S5 in DC only and desktop platforms support Deep S4/S5 in AC only. The default value is [Disabled].

Onboard LAN1

This allows you to enable or disable the Onboard LAN1.

Onboard LAN2_USB01

This allows you to enable or disable the Onboard LAN2_USB01.

Onboard LAN3 (For EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C606-4L / EN2C602-4L Only)

This allows you to enable or disable the Onboard LAN3.


Onboard LAN4 (For EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C606-4L / EN2C602-4L Only)

This allows you to enable or disable the Onboard LAN4.

Onboard Debug Port LED

Use this to enable or disable the Onboard Debug Port LED. The default value is [Auto].

3.3.6 USB Configuration

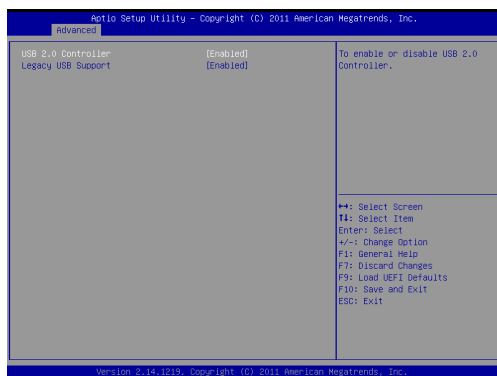

USB 2.0 Controller

Use this item to enable or disable the use of USB 2.0 controller.

Legacy USB Support

Use this option to select legacy support for USB devices. There are four configuration options: [Enabled], [Auto], [Disabled] and [UEFI Setup Only]. The default value is [Enabled]. Please refer to below descriptions for the details of these four options:


[Enabled] - Enables support for legacy USB.

[Auto] - Enables legacy support if USB devices are connected.

[Disabled] - USB devices are not allowed to use under legacy OS and UEFI setup when [Disabled] is selected. If you have USB compatibility issues, it is recommended to select [Disabled] to enter OS.

[UEFI Setup Only] - USB devices are allowed to use only under UEFI setup and Windows / Linux OS.


3.3.7 Intel® ME Subsystem

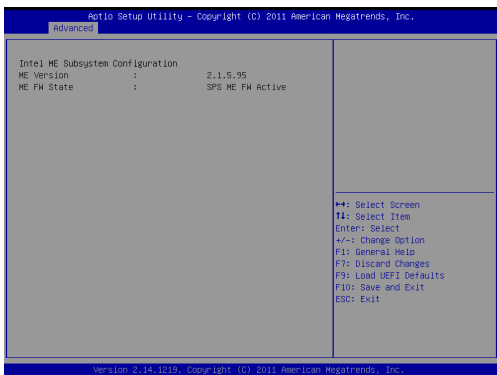

Intel® ME Subsystem

Display information regarding Intel® Management Engine.


3.3.8 Clock Generator Configuration

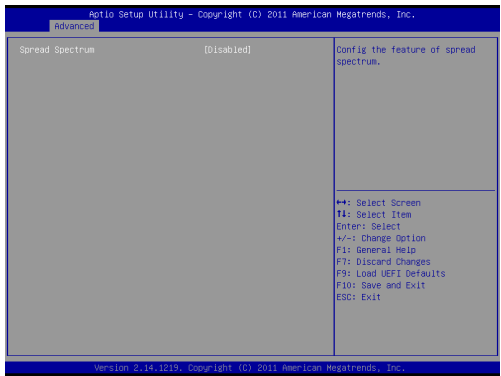

Spread Spectrum

It is recommended to disable this option for better system stability.

3.3.9 Storage Configuration

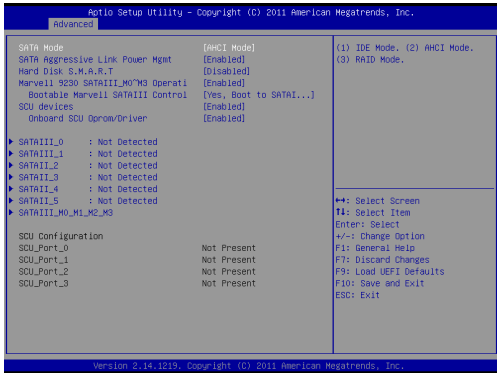

SATA Mode Selection

This item is for SATAIII_0_1, SATAII_2_3 and SATAII_4_5 ports. Use this to select SATA mode. Configuration options: [IDE Mode], [AHCI Mode], [RAID Mode] and [Disabled]. The default value is [AHCI Mode].



AHCI (Advanced Host Controller Interface) supports NCQ and other new features that will improve SATA disk performance but IDE mode does not have these advantages.

SATA Aggressive Link Power Management

Use this item to configure Aggressive Link Power Management.

Hard Disk S.M.A.R.T.

Use this to enable or disable S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology).

Marvell 9230 SATA3_M0~M3 Operation (For EN2C606-4L/D12 / EN2C602-4L/D12 / EN2C602/D12 Only):

This item is for SATAIII_M0_M1 and SATAIII_M2_M3 ports. Use this to enable or disable Marvell SATA3 operation mode.

Bootable Marvell SATAIII Control

Use this to select onboard Marvell SATAIII Option ROM.

SCU Devices

Use this to enable or disable SCU devices.

Onboard SCU Oprom/Driver

Use this to enable or disable Onboard Marvell SATA3 Option ROM. If Option ROM is disabled, you cannot use the SATA devices connected to the Marvell SATA3 controller as Boot Device.

Marvell 9220 SATA3_M0~M1 Operation (For EN2C606-4L / EN2C602-4L / EN2C602 Only):

This item is for SATAIII_M0_M1 ports. Use this to enable or disable Marvell SATA3 operation mode.

Bootable Marvell SATAIII Control

Use this to select onboard Marvell SATAIII Option ROM.

SCU Devices

Use this to enable or disable SCU devices.


Onboard SCU Oprom/Driver

Use this to enable or disable Onboard Marvell SATA3 Option ROM. If Option ROM is disabled, you cannot use the SATA devices connected to the Marvell SATA3 controller as Boot Device.



We recommend to use Intel® C606/C602 SATA ports (SATAIII_0_1, SATAII_2_3 and SATAII_4_5) for your bootable devices. This will minimum your boot time and get the best performance. But if you still want to boot from the Marvell SATA3 controller, you can enable it from the UEFI.

3.3.10 Super IO Configuration

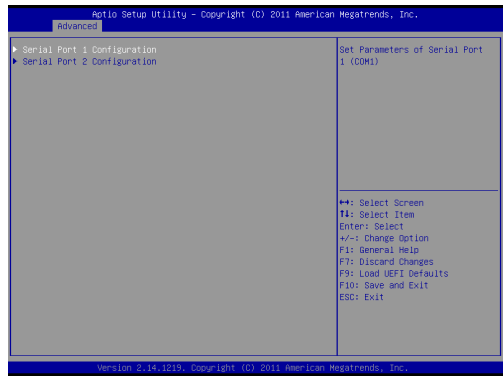


Serial Port 1 Configuration

Use this item to configure the onboard serial port 1.

Serial Port 2 Configuration

Use this item to configure the onboard serial port 2.

3.3.11 Serial Port Console Redirection

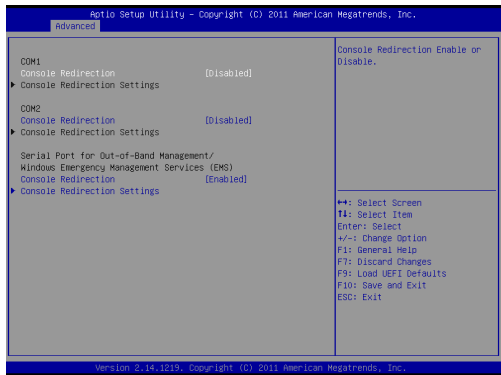


Console Redirection

Use this option to enable or disable Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings.

3.3.12 Voltage Control

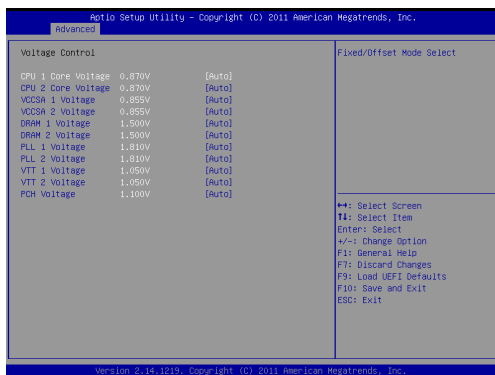

CPU 1 Core voltage

Use this to select CPU 1 Core voltage. The default value is [Auto].

CPU 2 Core voltage

Use this to select CPU 2 Core voltage. The default value is [Auto].

VCCSA 1 Voltage

Use this to select VCCSA 1 Voltage. The default value is [Auto].

VCCSA 2 Voltage

Use this to select VCCSA 2 Voltage. The default value is [Auto].

DRAM 1 Voltage

Use this to select DRAM 1 Voltage. The default value is [Auto].

DRAM 2 Voltage

Use this to select DRAM 2 Voltage. The default value is [Auto].

PLL 1 Voltage

Use this to select CPU PLL 1 Voltage. The default value is [Auto].

PLL 2 Voltage

Use this to select CPU PLL 2 Voltage. The default value is [Auto].

VTT 1 Voltage

Use this to select VTT 1 Voltage. The default value is [Auto].

VTT 2 Voltage


Use this to select VTT 2 Voltage. The default value is [Auto].

PCH Voltage

Use this to select PCH Voltage. The default value is [Auto].

3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature and the critical voltage.

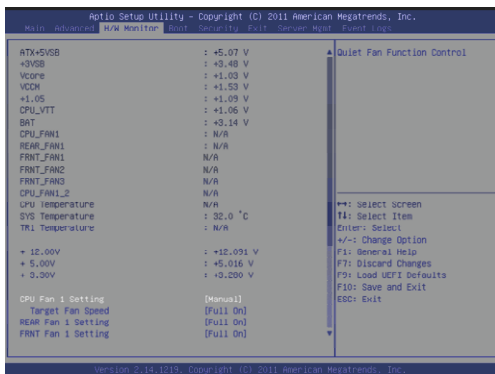

CPU_Fan1_1 Setting

This allows you to set the speed of CPU_Fan1_1. The default value is [Full On].

CPU_Fan1_2 Setting

This allows you to set the speed of CPU_Fan1_2. The default value is [Full On].

CPU_Fan2_1 Setting

This allows you to set the speed of CPU_Fan2_1. The default value is [Full On].

CPU_Fan2_2 Setting

This allows you to set the speed of CPU_Fan2_2. The default value is [Full On].

REAR_Fan1 Setting

This allows you to set the speed of REAR Fan1. The default value is [Full On].

REAR_Fan2 Setting

This allows you to set the speed of REAR Fan1. The default value is [Full On].

FRNT_Fan1 Setting

This allows you to set the speed of FRNT Fan1. The default value is [Full On].

FRNT Fan2 Setting

This allows you to set the speed of FRNT Fan2. The default value is [Full On].

FRNT Fan3 Setting

This allows you to set the speed of FRNT Fan3. The default value is [Full On].

FRNT Fan4 Setting

This allows you to set the speed of FRNT Fan4. The default value is [Full On].

Watch Dog Timer

This allows you to enable or disable the Watch Dog Timer. The default value is [Disabled].


Case Open Feature

This allows you to enable or disable the Case Open Feature. The default value is [Enabled].

Clear Status

Enable to clear case open status if case open has been detected.

3.5 Server Management

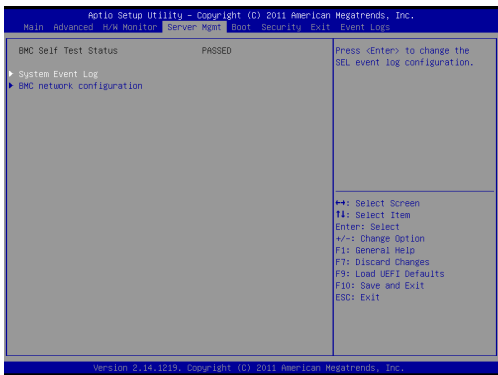

System Event Log

Enter to configure System Event Logging features during boot.

BMC Network Configuration

Enter to configure BMC Network parameters.

3.6 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.



Boot Option #1

Select boot option #1.

Boot Option #2

Select boot option #2.

Boot Option #3

Select boot option #3.

USB Device BBS Priorities

Set the boot priorities for USB devices.

Setup Prompt Timeout

This shows the number of seconds to wait for setup activation key. 65535(0XFFFF) means indefinite waiting.

Bootup NumLock State

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

PCI ROM Priority

Use this to adjust the PCI ROM Priority. The default value is [Legacy ROM].

Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Enabled].

AddOn ROM Display

Use this option to adjust AddOn ROM Display. If you enable the option “Full Screen Logo” but you want to see the AddOn ROM information when the system boots, please select [Enabled]. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled].

Boot From Onboard LAN


Use this item to enable or disable the Boot From Onboard LAN feature.

Boot From PCIE/PCI LAN


Use this item to enable or disable the Boot From PCIE/PCI LAN feature.

3.7 Security Screen

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

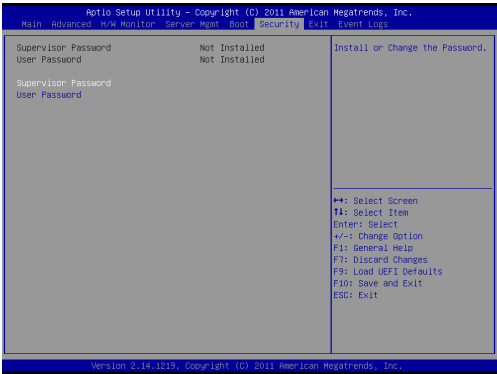

3.8 Exit Screen

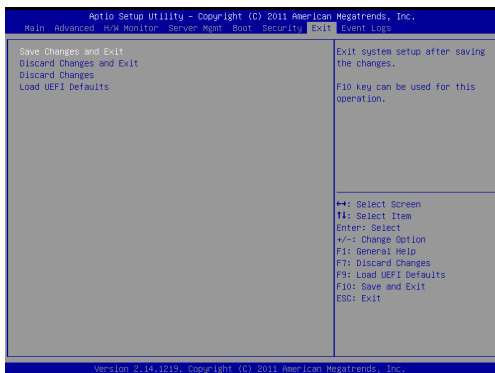

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop-out. Select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop-out. Select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.


Discard Changes

When you select this option, the following message “Discard changes?” will pop-out. Select [Yes] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

3.9 Event Logs

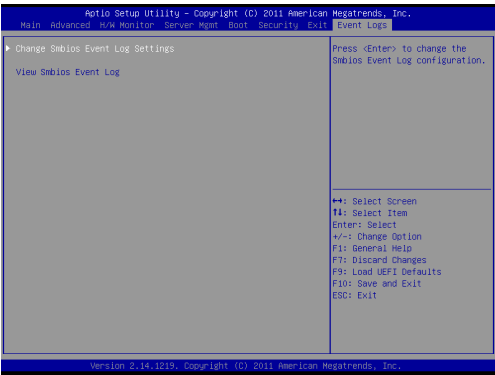

Change Smbios Event Log Settings

This allows you to configure the Smbios Event Log Settings.

View Smbios Event Log

This allows you to view the Smbios Event Log.

Chapter 4: Software Support

4.1 Install Operating System

This motherboard supports Microsoft® Windows® Server 2003 / 2003 R2 / 2008 / 2008 R2 / Linux compliant. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer your OS documentation for more information.

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard's features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double click on the file "ASRSETUP.EXE" in the Support CD to display the menu.

4.2.2 Drivers Menu

The Drivers Menu shows the available device's drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the application softwares that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 Contact Information

If you need to contact ASRock or want to know more about ASRock, you're welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

Chapter 5: Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot your system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries to you and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard. Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR3 1600/1333/1066 ECC DIMMs.
3. If you have installed more than one DIMM modules, they should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify

faulty ones.

5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether your power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to your problem on ASRock's FAQ page:
<http://www.asrock.com/support/faq.asp>
2. Try downloading and updating the latest UEFI on ASRock's website:
<http://www.asrock.com/support/download.asp>

5.2 Technical Support Procedures

If you have tried the troubleshooting procedures mentioned above and the problems are still unsolved, please contact ASRock's technical support with the following information:

1. Your contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

You may contact ASRock's technical support at:
<http://www.asrock.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of your invoice marked with the date of purchase is required. By calling your vendor or going to our RMA website (<http://www.asrock.com/support/index.asp?cat=RMA>) you may obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when you return the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact your distributor first for any product related problems during the warranty period.