



OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

GENOA2D24TM3-2L+

User Manual

English



Version 1.11

Published Doc. 2025

Copyright©2025 ASRock Rack INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRock Rack Tel : +886-2-55599600 ext.123 (Standard International call charges apply)

WARNING



THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a button battery can cause serious injury or death.

Please keep batteries out of sight or reach of children.

ASRock Rack's Website: www.ASRockRack.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related UKCA Directives. Full text of UKCA declaration of conformity is available at: <http://www.asrockrack.com>



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: <http://www.asrockrack.com>

ASRock Rack follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRock Rack product is in line with global environmental regulations. In addition, ASRock Rack disclose the relevant information based on regulation requirements.

Please refer to <https://www.asrockrack.com/general/about.asp?cat=Responsibility> for information disclosure based on regulation requirements ASRock Rack is complied with.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	6
1.4 Motherboard Layout	7
1.5 Onboard LED Indicators	11
1.6 I/O Panel	12
1.7 Block Diagram	14
Chapter 2 Installation	15
2.1 Screw Holes	15
2.2 Pre-installation Precautions	15
2.3 Installing the CPU	16
2.4 Installing the Memory Modules (DIMM)	21
2.5 Expansion Slots (PCI Express Slots)	23
2.6 Jumper Setup	24
2.7 Onboard Headers and Connectors	25
2.8 Dr. Debug	41
2.9 Identification purpose LED/Switch	47
2.10 Dual LAN and Teaming Operation Guide	48
2.11 M.2 SSD Module Installation Guide (M2_1)	49
2.12 M.2 SSD Module Installation Guide (M2_2)	51
Chapter 3 UEFI Setup Utility	53
3.1 Introduction	53

3.1.1	UEFI Menu Bar	53
3.1.2	Navigation Keys	54
3.2	Main Screen	55
3.2.1	Motherboard Information	56
3.2.2	Processor Information	56
3.2.3	Memory Information	57
3.3	Advanced Screen	58
3.3.1	CPU Configuration	59
3.3.2	Chipset Configuration	60
3.3.3	Storage Configuration	62
3.3.4	NVMe Configuration	63
3.3.5	ACPI Configuration	64
3.3.6	USB Configuration	65
3.3.7	Super IO Configuration	66
3.3.8	Serial Port Console Redirection	67
3.3.9	H/W Monitor	70
3.3.10	PCI Subsystem Settings	71
3.3.11	AMD CBS	72
3.3.12	AMD PBS	73
3.3.13	PSP Firmware Versions	75
3.3.14	Network Stack Configuration	76
3.3.15	Driver Health	78
3.3.16	Tls Auth Configuration	79
3.3.17	Instant Flash	80

3.4	Security	81
3.4.1	Install Default Secure Boot Keys	82
3.4.2	Clear Secure Boot Keys	83
3.4.3	Key Management	84
3.5	Server Mgmt	87
3.5.1	BMC Network Configuration	89
3.5.2	DNS Configuration	91
3.5.3	System Event Log	93
3.5.4	BMC Tools	94
3.6	Event Logs	95
3.7	Boot Screen	97
3.8	Exit Screen	99

Chapter 4 Software Support	100
-----------------------------------	------------

4.1	Download and Install Operating System	100
4.2	Download and Install Software Drivers	100
4.3	Contact Information	100

Chapter 5 Troubleshooting	101
----------------------------------	------------

5.1	Troubleshooting Procedures	101
5.2	Technical Support Procedures	103
5.3	Returning Merchandise for Service	103

Chapter 1 Introduction

Thank you for purchasing ASRock Rack **GENOA2D24TM3-2L+** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the Software Support.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. Find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: www.ASRockRack.com

*Please visit the website for more information and technical support:
<http://www.asrockrack.com/support/>*

1.1 Package Contents

- ASRock Rack GENOA2D24TM3-2L+ motherboard
(Proprietary T-shape form factor: 18.86" x 17.01", 47.9cm x 43.21cm)
- Quick installation guide
- 1 I/O shield
- 2 Screws for M.2 sockets



If any items are missing or appear damaged, contact the authorized dealer.

1.2 Specifications

GENOA2D24TM3-2L+	
Physical Status	
Form Factor	Proprietary T-shape
Dimension	18.86" x17.01"
Processor System	
CPU	Supports AMD EPYC™ 9005*/9004 (with AMD 3D V-Cache™ Technology) and 97x4 series processors <i>*A BIOS update is required to support AMD EPYC™ 9005 series processors</i>
Socket	Dual Socket SP5 (LGA6096)
Thermal Design Power (TDP)	Up to 400W
Chipset	System on Chip
System Memory	
Supported DIMM Quantity	12+12 DIMM slots (1DPC)
Supported Type	Supports DDR5 288-pin RDIMM, RDIMM-3DS
Max. Capacity per DIMM	RDIMM: 128GB (2Rx4) RDIMM-3DS: 256GB (2Rx4)
Max. Frequency	4800MHz
Voltage	1.1V
<i>Note: Memory capacity, frequency, and voltage support is to be validated.</i>	
PCIe Expansion Slots	
PCIe x16	SLOT1: Gen-Z 4C+ (PCIe5.0/CXL2.0* x16) [CPU0]
PCIe x32	SLOT2: Gen-Z HP+8C (2 PCIe5.0 x16/2 CXL2.0* x16) [CPU0] SLOT3: Gen-Z HP+8C (2 PCIe5.0 x16/2 CXL2.0* x16) [CPU1] <i>*Supports CXL1.1 while installing AMD EPYC 9004 (with AMD 3D V-Cache™ Technology) and 97x4 series processors</i>
Other PCIe Expansion Connectors	
M.2	1 M-key (PCIe3.0 x4), supports 2230/2242/2260/2280 form factor [CPU0] 1 M-key (PCIe3.0 x4), supports 2242/2280 form factor [CPU1]
MCIO	2 MCIO (PCIe5.0 x8 or 8 SATA* 6Gb/s) [CPU0] 2 MCIO (PCIe5.0 x8 or 8 SATA 6Gb/s) [CPU0] 4 MCIO (PCIe5.0 x8) [CPU1] <i>*MCIO1 and MCIO2 support PCIe only while installing 2 processors</i>
SATA/SAS Storage	
PCH Built-in Storage	AMD EPYC™ 9005/9004 (Up to 32 SATA 6Gb/s): 4 MCIO
Ethernet	
Additional Ethernet Controller	Intel® i350: 2 RJ45 (1GbE)
OCP	1 OCP NIC 3.0 (PCIe5.0 x16) [CPU1]

Server Management	
BMC Controller	ASPEED AST2600
IPMI Dedicated GLAN	1 Realtek RTL8211F for dedicated management GLAN
Graphics	
Controller	ASPEED AST2600
VRAM	DDR4 512M
Rear I/O	
UID Button/LED	1 UID button w/ LED
Video Output	1 DB15 (VGA)
Serial Port	1 RJ45 (COM)
USB	2 Type-A (USB3.2 Gen1)
RJ45	2 RJ45 (1GbE), 1 dedicated IPMI
Internal Connectors/Headers	
Power Connector	2 (CRPS IN +12V/+12VSB, max. 2700W)
Other Power Connector	3 (2x4 pin, 12V) for GPU cards 1 (2x3 pin, +12V_AUX, 3V, 3VSB) for OCP 1 Micro-fit (2x3 pin, 12V, 3V, 3.3VSB) for Riser or Internal SSD 1 Micro-fit (2x8 pin, 12V, 5V) for HSBP 1 (2x6-pin, 12V) for HSBP
Auxiliary Panel Header	1 (26-pin): system fault LED, locate, SMBus 1 (18-pin): system fault LED, LAN1/LAN2 activity LED, locate, SMBus
NMI Button	1
VGA Header	1
Fan Header	8 (2x4pin) for 1U system 6 (2x3-pin) for 2U system
TPM Header	1 (13-pin,SPI)
SGPIO Header	4
HSBP	1
SMBus Header	3
IPMB Header	1
Clear CMOS	1 (contact pads)
USB Header	1 (19-pin, 1 USB3.2 Gen1) 1 (26-pin, 1 USB3.2 Gen1 and 2 USB2.0)
Others	1 (2-pin) Chassis Intrusion Header
LED Indicators	
Standby Power LED	1 (3.3VSB)
80 Debug Port LED	1
Fan Fail LED	8
BMC Heartbeat LED	1
System BIOS	
Type	AMI UEFI BIOS; 256 Mb (32MB) SPI Flash ROM
Features	ASRock Rack Instant Flash, ACPI 6.4 and above compliance wake up events, SMBIOS 3.5.0 and above, Plug and Play(PnP)

Hardware Monitor	
Temperature	CPU, MB, Card side Temperature Sensing
Fan	Fan Tachometer CPU Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature) Fan Multi-Speed Control
Voltage	P0_VDDCR_CPU0, P0_VDDCR_CPU1, P0_VDDCR_SOC, P0_VDD_18_DUAL, P0_VDD_11_S3, P0_VDDIO, P1_VDDCR_CPU0, P1_VDDCR_CPU1, P1_VDDCR_SOC, P1_VDD_18_DUAL, P1_VDD_11_S3, P1_VDDIO, +BAT, +12V, +3VSB, +5VSB
Support OS	
OS	Microsoft® Windows: (for EPYC 9004) - Server 2019 (64bit) - Server 2022 (64bit) Microsoft® Windows: (for EPYC 9005) - Server 2019 (64bit) - Server 2022 (64bit) - Server 2025 (64bit) Linux: (for EPYC 9004) - RedHat Enterprise Linux Server 8.6 (64bit) / Server 8.7 (64bit) / Server 9.0 (64bit) / Server 9.1 (64bit) - SUSE SLES 15.4 (64bit) - UBuntu 20.04.5 (64bit) / 22.04 (64bit) / 22.10 (64bit) Linux: (for EPYC 9005) - RedHat Enterprise Linux Server 8.10 (64bit) / Server 9.4 (64bit) - SUSE SLES 15.6 (64bit) - UBuntu 22.04.5 (64bit) / 24.04.2 (64bit) Hypervisor: (for EPYC 9004) - VMWare® ESXi 7.0 U3i / 8.0 - CITRIX Hypervisor 8.2.1 <i>*Please refer to the website for the latest OS support list.</i>
Enviroment	
Temperature	Operation temperature: 10°C ~ 35°C Non operation temperature: -40°C ~ 70°C
Humidity	Non operation humidity: 20% ~ 90% (Non condensing)

NOTE: Please refer to the website for the latest specifications.



This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.




If installing Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If installing the drivers only, it will pass the WHQL tests.

1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows user to update system BIOS without entering operating systems first like MS-DOS or Windows®. With this utility, press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to the USB flash drive, floppy disk or hard drive, then update the BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

1.4 Motherboard Layout

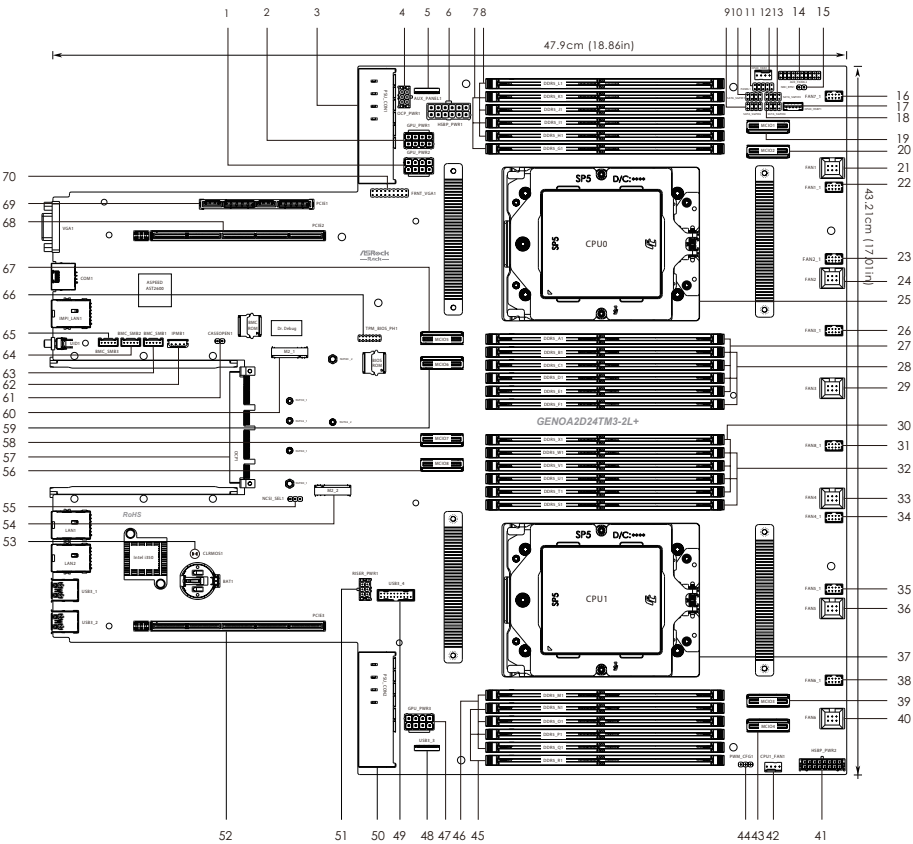


No.	Description
1	GPU Power Connector (GPU_PWR2)
2	GPU Power Connector (GPU_PWR1)
3	Power Supply Unit Connector (PSU_CON1)
4	OC Power Connector (OCP_PWR1)
5	Auxiliary Panel Header (AUX_PANEL1)
6	HDD Backplane Power Connector (HSBP_PWR1)
7	3 x 288-pin DDR5 DIMM Slots (DDR5_G1, DDR5_I1, DDR5_K1)*
8	3 x 288-pin DDR5 DIMM Slots (DDR5_H1, DDR5_J1, DDR5_L1)*
9	SATA SGPIO Connector (SATA_SGPIO2)
10	SATA SGPIO Connector (SATA_SGPIO1)
11	System Panel Header (PANEL1)
12	CPU0 Fan Connector (CPU0_FAN1)
13	SATA SGPIO Connector (SATA_SGPIO3)
14	Auxiliary Panel Header (AUX_PANEL2)
15	Non Maskable Interrupt Button (NMI_BTN1)
16	System Fan Connector (FAN7_1) <i>(for 1U system)</i>
17	Backplane PCI Express Hot-Plug Connector (CPU0_HSBP1)
18	SATA SGPIO Connector (SATA_SGPIO4)
19	Mini Cool Edge IO Connector (MCIO1)
20	Mini Cool Edge IO Connector (MCIO2)
21	System Fan Connector (FAN1) <i>(for 2U system)</i>
22	System Fan Connector (FAN1_1) <i>(for 1U system)</i>
23	System Fan Connector (FAN2_1) <i>(for 1U system)</i>
24	System Fan Connector (FAN2) <i>(for 2U system)</i>
25	AMD Socket SP5 (LGA6096) (CPU0)
26	System Fan Connector (FAN3_1) <i>(for 1U system)</i>
27	3 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_C1, DDR5_E1)*
28	3 x 288-pin DDR5 DIMM Slots (DDR5_B1, DDR5_D1, DDR5_F1)*
29	System Fan Connector (FAN3) <i>(for 2U system)</i>
30	3 x 288-pin DDR5 DIMM Slots (DDR5_T1, DDR5_V1, DDR5_X1)*
31	System Fan Connector (FAN8_1) <i>(for 1U system)</i>
32	3 x 288-pin DDR5 DIMM Slots (DDR5_S1, DDR5_U1, DDR5_W1)*
33	System Fan Connector (FAN4) <i>(for 2U system)</i>
34	System Fan Connector (FAN4_1) <i>(for 1U system)</i>

No.	Description
35	System Fan Connector (FAN5_1) <i>(for 1U system)</i>
36	System Fan Connector (FAN5) <i>(for 2U system)</i>
37	AMD Socket SP5 (LGA6096) (CPU1)
38	System Fan Connector (FAN6_1) <i>(for 1U system)</i>
39	Mini Cool Edge IO Connector (MCIO3)
40	System Fan Connector (FAN6) <i>(for 2U system)</i>
41	Micro-Fit HDD Backplane Power Connector (HSBP_PWR2)
42	CPU1 Fan Connector (CPU1_FAN1)
43	Mini Cool Edge IO Connector (MCIO4)
44	PWM Configuration Header (PWM_CFG1)
45	3 x 288-pin DDR5 DIMM Slots (DDR5_N1, DDR5_P1, DDR5_R1)*
46	3 x 288-pin DDR5 DIMM Slots (DDR5_M1, DDR5_O1, DDR5_Q1)*
47	GPU Power Connector (GPU_PWR3)
48	Front USB 3.2 Gen1 Header (USB3_3)
49	USB 3.2 Gen1 Header (USB3_4)
50	Power Supply Unit Connector (PSU_CON2)
51	Micro-Fit Riser Card Power Connector (RISER_PWR1)
52	PCIE 5.0 x32 Slot (PCIE3)
53	Clear CMOS Pad (CLRMOS1)
54	M.2 Socket (M2_2) (Type 2242/2280)
55	NCSI Mode Jumper (NCSI_SEL1)
56	Mini Cool Edge IO Connector (MCIO8)
57	OCPI 3.0 Gen5 x16 NIC Slot (OCP1)
58	Mini Cool Edge IO Connector (MCIO7)
59	Mini Cool Edge IO Connector (MCIO6)
60	M.2 Socket (M2_1) (Type 2230/2242/2260/2280)
61	Chassis Intrusion Header (CASEOPEN1)
62	Intelligent Platform Management Bus Header (IPMB1)
63	BMC SMBus Header (BMC_SMB1)
64	BMC SMBus Header (BMC_SMB2)
65	BMC SMBus Header (BMC_SMB3)
66	TPM-SPI Header (TPM_BIOS_PH1)
67	Mini Cool Edge IO Connector (MCIO5)
68	PCIE 5.0 x32 Slot (PCIE2)

No.	Description
69	PCIe 5.0 x16 Slot (PCIe1)
70	Front VGA Header (FRNT_VGA1)


**For DIMM installation and configuration instructions, please see p.20 (Installing the Memory Modules (DIMM)) for more details.*

1.5 Onboard LED Indicators

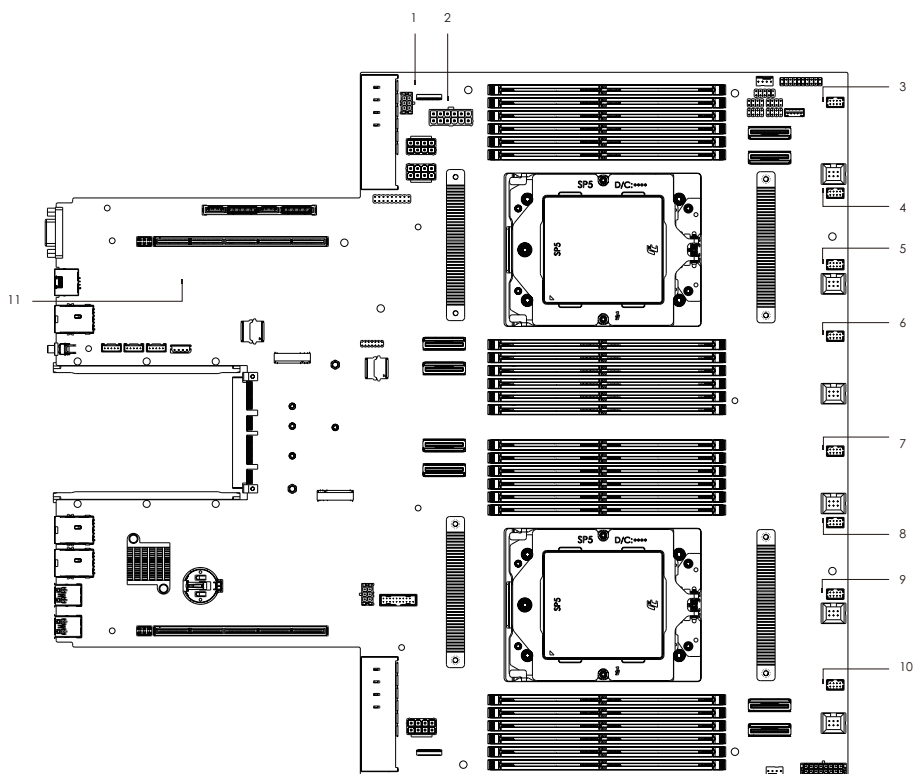

No.	Item	Status	Description
1	SYS_LED	Red	System fault
2	SB_PWR1	Green	STB PWR ready
3	LED_FAN7	Red	FAN7_1 failed
4	LED_FAN1	Red	FAN1_1 failed
5	LED_FAN2	Red	FAN2_1 failed
6	LED_FAN3	Red	FAN3_1 failed
7	LED_FAN8	Red	FAN8_1 failed
8	LED_FAN4	Red	FAN4_1 failed
9	LED_FAN5	Red	FAN5_1 failed
10	LED_FAN6	Red	FAN6_1 failed
11	BMC_LED1	Green	BMC heartbeat LED


1.6 I/O Panel

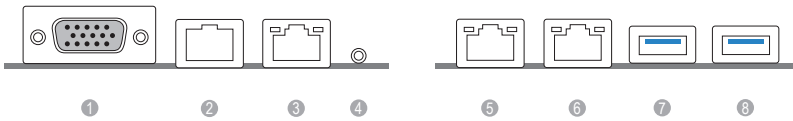

No.	Description	No.	Description
1	VGA Port (VGA1)	5	1G LAN RJ-45 Port (LAN1, shared NIC)**
2	RJ-45 Port (COM1)	6	1G LAN RJ-45 Port (LAN2)**
3	IPMI LAN Header (IPMI_LAN1)*	7	USB 3.2 Gen1 Port (USB3_1)
4	UID Switch (UID1)	8	USB 3.2 Gen1 Port (USB3_2)

LAN Port LED Indications


*There is an LED on each side of IPMI LAN port. Please refer to the table below for the LAN port LED indications.

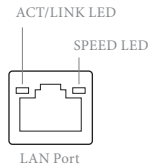

IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Yellow	100Mbps connection
On	Link	Green	1Gbps connection


*There is an LED on each side of 1G LAN port. Please refer to the table below for the LAN port LED indications.

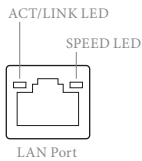

1G LAN Port (LAN1, LAN2) LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Orange	Data Activity	Orange	100Mbps connection
On	Link	Green	1Gbps connection

1.7 Block Diagram

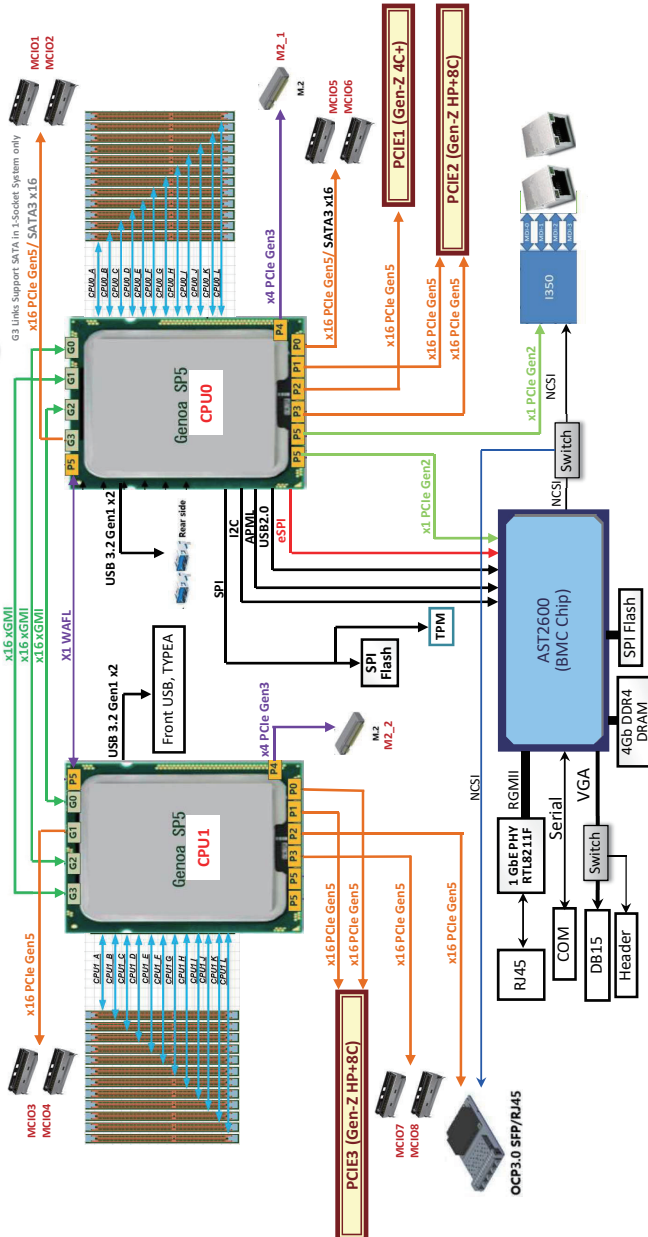

Chapter 2 Installation

This is a Proprietary T-shape form factor (18.86"x17.01") motherboard. Before installing the motherboard, study the configuration of the chassis to ensure that the motherboard fits into it.



1. Ensure the motherboard battery is installed before unplugging the power cord or installing/removing the motherboard.
2. Before installing or removing any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions


Take note of the following precautions before installing motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place the motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before handling the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.


2.3 Installing the CPU




1. Before inserting the CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

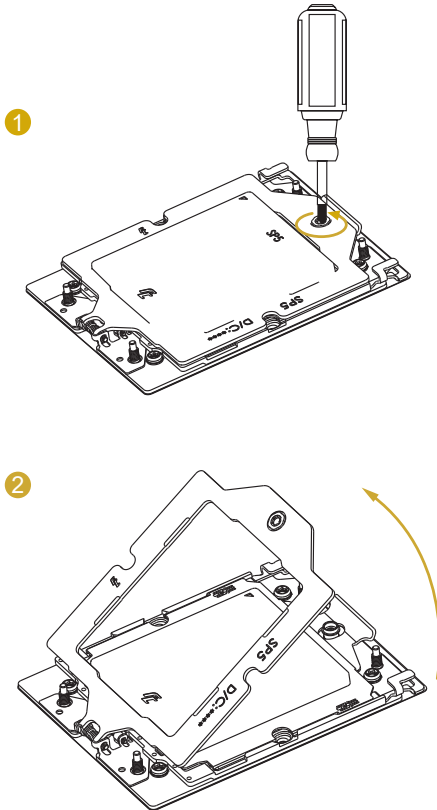


3

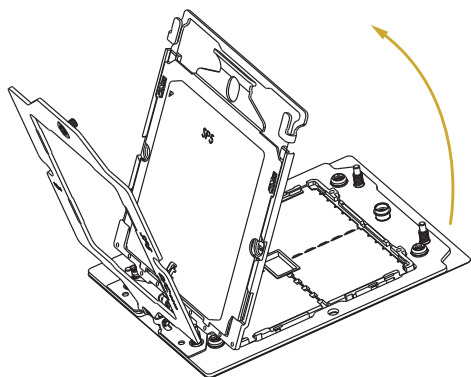

4

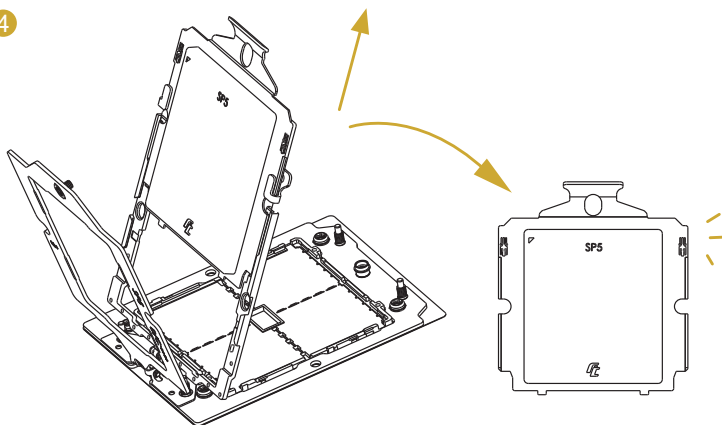

5

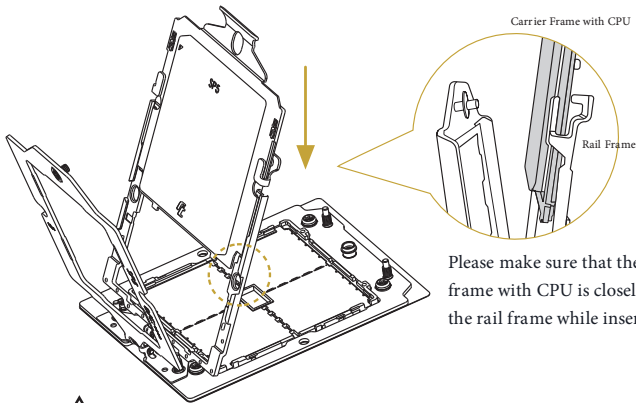


Please make sure that the carrier frame with CPU is closely attached to the rail frame while inserting it.




Install the carrier frame with CPU. Don't separate them.


6


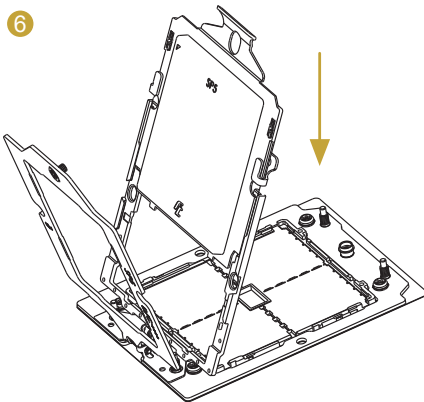


7

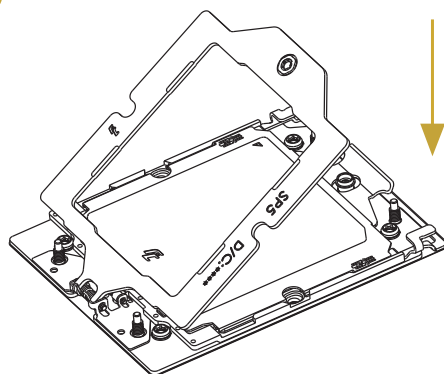

8

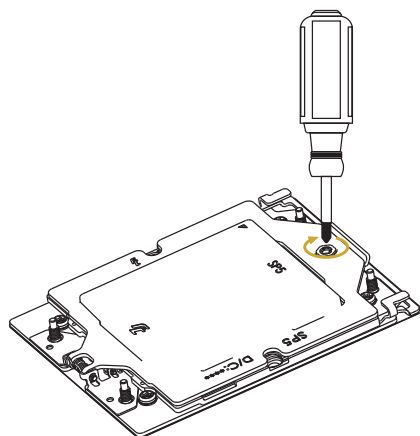

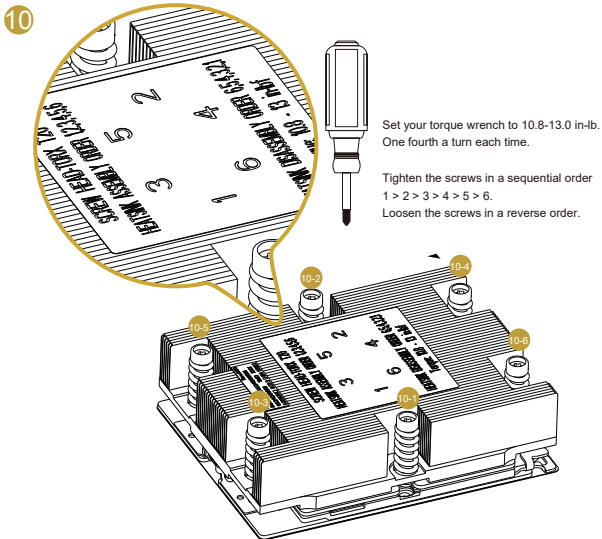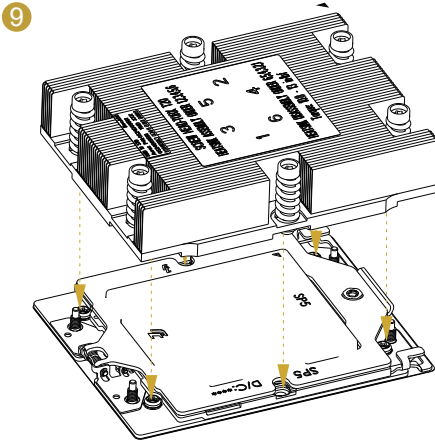


2.4 Installing the Memory Modules (DIMM)

This motherboard provides twenty-four 288-pin DDR5 (Double Data Rate 5) DIMM slots in two groups, and supports Single Channel Memory Technology.




1. It is not allowed to install a DDR, DDR2, DDR3 or DDR4 memory module into a DDR5 slot; otherwise, this motherboard and DIMM may be damaged.
2. For Twelve channel configuration, it always needs to install identical (the same brand, speed, size and chip-type) DDR5 DIMMs.


1

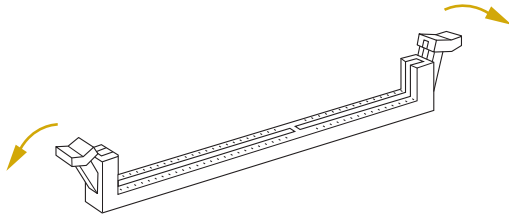

2

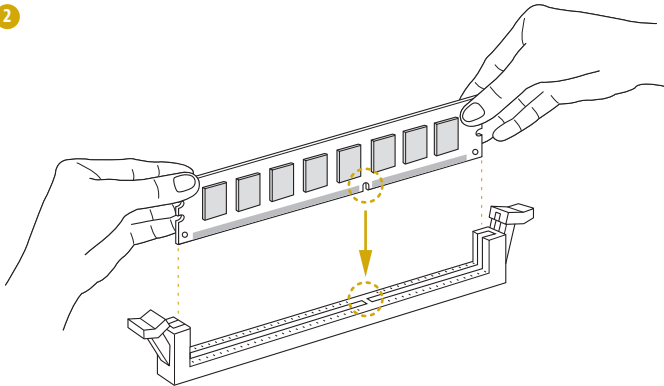

3

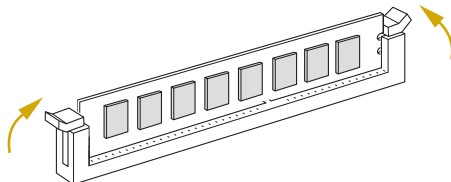

Recommended Memory Configurations

Number of Memory Channels Populated	Number of CPU Installed	AMD Recommended Memory Channels																							
		CPU0										CPU1													
		A1	B1	C1	D1	E1	F1	G1	H1	I1	J1	K1	L1	M1	N1	O1	P1	Q1	R1	S1	T1	U1	V1	W1	X1
24	2P	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
	1P																								
20	2P	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
	1P																								
16	2P	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V	V
	1P																								
12	2P	V	V	V				V	V	V			V	V		V				V	V				
	1P	V	V	V	V	V	V	V	V	V	V	V		V	V					V	V				
10	2P																								
	1P	V	V	V	V	V	V	V	V	V	V	V													
8	2P	V		V				V	V	V				V						V		V			
	1P	V	V	V		V	V	V	V	V	V				V										
6	2P																								
	1P	V	V	V				V	V																
4	2P	V						V						V						V					
	1P	V		V				V	V																
2	2P	V												V											
	1P	V					V																		
1	2P																								
	1P	V																							

2.5 Expansion Slots (PCI Express Slots)

There are three PCI Express slots on this motherboard.

PCIe slots:

PCIe3 (2 PCIe5.0 x16 / 2 CXL1.1 x16 slot, from CPU1) is used for PCI Express x32 lane width cards.

PCIe2 (2 PCIe5.0 x16 / 2 CXL1.1 x16 slot, from CPU0) is used for PCI Express x32 lane width cards.

PCIe1 (PCIe 5.0 / CXL1.1 x16 slot, from CPU0) is used for PCI Express x16 lane width cards.


Slot	Generation	Mechanical	Electrical	Source
PCIe3	5.0	x32	x32	CPU1
PCIe2	5.0	x32	x32	CPU0
PCIe1	5.0	x16	x16	CPU0

Installing an expansion card

- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before starting the installation.
- Step 2. Remove the system unit cover (if the motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that intending to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

2.6 Jumper Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.

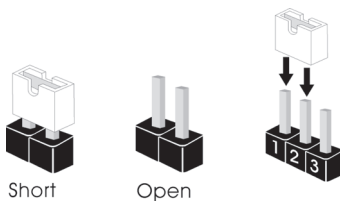

NCSI Mode Jumper
(3-pin NCSI_SEL1)
(see p.6, No. 55)



NCSI to I350 (Default)




NCSI to OCP NIC

2.7 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header
(9-pin PANEL1)
(see p.6, No.11)

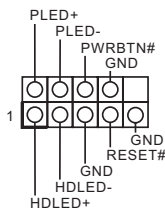

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. Configure the way to turn off the system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting the chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.


Auxiliary Panel Connector
(26-pin AUX_PANEL1)
(see p.6, No. 5)



This header supports multiple functions on the front panel, including front panel SMB, internet status indicator.


AUX_PANEL1	
PIN	NET
1	+3VSB
2	+3VSB
3	N/A
4	LOCATORLED+
5	PLED-
6	LOCATORLED-
7	+3V
8	N/A
9	System Fault LED-
10	HDLED-
11	PWRBTN#
12	LED PWR
13	GND
14	LAN1 LINK
15	RESET#
16	SMB_DATA
17	SMB_CLK
18	GND
19	LOCATORBTN#
20	N/A
21	N/A
22	N/A
23	LED PWR
24	LAN2 LINK
25	GND
26	GND

 Non Maskable Interrupt
Button Header
(2-pin NMI_BTN1)
(see p.6, No. 15)




Please connect a NMI device to this header.

 Chassis Intrusion Header
(2-pin CASEOPEN1)
(see p.6, No. 61)



This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

Auxiliary Panel Header
(18-pin AUX_PANEL2)
(see p.6, No. 14)

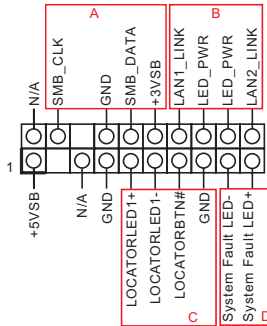

This header supports multiple functions on the front panel, including the front panel SMB, and internet status indicator.



A. Front panel SMBus connecting pin (6-1 pin FPSMB)

This header allows user to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

B. Internet status indicator (2-pin LAN1_LED, LAN2_LED)

These two 2-pin headers allow user to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.


C. Locator LED (4-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

D. System Fault LED (2-pin LOCATOR)

This header is for the Fault LED on the system.

USB 3.2 Gen1 Header
(19-pin USB3_4)
(see p.6, No. 49)

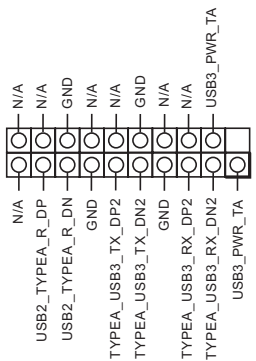

Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 header on this motherboard. This USB 3.2 Gen1 header can support one USB 3.2 Gen1 port.


Front USB 3.2 Gen1
Connector
(26-pin USB3_3)
(see p.6, No. 48)



Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 connector on this motherboard. This USB 3.2 Gen1 connector can support one USB 3.2 Gen1 port and two USB 2.0 ports.

USB3_3	
PIN	NET
1	Vbus
2	Vbus
3	Vbus
4	Vbus
5	Vbus
6	Vbus
7	GND
8	GND
9	GND
10	GND
11	GND
12	GND
13	GND
14	GND
15	INTA_PA_SSRX-
16	INTA_PA_SSRX+
17	GND
18	INTA_PA_SSTX-
19	INTA_PA_SSTX+
20	GND
21	IntA_PA_D-
22	IntA_PA_D+
23	GND
24	IntA_PB_D-
25	IntA_PB_D+
26	GND

CPU Fan Connectors
(4-pin CPU0_FAN1)
(see p.6, No. 12)
(4-pin CPU1_FAN1)
(see p.6, No. 42)

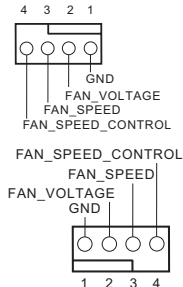

This motherboard provides two 4-Pin CPU fan (Quiet Fan) connectors. If planning to connect a 3-Pin CPU fan, please connect it to Pin 1-3.
**For more details, please refer to the Cooler QVL list on the ASRock Rack website.*

System Fan Connectors

(for 2U system)

(6-pin FAN1)

(see p.6, No. 21)

(6-pin FAN2)

(see p.6, No. 24)

(6-pin FAN3)

(see p.6, No. 29)

(6-pin FAN4)

(see p.6, No. 33)


(6-pin FAN5)

(see p.6, No. 36)

(6-pin FAN6)

(see p.6, No. 40)

Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.

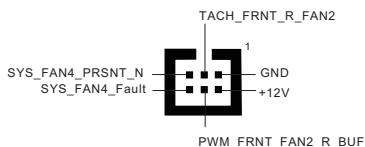

(for 1U system)

(8-pin FAN1_1)

(see p.6, No. 22)

(8-pin FAN2_1)

(see p.6, No. 23)

(8-pin FAN3_1)

(see p.6, No. 26)

(8-pin FAN4_1)

(see p.6, No. 34)

(8-pin FAN5_1)

(see p.6, No. 35)

(8-pin FAN6_1)


(see p.6, No. 38)

(8-pin FAN7_1)

(see p.6, No. 16)

(8-pin FAN8_1)

(see p.6, No. 31)

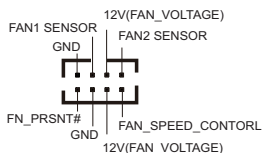

BMC SMB Headers

(5-pin BMC_SMB1)


(see p.6, No. 63)

(5-pin BMC_SMB2)

(see p.6, No. 64)

(5-pin BMC_SMB3)

(see p.6, No. 65)

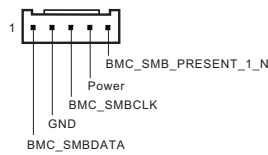


These headers are used for the SMBUS devices.

TPM-SPI Header

(13-pin TPM_BIOS_PH1)

(see p.6, No. 66)

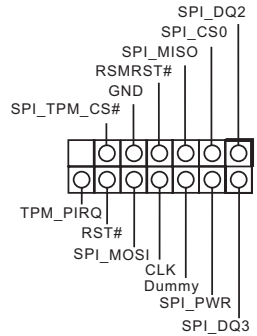

This connector supports SPI Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

GPU Power Connectors

(6-pin GPU_PWR1)


(see p.6, No. 2)

(6-pin GPU_PWR2)

(see p.6, No. 1)

(6-pin GPU_PWR3)

(see p.6, No. 47)

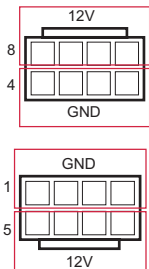


This motherboard provides three GPU power connectors.

Backplane Power Connector

(12-pin HSBP_PWR1)

(see p.6, No. 6)

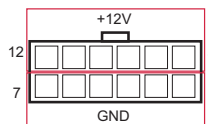


Please connect a 12-pin power cable to this connector to connect a HDD.

OCF Power Connector


(6-pin OCP_PWR1)

(see p.6, No. 4)

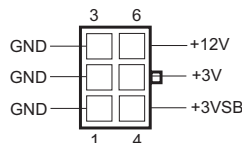


Please connect a 6-pin power cable to this connector for OCP power supply.

 Micro-Fit Backplane
Power Connector
(16-pin HSBP_PWR2)
(see p.6, No. 41)




Please connect a 16-pin power
cable to this connector to
connect a HDD.

Micro-Fit Riser Card
Power Connector
(6-pin RISER_PWR1)
(see p.6, No. 51)

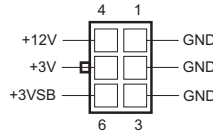


Please connect a 6-pin power
cable to this connector to
connect a riser card or an
internal SSD.

Front VGA Header
(17-pin FRNT_VGA1)
(see p.6, No. 70)

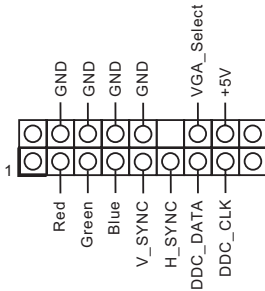


Please connect either end of
the VGA cable to this VGA
header.

Intelligent Platform
Management Bus header
(4-pin IPMB1)
(see p.6, No. 62)

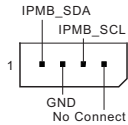

This 4-pin connector is used
to provide a cabled baseboard
or front panel connection
for value added features and
3rd-party add-in cards, such
as Emergency Management
cards, that provide manage-
ment features using the IPMB.

Serial General Purpose
Input/Output Headers
(7-pin SATA_SGPIO1)
(see p.6, No. 10)
(7-pin SATA_SGPIO2)
(see p.6, No. 9)
(7-pin SATA_SGPIO3)
(see p.6, No. 13)
(7-pin SATA_SGPIO4)
(see p.6, No. 18)

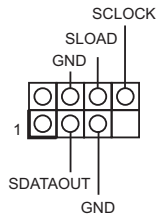


These headers support Serial
Link interface for onboard
SATA connections.

Clear CMOS Pad
(CLRMOS1)
(see p.6, No. 53)




This allows user to clear the data in CMOS. To clear CMOS, take out the CMOS battery and short the Clear CMOS Pad.

 PWM Configuration
Header
(3-pin PWM_CFG1)
(see p.6, No. 44)




This header is used for PWM configurations.

Backplane PCI Express
Hot-Plug Connector
(5-pin CPU0_HSBP1)
(see p.6, No. 17)

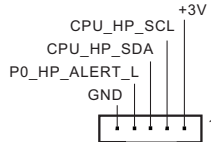

The header is used for the hot plug feature of HDDs on the backplane.

 MCIO Connectors
(MCIO1)
(see p.6, No. 19)
(MCIO2)
(see p.6, No. 20)
(MCIO3)
(see p.6, No. 39)
(MCIO4)
(see p.6, No. 43)
(MCIO5)
(see p.6, No. 67)
(MCIO6)
(see p.6, No. 59)
(MCIO7)
(see p.6, No. 58)
(MCIO8)
(see p.6, No. 56)



This motherboard supports These connectors are used for the PCIE devices.

MCIO1 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G3_RX_DP7	B2	G3_TX_DP7
A3	G3_RX_DN7	B3	G3_TX_DN7
A4	GND	B4	GND
A5	G3_RX_DP6	B5	G3_TX_DP6
A6	G3_RX_DN6	B6	G3_TX_DN6
A7	GND	B7	GND
A8	BP_TYPE1_R	B8	SCL1
A9	2WIRE_RESET1_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	G3_RX_DP5	B14	G3_TX_DP5
A15	G3_RX_DN5	B15	G3_TX_DN5
A16	GND	B16	GND
A17	G3_RX_DP4	B17	G3_TX_DP4
A18	G3_RX_DN4	B18	G3_TX_DN4
A19	GND	B19	GND
A20	G3_RX_DP3	B20	G3_TX_DP3
A21	G3_RX_DN3	B21	G3_TX_DN3
A22	GND	B22	GND
A23	G3_RX_DP2	B23	G3_TX_DP2
A24	G3_RX_DN2	B24	G3_TX_DN2
A25	GND	B25	GND
A26	-	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	G3_RX_DP1	B32	G3_TX_DP1
A33	G3_RX_DN1	B33	G3_TX_DN1
A34	GND	B34	GND
A35	G3_RX_DP0	B35	G3_TX_DP0
A36	G3_RX_DN0	B36	G3_TX_DN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO2 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G3_RX_DP15	B2	G3_TX_DP15
A3	G3_RX_DN15	B3	G3_TX_DN15
A4	GND	B4	GND
A5	G3_RX_DP14	B5	G3_TX_DP14
A6	G3_RX_DN14	B6	G3_TX_DN14
A7	GND	B7	GND
A8	BP_TYPE1_R	B8	SCL1
A9	2WIRE_RESET2_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	G3_RX_DP13	B14	G3_TX_DP13
A15	G3_RX_DN13	B15	G3_TX_DN13
A16	GND	B16	GND
A17	G3_RX_DP12	B17	G3_TX_DP12
A18	G3_RX_DN12	B18	G3_TX_DN12
A19	GND	B19	GND
A20	G3_RX_DP11	B20	G3_TX_DP11
A21	G3_RX_DN11	B21	G3_TX_DN11
A22	GND	B22	GND
A23	G3_RX_DP10	B23	G3_TX_DP10
A24	G3_RX_DN10	B24	G3_TX_DN10
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	G3_RX_DP9	B32	G3_TX_DP9
A33	G3_RX_DN9	B33	G3_TX_DN9
A34	GND	B34	GND
A35	G3_RX_DP8	B35	G3_TX_DP8
A36	G3_RX_DN8	B36	G3_TX_DN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO3 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G1_RX_DP7	B2	G1_TX_DP7
A3	G1_RX_DN7	B3	G1_TX_DN7
A4	GND	B4	GND
A5	G1_RX_DP6	B5	G1_TX_DP6
A6	G1_RX_DN6	B6	G1_TX_DN6
A7	GND	B7	GND
A8	BP_TYPE1	B8	SCL
A9	2WIRE_RESET3_N	B9	SDA
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	G1_RX_DP5	B14	G1_TX_DP5
A15	G1_RX_DN5	B15	G1_TX_DN5
A16	GND	B16	GND
A17	G1_RX_DP4	B17	G1_TX_DP4
A18	G1_RX_DN4	B18	G1_TX_DN4
A19	GND	B19	GND
A20	G1_RX_DP3	B20	G1_TX_DP3
A21	G1_RX_DN3	B21	G1_TX_DN3
A22	GND	B22	GND
A23	G1_RX_DP2	B23	G1_TX_DP2
A24	G1_RX_DN2	B24	G1_TX_DN2
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	G1_RX_DP1	B32	G1_TX_DP1
A33	G1_RX_DN1	B33	G1_TX_DN1
A34	GND	B34	GND
A35	G1_RX_DP0	B35	G1_TX_DP0
A36	G1_RX_DN0	B36	G1_TX_DN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO4 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	G1_RX_DP15	B2	G1_TX_DP15
A3	G1_RX_DN15	B3	G1_TX_DN15
A4	GND	B4	GND
A5	G1_RX_DP14	B5	G1_TX_DP14
A6	G1_RX_DN14	B6	G1_TX_DN14
A7	GND	B7	GND
A8	BP_TYPE1	B8	SCL
A9	2WIRE_RESET4_N	B9	SDA
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	G1_RX_DP13	B14	G1_TX_DP13
A15	G1_RX_DN13	B15	G1_TX_DN13
A16	GND	B16	GND
A17	G1_RX_DP12	B17	G1_TX_DP12
A18	G1_RX_DN12	B18	G1_TX_DN12
A19	GND	B19	GND
A20	G1_RX_DP11	B20	G1_TX_DP11
A21	G1_RX_DN11	B21	G1_TX_DN11
A22	GND	B22	GND
A23	G1_RX_DP10	B23	G1_TX_DP10
A24	G1_RX_DN10	B24	G1_TX_DN10
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	G1_RX_DP9	B32	G1_TX_DP9
A33	G1_RX_DN9	B33	G1_TX_DN9
A34	GND	B34	GND
A35	G1_RX_DP8	B35	G1_TX_DP8
A36	G1_RX_DN8	B36	G1_TX_DN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO5 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P0_RX_DP15	B2	P0_TX_DP15
A3	P0_RX_DN15	B3	P0_TX_DN15
A4	GND	B4	GND
A5	P0_RX_DP14	B5	P0_TX_DP14
A6	P0_RX_DN14	B6	P0_TX_DN14
A7	GND	B7	GND
A8	BP_TYPE1_R	B8	SCL1
A9	2WIRE_RESET5_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P0_RX_DP13	B14	P0_TX_DP13
A15	P0_RX_DN13	B15	P0_TX_DN13
A16	GND	B16	GND
A17	P0_RX_DP12	B17	P0_TX_DP12
A18	P0_RX_DN12	B18	P0_TX_DN12
A19	GND	B19	GND
A20	P0_RX_DP11	B20	P0_TX_DP11
A21	P0_RX_DN11	B21	P0_TX_DN11
A22	GND	B22	GND
A23	P0_RX_DP10	B23	P0_TX_DP10
A24	P0_RX_DN10	B24	P0_TX_DN10
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	P0_RX_DP9	B32	P0_TX_DP9
A33	P0_RX_DN9	B33	P0_TX_DN9
A34	GND	B34	GND
A35	P0_RX_DP8	B35	P0_TX_DP8
A36	P0_RX_DN8	B36	P0_TX_DN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO6 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P0_RX_DP7	B2	P0_TX_DP7
A3	P0_RX_DN7	B3	P0_TX_DN7
A4	GND	B4	GND
A5	P0_RX_DP6	B5	P0_TX_DP6
A6	P0_RX_DN6	B6	P0_TX_DN6
A7	GND	B7	GND
A8	BP_TYPE1_R	B8	SCL1
A9	2WIRE_RESET6_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	P0_RX_DP5	B14	P0_TX_DP5
A15	P0_RX_DN5	B15	P0_TX_DN5
A16	GND	B16	GND
A17	P0_RX_DP4	B17	P0_TX_DP4
A18	P0_RX_DN4	B18	P0_TX_DN4
A19	GND	B19	GND
A20	P0_RX_DP3	B20	P0_TX_DP3
A21	P0_RX_DN3	B21	P0_TX_DN3
A22	GND	B22	GND
A23	P0_RX_DP2	B23	P0_TX_DP2
A24	P0_RX_DN2	B24	P0_TX_DN2
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	P0_RX_DP1	B32	P0_TX_DP1
A33	P0_RX_DN1	B33	P0_TX_DN1
A34	GND	B34	GND
A35	P0_RX_DP0	B35	P0_TX_DP0
A36	P0_RX_DN0	B36	P0_TX_DN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO7 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P3_RX_DP15	B2	P3_TX_DP15
A3	P3_RX_DN15	B3	P3_TX_DN15
A4	GND	B4	GND
A5	P3_RX_DP14	B5	P3_TX_DP14
A6	P3_RX_DN14	B6	P3_TX_DN14
A7	GND	B7	GND
A8	BP_TYPE1	B8	SCL
A9	2WIRE_RESET7_N	B9	SDA
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	P3_RX_DP13	B14	P3_TX_DP13
A15	P3_RX_DN13	B15	P3_TX_DN13
A16	GND	B16	GND
A17	P3_RX_DP12	B17	P3_TX_DP12
A18	P3_RX_DN12	B18	P3_TX_DN12
A19	GND	B19	GND
A20	P3_RX_DP11	B20	P3_TX_DP11
A21	P3_RX_DN11	B21	P3_TX_DN11
A22	GND	B22	GND
A23	P3_RX_DP10	B23	P3_TX_DP10
A24	P3_RX_DN10	B24	P3_TX_DN10
A25	GND	B25	GND
A26	BP_TYPE2	B26	INT_N
A27	-	B27	-
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	P3_RX_DP9	B32	P3_TX_DP9
A33	P3_RX_DN9	B33	P3_TX_DN9
A34	GND	B34	GND
A35	P3_RX_DP8	B35	P3_TX_DP8
A36	P3_RX_DN8	B36	P3_TX_DN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO8 Pin Definition

Pin	Definition	Pin	Definition
A1	GND	B1	GND
A2	P3_RX_DP7	B2	P3_TX_DP7
A3	P3_RX_DN7	B3	P3_TX_DN7
A4	GND	B4	GND
A5	P3_RX_DP6	B5	P3_TX_DP6
A6	P3_RX_DN6	B6	P3_TX_DN6
A7	GND	B7	GND
A8	BP_TYPE1	B8	SCL1
A9	2WIRE_RESET8_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	-
A13	GND	B13	GND
A14	P3_RX_DP5	B14	P3_TX_DP5
A15	P3_RX_DN5	B15	P3_TX_DN5
A16	GND	B16	GND
A17	P3_RX_DP4	B17	P3_TX_DP4
A18	P3_RX_DN4	B18	P3_TX_DN4
A19	GND	B19	GND
A20	P3_RX_DP3	B20	P3_TX_DP3
A21	P3_RX_DN3	B21	P3_TX_DN3
A22	GND	B22	GND
A23	P3_RX_DP2	B23	P3_TX_DP2
A24	P3_RX_DN2	B24	P3_TX_DN2
A25	GND	B25	GND
A26	BP_TYPE2	B26	SCL2_R
A27	-	B27	SDA2_R
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	-
A31	GND	B31	GND
A32	P3_RX_DP1	B32	P3_TX_DP1
A33	P3_RX_DN1	B33	P3_TX_DN1
A34	GND	B34	GND
A35	P3_RX_DP0	B35	P3_TX_DP0
A36	P3_RX_DN0	B36	P3_TX_DN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

2.8 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

Code	Description
0x10	PEI_CORE_STARTED
0x11	PEI_CAR_CPU_INIT
0x15	PEI_CAR_NB_INIT
0x19	PEI_CAR_SB_INIT
0x31	PEI_MEMORY_INSTALLED
0x32	PEI_CPU_INIT
0x33	PEI_CPU_CACHE_INIT
0x34	PEI_CPU_AP_INIT
0x35	PEI_CPU_BSP_SELECT
0x36	PEI_CPU_SMM_INIT
0x37	PEI_MEM_NB_INIT
0x3B	PEI_MEM_SB_INIT
0x4F	PEI_DXE_IPL_STARTED
0x60	DXE_CORE_STARTED
0x61	DXE_NVRAM_INIT
0x62	DXE_SBRUN_INIT

0x63	DXE_CPU_INIT
0x68	DXE_NB_HB_INIT
0x69	DXE_NB_INIT
0x6A	DXE_NB_SMM_INIT
0x70	DXE_SB_INIT
0x71	DXE_SB_SMM_INIT
0x72	DXE_SB_DEVICES_INIT
0x78	DXE_ACPI_INIT
0x79	DXE_CSM_INIT
0x90	DXE_BDS_STARTED
0x91	DXE_BDS_CONNECT_DRIVERS
0x92	DXE_PCI_BUS_BEGIN
0x93	DXE_PCI_BUS_HPC_INIT
0x94	DXE_PCI_BUS_ENUM
0x95	DXE_PCI_BUS_REQUEST_RESOURCES
0x96	DXE_PCI_BUS_ASSIGN_RESOURCES
0x97	DXE_CON_OUT_CONNECT
0x98	DXE_CON_IN_CONNECT

0x99 DXE_SIO_INIT

0x9A DXE_USB_BEGIN

0x9B DXE_USB_RESET

0x9C DXE_USB_DETECT

0x9D DXE_USB_ENABLE

0xA0 DXE_IDE_BEGIN

0xA1 DXE_IDE_RESET

0xA2 DXE_IDE_DETECT

0xA3 DXE_IDE_ENABLE

0xA4 DXE_SCSI_BEGIN

0xA5 DXE_SCSI_RESET

0xA6 DXE_SCSI_DETECT

0xA7 DXE_SCSI_ENABLE

0xA8 DXE_SETUP_VERIFYING_PASSWORD

0xA9 DXE_SETUP_START

0xAB DXE_SETUP_INPUT_WAIT

0xAD DXE_READY_TO_BOOT

0xAE DXE_LEGACY_BOOT

0xAF	DXE_EXIT_BOOT_SERVICES
0xB0	RT_SET_VIRTUAL_ADDRESS_MAP_BEGIN
0xB1	RT_SET_VIRTUAL_ADDRESS_MAP_END
0xB2	DXE_LEGACY_OPMOM_INIT
0xB3	DXE_RESET_SYSTEM
0xB4	DXE_USB_HOTPLUG
0xB5	DXE_PCI_BUS_HOTPLUG
0xB6	DXE_NVRAM_CLEANUP
0xB7	DXE_CONFIGURATION_RESET
0xF0	PEI_RECOVERY_AUTO
0xF1	PEI_RECOVERY_USER
0xF2	PEI_RECOVERY_STARTED
0xF3	PEI_RECOVERY_CAPSULE_FOUND
0xF4	PEI_RECOVERY_CAPSULE_LOADED
0xE0	PEI_S3_STARTED
0xE1	PEI_S3_BOOT_SCRIPT
0xE2	PEI_S3_VIDEO_REPOST

0xE3 PEI_S3_OS_WAKE

0x50 PEI_MEMORY_INVALID_TYPE

0x53 PEI_MEMORY_NOT_DETECTED

0x55 PEI_MEMORY_NOT_INSTALLED

0x57 PEI_CPU_MISMATCH

0x58 PEI_CPU_SELF_TEST_FAILED

0x59 PEI_CPU_NO_MICROCODE

0x5A PEI_CPU_ERROR

0x5B PEI_RESET_NOT_AVAILABLE

0xD0 DXE_CPU_ERROR

0xD1 DXE_NB_ERROR

0xD2 DXE_SB_ERROR

0xD3 DXE_ARCH_PROTOCOL_NOT_AVAILABLE

0xD4 DXE_PCI_BUS_OUT_OF_RESOURCES

0xD5 DXE_LEGACY_OPROM_NO_SPACE

0xD6 DXE_NO_CON_OUT

0xD7 DXE_NO_CON_IN

0xD8	DXE_INVALID_PASSWORD
0xD9	DXE_BOOT_OPTION_LOAD_ERROR
0xDA	DXE_BOOT_OPTION_FAILED
0xDB	DXE_FLASH_UPDATE_FAILED
0xDC	DXE_RESET_NOT_AVAILABLE
0xE8	PEI_MEMORY_S3_RESUME_FAILED
0xE9	PEI_S3_RESUME_PPI_NOT_FOUND
0xEA	PEI_S3_BOOT_SCRIPT_ERROR
0xEB	PEI_S3_OS_WAKE_ERROR

2.9 Identification purpose LED/Switch

The UID button can be used to locate the server being processed behind the server rack.

Unit Identification
purpose LED/Switch
(UID1)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.



1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.
2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.

2.10 Dual LAN and Teaming Operation Guide

Dual LAN with Teaming enabled on this motherboard allows two single connections to act as one single connection(s) for twice the transmission bandwidth, making data transmission more effective and improving the quality of transmission of distant images. Fault tolerance on the dual LAN network prevents network downtime by transferring the workload from a failed port to a working port.



The speed of transmission is subject to the actual network environment or status even with Teaming enabled.

Before setting up Teaming, please make sure whether the Switch (or Router) supports Teaming (IEEE 802.3ad Link Aggregation). It can be specified a preferred adapter in Intel PROSet. Under normal conditions, the Primary adapter handles all non-TCP/IP traffic. The Secondary adapter will receive fallback traffic if the primary fails. If the Preferred Primary adapter fails, but is later restored to an active status, control is automatically switched back to the Preferred Primary adapter.

Step 1

From **Device Manager**, open the properties of a team.

Step 2

Click the **Settings** tab.

Step 3

Click the **Modify Team** button.

Step 4

 
Select the adapter that want to be the primary adapter and click the **Set Primary** button.

If not specify a preferred primary adapter, the software will choose an adapter of the highest capability (model and speed) to act as the default primary. When a failover occurs, another adapter becomes the primary. The adapter will, however, rejoin the team as a non-primary.

2.11 M.2 SSD Module Installation Guide (M2_1)


The M.2 Socket (M2_1, Key M) supports type 2230/2242/2260/2280 M.2 PCI Express module up to Gen3x4 (8GT/s x4).

Installing the M.2 SSD Module



Step 1


Prepare a M.2 SSD module and the screw.

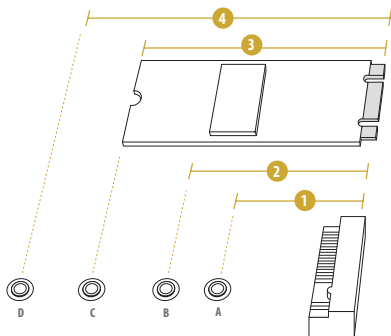


Step 2

Depending on the PCB type and length of the M.2 SSD module, find the corresponding nut location to be used.



No.	1	2	3	4
Nut Location	A (NUT30_1)	B (NUT42_1)	C (NUT60_1)	D (NUT80_1)
PCB Length	3cm	4.2cm	6cm	8cm
Module Type	Type 2230	Type 2242	Type 2260	Type 2280

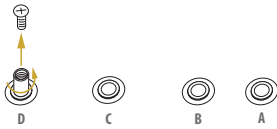**Step 3**

 
Move the standoff based on the module type and length. The standoff is placed at the nut location D by default. Skip Step 3 and 4 and go straight to Step 5 when using the default nut. Otherwise, release the standoff by hand.

**Step 4**

 Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

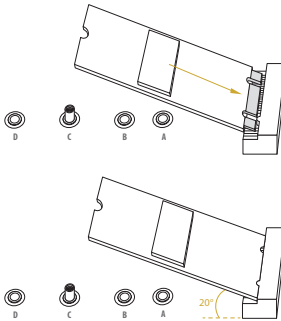**Step 5**

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

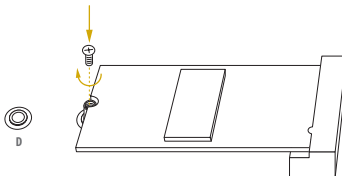
**Step 6**

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

2.12 M.2 SSD Module Installation Guide (M2_2)


The M.2 Socket (M2_2, Key M) supports type 2242/2280 M.2 PCI Express module up to Gen3 x4 (8GT/s x4).

 Installing the M.2 SSD Module



Step 1



Prepare a M.2 SSD module and the screw.

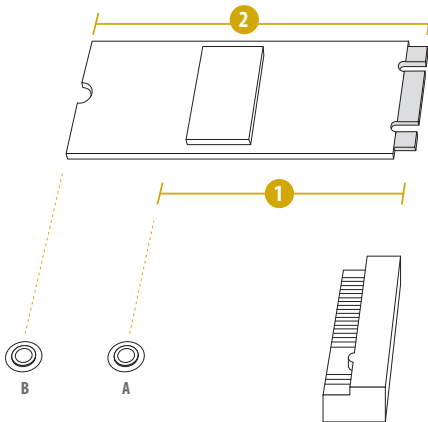


Step 2

Depending on the PCB type and length of the M.2_SSD (NGFF) module, find the corresponding nut location to be used.


No.	1	2
Nut Location	A (NUT42_1)	B (NUT80_1)
PCB Length	4.2cm	8cm
Module Type	Type 2242	Type 2280

 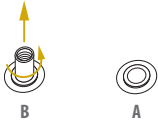**Step 3**

 
Move the standoff based on the module type and length. Skip Step 3 and 4 and go straight to Step 5 when using the default nut. Otherwise, release the standoff by hand.

**Step 4**


Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

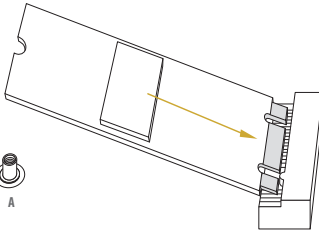**Step 5**

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

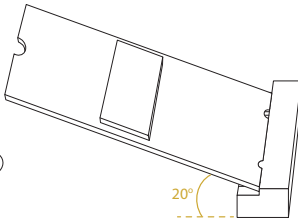**Step 6**

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

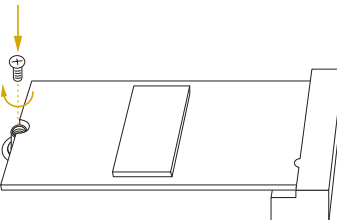

Chapter 3 UEFI Setup Utility

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure the system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. Run the UEFI SETUP UTILITY when starting up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

Restart the system by pressing <Ctrl> + <Alt> + <Delete> to enter the UEFI SETUP UTILITY after POST, or by pressing the reset button on the system chassis. It can also allow user to restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
Server Mgmt	To manage the server
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Event Logs	For event log configuration
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←→> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.

3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

3.2 Main Screen

Once entering the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows user to set the system time and date.



Motherboard Information

Enter this item to view the motherboard information.

Processor Information

Enter this item to view the processor information.


Memory Information

Enter this item to view the memory information.

Note: The screenshots in this user manual are examples and for references only. The actual images may slightly vary depending on the model and the version using.


3.2.1 Motherboard Information

Press [Enter] to view the information of the motherboard.

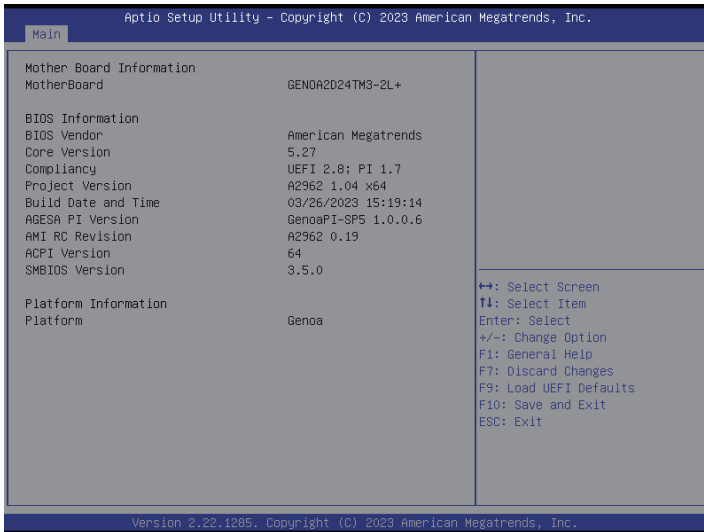


3.2.2 Processor Information

Press [Enter] to view the information of the processor.

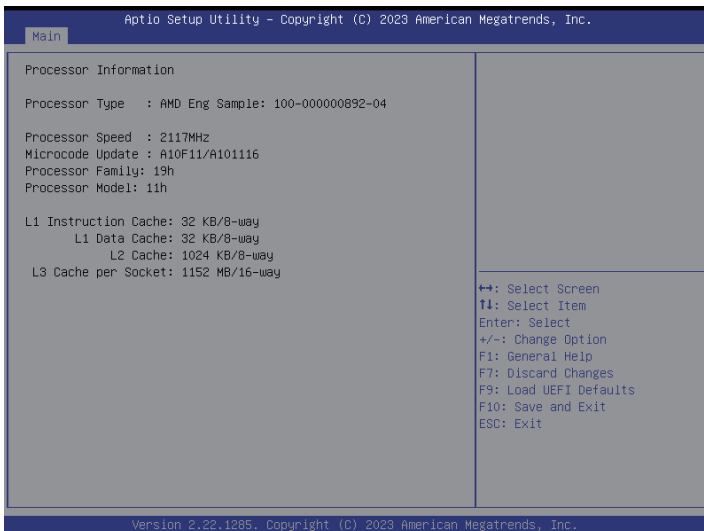


3.2.3 Memory Information

Press [Enter] to view the information of the memory.

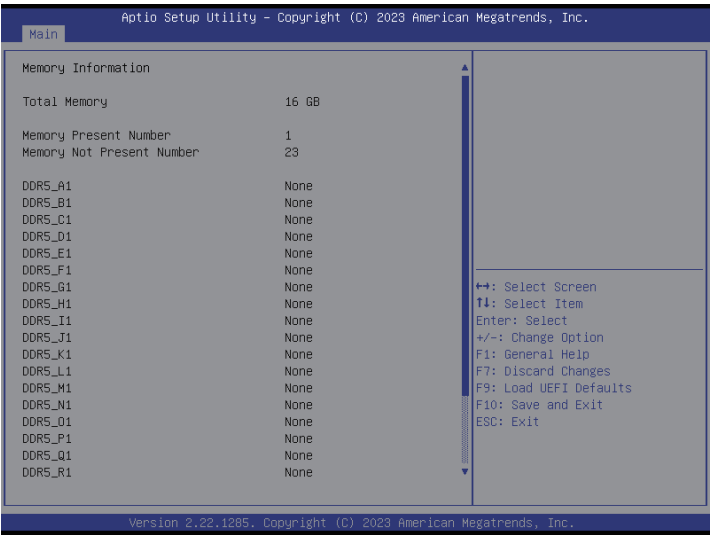


3.3 Advanced Screen

This section allowed to configure the following items: CPU Configuration, Chipset Configuration, Storage Configuration, NVMe Configuration, ACPI Configuration, USB Configuration, Super IO Configuration, Serial Port Console Redirection, H/W Monitor, PCI Subsystem Settings, AMD CBS, AMD PBS, PSP Firmware Versions, Network Stack Configuration, Driver Health, Tls Auth Configuration and Instant Flash.

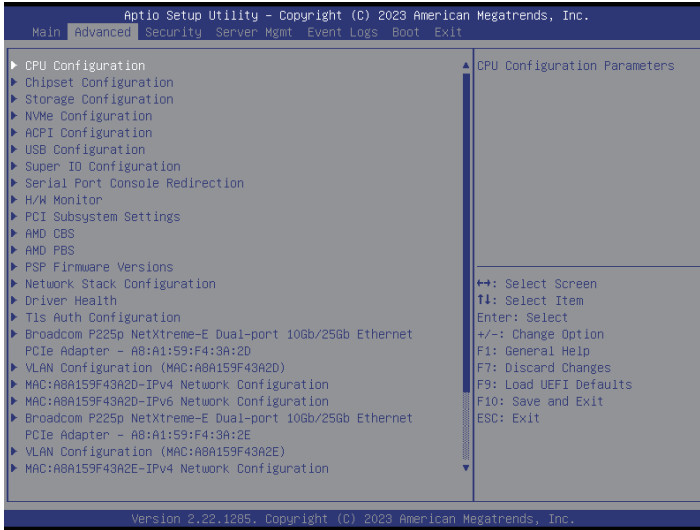

Setting wrong values in this section may cause the system to malfunction.

3.3.1 CPU Configuration

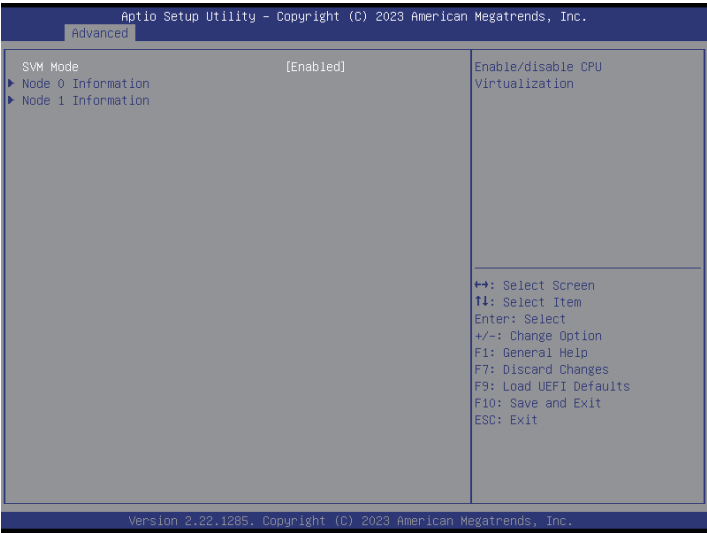

SVM Mode

Enable or disable CPU Virtualization.


Node 0 Information

Select this item to display the Node 0 Information.

Node 1 Information

Select this item to display the Node 1 Information.

3.3.2 Chipset Configuration

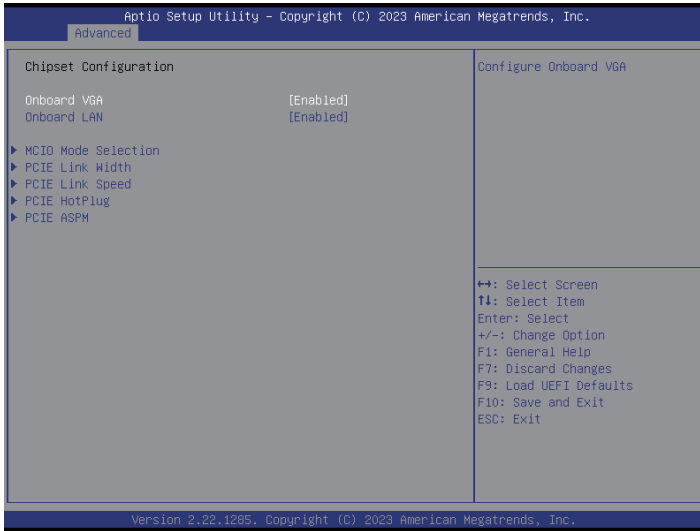

Onboard VGA

Use this to enable or disable the Onboard VGA function.

Onboard LAN

Use this item to enable or disable the Onboard LAN function.

MCIO Mode Selection

Select this item to configure SATA or PCIe in MCIO port.

MCIO5/6 Mode Selection

Select SATA or PCIe work in MCIO port.

PCIe Link Width

Select this item to configure PCIe Link Width.

PCIe1/2/3 Link Width

Select PCIe port Bifurcation for PCIe1(CPU0 P2)/PCIe2(CPU0 P1)/PCIe2(CPU0 P3)/PCIe3(CPU1 P0)/PCIe3(CPU1 P1). The default value is [x16].

MCIO1/2/3/4/5/6/7/8 Link Width

Select MCIO1/2/3/4/5/6/7/8 Link Width. The default value is [x4x4/x4x4].

PCIE Link Speed

Select PCIE Link Speed.

MCIO1/2/3/4 Link Speed

Select MCIO1/2/3/4 Link Speed.

PCIE Hot Plug

Select this item to configure PCIE Hot Plug globally.

PCIE1/2/3 Hot Plug

Enable or disable PCIE1(CPU0 P2)/PCIE2(CPU0 P1)/PCIE2(CPU0 P3)/PCIE3(CPU1 P0)/PCIE3(CPU1 P1) Hot Plug.

MCIO1/2/3/4/5/6/7/8 Hot Plug

Enable or disable MCIO Hot Plug.


PCIE ASPM

Select this item to configure the PCIE ASPM.

PCI-E ASPM Support (Global)

Select this item to disable ASPM Support in all PCIe root ports.


3.3.3 Storage Configuration

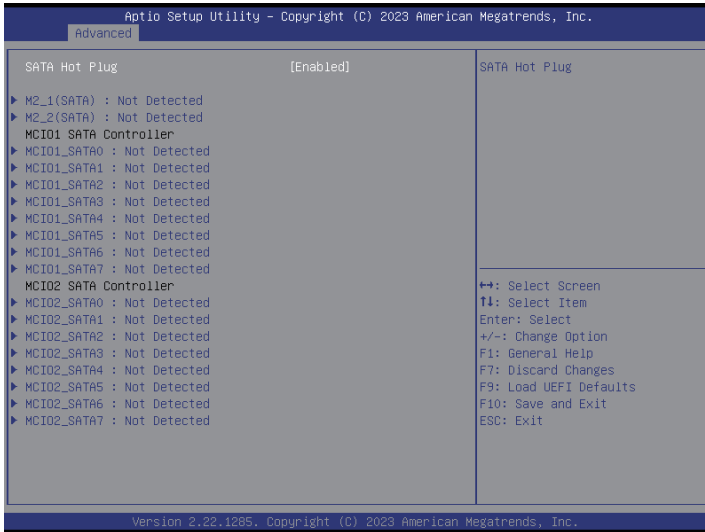

SATA Hot Plug

Enable or disable the SATA Hot Plug Function.

3.3.4 NVMe Configuration

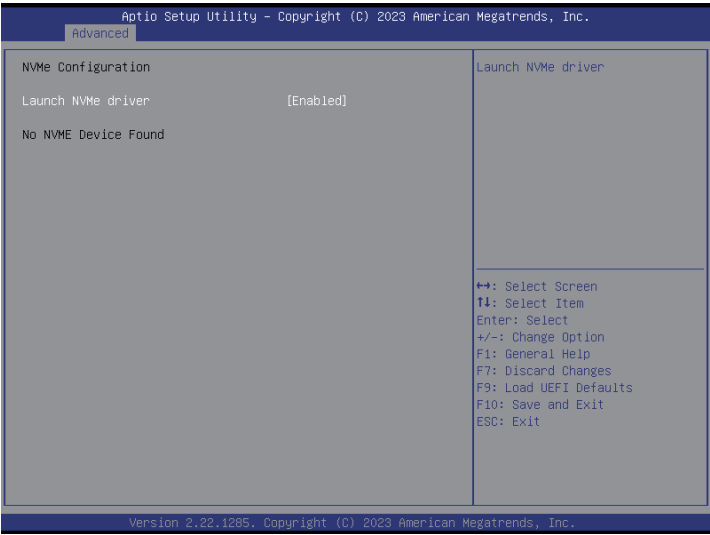

The NVMe Configuration displays the NVMe controller and Drive information.

Launch NVMe driver

Select this item to enable or disable launch NVMe driver.

3.3.5 ACPI Configuration



PCIE Devices Power On

Allow the system to be waked up by a PCIE device and enable wake on LAN.


Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

RTC Alarm Power On


Allow the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by the operating system.

3.3.6 USB Configuration

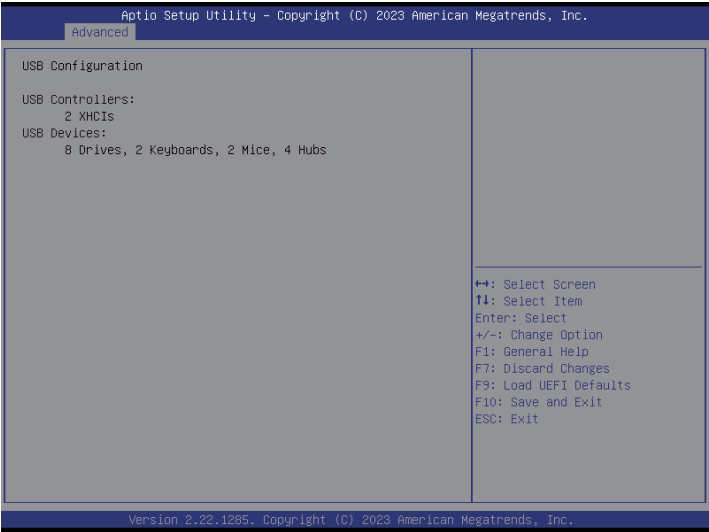

The USB Configuration displays the USB Controllers and USB Devices informations.

3.3.7 Super IO Configuration

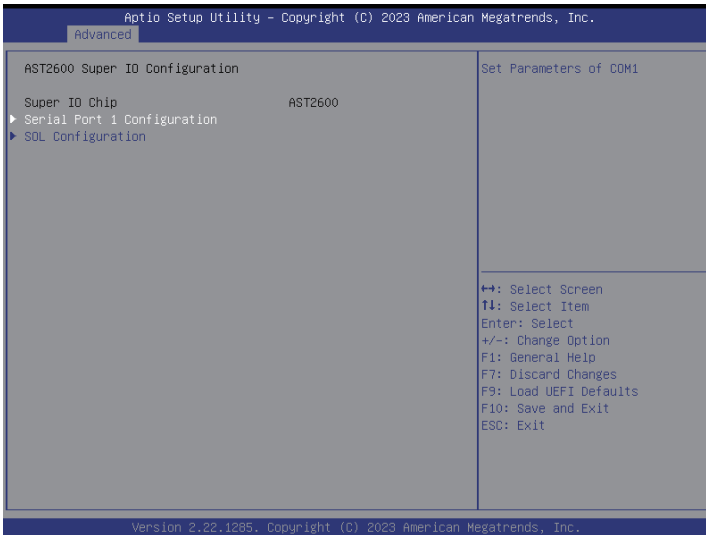

Serial Port 1 Configuration

Use this item to set parameters of Serial Port 1 (COM1).

Serial Port

Use this item to enable or disable the serial port.

Change Settings

Use this item to select an optimal setting for Super IO device.


SOL Configuration

Use this item to set parameters of SOL.

SOL Port

Use this item to set parameters of SOL.

3.3.8 Serial Port Console Redirection

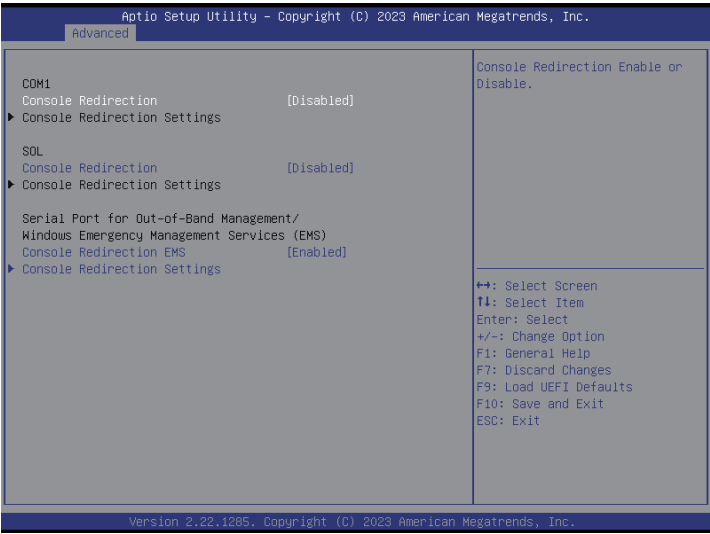

COM1 / SOL

Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled that specifies a COM Port can be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how the host computer and the remote computer (which are be connected to) will exchange data. Both computers should have the same or compatible settings.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100Plus	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [38400], [57600] and [115200].

Data Bits

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

Parity

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space].

Stop Bits

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

Recorder Mode

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

Resolution 100x31

Use this item to enable or disable extended terminal resolution support.

Putty Keypad

Use this item to select Function Key and Keypad on Putty.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)**Console Redirection EMS**

Use this option to enable or disable Console Redirection. Set this item to Enabled to select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how the host computer and the remote computer (which are be connected to) will exchange data.

Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

Terminal Type EMS

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second EMS

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Flow Control EMS

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].


Data Bits EMS

Parity EMS


Stop Bits EMS

3.3.9 H/W Monitor

In this section, it allows to monitor the status of the hardware on the system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

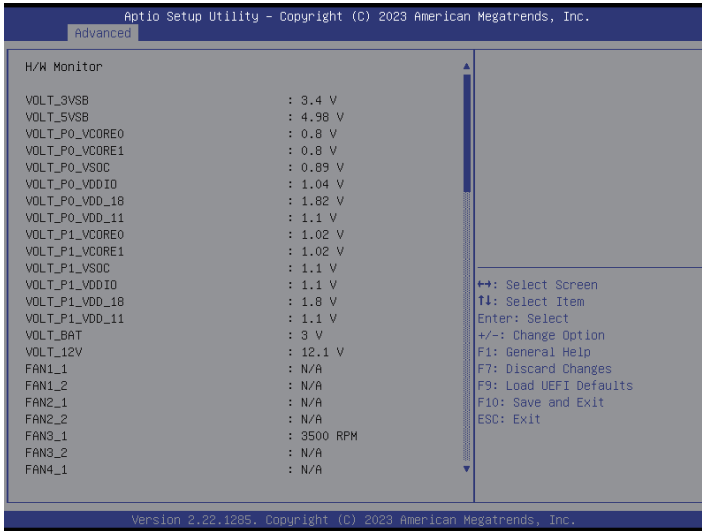

3.3.10 PCI Subsystem Settings

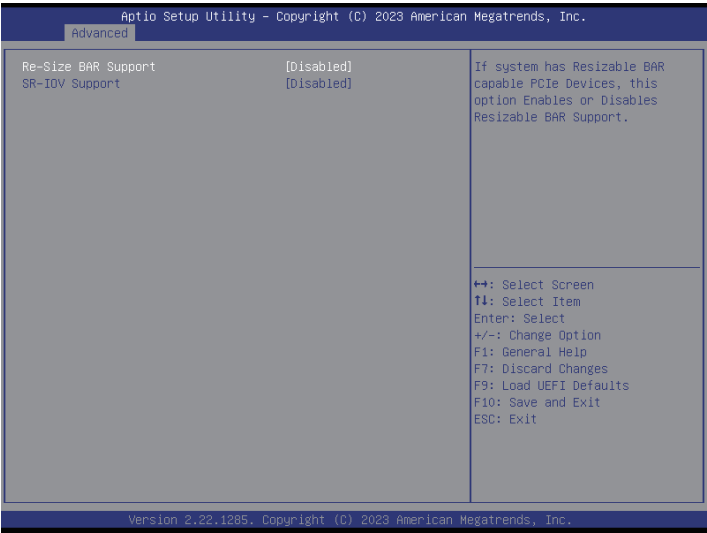


Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR support.

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option enables or disables Single Root IO Virtualization Support.

3.3.11 AMD CBS

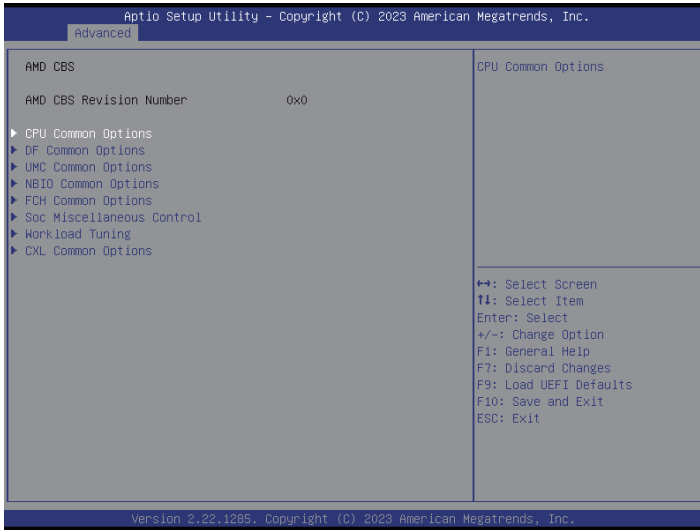

CPU Common Options

Use this item to configure CPU Common options.

DF Common Options

Use this item to configure DF Common options.

UMC Common Options

Use this item to configure UMC Common options.

NBIO Common Options

Use this item to configure NBIO Common options.

FCH Common Options

Use this item to configure FCH Common options.

Soc Miscellaneous Control

Use this item to configure Soc Miscellaneous Control options.


Workload Tuning Options

Use this item to configure Workload Tuning options.

CXL Common Options

Use this item to configure CXL Common options.

3.3.12 AMD PBS

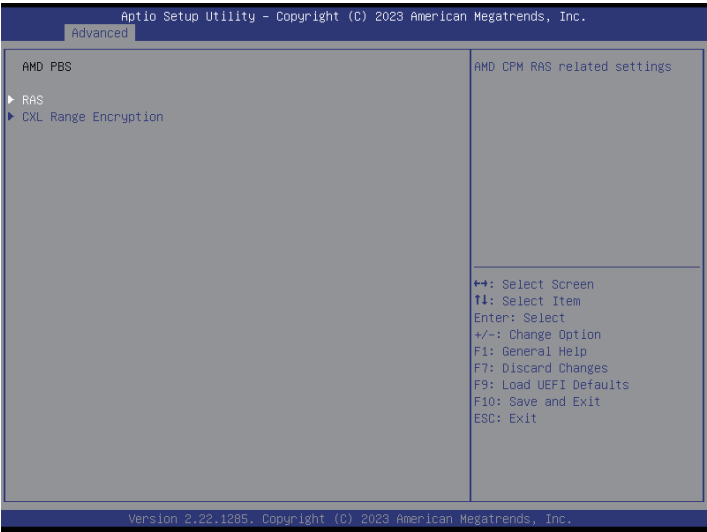

RAS

Use this item to configure AMD CPM RAS related settings.

RAS Periodic SMI Control

Use this to enable or disable Periodic SMI for polling [MCA Threshold] error.

SMI Threshold

This limits the number of [MCA Threshold and Deferred Error SMI source] per a unit time.

SMI Scale

Use this to defines the time scale.

SMI Scale Unit

Use this to defines the unit of time scale.

SMI Period

Use this to defines the polling interval with ms unit. Input 0 value to disable this function.

GHEs Notify Type

This specifies the notification type for deferred/corrected errors.

GHEs UnCorr Notify Type

This specifies the notification type for uncorrected errors.

PCIe GHEs Notify Type

This specifies the notification type for PCIe corrected errors.

PCIe UnCorr GHES Notify Type

This specifies the notification type for PCIe uncorrected errors.

PCIe Root Port Corr Err Mask Reg

Use this to initialize the PCIe AER corrected error mask register of root port.

PCIe Root Port UnCorr Err Mask Reg

Use this to initialize the PCIe AER uncorrected error mask register of root port.

PCIe Root Port UnCorr Err Sev Reg

Use this to initialize the PCIe AER uncorrected error severity registers of root port.

PCIe Device Corr Err Mask Reg

Use this to initialize the PCIe AER corrected error mask register of PCIe device.

PCIe Device UnCorr Err Mask Reg

Use this to initialize the PCIe AER uncorrected error mask register of PCIe device.

PCIe Device UnCorr Error Sev Reg

Use this to initialize the PCIe AER uncorrected error severity registers of PCIe device

CXL DP CIE Mask Enable

Use this to enable or disable masking of CXL DP correctable error-internal error.

DRAM Hard Post Package Repair

Use this to enable or disable the spare DRAM rows to replace malfunctioning rows via an in-field repair mechanism.

HEST DMC Structure Support

Use this to enable or disable HEST DMC Structure feature.

CXL Error Report Support

Use this to enable or disable CXL Error Report feature.

CXL Range Encryption

Use this item to configure AMD CXL Range Encryption related settings.


Range1~7 Memory Base/Limit

Use this to enter memory range base address and limit address.

Start CXL Range Encryption


Select this item to start and encrypt all memory ranges.

3.3.13 PSP Firmware Versions

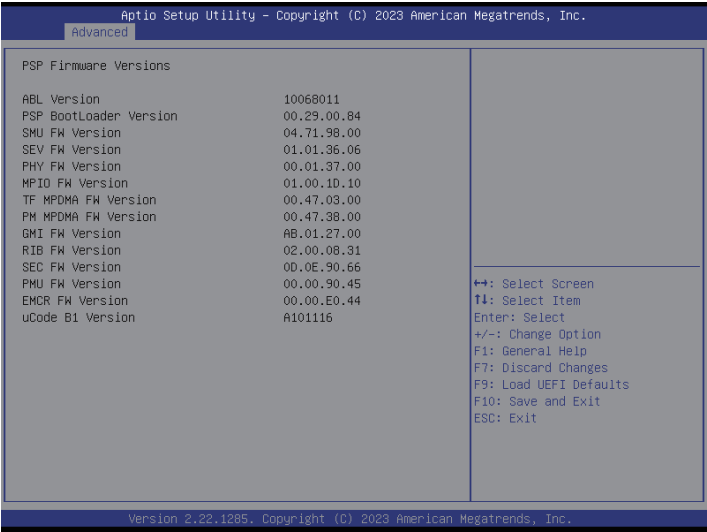

The PSP Firmware Versions displays the version information of ABL, PSP BootLoader, SMU FW, SEV FW, PHY FW, MPIO FW, TF MPDMA FW, PM MPDMA FW, GMI FW, RIB FW, SEC FW, PMU FW, EMCR FW and uCode B1.

3.3.14 Network Stack Configuration

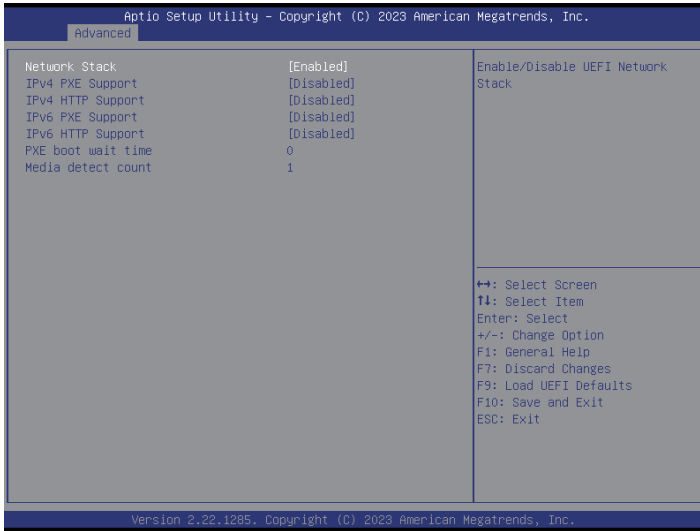

Network Stack

Use this item to enable or disable UEFI Network Stack.

IPv4 PXE Support

Use this item to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

IPv4 HTTP Support

Use this item to enable or disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

IPv6 PXE Support

Use this item to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

IPv6 HTTP Support

Use this item to enable or disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.


PXE boot wait time

Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

Media detect count

Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

3.3.15 Driver Health

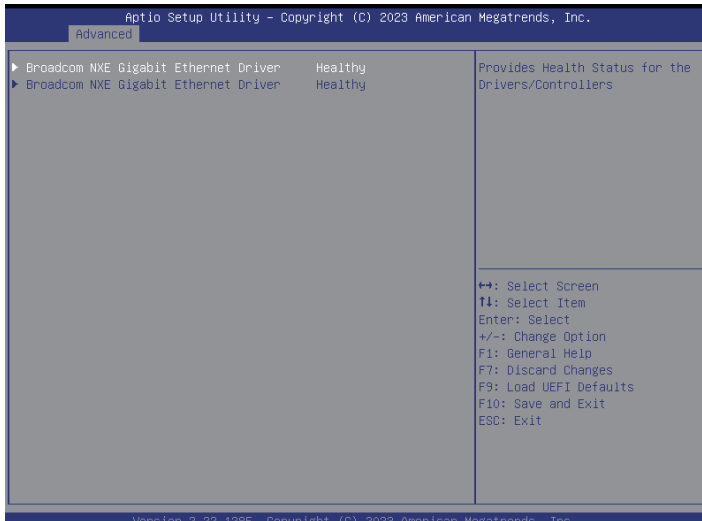


Broadcom NXE Gigabit Ethernet Driver

Provides Health Status for the Drivers/Controllers.

Broadcom NXE Gigabit Ethernet Driver

Provides Health Status for the Drivers/Controllers

3.3.16 Tls Auth Configuration

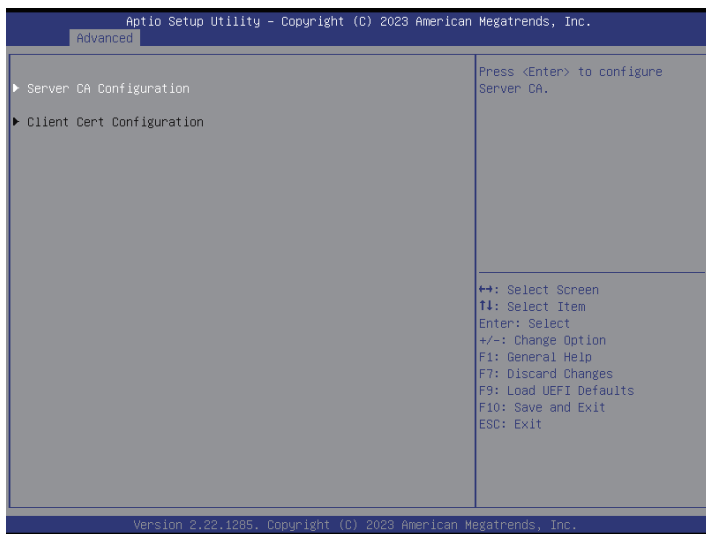

Server CA Configuration

Press <Enter> to configure Server CA.

Enroll Cert

Press <Enter> to enroll cert.

Delete Cert

Press <Enter> to delete cert.

Client Cert Configuration


Press <Enter> to configure Client Cert.

3.3.17 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows user to update system UEFI without entering operating systems first like MS-DOS or Windows[®]. Just save the new UEFI file to the USB flash drive, floppy disk or hard drive and launch this tool, then update the UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. The utility will show the UEFI files and the respective information when executing Instant Flash utility. Select the proper UEFI file to update the UEFI, and reboot the system after the UEFI update process is completed.

3.4 Security

In this section, set or change the supervisor/user password for the system. For the user password, it also allows to clear it.

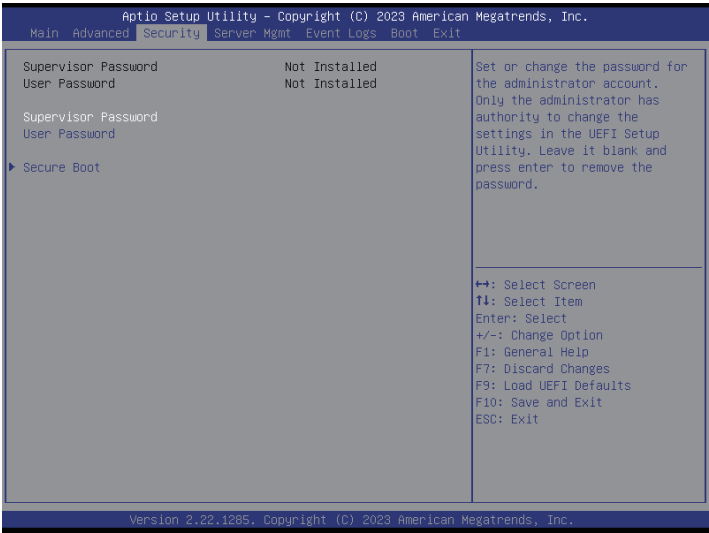

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Use this to enable or disable Secure Boot Control. The default value is [Disabled]. Enable to support Windows Server 2012 R2 or later versions Secure Boot.

Secure Boot Mode


Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time using secure boot.


3.4.1 Install Default Secure Boot Keys

Please install default secure boot keys if it is the first time to use secure boot. Select Clear Secure Boot keys item to clear the assigned secure boot keys.

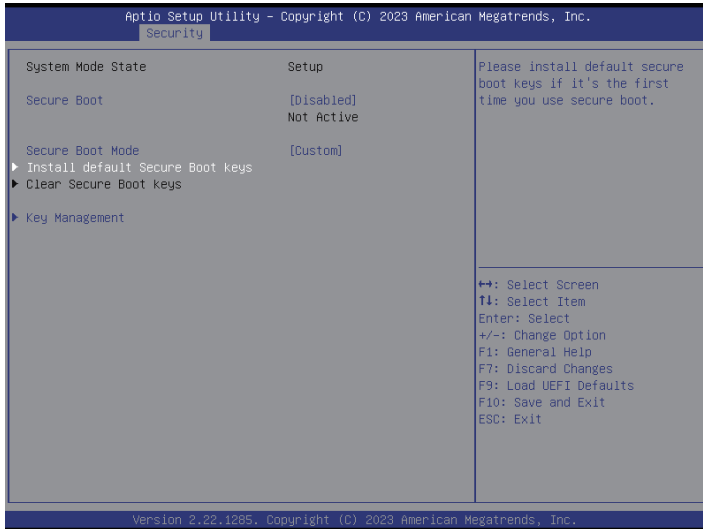


3.4.2 Clear Secure Boot Keys

Force System to Setup Mode-Clear all Secure Boot Variables. Change takes effect after re-boot.

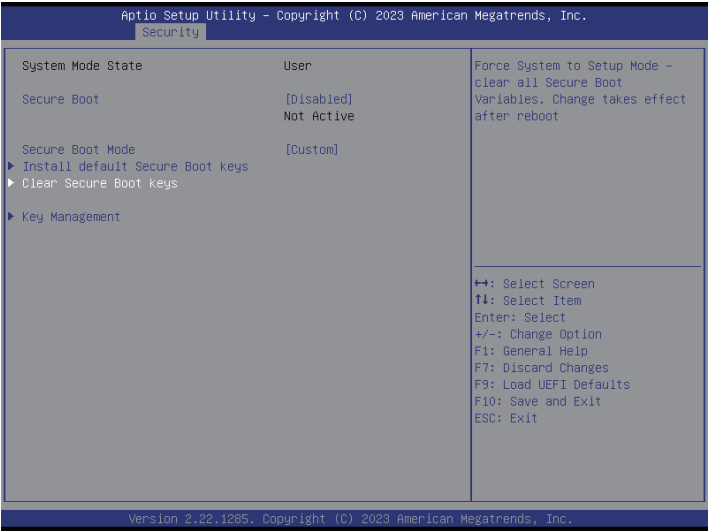

3.4.3 Key Management

In this section, expert user can modify Secure Boot Policy variables without full authentication.

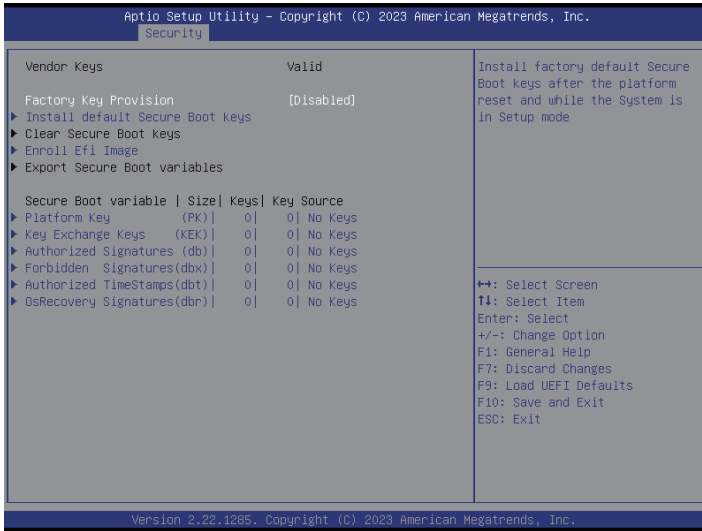

Factory Key Provision

Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time to use the secure boot.

Enroll Efi Image

Allow the image to run in Secure Boot mode. Enroll SHA256 hash of the binary into Authorized Signature Database (db).

Platform Key(PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- EFI_SIGNATURE_LIST
- EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Key Exchange Keys(KEK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Authorized Signatures(db)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Forbidden Signatures(dbx)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Authorized TimeStamps(dbt)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

OsRecovery Signatures(dbr)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:


- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

3.5 Server Mgmt

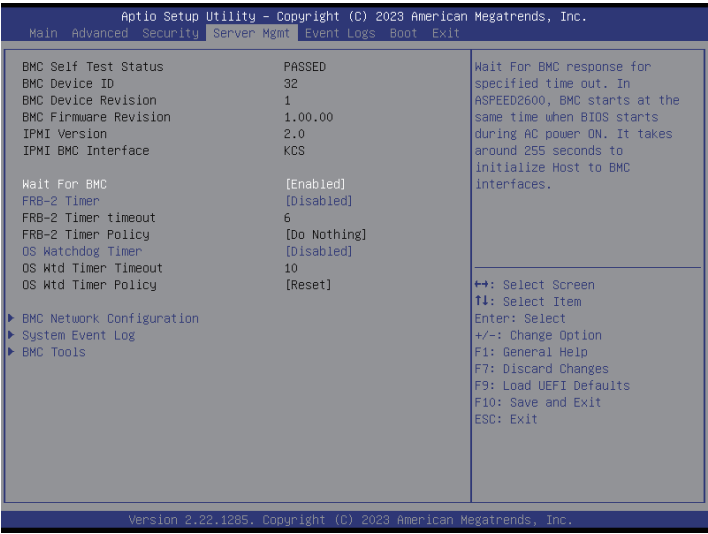

Wait For BMC

Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 255 seconds to initialize Host to BMC interfaces.

FRB-2 Timer

Select this item to enable or disable FRB-2 timer (POST timer)

FRB-2 Timer Timeout

Select this item to define the FRB-2 Time Expiration between 1 to 30 value.

FRB-2 Timer Policy

Configure how the system should respond. If the FRB-2 Timer expires is disabled, this item is not available.

OS Watchdog Timer

Select this item to enable or disable OS Watchdog Timer. If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads.

OS Wtd Timer Timeout

Configure the OS Boot Watchdog Timer Expiration between 1 to 30 min value. If the OS Boot Watchdog Timer is disabled, this item is not available.

OS Wtd Timer Policy

Configure how the system should respond if the OS Boot Watchdog Timer expires. If the OS Boot Watchdog Timer is disabled, this item is not available.

BMC Network Configuration

Select this item to configure BMC network parameters.

DNS Configuration

Select this item to configure DNS parameters.


System Event Log

Press <Enter> to change the SEL event log configuration.

BMC Tools

Select this item to configure about KCS control, restore AC power loss and load BMC default settings.

3.5.1 BMC Network Configuration

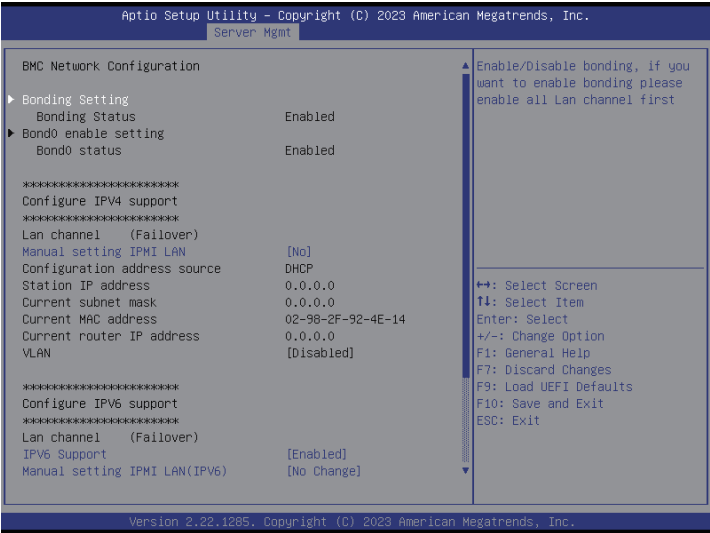

Bonding Setting

Use this item to enable or disable bonding, Set this item to enable bonding please enable all Lan channel first.

Bond0 Enable Setting

Show the Bond0 status is enabled or disabled.

Manual Setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

Configuration Address Source

Select to configure BMC network parameters statically or dynamically(by BIOS or BMC). Configuration options: [Static] and [DHCP].

Static: Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

DHCP: IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



When [DHCP] or [Static] is selected, do NOT modify the BMC network settings on the IPMI web page.



The default login information for the IPMI web interface is:

Username: admin

Password: admin

For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/ipmi.asp>

VLAN

Enabled/Disabled Virtual Local Area Network.

Enable or disable Virtual Local Area Network.

If [Enabled] is selected, configure the items below.

VLAN ID: Select this item to configure the VLAN ID setting, the Maximum value is 4094 and the Minimum value is 1.

VLAN Priority: Select this item to configure the VLAN Priority setting. the Maximum value is 7 and the Minimum value is 0.

IPV6 Support

Enable or disable LAN1 IPV6 Support.

Manual Setting IPMI LAN (IPV6)


Select to configure LAN channel parameters statically or dynamically (by BIOS or BMC).

Unspecified option will not modify any BMC network parameters during BIOS phase.

IPV6 Index

Set Selector for Static IP, range: 0 to 15.

3.5.2 DNS Configuration

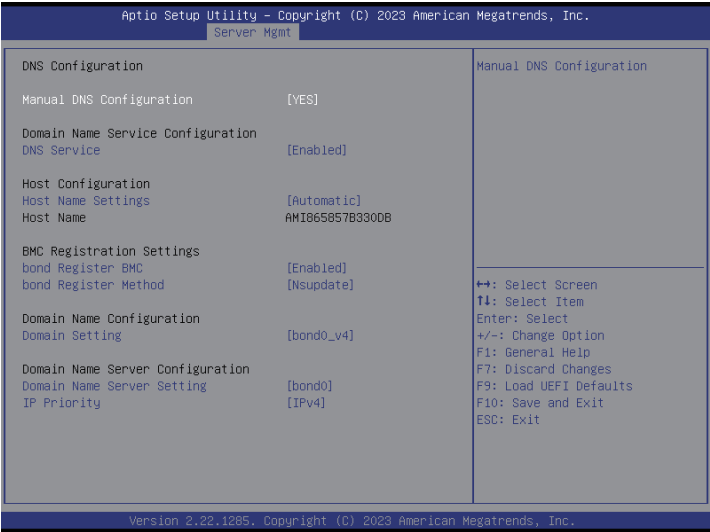

Manual DNS Configuration

Select this item to manual configure DNS.

If [YES] is selected, configure the items below.

DNS Service

Select this item to enable or disable DNS Service Configuration.

Host Name Settings

Select this item to automatic or manual Host Name Settings.

Bond Register BMC

Select this item to enable or disable Bond Register BMC.

Bond Register Method

Select this item to configure Bond Register Method with Nsupdate or DHCP client FQDN/Hostname..

Domain Setting

This item supports Manual, Bond0_v4 and Bond0_v6 Domain Settings.


Domain Name Server Setting

Select this item to configure DNS Server Settings.

IP Priority

Select this item to configure IP Priority.

3.5.3 System Event Log

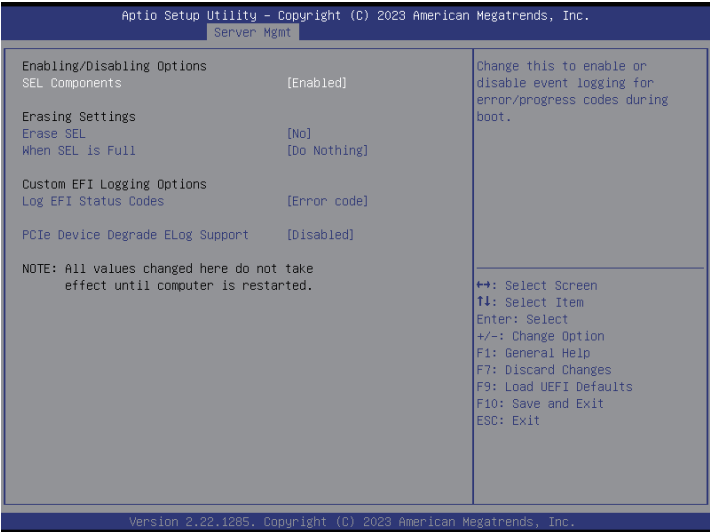

SEL Components

Change this to enable or disable event logging for error/progress codes during boot.

Erase SEL

Use this to choose options for erasing SEL.

When SEL is Full

Use this to choose options for reactions to a full SEL.


Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress code or both.

PCIe Device Degrade Elog Support

Use this item to enable or disable PCIe Device Degrade Error Logging Support.

3.5.4 BMC Tools

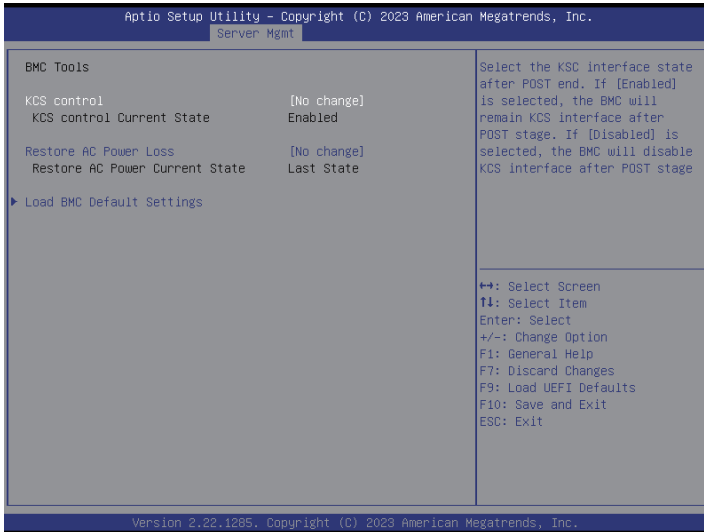

KCS control

Select the KCS interface state after POST end. If [Enabled] is selected, the BMC will remain KCS interface after POST stage. If [Disabled] is selected, the BMC will disable KCS interface after POST stage.


Restore AC Power Loss

This allows user to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

Load BMC Default Settings

Use this item to load BMC default settings.

3.6 Event Logs

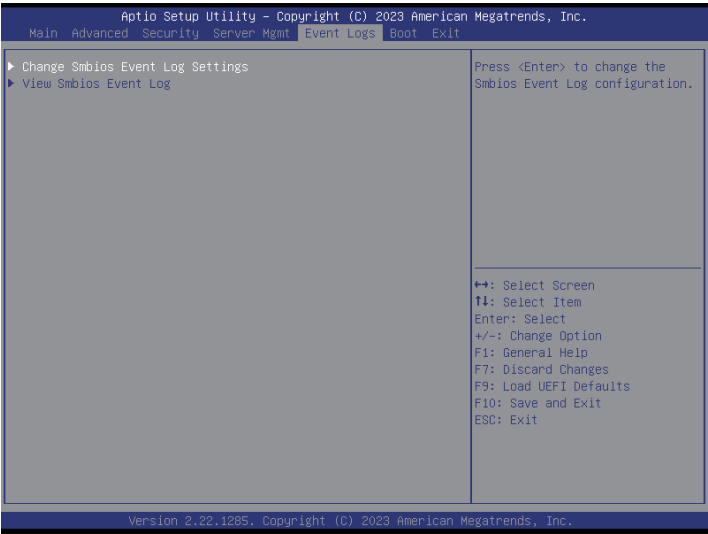

Change Smbios Event Log Settings

Select item to configure the Smbios Event Log Settings.

When entering, the items as below are displayed:

Smbios Event Log

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

Erase Event Log

The options include [No], [Yes, Next reset] and [Yes, Every reset]. If Yes is selected, all logged events will be erased.

When Log is Full

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

Log System Boot Event

Choose option to enable/disable logging of System boot event.

MECI (Multiple Event Count Increment)

Use this item to enter the increment value for the multiple event counter. The valid range is from 1 to 255.

METW (Multiple Event Time Window)

Use this item to specify the number of minutes which must pass between duplicate log entries which utilize a multiple-event counter. The value ranges from 0 to 99 minutes.

Log EFI Status Code

Enable or disable the logging of EFI Status Codes as OEM reserved type E0 (if not already converted to legacy).

Convert EFI Status Codes to Standard Smbios Type

Enable or disable the converting of EFI Status Codes to Standard Smbios Types (Not all may be translated).

View Smbios Event Log


Press <Enter> to view the Smbios Event Log records.



All values changed here do not take effect until computer is restarted.

3.7 Boot Screen

In this section, it will display the available devices the system for user to configure the boot settings and the boot priority.

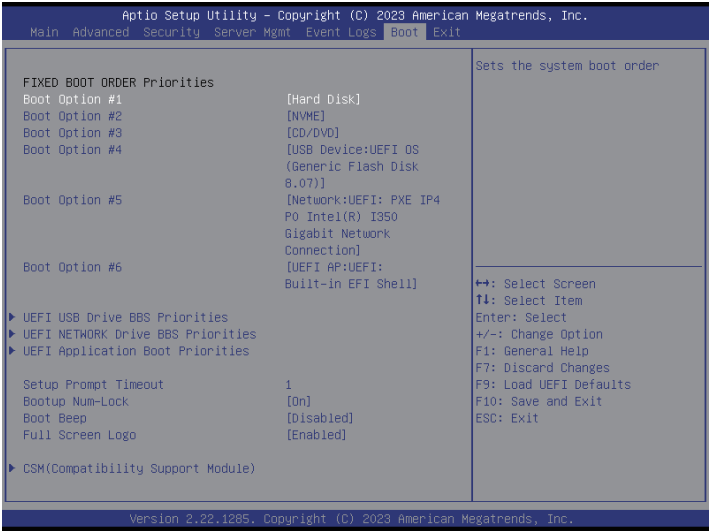

Boot Option #1/#2/#3/#4/#5/#6

Use this item to set the system boot order.

UEFI USB Drive BBS Priorities

Specifies the Boot Device Priority sequence from available UEFI USB Drives.

UEFI NETWORK Drive BBS Priorities

Specifies the Boot Device Priority sequence from available UEFI NETWORK Drives.

UEFI Application Boot Priorities

Specifies the Boot Device Priority sequence from available UEFI Application.

Setup Prompt Timeout

Configure the number of seconds to wait for the UEFI setup utility.

Bootup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

Boot Beep

Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.

Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Enabled].

CSM (Compatibility Support Module)

CSM

Select this item to enable or disable the Compatibility Support Module support.

When enabling this item, the sub-items as below are displayed:

Launch PXE OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.


Launch Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

Launch Video OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

3.8 Exit Screen

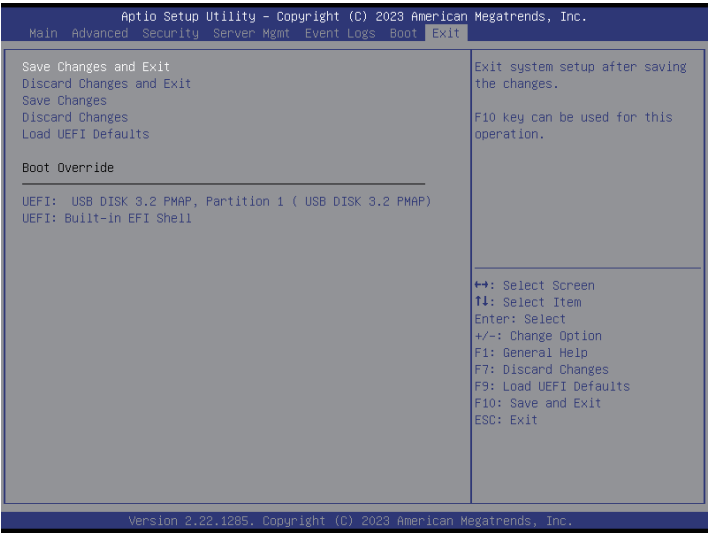

Save Changes and Exit

When selecting this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When selecting this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Save Changes

When selecting this option, the following message “Save changes?” will pop-out. Press <F7> key or select [Yes] to save all changes.

Discard Changes

When selecting this option, the following message “Discard changes?” will pop-out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Chapter 4 Software Support

After all the hardware has been installed, go to the official website at <http://www.ASRockRack.com> and make sure if there are any new updates of the BIOS / BMC firmware for the motherboard.

4.1 Download and Install Operating System

This motherboard supports various Microsoft® Windows® Server / Linux compliant operating systems. Please download the operating system from the OS manufacturer. Please refer to the OS documentation for more instructions.

4.2 Download and Install Software Drivers

This motherboard supports various Microsoft® Windows® compliant drivers. Please download the required drivers from our website at <http://www.ASRockRack.com>.

To download necessary drivers, go to the product page, click on the "Download" tab, choose the operating system, and select the required driver to download.

4.3 Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or contact the dealer for further information.

Chapter 5 Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot the system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries to personal and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard. Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR5 RDIMM and RDIMM-3DS.
3. If having installed more than one DIMM modules, they should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether the power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to the problem on ASRock Rack's FAQ page:
<http://www.asrockrack.com/support>

5.2 Technical Support Procedures

If having tried the troubleshooting procedures mentioned above and the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

Contact ASRock Rack's technical support at:
<http://www.asrockrack.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of the invoice marked with the date of purchase is required. By calling the vendor or going to the RMA website (<http://event.asrockrack.com/tsd.asp>) to obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when returning the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact the distributor first for any product related problems during the warranty period.

Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

ASRock Rack Incorporation

e-mail: ASRockRack_sales@asrockrack.com

ASRock Rack Europe B.V.

Bijsterhuizen 11-11
6546 AR Nijmegen
The Netherlands
Phone: +31-24-345-44-33

ASRock Rack America Inc.

4331 Eucalyptus Ave., Chino, CA 91710 U.S.A.
Phone: +1-909-590-8308
Fax: +1-909-590-1026