



3U8G+/C621 Heatsinks

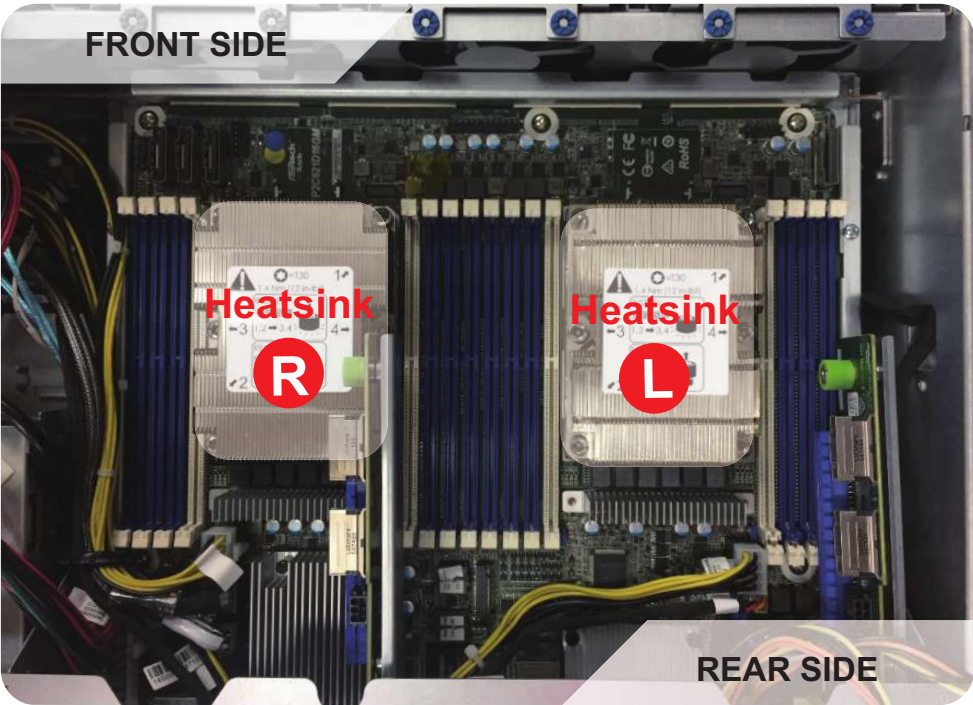

Install the Air Duct (R)

Step 1.

Remove the riser-card assembly.

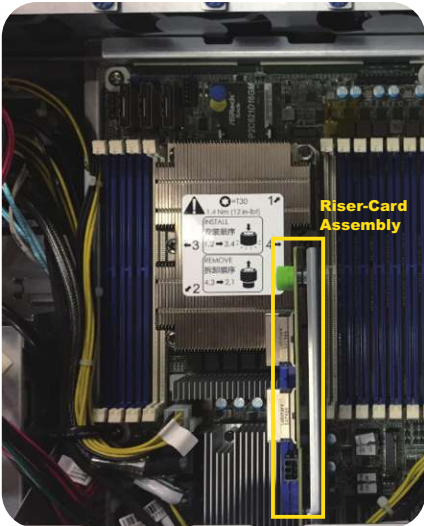

Step 2.

Connect one end of the slimline cable to the connector on the serverboard.




Step 3.

Pass the other end of the slimline cable through the hole of plastic air duct.




Step 4.

Carefully lower the air duct to the horizontal position. Make sure the side edges of the duct align correctly with the heatsink.

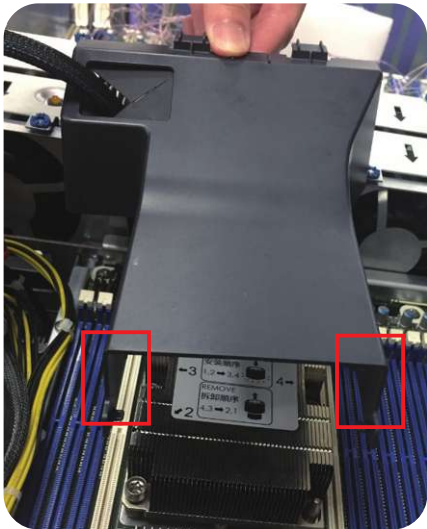


Step 5.

Align the front edge marked as yellow (A) with the fan bracket. Align the edge marked as red (B) with the DIMM slot clips.

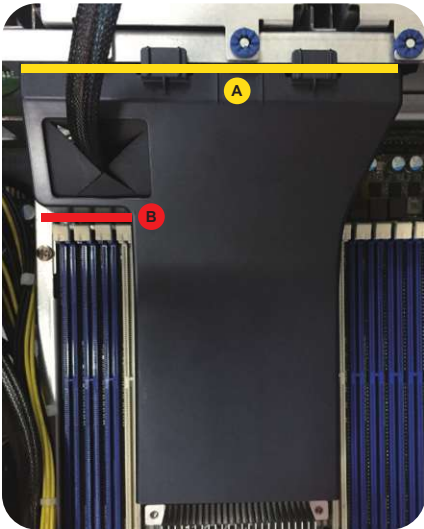

Step 6.


Push the air duct toward the front of the chassis until the two latches on the duct secure in place.

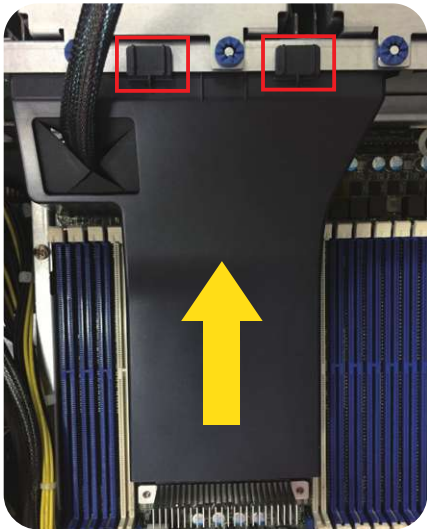

Install the Air Duct (L)


Step 1.

Carefully lower the air duct to the horizontal position. Make sure the side edges of the duct align correctly with the heatsink.

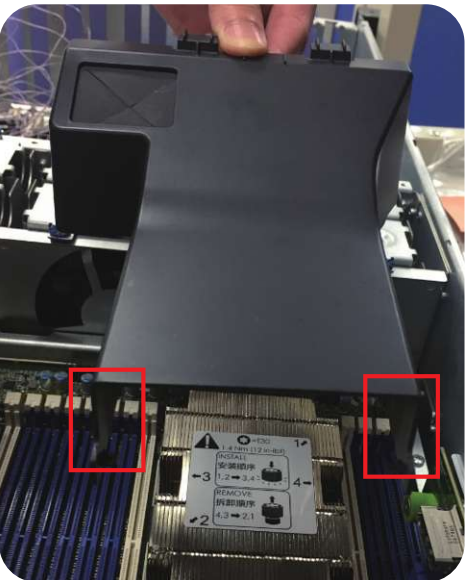

Step 2.

Align the front edge marked as yellow (A) with the fan bracket. Align the edge marked as red (B) with the DIMM slot clips.

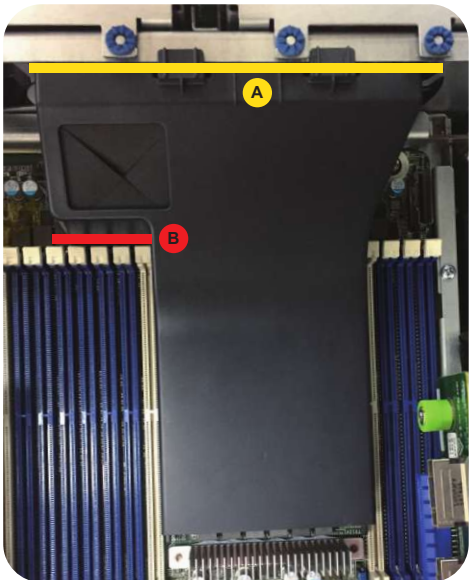

Step 3.

Push the air duct toward the front of the chassis until the two latches on the duct secure in place.

