



P/N: 15G065392000AR V1.0

Quick Installation Guide
4U60L8E-EGS/2T




4U60L8E-EGS/2T

The User Manual is available for download from the ASRock Rack's official website at <http://www.asrockrack.com>.

Take note of the following precautions before installing the components or change any settings.


1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the components due to static electricity, NEVER place the components directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before installation.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstalling any components, place them on a grounded anti-static pad or in the bag that comes with the components.
5. When placing screws into the screw holes to secure any components to the barebone, please do not over-tighten the screws! Doing so may damage both components and barebone.

2 Internal Features

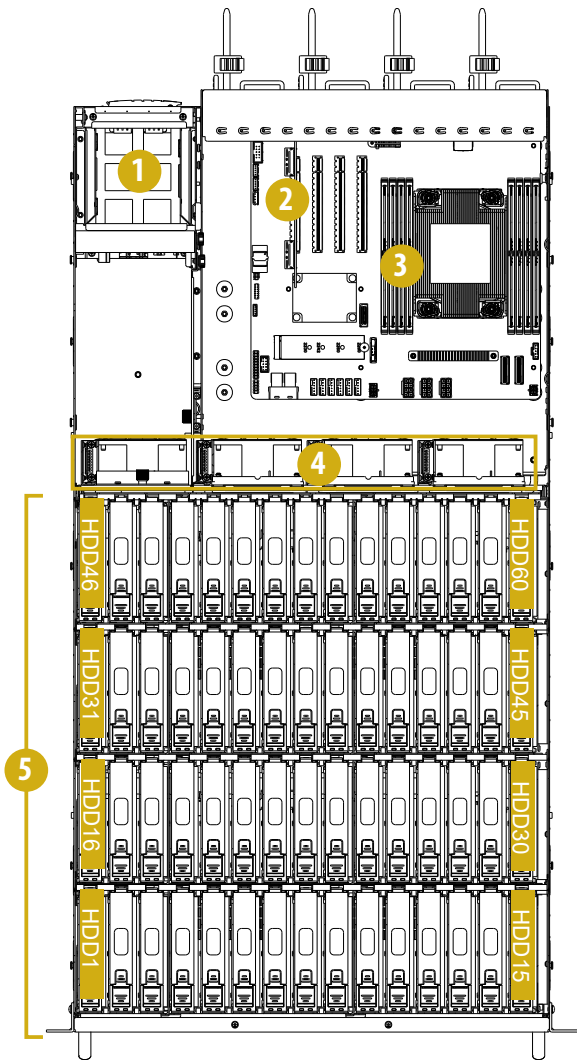

No.	Description
1	8 Hot-swap 2.5" NVMe (PCIe5.0 x4) drive bays, support TA@30C
2	Riser-card (RB1U2MC_G5_RDV/PS7102)
3	Server motherboard
4	4 PWM hot-swap 80x38mm fans
5	60 Hot-swap 3.5" SATA/SAS drive bays* *Additional RAID/HBA card required to support the 60 3.5" SATA/SAS drives


5 System Front Panel

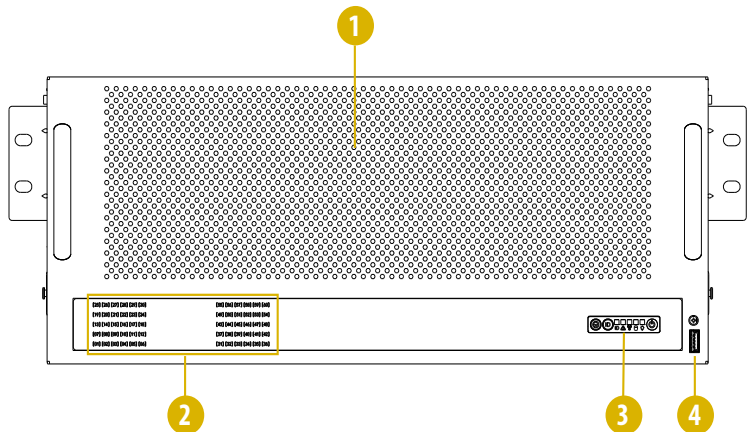


No.	Description
1	Front vent
2	60 3.5" Hard drive tray LEDs
3	Front I/O panel
4	1 Type-A (USB2.0) port

1 Replace Server Board

- 1 Carefully unplug all cables and release screws on the server board to remove them from the barebone.
- 2 Align the replaced server board with the mounting holes.
- 3 Affix the screws clockwise into the mounting holes in all of the corners of the server board.
Do not over-tighten the screws.

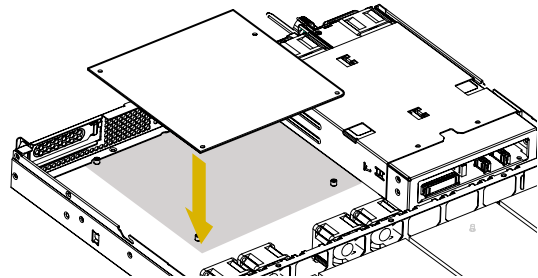


3 Front I/O Panel

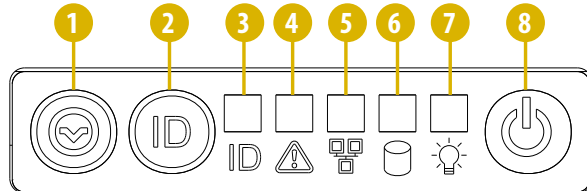


No.	Description
1	System reset button
2	ID button
3	ID LED
4	System fault LED
5	LAN activity LED
6	Hard drive (M.2) activity LED
7	Power LED
8	System power on/off button

4 Rear I/O Panel

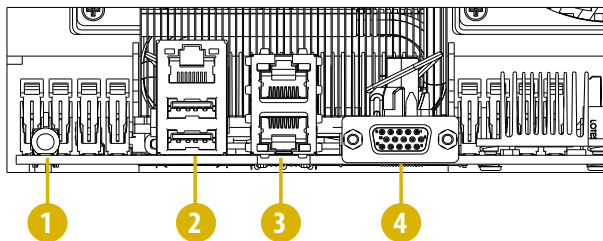

No.	Description
1	ID button w/ LED
2	Upper: Dedicated IPMI LAN port Lower: 2 Type-A (USB3.2 Gen1) ports
3	2 RJ45 (10GbE) LAN ports (LAN1, LAN2)
4	DB15 (VGA)


6 System Rear Panel

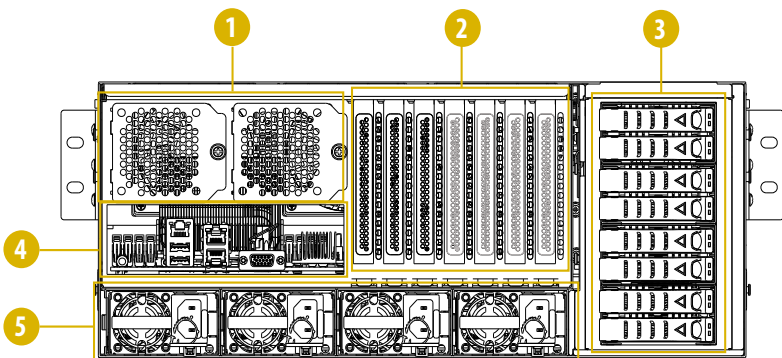


No.	Description
1	Rear vents
2	3 FHHL PCIe5.0 x16 slots
3	8 Hot-swap 2.5" NVMe (PCIe5.0 x4) drive bays, support TA@30C
4	Rear I/O panel (depends on the specification of the server motherboard)
5	2+2 CRPS

7 Remove Server Top Cover


1. Push both tabs of the front cover toward the FRONT of the chassis.
2. Tilt the cover and remove it.

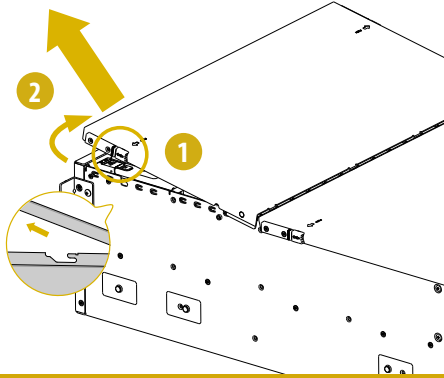

3. Push both tabs of the middle cover toward the FRONT of the chassis.
4. Tilt the cover and remove it.

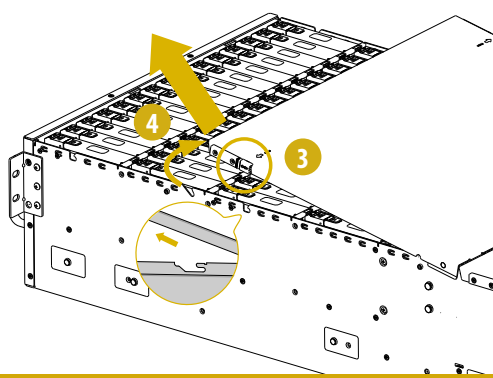


5. Push both tabs of the rear cover toward the FRONT of the chassis.
6. Tilt the cover and remove it.

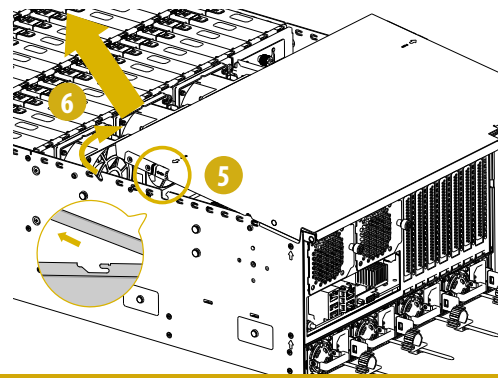


8 Replace System Fan

1. Lift to remove the failed fan.
2. Align the mounts on the replacement fan with the fan mounting holes on the fan bar.
3. Gently place the fan into the fan frame.
4. Make sure the fan is well seated and the fan connector is properly connected.

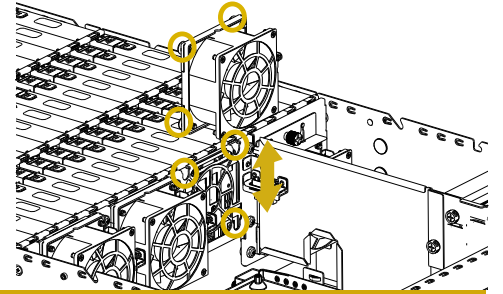


9 Install the CPU and Heatsink (LGA 4677 Socket)


Remove the CPU socket cover and open the socket lever.

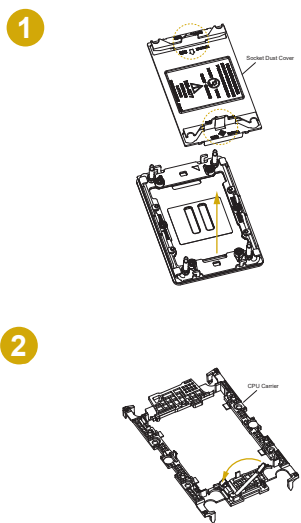


Align and install the processor on the carrier and make sure the arrow is located in the correct direction. Close the socket lever.

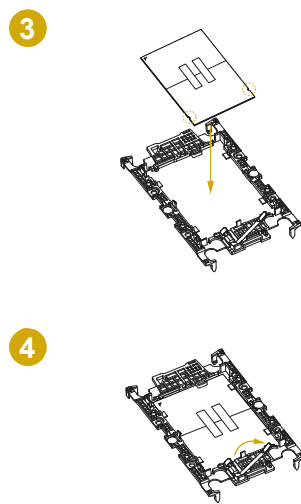


Carefully flip the carrier assembly. Apply a thermal paste.

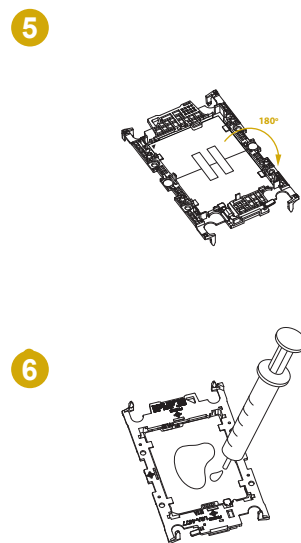

Install the heatsink to the CPU carrier. Then install the heatsink and CPU carrier to the socket.

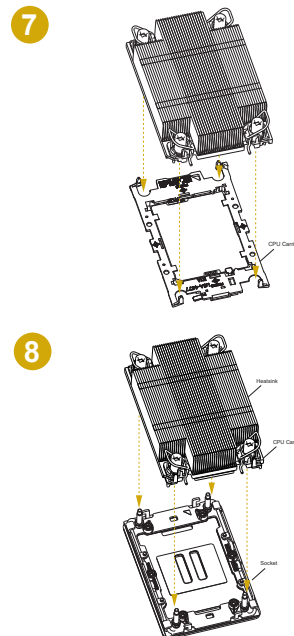


Tighten the corner fasteners. Secure the heatsink to the motherboard with a screwdriver.

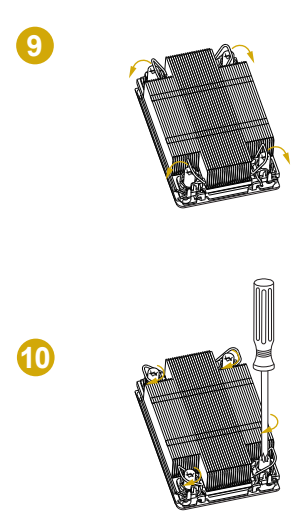


Note: We recommend using the CPU installation tool to avoid CPU pin-bent problem.

10 Install Add-in Card

1. Release the screw securing the slot cover to the chassis.
2. Remove the slot cover.

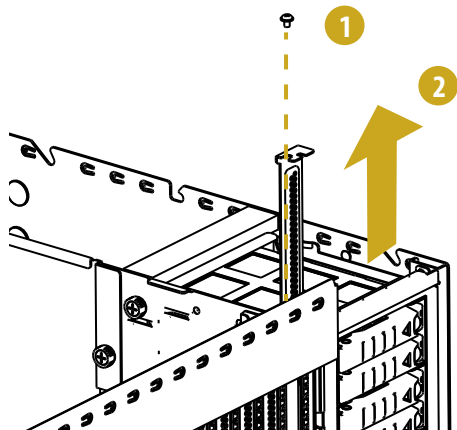


3. Install an add-in card into the slot.
4. Make sure the card is well seated and tighten the screw.

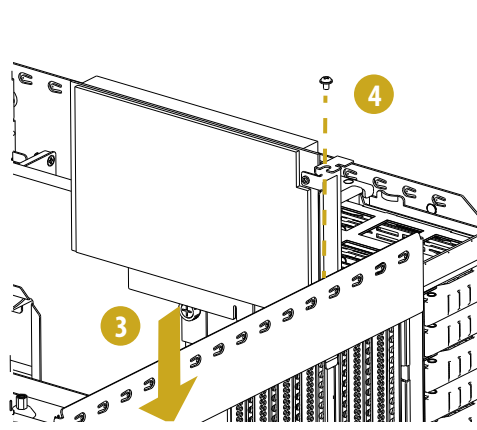


11 Replace Power Supply

1. Hold onto the power supply handle while pressing the locking lever towards the power supply bay.
2. Pull to remove the PSU from the chassis.

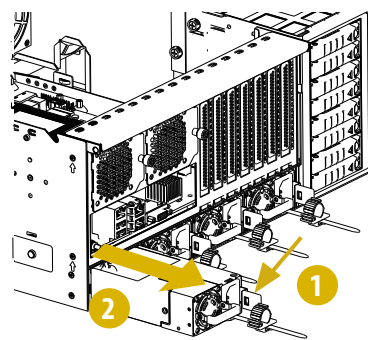


1. Carefully slide the PSU all the way into the power supply bay.
2. Make sure the PSU clicks into place and is well installed.

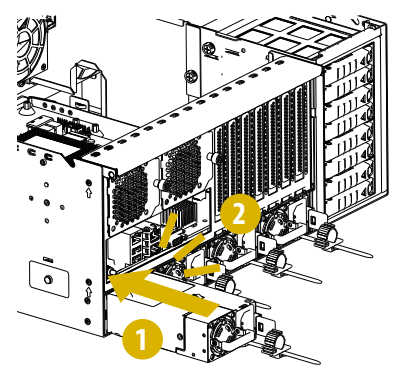

12 Remove Hard Drive Tray and Install Hard Drive


Removing the 2.5" Hard Drive Tray

1. Push the locking lever latch toward LEFT.
2. Rotate the lever out and pull the tray out.

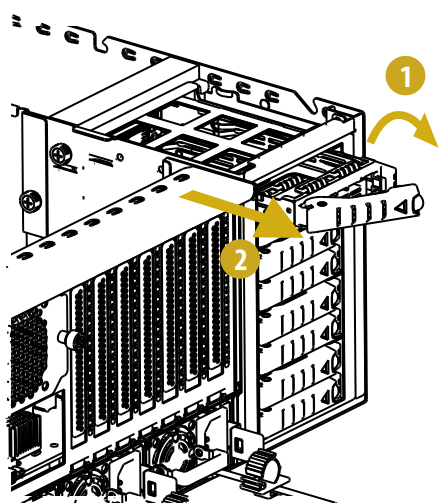


Installing the 2.5" Hard Drive

1. Place the 2.5" hard drive into the tray.
2. Slide the hard drive assembly into hard drive bay.
3. Rotate the lever in to lock the assembly.

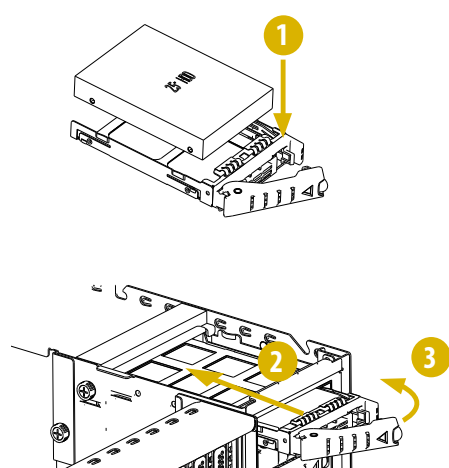


Removing the 3.5" Hard Drive Tray

1. Press the locking lever latch.
2. Rotate the lever and pull the tray out.

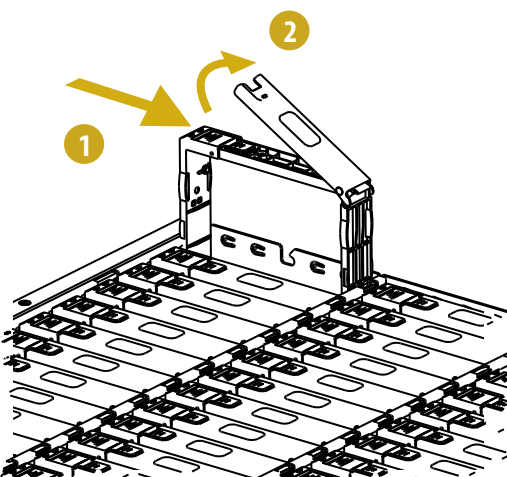

Installing the 3.5" Hard Drive

1. Place the 3.5" hard drive into the tray.
2. Slide the hard drive assembly into hard drive bay.
3. Push in the locking lever to lock the assembly.

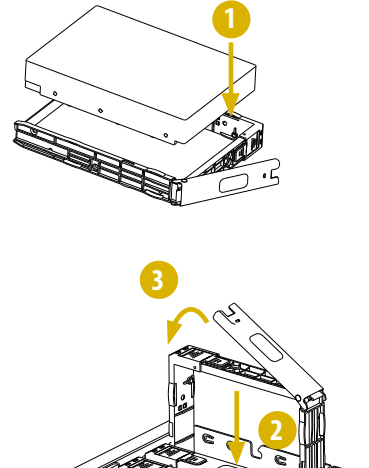

Note: The illustration is for references only. The actual location may be slightly different by models.