#### Copyright Notice:

No part of this installation guide may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this guide may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

#### Disclaimer:

Specifications and information contained in this guide are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this guide.

With respect to the contents of this guide, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the guide or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **CALIFORNIA, USA ONLY**

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.


"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

The terms HDMI™ and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



# Motherboard Layout


PS2 USB PW1 Jumper

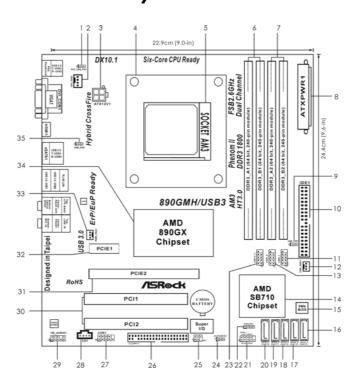

CPU Fan Connector (CPU\_FAN1) 20 SATAII Connector (SATAII\_1 (PORT 0), Blue) ATX 12V Power Connector (ATX12V1) 21 System Panel Header (PANEL1, White) CPU Heatsink Retention Module Chassis Speaker Header AM3 CPU Socket (SPEAKER 1, White) 2 x 240-pin DDR3 DIMM Slots 23 USB 2.0 Header (USB10\_11, Blue) (Dual Channel A: DDR3\_A1, DDR3\_B1; Blue) 24 Clear CMOS Jumper (CLRCMOS1) 2 x 240-pin DDR3 DIMM Slots 25 Infrared Module Header (IR1) (Dual Channel B: DDR3\_A2, DDR3\_B2; White) Floppy Connector (FLOPPY1) ATX Power Connector (ATXPWR1) 27 Serial Port Connector (COM1) USB\_PW1 Jumper 28 Internal Audio Connector: CD1 (Black) 10 Primary IDE Connector (IDE1, Blue) Front Panel Audio Header 11 USB 2.0 Header (USB6\_7, Blue) (HD\_AUDIO1, White) Chassis Fan Connector (CHA FAN1) PCI Slots (PCI1-2) 30 13 USB 2.0 Header (USB8\_9, Blue) 31 PCI Express 2.0 x16 Slot (PCIE2; Blue) Southbridge Controller PCI Express 2.0 x1 Slot (PCIE1; White) 14 32 15 SPI Flash Memory (8Mb) Power Fan Connector (PWR\_FAN1) SATAII Connector (SATAII\_5 (PORT 4), Blue) Northbridge Controller SATAII Connector (SATAII 4 (PORT 3), Blue) USB PW2 Jumper SATAII Connector (SATAII 3 (PORT 2), Blue)

19

SATAII Connector (SATAII 2 (PORT 1), Blue)

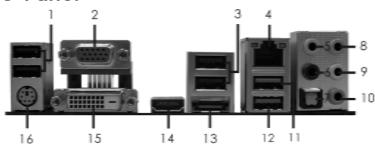

- 1 USB 2.0 Ports (USB23)
- 2 VGA/D-Sub Port
- 3 USB 2.0 Ports (USB45)
- \* 4 LAN RJ-45 Port
- 5 Central / Bass (Orange)
- 6 Rear Speaker (Black)
- 7 Optical SPDIF Out Port
- 8 Line In (Light Blue)

- \*\* 9 Front Speaker (Lime)
- 10 Microphone (Pink)
- 11 USB 2.0 Port (USB0)
- 12 USB 3.0 Port (USB1)
- 13 eSATAII Port (eSATA1)
- 14 VGA/HDMI Port
- 15 VGA/DVI-D Port
- 16 PS/2 Keyboard Port (Purple)

#### LAN Port LED Indications

Green

#### Activity/Link LED

Status	Description
Off	No Link
Blinking	Data Activity
On	Link

# SPEED LED Status Description Off 10Mbps connection Orange 100Mbps connection

1Gbps connection



<sup>\*\*</sup> If you use 2-channel speaker, please connect the speaker's plug into "Front Speaker Jack".

See the table below for connection details in accordance with the type of speaker you use.

#### **TABLE for Audio Output Connection**

Audio Output Channels	Front Speaker	Rear Speaker	Central / Bass	Line In
	(No. 9)	(No. 6)	(No. 5)	(No. 8)
2	V			
4	V	V		
6	V	V	V	
8	V	V	V	٧

To enable Multi-Streaming function, you need to connect a front panel audio cable to the front panel audio header. After restarting your computer, you will find "Mixer" tool on your system. Please select "Mixer ToolBox" , click "Enable playback multi-streaming", and click

"ok". Choose "2CH", "4CH", "6CH", or "8CH" and then you are allowed to select "Realtek HDA Primary output" to use Rear Speaker, Central/Bass, and Front Speaker, or select "Realtek HDA Audio 2nd output" to use front panel audio.

<sup>\*</sup> There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

# Eng

# 1. Introduction

Thank you for purchasing ASRock **890GMH/USB3** motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest VGA cards and CPU support lists on ASRock website as well. ASRock website <a href="http://www.asrock.com">http://www.asrock.com</a>

If you require technical support related to this motherboard, please visit our website for specific information about the model you are using. <a href="https://www.asrock.com/support/index.asp">www.asrock.com/support/index.asp</a>

### 1.1 Package Contents

ASRock 890GMH/USB3 Motherboard

(Micro ATX Form Factor: 9.6-in x 9.0-in, 24.4 cm x 22.9 cm)

ASRock 890GMH/USB3 Quick Installation Guide

ASRock 890GMH/USB3 Support CD

1 x Ultra ATA 66/100/133 IDE Ribbon Cable (80-conductor)

2 x Serial ATA (SATA) Data Cables (Optional)

1 x I/O Panel Shield

# 1.2 Specifications

Platform	- Micro ATX Form Factor: 9.6-in x 9.0-in, 24.4 cm x 22.9 cm
riationiii	- All Solid Capacitor design (100% Japan-made high-quality
	Polymer Capacitors)
CPU	- Support for Socket AM3 processors: AMD Phenom™ II X6 /
CFO	X4 / X3 / X2 (except 920 / 940) / Athlon II X4 / X3 / X2 /
	Sempron processors
	- Six-Core CPU Ready
	- Supports AMD OverDrive™ with ACC feature (Advanced
	Clock Calibration)
	- Supports AMD's Cool 'n' Quiet™ Technology
	- FSB 2600 MHz (5.2 GT/s)
	- Supports Untied Overclocking Technology (see <b>CAUTION 1</b> )
	- Supports Hyper-Transport 3.0 (HT 3.0) Technology
Chipset	- Northbridge: AMD 890GX
ompoct	- Southbridge: AMD SB710
Memory	- Dual Channel DDR3 Memory Technology (see <b>CAUTION 2</b> )
,	- 4 x DDR3 DIMM slots
	- Support DDR3 1800(OC)/1600(OC)/1333/1066/800 non-ECC
	un-buffered memory (see CAUTION 3)
	- Max. capacity of system memory: 16GB (see <b>CAUTION 4</b> )
Expansion Slot	- 1 x PCI Express 2.0 x16 slot (blue @ x16 mode)
•	- 1 x PCI Express 2.0 x1 slot
	- 2 x PCI slots
	- Supports ATI™ Hybrid CrossFireX™
Graphics	- Integrated AMD Radeon HD 4290 graphics
	- DX10.1 class iGPU, Shader Model 4.1
	- Max. shared memory 512MB (see CAUTION 5)
	- Three VGA Output options: D-Sub, DVI-D and HDMI
	- Supports HDMI Technology with max. resolution up to
	1920x1200 (1080P)
	- Supports Dual-link DVI with max. resolution up to 2560x1600
	@ 75Hz
	- Supports D-Sub with max. resolution up to 2048x1536
	@ 85Hz
	- Supports HDCP function with DVI and HDMI ports
	- Supports Full HD 1080p Blu-ray (BD) / HD-DVD playback
	with DVI and HDMI ports

Audio	- 7.1 CH HD Audio with Content Protection
	(Realtek ALC892 Audio Codec)
	- Premium Blu-ray audio support
LAN	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s
	- Realtek RTL8111DL
	- Supports Wake-On-LAN
Rear Panel I/O	I/O Panel
	- 1 x PS/2 Keyboard Port
	- 1 x VGA/D-Sub Port
	- 1 x VGA/DVI-D Port
	- 1 x HDMI Port
	- 1 x Optical SPDIF Out Port
	- 5 x Ready-to-Use USB 2.0 Ports
	- 1 x eSATAII Connector
	- 1 x Ready-to-Use USB 3.0 Port
	- 1 x RJ-45 LAN Port with LED (ACT/LINK LED and SPEED LED
	- HD Audio Jack: Rear Speaker/Central/Bass/Line in/
	Front Speaker/Microphone (see CAUTION 6)
USB 3.0	- 1 x USB 3.0 port by Fresco FL1000G, supports USB 3.0 up to
	5Gb/s
Connector	- 5 x Serial ATAII 3.0Gb/s connectors, support RAID (RAID 0,
	RAID 1, RAID 10 and JBOD), NCQ, AHCI and "Hot Plug"
	functions (see CAUTION 7)
	- 1 x ATA133 IDE connector (supports 2 x IDE devices)
	- 1 x Floppy connector
	- 1 x IR header
	- 1 x COM port header
	- CPU/Chassis/Power FAN connector
	- 24 pin ATX power connector
	- 4 pin 12V power connector
	- CD in header
	- Front panel audio connector
	- 3 x USB 2.0 headers (support 6 USB 2.0 ports)
BIOS Feature	- 8Mb AMI BIOS
	- AMI Legal BIOS
	- Supports "Plug and Play"
	- ACPI 1.1 Compliance Wake Up Events
	- Supports jumperfree
	- SMBIOS 2.3.1 Support
	- VCCM, NB, SB Voltage Multi-adjustment
	- VOCINI, NB, SB Voltage Multi-adjustment

_
<u></u>
5
Ė

	D: 1000 A 000 A	
Support CD	- Drivers, Utilities, AntiVirus Software (Trial Version)	
Unique Feature	- ASRock OC Tuner (see CAUTION 8)	
	- ASRock Intelligent Energy Saver (see CAUTION 9)	
	- ASRock Instant Boot	
	- ASRock Instant Flash (see CAUTION 10)	
	- ASRock OC DNA (see CAUTION 11)	
	- ASRock APP Charger (see CAUTION 12)	
	- Hybrid Booster:	
	- CPU Frequency Stepless Control (see CAUTION 13)	
	- ASRock U-COP (see CAUTION 14)	
	- Boot Failure Guard (B.F.G.)	
	- Turbo 25 / Turbo 30 GPU Overclocking	
Hardware	- CPU Temperature Sensing	
Monitor	- Chassis Temperature Sensing	
	- CPU/Chassis/Power Fan Tachometer	
	- CPU Quiet Fan	
	- Voltage Monitoring: +12V, +5V, +3.3V, Vcore	
os	- Microsoft® Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit	
	/ XP / XP Media Center / XP 64-bit compliant	
Certifications	- FCC, CE, WHQL	
	- ErP/EuP Ready (ErP/EuP ready power supply is required)	
	(see CAUTION 15)	

<sup>\*</sup> For detailed product information, please visit our website: <a href="http://www.asrock.com">http://www.asrock.com</a>

#### WARNING

Please realize that there is a certain risk involved with overclocking, including adjusting the setting in the BIOS, applying Untied Overclocking Technology, or using the third-party overclocking tools. Overclocking may affect your system stability, or even cause damage to the components and devices of your system. It should be done at your own risk and expense. We are not responsible for possible damage caused by overclocking.

#### **CAUTION!**

- 1. This motherboard supports Untied Overclocking Technology. Please read "Untied Overclocking Technology" on page 27 for details.
- This motherboard supports Dual Channel Memory Technology. Before you implement Dual Channel Memory Technology, make sure to read the installation guide of memory modules on page 13 for proper installation.
- Whether 1800/1600MHz memory speed is supported depends on the AM3
   CPU you adopt. If you want to adopt DDR3 1800/1600 memory module
   on this motherboard, please refer to the memory support list on our
   website for the compatible memory modules.
   ASRock website <a href="http://www.asrock.com">http://www.asrock.com</a>
- Due to the operating system limitation, the actual memory size may be less than 4GB for the reservation for system usage under Windows® 7 / Vista™ / XP. For Windows® OS with 64-bit CPU, there is no such limitation.
- The maximum shared memory size is defined by the chipset vendor and is subject to change. Please check AMD website for the latest information.
- For microphone input, this motherboard supports both stereo and mono modes.
   For audio output, this motherboard supports 2-channel, 4-channel, 6-channel, and 8-channel modes. Please check the table on page 3 for proper connection.
- Before installing SATAII hard disk to SATAII connector, please read the "SATAII
  Hard Disk Setup Guide" on page 29 of "User Manual" in the support CD to
  adjust your SATAII hard disk drive to SATAII mode. You can also connect SATA
  hard disk to SATAII connector directly.
- 8. It is a user-friendly ASRock overclocking tool which allows you to surveil your system by hardware monitor function and overclock your hardware devices to get the best system performance under Windows® environment.

  Please visit our website for the operation procedures of ASRock OC Tuner. ASRock website: <a href="http://www.asrock.com">http://www.asrock.com</a>
- 9. Featuring an advanced proprietary hardware and software design, Intelligent Energy Saver is a revolutionary technology that delivers unparalleled power savings. The voltage regulator can reduce the number of output phases to improve efficiency when the CPU cores are idle. In other words, it is able to provide exceptional power saving and improve power efficiency without sacrificing computing performance. To use Intelligent Energy Saver function, please enable Cool 'n' Quiet option in the BIOS setup in advance. Please visit our website for the operation procedures of Intelligent Energy Saver.

ASRock website: http://www.asrock.com

inglish

- 10. ASRock Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows you to update system BIOS without entering operating systems first like MS-DOS or Windows®. With this utility, you can press <F6> key during the POST or press <F2> key to BIOS setup menu to access ASRock Instant Flash. Just launch this tool and save the new BIOS file to your USB flash drive, floppy disk or hard drive, then you can update your BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.
- 11. The software name itself OC DNA literally tells you what it is capable of. OC DNA, an exclusive utility developed by ASRock, provides a convenient way for the user to record the OC settings and share with others. It helps you to save your overclocking record under the operating system and simplifies the complicated recording process of overclocking settings. With OC DNA, you can save your OC settings as a profile and share with your friends! Your friends then can load the OC profile to their own system to get the same OC settings as yours! Please be noticed that the OC profile can only be shared and worked on the same motherboard.
- 12. If you desire a faster, less restricted way of charging your Apple devices, such as iPhone/iPod/iPad Touch, ASRock has prepared a wonderful solution for you ASRock APP Charger. Simply installing the APP Charger driver, it makes your iPhone charged much quickly from your computer and up to 40% faster than before. ASRock APP Charger allows you to quickly charge many Apple devices simultaneously and even supports continuous charging when your PC enters into Standby mode (S1), Suspend to RAM (S3), hibernation mode (S4) or power off (S5). With APP Charger driver installed, you can easily enjoy the marvelous charging experience than ever.
  - ASRock website: <a href="http://www.asrock.com/Feature/AppCharger/index.asp">http://www.asrock.com/Feature/AppCharger/index.asp</a>
- 13. Although this motherboard offers stepless control, it is not recommended to perform over-clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.
- 14. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.

15. EuP, stands for Energy Using Product, was a provision regulated by European Union to define the power consumption for the completed system. According to EuP, the total AC power of the completed system shall be under 1.00W in off mode condition. To meet EuP standard, an EuP ready motherboard and an EuP ready power supply are required. According to Intel's suggestion, the EuP ready power supply must meet the standard of 5v standby power efficiency is higher than 50% under 100 mA current consumption. For EuP ready power supply selection, we recommend you checking with the power supply manufacturer for more details.

# 2. Installation

This is a Micro ATX form factor (9.6-in  $\times$  9.0-in, 24.4 cm  $\times$  22.9 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

### **Pre-installation Precautions**

Take note of the following precautions before you install motherboard components or change any motherboard settings.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

- Unplug the power cord from the wall socket before touching any component.
- To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
- 3. Hold components by the edges and do not touch the ICs.
- 4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.
- When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.

#### 2.1 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that the CPU corner with the golden triangle matches the socket corner with a small triangle.
- Step 3. Carefully insert the CPU into the socket until it fits in place.



The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.



STEP 1: Lift Up The Socket Lever



STEP 2 / STEP 3: Match The CPU Golden Triangle To The Socket Corner Small Triangle



STEP 4: Push Down And Lock The Socket Lever

#### 2.2 Installation of CPU Fan and Heatsink

After you install the CPU into this motherboard, it is necessary to install a larger heatsink and cooling fan to dissipate heat. You also need to spray thermal grease between the CPU and the heatsink to improve heat dissipation. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU FAN connector (CPU\_FAN1, see Page 2, No. 2). For proper installation, please kindly refer to the instruction manuals of the CPU fan and the heatsink.

### 2.3 Installation of Memory Modules (DIMM)

This motherboard provides four 240-pin DDR3 (Double Data Rate 3) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install **identical** (the same brand, speed, size and chiptype) DDR3 DIMM pair in the slots of the same color. In other words, you have to install **identical** DDR3 DIMM pair in **Dual Channel A** (DDR3\_A1 and DDR3\_B1; Blue slots; see p.2 No.6) or **identical** DDR3 DIMM pair in **Dual Channel B** (DDR3\_A2 and DDR3\_B2; White slots; see p.2 No.7), so that Dual Channel Memory Technology can be activated. This motherboard also allows you to install four DDR3 DIMMs for dual channel configuration, and please install **identical** DDR3 DIMMs in all four slots. You may refer to the Dual Channel Memory Configuration Table below.

#### **Dual Channel Memory Configurations**

	DDR3_A1	DDR3_B1	DDR3_A2	DDR3_B2
	(Blue Slot)	(Blue Slot)	(White Slot)	(White Slot)
(1)	Populated	Populated	-	-
(2)	-	-	Populated	Populated
(3)*	Populated	Populated	Populated	Populated

<sup>\*</sup> For the configuration (3), please install **identical** DDR3 DIMMs in all four slots.




- If you want to install two memory modules, for optimal compatibility and reliability, it is recommended to install them in the slots of the same color. In other words, install them either in the set of blue slots (DDR3\_A1 and DDR3\_B1), or in the set of white slots (DDR3\_A2 and DDR3\_B2).
- If only one memory module or three memory modules are installed in the DDR3 DIMM slots on this motherboard, it is unable to activate the Dual Channel Memory Technology.
- If a pair of memory modules is NOT installed in the same Dual Channel, for example, installing a pair of memory modules in DDR3\_A1 and DDR3\_A2, it is unable to activate the Dual Channel Memory Technology.
- It is not allowed to install a DDR or DDR2 memory module into DDR3 slot; otherwise, this motherboard and DIMM may be damaged.
- If you adopt DDR3 1800/1600 memory modules on this motherboard, it is recommended to install them on DDR3\_A2 and DDR3\_B2 slots.

## Installing a DIMM



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

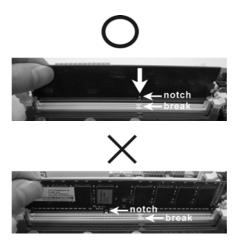



The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

## 2.4 Expansion Slots (PCI and PCI Express Slots)

There are 2 PCI slots and 2 PCI Express slots on this motherboard.

**PCI Slots:** PCI slots are used to install expansion cards that have the 32-bit PCI interface.

#### **PCIE Slots:**

PCIE1 (PCIE x1 slot; White) is used for PCI Express cards with x1 lane width cards, such as Gigabit LAN card and SATA2 card.
PCIE2 (PCIE x16 slot; Blue) is used for PCI Express x16 lane width graphics cards.

#### Installing an expansion card

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

### 2.5 Dual Monitor and Surround Display Features

#### **Dual Monitor Feature**

This motherboard supports dual monitor feature. With the internal VGA output support (DVI-D, D-Sub and HDMI), you can easily enjoy the benefits of dual monitor feature without installing any add-on VGA card to this motherboard. This motherboard also provides independent display controllers for DVI-D, D-Sub and HDMI to support dual VGA output so that DVI-D, D-sub and HDMI can drive same or different display contents.

To enable dual monitor feature, please follow the below steps:

 Connect DVI-D monitor cable to VGA/DVI-D port on the I/O panel, connect D-Sub monitor cable to VGA/D-Sub port on the I/O panel, or connect HDMI monitor cable to HDMI port on the I/O panel.



VGA/DVI-D port HDMI port

2. If you have installed onboard VGA driver from our support CD to your system already, you can freely enjoy the benefits of dual monitor function after your system boots. If you haven't installed onboard VGA driver yet, please install onboard VGA driver from our support CD to your system and restart your computer. Then you can start to use dual monitor function on this motherboard.



- DVI-D and HDMI ports cannot function at the same time. When one of them is enabled, the other one will be disabled.
- When you playback HDCP-protected video from Blu-ray (BD) or HD-DVD disc, the content will be displayed only in one of the two monitors instead of both monitors.

#### **Surround Display Feature**

This motherboard supports surround display upgrade. With the internal VGA output support (DVI-D, D-Sub and HDMI) and external add-on PCI Express VGA cards, you can easily enjoy the benefits of surround display feature. Please refer to the following steps to set up a surround display environment:

- 1. Install the ATI™ PCI Express VGA card on PCIE2 slot. Please refer to page 15 for proper expansion card installation procedures for details.
- Connect DVI-D monitor cable to VGA/DVI-D port on the I/O panel, connect D-Sub monitor cable to VGA/D-Sub port on the I/O panel, or connect HDMI monitor cable to HDMI port on the I/O panel. Then connect other monitor cables to the corresponding connectors of the add-on PCI Express VGA card on PCIE2 slot.
- 3. Boot your system. Press <F2> to enter BIOS setup. Enter "Share Memory" option to adjust the memory capability to [32MB], [64MB], [128MB] [256MB] or [512MB] to enable the function of VGA/D-sub. Please make sure that the value you select is less than the total capability of the system memory. If you do not adjust the BIOS setup, the default value of "Share Memory", [Auto], will disable VGA/D-Sub function when the add-on VGA card is inserted to this matherboard.
- 4. Install the onboard VGA driver and the add-on PCI Express VGA card driver to your system. If you have installed the drivers already, there is no need to install them again.
- 5. Set up a multi-monitor display.

### For Windows® XP / XP 64-bit OS:

Right click the desktop, choose "Properties", and select the "Settings" tab so that you can adjust the parameters of the multi-monitor according to the steps below.

- A. Click the "Identify" button to display a large number on each monitor.
- B. Right-click the display icon in the Display Properties dialog that you wish to be your primary monitor, and then select "Primary". When you use multiple monitors with your card, one monitor will always be Primary, and all additional monitors will be designated as Secondary.
- C. Select the display icon identified by the number 2.
- D. Click "Extend my Windows desktop onto this monitor".
- E. Right-click the display icon and select "Attached", if necessary.
- F. Set the "Screen Resolution" and "Color Quality" as appropriate for the second monitor. Click "Apply" or "OK" to apply these new values.
- G. Repeat steps C through E for the diaplay icon identified by the number one, two, three and four.

#### For Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit OS:

Right click the desktop, choose "Personalize", and select the "Display Settings" tab so that you can adjust the parameters of the multi-monitor according to the steps below.

- A. Click the number "2" icon.
- B. Click the items "This is my main monitor" and "Extend the desktop onto this monitor".
- C. Click "OK" to save your change.
- D. Repeat steps A through C for the display icon identified by the number three and four.
- 6. Use Surround Display. Click and drag the display icons to positions representing the physical setup of your monitors that you would like to use. The placement of display icons determines how you move items from one monitor to another.



#### **HDCP Function**

HDCP function is supported on this motherboard. To use HDCP function with this motherboard, you need to adopt the monitor that supports HDCP function as well. Therefore, you can enjoy the superior display quality with high-definition HDCP encryption contents. Please refer to below instruction for more details about HDCP function.

#### What is HDCP?

HDCP stands for High-Bandwidth Digital Content Protection, a specification developed by Intel® for protecting digital entertainment content that uses the DVI interface. HDCP is a copy protection scheme to eliminate the possibility of intercepting digital data midstream between the video source, or transmitter - such as a computer, DVD player or set-top box - and the digital display, or receiver - such as a monitor, television or projector. In other words, HDCP specification is designed to protect the integrity of content as it is being transmitted.

Products compatible with the HDCP scheme such as DVD players, satellite and cable HDTV set-top-boxes, as well as few entertainment PCs requires a secure connection to a compliant display. Due to the increase in manufacturers employing HDCP in their equipment, it is highly recommended that the HDTV or LCD monitor you purchase is compatible.

### 2.6 ATI™ Hybrid CrossFireX™ Operation Guide

This motherboard supports ATI™ Hybrid CrossFireX™ feature. ATI™ Hybrid CrossFireX™ brings multi-GPU performance capabilities by enabling an AMD 890GX integrated graphics processor and a discrete graphics processor to operate simultaneously with combined output to a single display for blisteringly-fast frame rates. Currently, ATI™ Hybrid CrossFireX™ Technology is only supported with Windows® Vista™ / 7 OS, and is not available with Windows® XP OS. In the future, ATI™ Hybrid CrossFireX™ may be supported with Windows® XP OS. Please visit our website for updated information.



#### What does an ATI™ Hybrid CrossFireX™ system include?

An ATI™ Hybrid CrossFireX™ system includes an ATI™ Radeon™ 2400, 3450 or 5450 series graphics processor and a motherboard based on an AMD 890GX integrated chipset, all operating in a Windows® Vista™ / 7 environment. Please refer to below PCI Express graphics card support list for ATI™ Hybrid CrossFireX™. For the future update of more compatible PCI Express graphics cards, please visit our website for further information.

Vendor	Chipset	Model	Driver
ATI	RADEON HD2400XT	POWERCOLOR HD2400 XT	Support CD 8.70
		256MB DDR3	
	RADEON HD3450	POWERCOLOR AX3450	Support CD 8.70
		256MD2-S	
	RADEON HD5450	ATI RADEON HD5450 1GB	Support CD 8.70


### Enjoy the benefit of ATI™ Hybrid CrossFireX™

- Step 1. Install one compatible PCI Express graphics card to PCIE2 slot (blue). For the proper installation procedures, please refer to section "Expansion Slots".
- Step 2. Connect the monitor cable to the correspondent connector on the PCI Express graphics card on PCIE2 slot.
- Step 3. Boot your system. Press <F2> to enter BIOS setup. Enter "Advanced" screen, and enter "Chipset Settings". Then set the option "Surround View" to [Enabled].
- Step 4. Boot into OS. Please remove the ATI™ driver if you have any VGA driver installed in your system.
- Step 5. Install the onboard VGA driver from our support CD to your system for both the onboard VGA and the discrete graphics card.
- Step 6. Restart your computer. Then you will find "ATI Catalyst Control Center" on your Windows® taskbar.



**ATI Catalyst Control Center** 

Step 7. Double-click "ATI Catalyst Control Center". Click "View", click "CrossFire™", and then select the option "Enable CrossFire™".

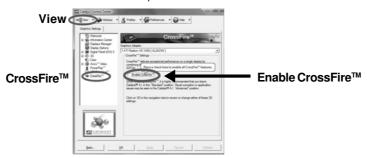

Step 8. Click "Yes" to continue.



Step 9. Click "OK" to save your change.




Step 10. Reboot your system. Then you can freely enjoy the benefit of Hybrid™ CrossFireX™ feature.

- \* Hybrid CrossFireX<sup>™</sup> appearing here is a registered trademark of ATI<sup>™</sup> Technologies Inc., and is used only for identification or explanation and to the owners' benefit, without intent to infringe.
- \* For further information of ATI™ Hybrid CrossFireX™ technology, please check AMD website for up dates and details.

**Jumpers Setup** 

2.7

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.

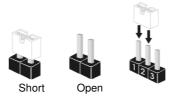

Jumper	Setting	
PS2 USB PW1	4.0	

(see p.2, No. 1) +5VSB Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB23 wake up events.

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

USB PW2 Short pin2, pin3 to enable 0 • • +5V\_DUAL for USB01/45 (see p.2, No. 35) wake up events.

Note: To select +5V DUAL, it requires 2 Amp and higher standby current provided by power supply. When you select +5V\_DUAL, USB devices can wake up the system under S3 (Suspend to RAM) state.

USB PW1 Short pin2, pin3 to enable (see p.2, No. 9) +5VSB (standby) for USB6\_7/8\_9/10\_11 wake up

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

Clear CMOS Jumper 2\_3 (CLRCMOS1) • • 0  $\circ \bullet \bullet$ (see p.2, No. 24) Default Clear CMOS

Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRCMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action.

#### 2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

Floppy Connector (33-pin FLOPPY1) (see p.2 No. 26)

PINI FLOPPY1



Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

#### Primary IDE connector (Blue)

(39-pin IDE1, see p.2 No. 10)



connect the blue end to the motherboard



connect the black end to the IDE devices

80-conductor ATA 66/100/133 cable

Note: Please refer to the instruction of your IDE device vendor for the details.

# Serial ATAII Connectors

(SATAII\_1 (PORT 0):

see p.2, No. 20)

(SATAII 2 (PORT 1):

see p.2, No. 19) (SATAII\_3 (PORT 2):

 see p.2, No. 18)
 SATAII\_4 (PORT 3):
 SATAII\_5 (SATAII\_3 SATAII\_3 SATAII\_4 SATAII\_5 (PORT 0) (PORT 1) (PORT 2) (PORT 3) (PORT 4)

 see p.2, No. 17)
 (SATAII\_5 (PORT 4):

see p.2, No. 16)


SATAII\_1 SATAII\_2 SATAII\_3 SATAII\_4 SATAII\_5

These five Serial ATAII (SATAII) connectors support SATAII or SATA hard disk for internal storage devices. The current SATAII interface allows up to 3.0 Gb/s data transfer rate.

Serial ATA (SATA) Data Cable (Optional)



Either end of the SATA data cable can be connected to the SATA / SATAII hard disk or the SATAII connector on the motherboard.

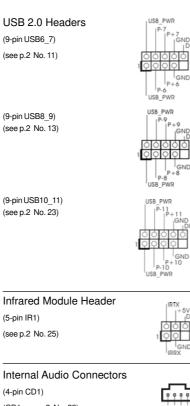

Besides five default USB 2.0 ports on the I/O panel, there are three USB 2.0 headers on this motherboard. Each USB 2.0 header can support two USB 2.0 ports.



This header supports an optional wireless transmitting and receiving infrared module.


(CD1: see p.2 No. 28)



This connector allows you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.

Front Panel Audio Header (9-pin HD\_AUDIO1)

(see p.2, No. 29)

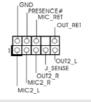

This is an interface for the front panel audio cable that allows convenient connection and control of audio devices.



- 1. High Definition Audio supports Jack Sensing, but the panel wire on the chassis must support HDA to function correctly. Please follow the instruction in our manual and chassis manual to install your system.
- 2. If you use AC'97 audio panel, please install it to the front panel audio header as below:
  - A. Connect Mic\_IN (MIC) to MIC2\_L.
  - B. Connect Audio\_R (RIN) to OUT2\_R and Audio\_L (LIN) to OUT2\_L.
  - C. Connect Ground (GND) to Ground (GND).

- D. MIC\_RET and OUT\_RET are for HD audio panel only. You don't need to connect them for AC'97 audio panel. E. To activate the front mic.
  - For Windows® XP / XP 64-bit OS: Select "Mixer". Select "Recorder". Then click "FrontMic". For Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit OS: Go to the "FrontMic" Tab in the Realtek Control panel. Adjust "Recording Volume".

### System Panel Header (9-pin PANEL1)

(see p.2 No. 21)



This header accommodates several system front panel functions.

# Chassis Speaker Header

(4-pin SPEAKER 1) (see p.2 No. 22)



- GND - +12V - CHA\_FAN\_SPEED

+12V ·

Please connect the chassis speaker to this header.

#### Chassis and Power Fan Connectors

(3-pin CHA\_FAN1)

(see p.2 No. 12)



Please connect the fan cables to the fan connectors and match the black wire to the

### CPU Fan Connector

(4-pin CPU\_FAN1)

(see p.2 No. 2)



Please connect the CPU fan cable to this connector and match the black wire to the ground pin.



Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

Pin 1-3 Connected

3-Pin Fan Installation

**ATX Power Connector** (24-pin ATXPWR1) (see p.2 No. 8)



Please connect an ATX power supply to this connector.



Though this motherboard provides 24-pin ATX power connector, it can still work if you adopt a traditional 20-pin ATX power supply. To use the 20-pin ATX power supply, please plug your power supply along with Pin 1 and Pin 13.



20-Pin ATX Power Supply Installation

ATX 12V Power Connector

(4-pin ATX12V1) (see p.2 No. 3)



Please connect an ATX 12V power supply to this connector.

Serial port Header

(9-pin COM1) (see p.2 No.27)



This COM1 header supports a serial port module.

#### 2.9 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from up to bottom side to install those required drivers. Therefore, the drivers you install can work properly.

# 2.10 Installing Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit / XP / XP 64-bit With RAID Functions

If you want to install Windows® 7/7 64-bit / Vista<sup>TM</sup> / Vista<sup>TM</sup> 64-bit / XP 64-bit on your SATA / SATAII HDDs with RAID functions, please refer to the document at the following path in the Support CD for detailed procedures:

..\ RAID Installation Guide

# 2.11 Installing Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit / XP / XP 64-bit Without RAID Functions

If you want to install Windows® 7 / 7 64-bit / Vista $^{TM}$  / Vista $^{TM}$  64-bit / XP / XP 64-bit OS on your SATA / SATAII HDDs without RAID functions, please follow below procedures according to the OS you install.

# 2.11.1 Installing Windows® XP / XP 64-bit Without RAID Functions

If you want to install Windows $^{\circ}$  XP / XP 64-bit on your SATA / SATAII HDDs without RAID functions, please follow below steps.

Using SATA / SATAII HDDs without NCQ and Hot Plug functions (IDE mode)

STEP 1: Set up BIOS.

 A. Enter BIOS SETUP UTILITY → Advanced screen→ Storage Configuration.

B. Set the "SATA Operation Mode" option to [IDE].

STEP 2: Install Windows® XP / XP 64-bit OS on your system.

# nalish

# 2.11.2 Installing Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit Without RAID Functions

If you want to install Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit on your SATA / SATAII HDDs without RAID functions, please follow below steps.

#### Using SATA / SATAII HDDs without NCQ and Hot Plug functions (IDE mode)

#### STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → Storage Configuration.
- B. Set the "SATA Operation Mode" option to [IDE].

STEP 2: Install Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit OS on your system.

#### Using SATA / SATAII HDDs with NCQ and Hot Plug functions (AHCI mode)

#### STEP 1: Set Up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → Storage Configuration.
- B. Set the "SATA Operation Mode" option to [AHCI].

STEP 2: Install Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit OS on your system.

#### 2.12 Untied Overclocking Technology

This motherboard supports Untied Overclocking Technology, which means during overclocking, FSB enjoys better margin due to fixed PCI / PCIE buses. Before you enable Untied Overclocking function, please enter "Overclock Mode" option of BIOS setup to set the selection from [Auto] to [CPU, PCIE, Async.]. Therefore, CPU FSB is untied during overclocking, but PCI / PCIE buses are in the fixed mode so that FSB can operate under a more stable overclocking environment.



Please refer to the warning on page 7 for the possible overclocking risk before you apply Untied Overclocking Technology.

# 3. BIOS Information

The Flash Memory on the motherboard stores BIOS Setup Utility. When you start up the computer, please press <F2> during the Power-On-Self-Test (POST) to enter BIOS Setup utility; otherwise, POST continues with its test routines. If you wish to enter BIOS Setup after POST, please restart the system by pressing <Ctl> + <Alt> + <Delete>, or pressing the reset button on the system chassis. The BIOS Setup program is designed to be user-friendly. It is a menu-driven program, which allows you to scroll through its various sub-menus and to select among the predetermined choices. For the detailed information about BIOS Setup, please refer to the User Manual (PDF file) contained in the Support CD.

# 4. Software Support CD information

This motherboard supports various Microsoft® Windows® operating systems: 7 / 7 64-bit / Vista $^{\text{TM}}$  / Vista $^{\text{TM}}$  / Vista $^{\text{TM}}$  64-bit / XP / XP Media Center / XP 64-bit. The Support CD that came with the motherboard contains necessary drivers and useful utilities that will enhance motherboard features. To begin using the Support CD, insert the CD into your CD-ROM drive. It will display the Main Menu automatically if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double-click on the file "ASSETUP.EXE" from the "BIN" folder in the Support CD to display the menus.

# 1. 제품소개

ASRock 의 890GMH/USB3 메인 보드를 구매하여 주신것에 대하여 감사 드립니다. 이 메인보드는 엄격한 품질관리 하에 생산되어진 신뢰성 있는 메인보드 입니다. 이 제품은 고 품격 디자인과 함께 ASRock의 우수한 품질과 최고의 안정성을 자랑하고 있습니다. 이 빠른 설치 안내서에는 마더보드에 대한 설명과 단계별 설치 방법이실려 있습니다. 마더보드에 대한 보다 자세한 내용은 지원 CD의 사용 설명서에서 확인할 수 있습니다.



메인보드의 사양이나 바이오스가 업 데이트 되기 때문에 이 사용자설명서의 내용은 예고 없이 변경되거나 바뀔 수가 있습니다. 만일을생각해서 이 사용자 설명서의 어떤 변경이 있으면 ASRock의 웹사이트에서 언제든지 업 데이트를 하실 수 있습니다. 웹사이트에서 최신 VGA 카드와 CPU 지원 목록을 확인할 수 있습니다. ASRock의 웹사이트 주소는 <a href="http://www.asrock.com">http://www.asrock.com</a> 입니다. 본 머더보드와 관련하여 기술 지원이 필요한 경우 당사 웹 사이트를 방문하여 사용 중인 모델에 대한 특정 정보를 얻으십시오.

www.asrock.com/support/index.asp

# 1.1 패키지 내용

ASRock 890GMH/USB3 마더보드

(Micro ATX 폼 팩터: 9.6" X 9.0", 24.4 X 22.9 cm)

ASRock 890GMH/USB3 퀵 설치 가이드

ASRock 890GMH/USB3 지원 CD

80 도체 울트라 ATA 66/100/133 IDE 리본 케이블 1개

시리얼 ATA(SATA) 데이터 케이블 2개(선택 사양)

I/O 차폐 1 개

한국어

플랫폼

- Micro ATX 폼 팩터: 9.6" X 9.0", 24.4 X 22.9 cm - 완전 고체 축전지 디자인 (100% 일제 고품질 기능성 고분자 콘

한국어

HD-DVD 재생을 지원

1 - 1 -	- 1.1 OII IID Audio 7 7 II
	(Realtek ALC892 Audio Codec)
	- Premium Blu-ray 오디오 지원
랜	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s
	- Realtek RTL8111DL
	- 웨이크 - 온 - 랜 지원
후면판 I/O	I/O Panel
	- 1 개 PS/2 키보드 포트
	- 1 개의 VGA/D-Sub 포트
	- 1 개의 VGA/DVI-D 포트
	- 1 개의 HDMI
	- 1 개광학 SPDIF 출력 포트
	- 5 개디폴트 USB 2.0 포트
	- 1 개 eSATAII 커넥터
	- 1 개디폴트 USB 3.0 포트
	- 1 개 LED(ACT/LINK LED 및 SPEED LED)가 있는 RJ-45
	LAN 포트
	- 오디오 잭: 후방 스피커 / 중앙 / 저음 / 라인 인 / 전방 스피커
	/ 마이크 (주의 6 참조)
USB 3.0	- Fresco FL1000G 의 USB3.0 포트 1 개, USB 3.0 지원
	(최고 5Gb/s)
온보드 헤더	- 5 개의 Serial ATAII 3.0Gb/s 커넥터,. RAID (RAID 0,
및 커넥터	RAID 1, RAID 10 및 JBOD) 기능 지원, NCQ, AHCI 및
	"핫 플러그"기 능지원 ( <b>주의 7 참조</b> )
	- ATA133 IDE 커넥터 1 개 (최고 2 개의 IDE 장치 지원)
	- 플로피 포트 1개
	- 적외선 모듈 헤더 1 개
	- COM 포트 헤더 1 개
	- CPU/ 섀시 / 전원 팬 커넥터
	- 24 핀 ATX 전원 헤더
	- 4 핀 ATX 12V 파워 콘넥터
	- 내부 오디오 콘넥터
	- 전면부 오디오 콘넥터
	- USB 2.0 헤더 3 개 (6 개의 추가 USB 2.0 포트를 지원하는 헤더
	2개)
BIOS	- 8Mb AMI BIOS
	- AMI 에 따른 바이오스
	- "플러그 앤 플레이" 지원
	- ACPI 1.1 웨이크 - 업 이벤트와의 호환
	- 점퍼 프리 지원
	- 점퍼 프리 지원 ; SMBIOS 2.3.1 지원

- 7.1 CH HD Audio 목록 보호

오디오

지원 CD	- 드라이버, 유틸리티, 안티바이러스 소프트웨어(시험판)
특점및 특성	- ASRock OC 튜너 (주의 8 참조)
	- ASRock Intelligent Energy Saver (주의 9 참조)
	- ASRock Instant Boot
	- ASRock Instant Flash (주의 10 참조)
	- ASRock OC DNA (주의 11 참조)
	- ASRock APP Charger (주의 12 참조)
	- 하이드브리 부스터:
	- CPU 주파수의 단계적인 조절 ( <b>주의 13 참조</b> )
	- ASRock U-COP (주의 14 참조)
	- B.F.G(Boot Failure Guard)
	- Turbo 25 / Turbo 30 GPU Overclocking
하드웨어 모니터	- CPU 온도 감지
	- 마더보드 온도 감지
	- CPU/섀시 / 전원 팬 회전 속도계:샤시(케이스) 팬 회전 속도
	계
	- CPU 소음팬
	- 전압 감시 기능 : +12V,+5V,+3.3V,Vcore
OS	- 마이크로 소프트 Windows® 7/7 64 비트 /Vista™/
	Vista™64 비트 /XP/XP 미디어 센터 /XP 64 비트 와 호환
인중서	- FCC, CE, WHQL
	- ErP/EuP 지원(ErP/EuP 지원 전원 공급기가 요구됨)
	(주의 15 참조)

<sup>\*</sup>상세한 제품정보는 당사의 웹사이트를 방문할수있습니다. http://www.asrock.com

#### 경고

오버클로킹에는 BIOS 설정을 조정하거나 Untied Overclocking Technology 를 적용하 거나타업체의 오버클로킹 도구를 사용하는 것을 포함하여 어느 정도의 위험이 따른다는 것을 유념하십시오. 오버클로킹은 시스템 안정성에 영향을 주거나 심지어 시스템의 구성 요소와 장치에 손상을 입힐지도 모릅니다. 오버클로킹은 사용자 스스로 위험과 비용을 감 수하고 해야 합니다. 당사는 오버클로킹에 의해 발생할 수 있는 손상에 대해서 책임이 없 습니다.

한국어

1. 이 마더보드는 언타이드 오버클러킹 기술을 지원합니다. 자세한 내용은 27페 이지의 "언타이드 오버클러킹 기술"을 읽으십시오.

주의!

- 2. 이 마더보드는 듀얼 채널 메모리 기술을 지원합니다. 듀얼 채널 메모리 기술을 우구현하기 전에 올바른 설치를 위하여 13쪽에 있는 메모리 모듈 설치 안내를읽으십시오.
- 3. 1800/1600MHz 메모리 속도의 지원 여부는 채택된 AM3 CPU에 따라 결정됩니다. 이 마더보드에 DDR3 1800/1600 메모리 모듈을 채택하려는 경우 당사 웹사이트의 메모리 지원 목록에서 호환 가능한 메모리 모듈을 검색하십시오. ASRock 웹사이트 <a href="http://www.asrock.com">http://www.asrock.com</a>
- 4. 운영 체제한계 때문에 Windows®7/Vista™/XP에서 시스템 용도로 예약된 실제 메 모리 크기는4 GB 이하일 수 있습니다. 64비트 CPU와 Windows® OS의 경우 그런 한계가 없습니다.
- 5. 칩세트의 제조원이 정하였거나 그변화를 한제하게되는 최대 공유 메 모리의 크기에 대하여, AMD 의 웹사이트를 방문하여 최신 정보 를받으십시요.
- 6. 본 마더보드는 마이크 입력에 대해서 스테레오와 모노 모드 둘 다 지 원합니다. 본 마더보드는 오디오 출력에 대해서 2채널, 4채널, 6채널 및 8채널 모드를지원합니다. 올바른 연결을 위해 3쪽에 나온 표 를확인하십시오.
- 7. SATAII 하드 디스크를 SATAII 커넥터에 연결하기 전에, 지원 CD의 "User Manual" (사용 설명서) 29페이지에 나와 있는 "SATAII Hard Disk Setup Guide" (SATAII 하드 디스크 설치 설명서) 에 따라 SATAII 하드 디스크 드라이브를 SATAII 모드로 조정하십시오. 또한 SATA 하드 디스크를 SATAII 커넥터에 직접 연결할 수 있습니다
- 8. 이것은 사용하기 쉬운ASRock 오버클러킹 툴이며 당신으로하여금, 하드웨어 모니터 기능으로 당신의 시스템을 감시하며 하드웨어 시설 을 오버클러킹함으로서Windows® 환경속에서 가장 우수한 시스템 작업을 실현합니다. 당사의 웹사이트를 방문하여ASRock 〇〇 튜너 의 작업 절차를요해할수있습니다.
  - ASRock웹사이트: http://www.asrock.com
- 9. 자체 개발한 고급 하드웨어 및 소프트웨어 디자인을 특징을 하는 Intelligent Energy Saver (인텔리전트 에너지 세이버) 는 혁신적인 기술로서 절전 효과가 타제품에 비해 월등합니다. CPU 코어가 유휴 상태일 때 전압 조정기가 출력 위상의 수를 줄여 효율을 높여줍니다. 즉, 탁월한 절전 효과와 함께 컴퓨터의 성능을 떨어뜨리지 않으면서 전원 효율을 높일 수 있습니다. Intelligent Energy Saver (인텔리전 트 에너지 세이버) 기능을 사용하려면, 먼저 BIOS 셋업에서 쿨앤콰이 어트 옵션을 활성화하십시오. Intelligent Energy Saver (인텔리전 트 에너지 세이버)의 사용법은 당사의 웹 사이트를 참조하십시오. ASRock 웹 사이트: <a href="http://www.asrock.com">http://www.asrock.com</a>

한국어

한국

- 10. ASRock Instant Flash는 플래시ROM에 내장된 BIOS 유틸리타입니다. 이 편리한 BIOS 업데이트 툴을 사용하면 먼저 MS-DOS나 Windows® 같은 운영체제에 들어가지 않고도 시스템 BIOS를 업데이트할 수 있습니다. POST 중에 BIOS 셋업 메뉴에서 <F6> 키를 누르거나 <F2> 키를 누르면이 유틸리티로 ASRock Instant Flash에 액세스할 수 있습니다. 이제이툴을 시작하여 USB 플래시 드라이브, 플로피디스크 또는하드드라이브에 새 BIOS 파일을 저장하면 플로피디스켓이나 기타복잡한 플래시 유틸리티를 추가로 준비하지 않고도 몇 번의 클릭만으로도 BIOS를 업데이트할 수 있습니다. USB 플래시 드라이브 또는 하드 드라이브는 FAT32/16/12 파일시스템을 사용해야 합니다.
- 11. 소프트웨어 이름 자체에서 볼 수 있듯이 ○C DNA는 문자 그대로 자신의 기능을 잘 드러내고 있습니다. ASRock이 개발한 독보적인 유틸리티인 ○C DNA에서 사용자가 매우 편리하게 ○C 설정을 기록하고 이를 다른 사용자와 공유할수 있습니다. 이 소프트웨어를 사용하면 운영 체제에 오버클로킹 기록을 저장하여 오버클로킹 설정의 복잡한 기록 과정을 단순화하는데 도움이 됩니다. 또한 ○C DNA를 사용하여 ○C 설정을 프로파일로 저장하고 이를 친구와 공유할수 있습니다! 이 경우 친구는 ○C 프로파일을 자신의 시스템에 로드하여 사용자와 동일한 ○C 설정을 불러올 수 있습니다! 단,○C 프로파일은 동일한 메인보드에서만 공유 및 사용이 가능합니다.
- 12. 아이폰/아이팟 터치/아이패드와 같은 Apple 기기들을 더 빠르고 덜 제한된 방식으로 충전하려는 경우, ASRock 이 제공하는 놀라운 솔루션인 ASRock APP Charger 를 이용하십시오. APP Charger 드라이버를 설치하기만 하면 아이폰이 컴퓨터를 통해서 훨씬 더 빨리 충전되며 충전 속도도최대 40% 더 빨라집니다. ASRock APP Charger 는 많은 Apple 기기를 동시에 빨리 충전할 수 있게 하며, PC 가 대기 모드(S1), RAM 에 대한 일시 중단(S3), 최대 절전 모드(S4) 또는 전원 꺼짐 모드(S5)에 들어갈 때도 연속적충전을 지원합니다. APP Charger 드라이버를 설치하면 그 어느 때보다 더간편하고 빠르게 충전할 수 있습니다.

ASRock 웹사이트:  $\underline{\text{http://www.asrock.com/Feature/AppCharger/index.asp}}$ 

- 13. 본 마더보드는 직접 조절 기능을 제공하지만, 오버 클러킹을 하는 것은 권장되지않습니다. 권장하는 CPU 주파수 외에 다른 주파수를 설정 시에는 시스템이 불안정해지거나, 메인보드와 CPU의 불량이 발생 할 수 있으므로 가급적 사용 하지 마십시오.
- 14. 시스템을 다시 시작하기 전에 메인보드 위의 CPU 팬이 정상적으로 동작 또는 장착되어 있는지 확인하여 주십시오. 고온 방지를 위하여 PC 시스템을 설치할 때 CPU와 방열판 사이에 그리스를 발라 주셔야 합니다.

었습니다. EuP 에 따르면, 완제품 시스템의 총 AC 전원은 끄기 모드 상태에서 1.00W 미만이어야 합니다. EuP 표준을 충족하려면 EuP 지원 마더보드 및 EuP 지원 전원공급장치가 필요합니다. 인텔(Intel)의 제안에 따르면 EuP 지원 전원공급장치는 5V 대기 전력 효율이 100 mA 전류 소비 하에서 50% 보다 높아야 한다는 기준을 충족해야합니다. EuP 지원 전원공급장치를 선택하려면 전원공급장치 제조업체에 자세한 사항을 문의하시기 바랍니다.

15. EuP는 Energy Using Product (에너지 사용 제품)의 약어이며 유럽 연합이 완제품 시스템의 전력 소비량을 정의하기 위해 제정한 표준이

한국어

## 1.3 점퍼 셋팅

그림은 점퍼를 어떻게 셋업 하는지를 보여줍니다. 점퍼 캡이 핀 위에 있을 때, 점퍼는 "쇼트"입니다. 점퍼 캡이 핀 위에 없을 때 점퍼는 "오픈" 입니다. 그림은 3개의 핀 중 1-2번 핀이 "쇼트"임을 보여주는 것이며, 점퍼 캡이 이 두 핀 위에 있음을 보여주는 것입니다.



점퍼 세팅

PS2\_USB\_PW1 (2페이지, 1 번 항목 참조)





PS/2 또는 USB23 를 깨어나게 하기 위해서는 2번과 3번 핀을 "쇼트" 하여야 합니다.

참고: +5VSB 선택할 경우 2 암페어 정도 높은 전류 공급을 요구합니다.

USB\_PW2

(2페이지, 35번 항목 참조)





USB01/45 를 깨어나게 하기 위해서는 2 번과 3 번 핀을 +5V\_DUAL 하여야 합니다.

참고: +5V\_DUAL 선택할 경우 2 암페어 정도 높은 전류 공급을 요구합니다. +5V\_DUAL 을 선택하면, USB 장치가 시스템을 S3 (Suspend to RAM) 상 대에서 해제할 수 있습니다.

USB\_PW1

(2페이지, 9번 항목 참조)





USB6\_7/8\_9/10\_11 를 깨어나게하기 위해서는 2 번과 3 번 핀을 "쇼트" 하여야 합니 다.

참고: +5VSB 선택할 경우 2 암페어 정도 높은 전류 공급을 요구합니다.

CMOS 초기화 (CLRCMOS1, 3 핀 점퍼)

(CLRCMOS1, 3 핀 점퍼) (2페이지, 24번 항목 참조)





참고: CLRCMOS1은 CMOS의 데이터를 삭제할 수 있게 합니다. CMOS의데이터는 시스템 암호, 날자, 시간 및 시스템 설정 매개 변수와 같은 시스템 설정 정보를 포함합니다. 시스템 매개 변수를 삭제하고 기본 설정으로초기화하려면 컴퓨터를 끄고 전원 코드를 뽑은 후 점퍼 캡을 사용하여CLRCMOS1의 2번과 3번 핀을 5초간 단락시키십시오. CMOS를 초기화 한 뒤, 반드시 점퍼 캡을 제거하여야 합니다. 바이오스 업데이트를마친 후 CMOS를 삭제해야하는 경우 CMOS 삭제 동작 전에 시스템을 먼저부팅했다가 종료해야 합니다.

한국어

## 1.4 온보드 헤더 및 커넥터



#### 주의!

이 콘넥터는 점퍼가 아닙니다.이 콘넥터 위에 점퍼 캡을 사용하지 마세요. 커넥터에 점퍼 캡을 설치하면 마더보드가 영구적으로 손상됩니다!

#### 콘넥터

FDD 콘넥터 (33핀 FLOPPY1) (2페이지, 26번 항목 참조)





참고: 케이블의 빨간색 줄무늬가 있는 쪽을 커넥터의 1 번 핀에 맞추어

연결하십시오.

IDE 콘넥터 1 (파란색) (39핀 IDE1, 2페이지, 10번 항목 참조)



파란색은 메인보드에 연결합니다



검정색은 IDE 디바이스에 연결합니다

5개의 직렬 ATA (SATAII) 커

넥터가 내부 저장 장치용 SATA

또는 SATAII HDD를 지원합니

80 도체 ATA 66/100/133 케이블

참고: 자세한 사항은 IDE 장치 벤터가 제공하는 사용 설명서를참조하십시오.

#### 시리얼 ATAII 커넥터

(SATAII\_1 (PORT 0):

2페이지, 20번 항목 참조)

(SATAII\_2 (PORT 1):

2페이지, 19번 항목 참조) (SATAII\_3 (PORT 2):

2페이지, 18번 항목 참조)

(SATAII 4 (PORT 3):

2페이지, 17번 항목 참조)

(SATAII\_5 (PORT 4): 2페이지, 16번 항목 참조) 다. 커넥터가 내부기억 장치용 SATAII 케이블을지원합니다. 현재의 SATAII 인터페이스는 최고 3.0 Gb/s 의데이터 전송 속 도를지원합니다.



SATAII\_1 SATAII\_2 SATAII\_3 SATAII\_4 SATAII\_5 (PORT 0) (PORT 1) (PORT 2) (PORT 3) (PORT 4)

시리얼 ATA(SATA) 데이터 케이블 (선택사양)



SATA 데이터 케이블의 어느 쪽이든 SATA / SATAII 하드 디스크나 마더보드의 SATAII 커넥터에 연결할 수 있습니다. 한국어

한국어

MIC2 L

입니다.



- High Definition Audio(고음질 오디오)는 잭 센스 기능을 지원하나, 제 대로작동하려 면 섀시의 패널 와이어가 HAD를 지원해야 합니다. 이 설 명서 및 섀시 설명서의지침을 따라 시스템을 설치하십시오.
- 2. AC' 97 오디오 패널을 사용하는 경우, 이를 아래와 같이 프런트 패널 의 오디오헤 더에 설치하십시오.
  - A. Mic\_IN (MIC)을 MIC2\_L에 연결합니다.
  - B. Audio\_R (RIN)을 OUT2\_R에 연결하고, Audio\_L (LIN)을 OUT2\_L에 연결합니다.
  - C. Ground (GND)을 Ground (GND) 에 연결합니다.
  - D. MIC\_RET 및 OUT\_RET는 HD 오디오 패널 전용입니다. 이들 을 AC' 97오디오 패널에 연결 하지 않아도 됩니다.
  - E. 앞면마이크작동.

Windows® XP / XP 64비트 OS의 경우: "Mixer" (믹서)와 "Recorder" (리코더)를 선택한 후"FrontMic" (앞 면마이크)를 선택합니다.

Windows®7/764비트/Vista™/Vista™64비트OS의 경우: Realtek 제어판에서"FrontMic" (앞면 마이크)로가서 "Recording Volume" (리코딩 볼륨)을 조정합니다.

#### 시스템 콘넥터

(9핀 PANEL1) (2페이지, 21 번 항목 참조)



이 콘넥터는 시스템 전면 패널 기능을 지원하기 위한 것입니다.

# 새시 스피커 헤더

(4핀 SPEAKER 1) (2페이지, 22번 항목 참조)



재시 스피커를 이 헤더에 연결하십시오.

한국어




(3핀 CHA\_FAN1)

(2페이지, 12번 항목 참조)

+12V ·

팬 케이블을 팬 커넥터에 연결 하고 접지 핀에는 검은색 전선 을 연결하십시오.

(3 핀 PWR\_FAN1)

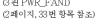






CPU 팬 케이블을 이 커넥터에 연결하고 흑색 선을 접지 핀에 맞추십시오.



본 머더보드가 4핀 CPU 팬(저소음 팬) 지원을 제공하기는 하지만 팬 속도 제어 기능없이도 3핀 CPU 팬을 성공적으로 작동할 수 있습니다. 본 머더보드의 CPU 팬커넥터에 3핀 CPU 팬을 연결하려면 1-3번 핀에 연결하십시오.

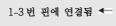



ATX 전원 헤더 (24 핀 ATXPWR1) (2페이지, 8번 항목 참조)



- CHA FAN SPEED

ATX 전원 공급기를 이 헤더에 연결하십시오.



이 마더보드는 24핀 ATX 전원 커넥터를 제공하지만, 종래의 20핀 ATX 전원 공급장치를 사용해도 작동이 가능합니다. 20핀 ATX 전원 공급장치를 사용하려면, Pin 1과 Pin 13으로 전원 공급장치를 연결하십시오.



20 핀 ATX 전원 공급장치 설치 **1** 

ATX 12V 파워 콘넥터 (4핀 ATX12V1)

(2페이지, 3번 항목 참조)



ATX 12V 플러그가 달린 전원공급장치를 이 커넥터에 연결해야 충분한 전력을 공급할 수 있습니다. 그러지 않을 경우 전원을 켤 수 없습니다.

시리얼포트 컨넥터 (9 핀 COM1) (2페이지, 27번 항목 참조)



이 콘넥터는 시리얼 포트 모듈을 지원합니다.

令 北 오

# 2. 시스템 바이오스 정보

메인보드의 플래쉬 메모리에는 바이오스 셋업 유틸리티가 저장되어 있습니다. 컴퓨터를 사용하실 때, "자가진단 테스트"(POST)가 실시되는 동안 <F2>키를 눌러 바이오스 셋업으로 들어가세요; 만일 그렇게 하지 않으면 POST는 테스트 루틴을 계속하여 실행할 것입니다. 만일 POST 이후 바이오스 셋업을 하기 원하신다면, <Ctl>+<Alt>+<Delete>키를 누르거나, 또는 시스템 본체의 리셋 버튼을 눌러 시스템을 재 시작하여주시기 바랍니다. 바이오스 셋업 프로그램은 사용하기 편하도록 디자인되어 있습니다. 각 항목은 다양한 서브 메뉴 표가 올라오며 미리 정해진 값 중에서 선택할 수 있도록 되어 있습니다. 바이오스 셋업에 대한 보다 상세한 정보를 원하신다면 보조 CD안의 포함된 사용자 매뉴얼(PDF 파일)을 따라 주시기 바랍니다.

# 3. 소프트웨어 지원 CD 정보

이 메인보드는 여러 가지 마이크로소프트 윈도우 운영 체계를 지원합니다 : 7/7 64 비트/Vista™64 비트/XP/XP 미디어 센터/XP 64 비트. 메인보드에 필요한 드라이버와 사용자 편의를 위해 제공되는 보조 CD는 메인보드의 기능을 향상시켜 줄 것입니다. 보조 CD를 사용하여 시작하시려면, CD-ROM 드라이브에 CD를 넣어주시기바랍니다. 만일 고객님의 컴퓨터가 "AUTORUN"이 가능하다면 자동으로 메인 메뉴를 모니터에 디스플레이 시켜 줄 것입니다. 만일 자동으로메인 메뉴가 나타나지 않는다면, 보조 CD의 디스플레이 메뉴 안에 있는 BIN 폴더ASSETUP.EXE 파일을 더블 클릭하여 주시기 바랍니다.

(D: \BIN\ASSETUP.EXE, D:는 CD-ROM 드라이브)

## 1、はじめに

ASRock 890GMH/USB3 マザーボードをお買い上げいただきありがとうございます。本製品は、弊社の厳しい品質管理の下で製作されたマザーボードです。本製品は、弊社の品質と耐久性の両立という目標に適合した堅牢な設計により優れた性能を実現します。このクイックインストレーションガイドには、マザーボードの説明および段階的に説明したインストレーションの手引きが含まれています。マザーボードに関するさらに詳しい情報は、「サポート CD」のユーザーマニュアルを参照してください。



マザーボードの仕様およびBIOSソフトウェアは、アップデートされることが有りますので、マニュアルの内容は、予告なしに変更されることがあります。 本マニュアルに変更が有った場合は、弊社のウェブサイトに通告なしに最新版のマニュアルが掲載されます。最新のVGAカードおよびCPUサポートリストもウェブサイトでご覧になれます。

ASRock社ウェブサイト: <a href="http://www.asrock.com">http://www.asrock.com</a>
このマザーボードに関連する技術サポートが必要な場合、当社のWebサイトにアクセスし、使用しているモデルについての特定情報を見つけてください。 <a href="www.asrock.com/support/index.asp">www.asrock.com/support/index.asp</a>

## 1.1 パッケージ内容

ASRock 890GMH/USB3 マザーボード:

(Micro ATXフォームファクター:

9.6-in x 9.0-in, 24.4 cm x 22.9 cm)

ASRock 890GMH/USB3 クイックインストレーションガイド

ASRock 890GMH/USB3 サポート CD

1 x Ultra ATA 66/100/133 IDEリボンケーブル (導線数: 80)

2 x シリアルATA (SATA)データケーブル(オプション)

1 x I/O パネルシールド

# 1.2 仕様

プラットフ	- Micro ATX フォームファクター: 9.6-in x 9.0-in,
ォーム	24.4 cm x 22.9 cm
	- 全ソリッド・キャパシター設計(100% 日本製の高品質
	導電性高分子電解コンデンサー)
CPU	- Socket AM3プロセッサのサポート:AMD Phenom™ II
	X6 / X4 / X3 / X2(920 / 940を除く) / Athlon II
	X4 / X3 / X2 / Sempronプロセッサ
	- Six-Core CPU 搭載
	- ACC (アドバンストクロック較正)機能で AMD
	OverDrive™ をサポートします
	- AMD社 Cool 'n' Quiet™をサポート
	- FSB 2600 MHz (5.2 GT/s)
	- Untied Overclockingをサポート(注意1を参照)
	- Hyper-Transport 3.0 (HT 3.0)をサポート
<b>ヱップセット</b>	- ノースブリッジ: AMD 890GX
	- サウスブリッジ: AMD SB710
メモリー	- デュアルヱャンネル DDR3 メモリーテクノロジー
	(注意 2 を参照)
	- DDR3 DIMM スロット x 4
	- DDR3 1800(OC)/1600(OC)/1333/1066/800
	non-ECC, un-bufferedメモリーに対応
	(注意3を参照)
	- システムメモリの最大容量: 16GB (注意 4 を参照)
拡張スロット	- 1 x PCI Express 2.0 x16スロット(青@ x16モード)
	- 1 x PCI Express 2.0 x1スロット
	- 2 x PCI スロット
	- ATI™ Hybrid CrossFireX™ をサポート
グラフィック	- 統合されたAMD Radeon HD 4290シリーズ
	- DX10.1 class iGPU, Shader Model 4.1
	- 最大の共有メモリ 512MB (注意 5 を参照)
	- 3 つの VGA 出力オプション:D-Sub、DVI-D、HDMI
	- 1920x1200 の最大解像度で HDMI をサポート (1080p)
	- 最大 2560 x 1600 @ 75Hz の解像度のあるデュアルリンク
	DVIに対応
	- 2048x1536 @ 85Hzの最大解像度で D-Subをサポート
	- HDCP機能、DVIポートおよびHDMIポートをサポート
	- 1080p Blu-ray (BD) / HD-DVD 再生サポート、DVI
	ポート および HDMI ポート をサポート

オーディオ	- 7.1 CH HD オーディオ(コンテンツ保護付)
	(Realtek ALc892 オーディオ Codec)
	- Premium Blu-rayオーディオのサポー
LAN	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s
	- Realtek RTL8111DL
	- Wake-On-LANをサポート
リアパネル	I/O Panel
1/0	- PS/2キーボード ポート x 1
	- VGA/D-Subポート x 1
	- VGA/DVI-Dポート x 1
	- HDMIポート x 1
	- 光学SPDIF出力ポート x 1
	- Ready-to-Use USB 2.0ポート x 5
	- eSATAIIポート x 1
	- Ready-to-Use USB 3.0ポート x 1
	- LED( ACT/LINK LED および SPEED LED) 付き
	RJ-45 LAN ポート x 1
	   - オーディオジャック:後部スピーカー、中央低音、
	入力、前部スピーカー、マイク入力(注意6参照)
USB 3.0	- Fresco FL1000G USB3.0 ポート x 1, USB 3.0 を最
	大 5Gb/ 秒までサポート
コネクター	- 5 x Serial ATAII 3.0Gb/秒コネクタが、RAID
	(RAID O、RAID 1、RAID 10、JBOD), NCQ, AHCIお
	│ よび 「 ホットプラグ」機能をサポート ( <b>注意 7</b> を参照)
	- ATA133 IDEコネクター s(サポート 2 x IDE devices)
	x 1
	  - フロッピーコネクター x 1
	- IR ヘッダー x 1
	- COM ポート ヘッダ x 1
	   - CPU/シャーシ/電源ファンコネクタ
	- 24ピン ATX 電源コネクター
	  - 4ピン 12V電源コネクター
	- CD 挿入へッダー
	- USB 2.0 ヘッダー(USB 2.0用6ポートをサポート) x 3
BIOS 関連機能	- 8Mb AMI BIOS
N.C.   MILE	- AMI Legal BIOS
	- プラグ&プレイをサポート
	- ACPI 1.1 準拠ウェイクアップイベント
	- jumperfree モード サポート
	- SMBIOS 2.3.1サポート
	- VCCM, NB, SBブリッジ電圧
	1 ,, , ,

サポート CD	- ドライバー、ユーティリティ、アンチウィルスソフト
	ウェアハードウェア (体験版)
特徴	- ASRock OC チューナー( <b>注意8</b> 参照)
	- ASRockインテリジェントエナジーサーバー (注意9参照)
	- ASRockインスタント ブート
	- ASRock Instant Flash ( <b>注意10</b> 参照)
	- ASRock OC DNA (注意11を参照)
	- ASRock APP エャージャー (注意 12 を参照)
	- ハイブリッド ブースタ:
	- CPU 周波数無段階制御 (注 <b>意 13</b> を参照)
	- ASRock U-COP ( <b>注意14</b> を参照)
	- 起動障害保護(Boot Failure Guard:B.F.G.)
	- Turbo 25 / Turbo 30 GPU Overclocking
モニター	- CPU 温度検知
	- マザーボード温度検知
	- CPU/シャーシ/電源ファンタコメータ
	- CPU クワイエットファン
	- 電源モニター: +12V, +5V, +3.3V, Vcore
0S	- Microsoft® Windows®7/7 64-bit/Vista™/Vista™
	64-bit/XP/XP Media Center/XP 64-bit compliant
認証	- FCC, CE, Microsoft® WHQL認証済み
	- ErP/EuP対応( ErP/EuP対応の電源装置が必要です)
	(注意 15 を参照)

<sup>\*</sup> 製品の詳細については、<a href="http://www.asrock.com">http://www.asrock.com</a> を御覧なさい。

#### 警告

オーバークロック(BIOS設定の調整、アンタイド・オーバークロック・テクノロジーの適用、第三者のオーバークロックツールの使用など)はリスクを伴いますのでご注意ください。オーバークロックするとシステムが不安定になったり、システムのコンポーネントやデバイスが破損することがあります。 ご自分の責任で行ってください。 弊社では、オーバークロックによる破損の責任は負いかねますのでご了承ください。

## 注意

- このマザーボードは、Untied Overclockingテクノロジーをサポートしています。詳細は27ページの"Untied Overclockingテクノロジー"をお読みください。
- 2. このマザーボードは、デュアルエャンネルメモリーテクノロジー(Dual Channel Memory Technology) をサポートしております。デュアルエャンネルメモリーテクノロジを実行する前に、正しいインストール法を理解する為に13ページのメモリーモジュールのインストレーションガイドをお読みください。
- 3. 1800/1600MHzメモリ速度がサポートされているかどうかは、採用している AM2+ CPUによって異なります。このマザーボードに DDR3 1800/1600メモリモジュールを採用する場合、WEBサイトのメモリサポートリストを参照して互換可能なメモリモジュールを見つけてください。 ASRock Webサイト http://www.asrock.com
- 4. オペレーティングシステム制限のため、Windows® 7 / Vista™ / XP使用下において、システム使用のリザーブに対する実際の記憶容量は4GB未満である可能性があります。64ビット CPUの Windows® OSに対しては、そのような制限はありません。
- 5. 最大共有メモリサイズは、チップセットメーカーによって定義され、それ ぞれ異なります。 AMD 社の WEB サイト で最新情報を確認してください。
- 6. マイク入力の場合、このマザーボードはステレオとモノラルモードをどちらもサポートします。オーディオ出力の場合、このマザーボードは2チャンネル、4チャンネル、6チャンネルと8チャンネルモードをサポートします。正しい接続については、3ページの表をチェックしてください。
- 7. SATAII対応ハードディスクをSATAIIコネクターにインストールする前に、 サポート CDの「SATAII対応ハードディスクセットアップガイド」の29 ページで説明しているSATAIIハードディスクドライブをSATAIIモードに調 整する手順をお読みください。さらに、SATAハードディスクとSATAIIコ ネクターをケーブルで直接接続することもできます。
- 8. 使いやすいASRock オーバークロック・ツールとして、ハードウェア・モニター機能でシステムを監視することができ、ハードウェア・デバイスをオーバークロックすることにより Windows® 環境での最適なシステム性能を得られます。ASRock OC チューナーのオペレーション手順については、ASRock ウェブサイト: http://www.asrock.comを御覧なさい。
- 9. 最新的な独自のハードウェアとソフトウェア設計を採用した Intelligent Energy Saver (インテリジェント エネルギーサーバー)は、比類のない省電力を提供する革新的なテクノロジです。電圧レギュレータは出力フェーズの数を削減して、CPUコアがアイドルになっているときに効率を高めています。言い換えると、コンピュータのパフォーマンスを犠牲にすることなしに、ひときわ優れた省電力を実現し電力効率を向上できるということです。 Intelligent Energy Saver (インテリジェント エネルギーサーバー)機能を使用するには、前もってBIOSセットアップでクールアンドクワイエットオブションを有効にしてください。Intelligent Energy Saver (インテリジェント エネルギーサーバー)の操作手順については、当社のWebサイトにアクセスしてください。ASRock Webサイト: http://www.asrock.com

- 10. ASRock Instant Flashは、Flash ROM(フラッシュ ROM) に組み込まれて いる BIOS フラッシュユーティリティです。この便利な BIOS 更新ツールにより、 MS-DOSあるいはWindows®のように最初にオペレーティングシステムに入る必要 なしに、システム BIOS を更新することができます。このユーティリティでは、 POSTの間に $\langle F6 \rangle$  キーを、あるいはBIOS設置アップメニューの際に $\langle F2 \rangle$  キー を押すことで、ASRock Instant Flashにアクセスすることができます。この ツールを起動し、新規 BIOSファイルを USBフラッシュドライブ、フロッピー ディスク、またはハードドライブに保存、そしていくつかのクリックだけで、 その他のフロッピーディスクや複雑なフラッシュユーティリティを使用せずに BIOS を更新することができます。ご使用の際には、USBフラッシュドライブあ るいはハードドライブがFAT32/16/12 ファイルシステムを使用していることを確 認してください。
- ソフトウェア名 OC DNAの名前がその機能を文字通り示しています。OC DNA はASRockが独自に開発した便利なユーティリティで、OC設定を記録したり他 の人と共有したりすることが容易になります。これにより、オペレーティング システムの下でオーバークロック機能を保存したり、オーバークロック設定の複 雑な記録プロセスを単純化できます。OC DNAでは、プロファイルとしてOC設 定を保存し友人と共有することができます。友人はOCプロファイルを自分のシ ステムに読み込んで、あなたと同じ OC 設定にすることが可能です。OCプロ ファイルは、同じマザーボードでしか共有し機能できないことにご注意くださ 11.
- iPhone/iPod/iPad Touchなど Apple デバイスを迅速かつお手軽に充電す るために、ASRock では ASRock APP チャージャーという素晴らしいソ リューションをご用意しています。 APP チャージャード ライバをインストー ルするだけで、ご使用のiPhoneをコンピュータから素早く充電することが できます。充電時間は従来より最高40%も速くなります。ASRock APP チャージャーをお使いいただくと複数の Apple デバイスを同時に素早く 充電 できます。 本製品は PC がスタンバイモード (S1)、メモリ サスペンド モード (S3)、休止モード(S4)または電源オフ(S5)の時にも継続充電をサポートしま す。 APP チャージャード ライバをインストールしていただくと、これまで にない充電性能に充分ご満足いただけることでしょう。


ASRockのWebサイト: http://www.asrock.com/Feature/

AppCharger/index.asp

- このマザーボードは、無段階制御を提供しますが、オーバークロッキング の実行はお薦めしません。推奨CPUバス周波数以外の周波数は、システム を不安定にしたり CPU を損傷したりすることがあります。
- CPUのオーバーヒートが検出されますと、システムは自動的にシャットダウ ンされます。システムのレジュームを行う前に、マザーボード上の СР U冷 却ファンが正しく機能しているか確認してから電源コードを外し、そして再 度つないでください。放熱効果を高める為には、PC システムのインストー ル時に、CPUとヒートシンクの間に放熱グリースをスプレイするのが効果的 です。

日本語

15. Energy Using Product(エコデザイン)の略語 EuP は完成システムの 消費電力を定義するために欧州連合により規制された条項です。 EuPに従っ て、管制システムの総 AC 電力はオフモード条件下で1.00W 未満に抑える必 要があります。EuP 規格を満たすには、EuP 対応マザーボードと EuP 対応 電源が必要です。 Intelの提案に従い、EuP 対応電源装置は規格を満たす 必要があります、つまり5vのスタンバイ電力効率は100 mAの消費電流下 で50%以上でなければなりません。EuP 対応電源装置を選択する場合、電 源装置製造元に詳細を確認するようにお勧めします。 右の図はジャンパがどのように設定されているかを示します。ジャンパキャップがピンに置かれている場合、ジャンパは "ショート" になります。ジャンパキャップがピンに置かれていない場合、ジャンパは "オープン"になります。右の図で、3ピンジャンパで、1-2ピンを "ショート"の場合、これらの2つのピンにジャンパキャップを置きます。

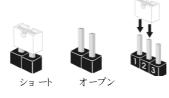

 ジャンパ
 設定
 説明

 PS2\_USB\_PW1
 1\_2
 2\_3
 2-3ショート +5VSB (standby)

 (ページ2 アイテム1参照)
 ト5V
 ト5VSB

注意: +5VSBを選択した場合、電源の出力で+5Vsbが最低限 2A 必要になります。

USB\_PW2 2\_3 2-3ショート +5V\_DUAL (ページ2 アイテム 35 参照) 1\_2 USB01/45 起動サポート。

注意: +5V\_DUALを選択した場合、電源の出力で+5Vsbが最低限2A必要になります。+5V\_DUALを選択した場合は、S3 (Suspend to RAM) 状態にてUSBデバイスはシステムを立ち上げることができます。

注意: +5VSBを選択した場合、電源の出力で+5Vsbが最低限 2A 必要になります。

 CMOSの消去ジャンパ (CLRCMOS1)
 1\_2
 2\_3

 (ベージ2 アイテム 24 参照)
 デフォルト 設定
 CMOSの消去

注意: CLRCMOS1を使うと、CMOS内のデータを消去できます。CMOSのデータには、システムパスワード、日付、時間、システム設定パラメータといったシステム設定情報が含まれています。システムパラメータをクリアして、デフォルト設定にリセットするには、コンピュータの電源を切って、電源コードのプラグを外してから、ジャンパキャップを使ってCLRCMOS1のpin2とpin3を3秒間ショートさせてください。なお、CMOS消去後は、ジャンパキャップをデフォルト設定(pin1とpin2をショート)に戻しておくのを忘れないでください。



オンボードのヘッダとコネクタ類はジャンパではありません。それ らのヘッダやコネクタにジャンパキャップをかぶせないでください。 ヘッダやコネクタにジャンパキャップをかぶせると、マザーボード に深刻な影響を与える場合があります。

FDDコネクタ (33ピン FLOPPY1) (ページ2 アイテム 26 参照)





注意: ケーブルの赤い縞模様の側がコネクタのピン1側に接続されていることを確認してくださ 11.

プライマリ IDEコネクタ(青) (39ピン IDE1) ページ 2,アイテム 10 を参照



コネクタの青色の端子を マザーボードに。



黒色の端子をIDEデバ イスに接続してください。

80-コンダクタATA 66/100/133ケーブル

注意: 詳細については、IDEデバイスベンダーの指示を参照してください。

シリアルATAIIコネクタ SATAIL\_1 (PORT 0): ページ 2,アイテム 20 を参照 SATAII\_2 (PORT 1): ページ2,アイテム19を参照 SATAII\_3 (PORT 2): ページ2,アイテム 18 を参照 SATAII\_4 (PORT 3): ページ2,アイテム17を参照 SATAII\_5 (PORT 4):

ページ2 ,アイテム 16 を参照

これら5本のシリアルATAII (SATAII) コネクタは内蔵スト レーデバイスに使用するSATA データケーブルに対応していま す。現在の SATAII インタフェー スの最大データ転送速度は 3.0 Gb/s です。




SATAII 1 SATAII 2 SATAII 3 SATAII 4 SATAII 5 (PORT 0) (PORT 1) (PORT 2) (PORT 3) (PORT 4)

シリアルATA(SATA) データケーブル(オプション)



SATAデータケーブルの一方の端は、 SATA/SATAIIハードディスクか、 あるいは本マザーボード のSATAII コネクタに接続することができます。



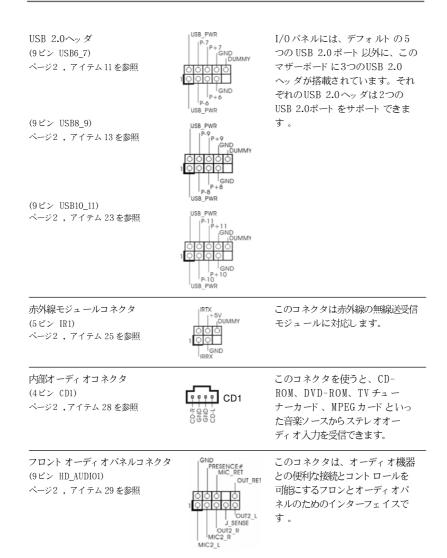

- 1. ハイディフィニションオーディオはジャックセンシングをサポート しますが、正しく 機能するためにシャーシのパネルワイヤが HADをサポート する必要があります。このマニュアルとシャーシのマニュアルの指示に従って、システムを取り付けてください。
- 2. AC' 97オーディオパネルを使用する場合、次のように前面パネルのオーディオヘッダに取り付けてください。
  - A. Mic\_IN (MIC)をMIC2\_Lに接続します。
  - B. Audio\_R (RIN)を OUT2\_R に、Audio\_L (LIN)を OUT2\_L に接続します。
  - C. Ground (GND)をGround (GND)に接続します。
  - D. MIC\_RETと OUT\_RETはオーディオパネル専用です。AC' 97 オーディオパネルに接続する必要はありません。
  - E. フロントマイクを有効化するには。
    Windows® XP / XP 64-bit OSの場合:
    "Mixer" (ミキサー)を選択し、続いて"Recorder" (レコーダー)
    を選択します。その後"FrontMic" (フロントマイク)をクリック
    します。

Windows® 7 / 7 64-bit / Vista™ / Vista™ 64-bit 0Sの場合:

Realtekコントロールパネルから"FrontMic" (フロントマイク)タブを開きます。"Recording Volume"(録音音量)を調整します。

システムパネルコネクタ (9ピン PANEL1) ページ2 , アイテム 21 を参照



このコネクタは数種類のシステムフロントパネルの機能を提供します。

シャーシスピーカーへッダ (4ピン SPEAKER1) ページ2 , アイテム 22 を参照



シャーシのスピーカーとこのヘッ ダを接続してく ださい。



(3ピン CHA FAN1) ページ2 , アイテム12を参照



ファンケーブルをファンコネクタ に接続し、黒いワイヤをアースピ ンに合わせてく ださい。

(3ピン PWR\_FAN1)

ページ2 ,アイテム 33を参照





このコネクタにはCPUファンケー ブルを接続します。黒いコードは アースピンに接続してください。



このマザーボードでは 4ピン CPU ファン(クワイエットファン)がサポートされていますが、 ファン速度コントロール機能がない場合でも、3ピン CPU ファンは正常に作動します。3 ピン CPUファンをこのマザーボードの CPUファンコネクタに接続しようとしている場合、 ピン 1-3 に接続してください。

> 接続されたピン1-3 🕶 3ピンファンのインストール



ATX パワーコネクタ (24ピン ATXPWR1) ページ2 , アイテム8を参照



ATX 電源コネクタを接続します。



このマザーボードには 24 ピン ATX 電源コネクタが装備されており、従来 0.20 ピン ATX 電源装置を採用している場合でも作動します。 20 ピン ATX 電源を使用するには、ピン 1 およびピン 13 と共に電源装置にプラグを差し 込みます。



20ピン ATX 電源装置の取り付け 1

ATX 12Vコネクタ (4ピン ATX12V1) ページ2 , アイテム3を参照



このコネクタにはCPUにVcore電 源を供給できるように、ATX 12V プラグを備えたサワーサプライを 接続する必要があることに注意し てください。接続に問題がある と、電源は正しく供給されませ h.

シリアルポート ヘッダ (9ピン COM1) ページ2 ,アイテム 27 を参照



このCOM1へッダは、シリアル ポート モジュールをサポート しま す。

## 2. BIOS 情報

BIOS セット アップユーティリティはマザーボードのフラッシュメモリに保存されています。コンピュータを起動させた後、POST(パワーオンセルフテスト)中に〈F2〉を押し、BIOS セット アップユーティリティに入ってください。押さない場合、POST はテストルーチンを続けます。テストを実行した後にBIOS セット アップユーティリティに入りたい場合、POST 終了後〈Ctr1〉+〈Alt〉+〈Delete〉を押すか、ケースのリセットスイッチを押してシステムを再起動してください。BIOS セット アップユーティリティは、ユーザーフレンドリであることを目指しています。これはメニュウ方式のプログラムです。スクロールさせることで様々なサブメニューを表示し、かつあらかじめ定義した選択肢から選択することが可能です。BIOS セット アップの詳細な情報については、サポート CD 内のユーザーズマニュアル(PDFファイル)をごらんください。

## 3. ソフトウェア サポート CD 情報

このマザーボードは Microsoft® Windows® 7 / 7 64-bit / Vista $^{\text{TM}}$  / Vista $^{\text{TM}}$  64-bit / XP / XP Media Center / XP 64-bit といった様々なマイクロソフト ウインドウズ オペレーティングシステムをサポートします。マザーボードに付属しているサポート CD はマザーボードの特徴を有効にするために必要なドライバやユーティリティを含んでいます。サポート CD を使用するには、CDROMドライブに CD を挿入してください。AUTORUN 機能が有効な場合、自動的にメインメニュウが立ち上がります。AUTORUN 機能が無効な場合、サポート CD 内の BIN フォルダにある ASSETUP.EXE をダブルクリックすることにより、メインメニュウが立ち上がります。

# 简体中文

# 1. 主板简介

谢谢你采用了华擎 890 GMH/USB3 主板,本主板由华擎严格制造,质量可靠,稳定性好,能够获得卓越的性能。此快速安装指南包括主板介绍和分步安装向导。您可以查看支持光盘里的用户手册了解更详细的资料。



由于主板规格和BIOS 软件将不断升级,本手册之相关内容变更恕不另行通知。请留意华擎网站上公布的升级版本。你也可以在华擎网站找到最新的显卡和CPU 支持表。

华擎网址: <a href="http://www.asrock.com">http://www.asrock.com</a>

如果您需要与此主板有关的技术支持,请参观我们的网站以了解您使用机

钟的规格信息。

www.asrock.com/support/index.asp

### 1.1 包装盒内物品

华擎 890GMH/USB3 主板

(Micro ATX 规格: 9.6 英寸 X 9.0 英寸, 24.4 厘米 X 22.9 厘米)

华擎 890GMH/USB3 快速安装指南

华擎 890GMH/USB3 支持光盘

一条80-conductor Ultra ATA 66/100/133 IDE 排线

两条 Serial ATA(SATA)数据线(选配)

一块 I/0 挡板

# 1.2 主板规格

±111 ±/−1	M: ATV +11+47
架构	- Micro ATX 规格:
	9.6 英寸 X 9.0 英寸, 24.4 厘米 X 22.9 厘米
	- 全固态电容设计 (100% 日本原装高品质高传导固态电容)
<b>处理器</b>	- 支持Socket AM3 处理器: AMD Phenom™ II X6 / X4 /
	X3 / X2(920/940除外) / Athlon II X4 / X3 / X2 /
	Sempron 处理器
	- 六核心 CPU 就绪
	- 通过 ACC (高级时钟校准)功能支持 AMD OverDrive™系
	统调节
	- 支持 AMD Cool 'n' Quiet™冷静技术
	- 支持 FSB 2600 MHz (5.2 GT/s)
	- 支持异步超频技术(详见警告1)
	- 支持 Hyper-Transport 3.0 (HT 3.0)技术
芯片组	- 北桥: AMD 890GX
	- 南桥: AMD SB710
系统内存	- 支持双通道内存技术(见警告2)
	- 配备4个DDR3 DIMM插槽
	- 支持 DDR3 1800(超频)/1600(超频)/1333/1066/800
	non-ECC、un-buffered 内存(见 <b>警告3</b> )
	- 系统最高支持16GB容量(见警告4)
扩展插槽	- 1 x PCI Express 2.0 x16插槽(蓝色x16模式)
	- 1 x PCI Express 2.0 x1插槽
	- 2 x PCI 插槽
	- 支持ATI <sup>™</sup> Hybrid CrossFireX <sup>™</sup>
板载显卡	- 集成 AMD Radeon HD 4290 显卡
	- DX10.1级别iGPU, Shader Model 4.1技术
	- 最大共享内存512MB ( <b>见警告5</b> )
	- 支持三个 VGA 输出选项: D-Sub 、 DVI-D 和 HDMI
	- 支持HDMI,最高分辨率达1920x1200 (1080p)
	- 支持Dua1-1ink DVI,最高分辨率达2560x1600 @ 75Hz
	- 支持 D-Sub,最高分辨率达 2048x1536 @ 85Hz
	- 通过 DV I-D 和 HDMI 接口支持 HDCP 功能
	- 通过 DV I-D 和 HDM I 接口可播放 1080 线蓝光光盘 (BD) /
	HD-DVD 光盘
音效	- 7.1 声道高保真音频,支持内容保护功能
	(Realtek ALC892 音频编解码器)
	- 支持优质蓝光音效

板载 LAN 功能	- PCIE xl Gigabit LAN 10/100/1000 Mb/s				
	- Realtek RTL8111DL				
	- 支持网路唤醒 (Wake-On-LAN)				
Rear Pane1	1/0界面				
1/0	- 1个PS/2 键盘接口				
(后面板输入/	- 1个VGA/D-Sub接口				
输出接口)	- 1个VGA/DVI-D接口				
	- 1 个 HDM I 接口				
	- 1 个光纤 SPDIF 输出接口				
	- 5个可直接使用的 USB 2.0接口				
	- 1个eSATAII接口				
	- 1个可直接使用的 USB 3.0接口				
	- 1个RJ-45局域网接口与LED指示灯(ACT/LINK LED和				
	SPEED LED)				
	- 高保真音频插孔:后置喇叭/中置喇叭/低音喇叭/				
	音频输入/前置喇叭/麦克风 (见警告6)				
USB 3.0	- 1 x Fresco FL1000G的USB 3.0连接头,支持USB 3.0到				
	5Gb/s				
连接头	- 5 x SATAII 3.0Gb/s 连接头,支持RAID(RAID 0,				
	RAID 1, RAID 10和JBOD), NCQ, AHCI和"热插拔"功				
	能(详见 <b>警告</b> 7)				
	- 1 x ATA133 IDE 插座 (最高支持 2 个 IDE 驱动器)				
	  - 1 x 软驱接口				
	- 1 x 红外线模块接头				
	- 1 X 串行接口连接器				
	- CPU/机箱/电源风扇接头				
	- 24 针 ATX 电源接头				
	- 4 针 12V 电源接头				
	- 内置音频接头				
	- 前置音频面板接头				
	- 3 x USB 2.0接口 (可支持6个额外的USB 2.0接口)				
BIOS	- 8Mb AMI BIOS				
	- 采用 AMI BIOS				
	- 支持即插即用(Plug and Play,PnP)				
	- ACPI 1.1 电源管理				
	- 支持唤醒功能				
	- 支持 jumperfree 免跳线模式				
	- 支持SMBIOS 2.3.1				
	- VCCM, NB, SB电压多功能调节器				
	, , <u>———</u> , , , , , , , , , , , , , , , , , ,				

支持光盘	- 驱动程序,工具软件,杀毒软件(试用版)
独家功能	- 华擎超频调节器(详见警告8)
	- 华擎智能节能器(Intelligent Energy Saver)(见警告9)
	- 华擎即时开机功能
	- 华擎Instant Flash (见警告10)
	- 华擎OC DNA (见警告11)
	- 华擎APP Charger (见警告12)
	- Hybrid Booster(安心超频技术):
	- 支持 CPU 无级频率调控(见警告13)
	- ASRock U-COP(见警告14)
	— Boot Failure Guard (B.F.G.,启动失败恢复技术)
	- Turbo 25 / Turbo 30 GPU超频
硬件监控器	- CPU 温度侦测
	- 主板温度侦测
	- CPU/机箱/电源风扇转速计
	- CPU 静音风扇
	- 电压范围: +12V, +5V, +3.3V, 核心电压
操作系统	- Microsoft® Windows® 7/7 64位元/Vista™/Vista™ 64
	位元 / XP / XP 多媒体中心 / XP 64 位元适用于此主板
认证	- FCC, CE, WHQL
	- 支持 ErP/EuP(需要同时使用支持 ErP/EuP 的电源供应
	器)(见警告15)

<sup>\*</sup> 请参阅华擎网站了解详细的产品信息: http://www.asrock.com

#### 警告


请了解超频具有不可避免的风险,这些超频包括调节 BIOS 设置、运用异步超频技术或使用第三方超频工具。超频可能会影响您的系统稳定性,甚至会导致系统组件和设备的损坏。这种风险和代价须由您自己承担,我们对超频可能导致的损坏不承担责任。

## 警告!

- 1. 这款主板支持异步超频技术。请阅读第 27 页的"Untied Overclocking Technology"(自由超频技术)了解详情。
- 2. 这款主板支持双通道内存技术。在您实现双通道内存技术之前,为能正确安装,请确认您已经阅读了第13页的内存模组安装指南。
- 3. 1800/1600MHz 内存频率是否支持在于您使用的 AM3 CPU。如果您想在这款主板上使用 DDR3 1800/1600 内存条,请查阅我们网站的内存支持列表了解兼容的内存。华擎网站 <a href="http://www.asrock.com">http://www.asrock.com</a>
- 4. 由于操作系统的限制,在Windows® 7 / Vista™ / XP下,供系统使用的实际内存容量可能小于 4GB。对於Windows® 操作系统搭配 64 位元CPU 来说,不会存在这样的限制。
- 5. 最大共享内存大小由芯片组厂商定义并且可以更改。请查阅 AMD 网站了解最新资讯。
- 6. 在麦克风输入方面,这款主板支持立体声和单声道这两种模式。在音频输出方面,这款主板支持2声道、4声道、6声道以及8声道模式。请查阅第3页的表格了解正确的连接方式。
- 7. 在将 SATAII 硬盘连接到 SATAII 接口之前,请阅读 CD 光盘中的 "User Manual"(用户手册,英文版)第 29 页的 "SATAII Hard Disk Setup Guide" (SATAII 硬盘安装指南)调整您的 SATAII 硬盘驱动器为 SATAII 模式。您也可以直接将 SATA 硬盘连接到 SATAII 接口。
- 8. 这是一款具有友好使用介面的华擎超频工具,让您通过硬件监控功能监控您的系统,帮助您在Windows®环境下对硬件运行超频以获得最佳的系统性能。请访问我们的网站了解华擎超频调节器的使用方法。 华擎网站: http://www.asrock.com
- 9. 智能节能器(Intelligent Energy Saver)采用先进的软硬件专利设计,这项革新技术带来极佳的节能效果。当 CPU 核心闲置时,电压调节器可以简小输出电压的相数,有助于提升能源效率。换句话说,它可以在不牺牲性能的前提下,让系统更省电,并提高能源效率。为了使用智能节能器(Intelligent Energy Saver)的功能,请在BIOS的高级设置里启用 Cool'n'Quiet 选项。请访问我们的网站了解智能节能器(Intelligent Energy Saver)的使用方法。华擎网站: http://www.asrock.com
- 10. 华擎 Instant Flash 是一个内建于Flash ROM的BIOS 更新工具程序。这个方便的BIOS 更新工具可让您无需进入操作系统(如MS-DOS 或Windows®)即可进行BIOS的更新。在系统开机自检过程中按下<F6>键或在BIOS 设置菜单中按下<F2>键即可进入华擎 Instant Flash 工具程序。启动这一程序後,只需把新的BIOS 文件保存在 U 盘、软盘或硬盘中,轻松点击鼠标就能完成BIOS 的更新,而不再需要准备额外的软盘或其他复杂的更新程序。请注意: U 盘或硬盘必须使用FAT32/64 文件系统。
- 11. 软件的名字本身-OC DNA 已经向您透露了它的用途。OC DNA 是华擎独家研发的创新工具程序,它为用户提供一种记录超频设置并与他人分享的简单方法。这个好用的工具程序可帮助您在操作系统中保存超频记录,大大简化了超频设置的记录过程。有了OC DNA,您可以将超频设置保存为一个设置文件并与朋友分享!请注意:超频设置文件只能在相同的主板上分享和使用。

- 12. 若您想要更快速、更自由地为您的苹果设备,如 iPhone/iPad/iPod touch 充电, 华擎为您提供了一个绝妙的解决方案 华擎 APP Charger。只需安装 APP Charger 驱动程序, 用电脑为 iPhone 充电最多可比以往快40%。华擎 APP Charger 允许您同时为多部苹果设备快速充电, 甚至可以在电脑进入待机(S1)、挂起至内存(S3)、休眠(S4)或关机(S5)模式下持续为设备充电。只需安装了 APP Charger 驱动程序, 您立刻就能拥有非凡的充电体验。
- 13. 尽管本主板提供无级频率调控,但不推荐用户超频使用。不同于标准CPU 总线频率的非标准频率可能会使系统不稳定,甚至会损害 CPU 和主 板
- 14. 当检测到 CPU 过热问题时,系统会自动关机。在您重新启动系统之前,请检查主板上的 CPU 风扇是否正常运转并拔出电源线,然后再将它插回。为了提高散热性,在安装 PC 系统时请在 CPU 和散热器之间涂一层导热胶。
- 15. EuP,全称 Energy Using Product (能耗产品),是欧盟用来定义完整系统耗电量的规定。根据 EuP 的规定,一个完整系统在关机模式下的交流电总消耗必须在 1.00W 以下。为满足 EuP 标准,您需要同时具备支持 EuP 的主板和支持 EuP 的电源供应器。根据 Intel®的建议,支持 EuP 的电源供应器必须满足在 100mA 电流消耗时,5Vsb 电源效率高于 50%。有关支持 EuP 的电源供应器选择方面的更多细节,我们建议您谘询电源供应器的制作商。

插图所示的就是设置跳线的方法。当跳线帽放置在针脚上时,这个跳线就是"短接"。如果针脚上没有放置跳线帽,这个跳线就是"开路"。插图显示了一个3针脚的跳线,当跳线帽放置在针脚1和针脚2之间时就是"短接"。

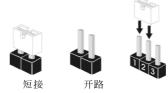

き脚

设定

PS2\_USB\_PW1 (见第2页第1项)





短接 pin2 和 pin3,就可以设置+5VSB(待机),使 PS/2 或USB23 能唤醒系统。

注意: 选择+5VSB, 电源必须能提供+2 AMP 或更高的待机电流。

USB\_PW2 (见第2页第35 项)





短接pin2 和pin3,就可以设置+5V\_DUAL,使USB01/45能唤醒系统。

注意:选择+5V\_DUAL,电源必须能提供+2 AMP 或更高的待机电流。当您选择+5V\_DUAL时,USB设备可唤醒处于S3(挂起到内存)状态下的系统。

USB\_PW1

(见第2页第9项)





短接pin2 和pin3,就可以设置+5VSB(待机),使USB6\_7/8\_9/10\_11能唤醒系统。

注意: 选择+5VSB, 电源必须能提供+2 AMP 或更高的待机电流。

清除 CMOS





(CLRCMOS1, 3针脚跳线) (见第2页第24项)

默认设置

清除 CMOS

注意: CLRCMOS1 允许您清除 CMOS 里的资料。在 CMOS 里的资料包括系统设置资讯,例如系统密码,日期,时间及系统设置参数。为了清除并重置系统参数到默认设置,请关闭电脑并拔掉电源线,然後用跳线帽短接 CLRCMOS1 上的 pin2 和 pin3 五秒钟。如果您需要再完成 BIOS 刷新时清除 CMOS,您必须首先启动系统,然後在您进行 CMOS 清除操作之前关闭系统。

#### 1.4 连接头



此类连接头是不用跳线帽连接的,请不要用跳线帽短接这些连接头。 跳线帽不正确的放置将会导致主板的永久性损坏!


连接头

图 示

说明

软驱接头

(33针 FLOPPY1) (见第2页第26项) I<sub>PIN1</sub> FLOPPY1

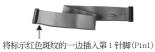

注意:请确保数据线标红色斑纹的一边插入连接器第1针脚(Pin1)的位置。

主 IDE 连接头(蓝色)

(39针 IDE1, 见第2页第10项)



蓝色端接到主板上

80 针的 ATA 66/100/133排线

注意:请查阅您的IDE 驱动器供应商提供的说明书了解详细资料。

Serial ATAII 接口

(SATAII\_1 (PORT 0)

见第2页第20项)

(SATAII\_2(PORT 1)

这里有五组 Serial ATAII (SATAII)接口支持 SATA 或 SATAII 硬盘作为内部储存设 置。目前SATAII界面理论上

见第2页第19项) SATAIL\_1 SATAIL\_2 SATAIL\_3 SATAIL\_4 SATAIL\_5可提供高达3.0Gb/s 的数据 (SATAII\_3(PORT 2) (PORT 0) (PORT 1) (PORT 2) (PORT 3) (PORT 4) 传输速率。

见第2页第18项)

(SATAII\_4(PORT 3)

见第2页第17项)

(SATAII 5(PORT 4)

见第2页第16项)

Serial ATA (SATA)


数据线

(选配)



SATA 数据线的任意一端均可 连接SATA/SATAII 硬盘或者 主板上的 SATAII 接口。



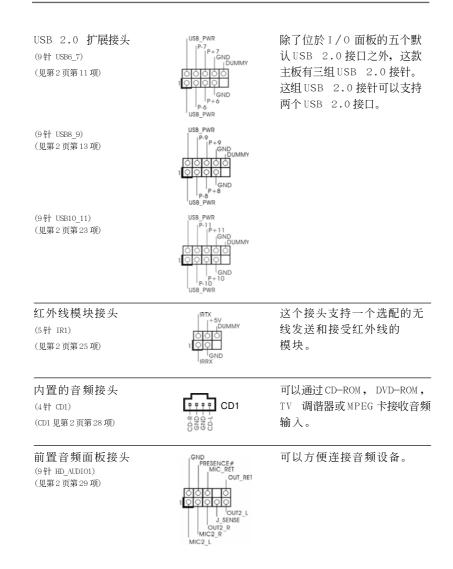

- 1. 高保真音频(High Definition Audio, HDA)支持智能音频接口检测功能 (Jack Sensing),但是机箱面板的连线必须支持 HDA 才能正常使用。请按我 们提供的手册和机箱手册上的使用说明安装您的系统。
- 2.如果您使用AC'97音频面板,请按照下面的步骤将它安装到前面板音频接针:
  - A. 将Mic\_IN(MIC)连接到MIC2\_L。
  - B. 将Audio\_R(RIN)连接到OUT2\_R,将Audio\_L(LIN)连接到OUT2\_L。
  - C. 将Ground(GND)连接到Ground(GND)。
  - D. MIC\_RET 和 OUT\_RET 仅用于 HD 音频面板。您不必将它们连接到 AC'97 音频面板。
  - E. 激活前置麦克风。

在Windows® XP / XP 64位操作系统中: 选择"Mixer"。选择"Recorder"。接著点击"FrontMic"。 在Windows® 7 / 7 64位 / Vista™ / Vista™ 64位操作系统中: 在Realtek 控制面板中点选"FrontMic"标签页。调节 "Recording Volume"。

#### 系统面板接头

(9针 PANEL1)

(见第2页第21项)



这个接头提供数个系统前面板功能。

#### 机箱喇叭接头

(4 针 SPEAKER1)

(见第2页第22项)



请将机箱喇叭连接到这个接 头。

#### 机箱,电源风扇接头

(3 针 CHA\_FAN1)

(见第2页第12项)



请将风扇连接线接到这个接 头,并让黑线与接地的针脚 相接。

(3针 PWR\_FAN1)

(见第2页第33项)



(4针 CPU\_FAN1) (见第2页第2项)



请将CPU 风扇连接线接到这个接头,并让黑线与接地的针脚相接。



虽然此主板支持4-Pin CPU 风扇(Quiet Fan,静音风扇),但是没有调速功能的3-Pin CPU 风扇仍然可以在此主板上正常运行。如果您打算将3-Pin CPU 风扇连接到此主板的CPU 风扇接口,请将它连接到Pin 1-3。

Pin 1-3 连接 **←** 

3-Pin 风扇的安装



ATX 电源接头

(24针 ATXPWR1) (见第2页8项)



请将ATX 电源供应器连接到这个接头。



虽然此主板提供24-pin ATX 电源接口,但是您仍然可以使用**2** 传统的20-pin ATX电源。为了使用20-pin ATX电源,请顺著 Pin 1和Pin 13插上电源接头。



20-Pin ATX 电源安装说明 **1** 

ATX 12V 电源接口

(4 针 ATX12V1)

(见第2页第3项)



请注意,必需将带有ATX 12V 插头的电源供应器连接到这个 插座,这样就可以提供充足的 电力。如果不这样做,就会导 致供电故障。

串行接口连接器

(9 针 COM1)

(见第2页第27项)



这个COM1端口支持一个串行接口的外设。

## 2. BIOS 信息

主板上的 Flash Memory 芯片存储了 BIOS 设置程序。启动计算机,在机器开机自检(POST)的过程中按下<F2>键,就可进入 BIOS 设置程序,否则将继续进行开机自检之常规检验。如果须要在开机自检后进入 BIOS 设置程序,请按下 <Ct1> + <Alt> + <Delete>键重新启动计算机,或者按下系统面板上的重启按钮。功能设置程序储存有主板自身的和连接在其上的设备的缺省和设定的参数。这些信息用于在启动系统和系统运行需要时,测试和初始化元器件。有关 BIOS 设置的详细信息,请查阅随机支持光盘里的用户手册(PDF 文件)。

## 3. 支持光盘信息

本主板支持各种微软视窗操作系统: Microsoft® Windows® 7/7 64 位元/ Vista $^{\text{TM}}$ /Vista $^{\text{TM}}$  64 位元/XP/XP 多媒体中心/XP 64 位元。主板附带的支持光盘包含各种有助于提高主板效能的必要驱动和实用程序。请将随机支持光盘放入光驱里,如果计算机的"自动运行"功能已启用,屏幕将会自动显示主菜单。如果主菜单不能自动显示,请查找支持光盘内BIN 文件夹下的ASSETUP.EXE 文件并双击它,即可调出主菜单。

# 简体中文

#### 电子信息产品污染控制标示

依据中国发布的「电子信息产品污染控制管理办法」及 SJ/T 11364-2006「电子信息产品污染控制标示要求」,电子信息产品应进行标示,藉以向消费者揭露产品中含有的有毒有害物质或元素不致发生外泄或突变从而对环境造成污染或对人身、财产造成严重损害的期限。依上述规定,您可于本产品之印刷电路板上看见图一之标示。图一中之数字为产品之环保使用期限。由此可知此主板之环保使用期限为 10年。



冬 —

#### 有毒有害物质或元素的名称及含量说明

若您欲了解此产品的有毒有害物质或元素的名称及含量说明,请参照以下表格及说明。

部件名称				有害物质或元	素	
HALL TANK	铅(Pb)	镉(Cd)	汞(Hg)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
印刷电路板 及其电子组件	х	0	0	0	0	0
外部信号连 接头及线材	х	0	0	0	0	0

- O: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T  $\,$  11363–2006 标准规定的限量要求以下。
- X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T  $\,$ 11363–2006 标准规定的限量要求,然该部件仍符合欧盟指令  $\,$ 2002/95/EC 的规范。

备注: 此产品所标示之环保使用年限,系指在一般正常使用状况下。

## 1. 主機板簡介

謝謝你採用了華擎 890GMH/USB3 主機板,本主機板由華擎嚴格製造,品質可靠,穩定性好,能夠獲得卓越的性能。此快速安裝指南包括了主機板介紹和分步驟安裝指導。您可以查看支援光碟裡的使用手冊了解更詳細的資料。



由於主機板規格和BIOS 軟體將不斷更新, 本手冊之相關內容變更恕不 另行通知。請留意華擎網站上公布的更新版本。你也可以在華擎網站 找到最新的顯示卡和CPU 支援列表。

華擎網址: http://www.asrock.com

如果您需要與此主機板有關的技術支援,請參觀我們的網站以了解您

使用機種的規格訊息。

www.asrock.com/support/index.asp

#### 1.1 包裝盒內物品

華擎 890GMH/USB3 主機板

(Micro ATX 規格: 9.6 英吋 X 9.0 英吋, 24.4 公分 X 22.9 公分)

華擎 890GMH/USB3 快速安裝指南

華擎 890GMH/USB3 支援光碟

一條80-conductor Ultra ATA 66/100/133 IDE 排線

兩條Serial ATA(SATA)數據線(選配)

一塊 I/0 擋板

## 1.2 主機板規格

架構	- Micro ATX 規格:
	9.6 英吋 X 9.0 英吋, 24.4 公分 X 22.9 公分
	- 全固態電容設計 (100%日本原裝高品質高傳導固態電容)
處理器	- 支援Socket AM3處理器: AMD Phenom™ II X6 / X4 /
	X3 / X2(920 / 940除外) / Athlon II X4 / X3 / X2
	/ Sempron 處理器
	- 六核心CPU 就緒
	- 透過ACC(先進時脈校正)技術支援AMD OverDrive™系
	統調整
	- 支援 AMD Cool 'n' Quiet 冷靜技術
	- 支援 FSB 2600 MHz (5.2 GT/s)
	- 支援非同步超頻技術 (詳見警告1)
	- 支援 Hyper-Transport 3.0 (HT 3.0)技術
晶片組	- 北橋: AMD 890GX
	- 南橋: AMD SB710
系統記憶體	- 支援雙通道記憶體技術(見警告2)
	- 4個DDR3 DIMM 插槽
	- 支援DDR3 1800(超頻)/1600(超頻)/1333/1066/800
	non-ECC 、un-buffered 記憶體(見警告3)
	- 系統最高支援16GB容量(見警告4)
擴充插槽	- 1 x PCI Express 2.0 x16插槽(藍色x16模式)
	- 1 x PCI Express 2.0 x1插槽
	- 2 x PCI 插槽
	- 支援ATI <sup>™</sup> Hybrid CrossFireX <sup>™</sup>
內建顯示	- 內建AMD Radeon HD 4290顯示
	- DX10.1級別iGPU,Shader Model 4.1技術
	- 最大共享記憶體 512MB (見警告 5)
	- 支援三個 VGA 輸出選項: D-Sub、 DVI-D 和 HDM I
	- 支援HDMI, 最高解析度達1920x1200 (1080p)
	- 支援 Dual-link DVI, 最高解析度達 2560x1600 @ 75Hz
	- 支援 D-Sub, 最高解析度達 2048x1536 @ 85Hz
	- DVI和HDMI接口支援HDCP功能
	- DVI和HDMI接口可播放1080p藍光光碟(BD) / HD-DVD
	光碟
音效	- 7.1 聲道高清晰音效,支援內容保護功能
	(Realtek ALC892 音效編解碼器)
	- 支援高級藍光音效

MII II - L At	- PCIE x1 Gigabit LAN 10/100/1000 Mb/s			
網路功能	- Realtek RTL8111DL			
	- 支援網路喚醒(Wake-On-LAN)			
D D 1				
Rear Panel	I/O 界面			
1/0	- 1個PS/2 鍵盤接口			
(後背板輸入/				
輸出接口)	- 1個VGA/DVI-D接口			
	- 1個HDMI 接口			
	- 1個光纖 SPDIF 輸出接口			
	- 5個可直接使用的 USB 2.0接口			
	- 1個eSATAII接口			
	- 1個可直接使用的USB 3.0接口			
	- 1個RJ-45區域網接口與LED指示燈(ACT/LINK LED和			
	SPEED LED)			
	- 高清晰音效插孔:後置喇叭/中置喇叭/低音喇叭/			
	音效輸入/前置喇叭/麥克風 (見警告6)			
USB 3.0	- 1 x Fresco FL1000G的USB 3.0接頭,支援USB 3.0到			
	5Gb/s			
接頭	- 5 x SATAII 3.0Gb/s接頭,支援RAID(RAID 0,			
	RAID 1, RAID 10和 JBOD),NCQ,AHCI和"熱插拔"功能			
	(詳見警告7)			
	- 1 x ATA133 IDE 插座 (最高支持 2 個 IDE 驅動器)			
	- 1 x 磁碟機接口			
	- 1 x 紅外線模組接頭			
	- 1 X 序列埠			
	- CPU/機箱/電源風扇接頭			
	- 24 針ATX 電源接頭			
	- 4 針 12V 電源接頭			
	- 內置音效接頭			
	- 前置音效接頭			
	- 3 x USB 2.0接口 (可支援6個額外的USB 2.0接口)			
BIOS	- 8Mb AMI BIOS			
	- 採用 AMI BIOS			
	- 支援即插即用(Plug and Play, PnP)			
	- ACPI 1.1 電源管理			
	- 支援喚醒功能			
	- 支援 jumperfree 免跳線模式			
	- 支援 SMBIOS 2.3.1			
	- VCCM, NB, SB 電壓多功能調節器			

支援光碟	- 驅動程式,工具軟體,防毒軟體(試用版本)
獨家功能	- 華擎 Tuner (詳見警告 8)
	- 華擎Intelligent Energy Saver (見警告9)
	- 華擎即時開機功能
	- 華擎Instant Flash (見警告10)
	- 華擎 OC DNA (見警告11)
	- 華擎 APP Charger (見警告12)
	- Hybrid Booster(安心超頻技術):
	- 支援 CPU 無級頻率調控 (見警告3)
	- ASRock U-COP(見警告14)
	- Boot Failure Guard (B.F.G., 啟動失敗恢復技術)
	- Turbo 25 / Turbo 30 GPU超頻
硬體監控器	- CPU 溫度偵測
	- 主板温度偵測
	- CPU/機箱/電源風扇轉速計
	- CPU 静音風扇
	- 電壓範圍:+12V, +5V, +3.3V, 核心電壓
	- Microsoft® Windows® 7/7 64位元/Vista™/Vista™ 64
	位元/XP/XP多媒體中心/XP 64 位元
認證	- FCC, CE, WHQL
	- 支援 ErP/EuP(需要同時使用支援 ErP/EuP 的電源供應
	器)(見警告15)
.l. 14 6 an 44 194 1 -a	

<sup>\*</sup> 請參閱華擎網站了解詳細的產品訊息: http://www.asrock.com

#### 警 告

請了解超頻具有不可避免的風險,這些超頻包括調節 BIOS 設置、運用非同步 超頻技術或使用第三方超頻工具。超頻可能會影響您的系統穩定性,甚至會 導致系統組件和設備的損壞。這種風險和代價須由您自己承擔,我們對超頻 可能導致的損壞不承擔責任。

#### 警告!


- 這款主板支援非同步超頻技術。請閱讀第27頁的"Untied Overclocking Technology"(非同步超頻技術)了解詳情。
- 這款主板支持雙通道記憶體技術。在您使用雙通道記憶體技術之前, 為能正確安裝,請確認您已經閱讀了第13頁的記憶體模組安裝指南。
- 3. 1800/1600MHz 記憶體頻率是否支援在於您使用的 AM3 CPU。如果您想在這款主板上使用 DDR3 1800/1600 記憶體,請查閱我們網站的記憶體支援列表了解相容的記憶體。華擎網站 http://www.asrock.com
- 由於作業系統的限制,在Windows® 7 / Vista™ / XP下,供系統使用 的實際記憶體容量可能小於 4GB。對於Windows® 作業系統搭配 64 位元 CPU 來說,不會存在這樣的限制。
- 最大共享記憶體大小由晶片組廠商定義並且可能更改。請查閱 AMD 網站 了解最新訊息。
- 6. 在麥克風輸入方面,這款主機板支援立體學和單聲道這兩種模式。在音效輸出方面,這款主機板支援2聲道、4聲道、6聲道以及8聲道模式。請參閱第3頁的表格瞭解正確的連接方式。
- 7. 在將 SATAII 硬碟連接到 SATAII 接口之前,請閱讀 CD 光碟中的 "User Manual"(使用手册, 英文版)第29頁的 "SATAII Hard Disk Setup Guide" (SATAII 硬碟安裝指南) 調整您的 SATAII 硬碟驅動器為 SATAII 模式。您也可以直接將 SATA 硬碟連接到 SATAII 接口。
- 8. 這是一款具有易使用介面的華擎超頻工具,讓您通過硬體監控功能監控您的系統,幫助您在Windows®環境下對硬體進行超頻以獲得最佳的系統性能。請參閱我們的網站了解ASROCK OC Tuner的使用方法。 華擎網站: http://www.asrock.com
- 9. Intelligent Energy Saver採用先進的軟硬體專利設計,這項革新技術帶來極佳的節能效果。當 CPU 核心閒置時,電壓調節器可以減小輸出電壓的相數,有助於提升能源效率。換句話說,它可以在不犧牲性能的前提下,讓系統更省電,並提高能源效率。為了使用 Intelligent Energy Saver 的功能,請在 BIOS 的進階設置裡啟用 Cool 'n' Quiet 選項。請參閱我們的網站了解 Intelligent Energy Saver 的使用方法。華擎網站: <a href="http://www.asrock.com">http://www.asrock.com</a>
- 10. 華擎 Instant Flash 是一個內建於 Flash ROM 的 BIOS 更新工具程式。這個方便的 BIOS 更新工具可讓您無需進入操作系統(如MS-DOS 或Windows®)即可進行 BIOS 的更新。在系統開機自檢過程中按下<F6>鍵或在 BIOS 設置菜單中按下<F2>鍵即可進入華擎 Instant Flash 工具程式。啟動這一程式後,只需把新的 BIOS 文件保存在隨身碟、磁盤或硬碟中,輕鬆點選滑鼠就能完成 BIOS 的更新,而不再需要準備額外的磁碟片或其他複雜的更新程式。請注意:隨身碟或硬碟必須使用 FAT32/64 文件系統。
- 11. 軟體的名字本身-OC DNA 已經向您透露了它的用途。OC DNA 是華擎獨家研發的創新工具程式,它為用戶提供一種記錄超頻設置並與他人分享的簡單方法。這個好用的工具程式可幫助您在操作系統中存取超頻記錄,大大簡化了超頻設置的記錄過程。有了OC DNA,您可以將超頻設置存取為一個設置文件並與朋友分享!請注意:超頻設置文件只能在同款的主機板上分享和使用。

繁體中文

- 12. 若您想要更快速、更自由地為您的蘋果設備,如 iPhone/iPad/iPod touch 充電, 華擎為您提供了一個絕妙的解決方案 華擎APP Charger。只需安裝 APP Charger 驅動程式, 用電腦為 iPhone 充電最多可比以往快40%。華擎APP Charger 讓您可以同時為多部蘋果設備快速充電, 甚至可以在電腦進入待命(S1)、待命(S3)、休眠(S4)或關機(S5)模式下持續為設備充電。只需安裝了APP Charger 驅動程式, 您立刻就能擁有非凡的充電體驗。
- 13. 儘管本主板提供無級頻率調控,但不推薦用戶超頻使用。不同於標準 CPU 前匯流排的非標準頻率可能會使系統不穩定,甚至會損害 CPU 和主板。主板的處理器主頻由跳線裝置決定。
- 14. 當檢測到 CPU 過熱問題時,系統會自動關機。在您重新啟動系統之前,請 檢查主板上的 CPU 風扇是否正常運轉並拔出電源線,然後再將它插回。為 了提高散熱性,在安裝 PC 系統時請在 CPU 和散熱器之間塗上一層散熱膏。
- 15. EuP, 全稱 Energy Using Product(能耗產品), 是歐盟用來定義完整系統耗電量的規定。根據 EuP 的規定, 一個完整系統在關機模式下的交流電總消耗必須在 1.00W 以下。為符合 EuP 標準, 您需要同時具備支援 EuP 的主機板和支援 EuP 的電源供應器。根據 Intel® 的建議, 支援 EuP 的電源供應器必須符合在 100mA 電流消耗時, 5Vsb 電源效率高於 50%。有關支援 EuP 的電源供應器選擇方面的詳情, 我們建議您諮詢電源供應器的製造商。

#### 1.3 跳線設置

插圖所示的就是設置跳線的方法。當跳 線帽放置在針腳上時, 這個跳線就是 "短接"。如果針腳上沒有放置跳線帽, 這個跳線就是"開路"。插圖顯示了一 個3針腳的跳線,當跳線帽放置在針腳1 和針腳2之間時就是"短接"。

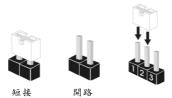

接腳

設定

PS2\_USB\_PW1 (見第2頁第1項)





短接pin2 和pin3,就可以設 置+5VSB(待機),使PS/2 或 USB23 能喚醒系統。

注意:選擇+5VSB,電源必須能提供+2 AMP 或更高的待機電流。

USB\_PW2

(見第2頁第35項)





短接pin2 和pin3,就可以設 置+5V\_DUAL,使USB01/45能 唤醒系統。

注意:選擇+5V\_DUAL,電源必須能提供+2 AMP 或更高的待機電流。當您選 擇+5V\_DUAL 時, USB 界面可喚醒處於S3(待命)狀態下的系統。

USB\_PW1

(見第2頁第9項)





短接pin2 和pin3,就可以設 置+5VSB(待機),使USB6\_7/ 8\_9/10\_11 能喚醒系統。

注意:選擇+5VSB,電源必須能提供+2 AMP 或更高的待機電流。

清除 CMOS

(CLRCMOS1, 3針腳跳線) (見第2頁第24項)





默認設置

清除 CMOS

注意:CLRCMOS1 允許您清除 CMOS 裏的資料。在 CMOS 裏的資料包括系統設置 資訊,例如系統密碼,日期,時間及系統設置參數。為了清除並重 置系統參數到默認設置, 請關閉電腦並拔掉電源線,然後用跳線帽短 接CLRCMOS1上的pin2和pin3五秒鐘。如果您需要再完成BIOS刷新 時清除 CMOS, 您必須先啟動系統, 然後在您進行 CMOS 清除操作之前 關閉系統。



此類接頭是不用跳線帽連接的,請不要用跳線帽短接這些接頭。 跳線帽不正確的放置將會導致主機板的永久性損壞!

接 頭

磁碟機接頭 (33針 FLOPPY1)

(見第2頁第26項)

圖示

I<sub>PIN1</sub> FLOPPY1

將標示紅色的一邊插入第1針腳(Pinl)

說明

注意:請確保數據線標紅色的一邊插入接頭第1針腳(Pin1)的位置。

主 IDE 接頭(藍色)

(39針 IDE1,見第2頁第10項)

.......... IDE1

藍色端接到主機板上

80 針的 ATA 66/100/133 排線

注意:請查閱您的 IDE 驅動器供應商提供的說明書了解詳細資料。

Serial ATAII 接口

(SATAII\_1(PORT 0):

見第2頁第20項)

(SATAII\_2(PORT 1):

這裡有五組Serial ATAII (SATAII)接口支援 SATA 或 SATAII硬碟作為內部儲存設 置。目前SATAII界面理論上

見第2頁第19項) SATAII\_1 SATAII\_2 SATAII\_3 SATAII\_4 SATAII\_5 可提供高達3.0Gb/s 的數據 (SATAII\_3(PORT 2): (PORT 0) (PORT 1) (PORT 2) (PORT 3) (PORT 4) 傳輸速率。

見第2頁第18項)

(SATAII\_4(PORT 3):

見第2頁第17項)

(SATAII\_5(PORT 4):

見第2頁第16項)


Serial ATA (SATA) 數據線

(選配)



SATA 數據線的任意一端均可 連接 SATA/SATAII 硬碟或者 主機板上的SATAII接口。



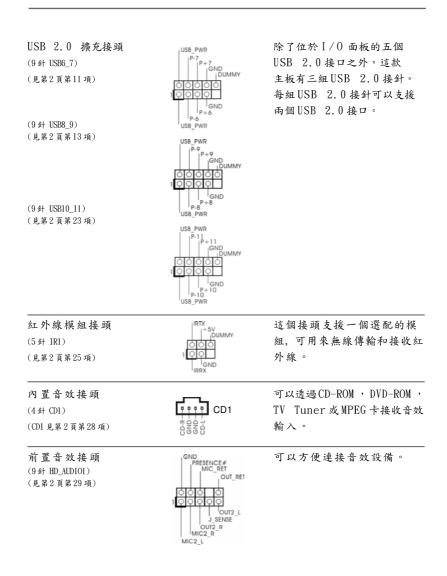



- 高清晰音效(High Definition Audio, HDA)支援智能音效接口檢測功能 (Jack Sensing),但是機箱面板的連線必須支持 HDA 才能正常使用。請按我 們提供的手冊和機箱手冊上的使用說明安裝您的系統。
- 2. 如果您使用 AC'97 音效面板, 請按照下面的步驟將它安裝到前面板音效接針:
  - A. 將 Mic\_IN(MIC)連接到 MIC2\_L。
  - B. 將 Audio\_R(RIN)連接到 OUT2\_R, 將 Audio\_L(LIN)連接到 OUT2\_L。
  - C. 將 Ground(GND)連接到 Ground(GND)。
  - D. MIC\_RET 和 OUT\_RET 僅用於 HD 音效面板。您不必將它們連接到 AC'97 音效面板。
  - E. 開啟前置麥克風。 在Windows® XP / XP 64 位元作業系統中: 選擇" Mixer"。選擇" Recorder"。接著點選" FrontMic"。 在Windows® 7 / 7 64 位元 / Vista™ / Vista™ 64 位元作業系

在Realtek 控制面板中點選"FrontMic"。調整"Recording Volume"。

#### 系統面板接頭

(9針 PANEL1)

(見第2頁第21項)



統中:

可接各種不同燈,電源開關及 重啟鍵等各種連線。

#### 機箱喇叭接頭

(4針 SPEAKER1)

(見第2頁第22項)



請將機箱喇叭連接到這個接頭。

#### 機箱,電源風扇接頭

(3針 CHA\_FAN1)

(見第2頁第12項)



請將風扇連接線接到這個接頭,並讓黑線與接地的針腳 相接。

(3針 PWR\_FAN1)

(見第2頁第33項)



CPU 風扇接頭

(4針 CPU\_FAN1)

(見第2頁第2項)



請將CPU 風扇連接線接到這個 接頭,並讓黑線與接地的針腳 相接。



雖然此主板支持 4-Pin CPU 風扇(Quiet Fan, 靜音風扇), 但是沒有調速功能的 3-Pin CPU 風扇仍然可以在此主板上正常運行。如果您打算將 3-Pin CPU 風扇連接到此主板的 CPU 風扇接口, 請將它連接到 Pin 1-3。

Pin 1-3 連接**◆** 

3-Pin 風扇的安裝



ATX 電源接頭 (24針 ATXPWR1) (見第2頁第8項)



請將ATX 電源供應器連接到這個接頭。



雖然此主機板提供 24-pin ATX 電源接口,但是您仍然可以  $^{12}$  使用傳統的 20-pin ATX 電源。為了使用 20-pin ATX 電源,請順著 Pin 1 和 Pin 3 插上電源接頭。



20-Pin ATX 電源安裝說明 1

ATX 12V 電源接口 (4針 ATX12V1)

(4針 AIXI2VI) (見第2頁第3項)



請注意,必需將帶有ATX 12V 插頭的電源供應器連接到這個 插座,這樣就可以提供充足的 電力。如果不這樣做,就會導 致供電故障。

序列埠 (9針COM1) (見第2頁第27項)



這個序列埠COM1 支援一個序 列埠的裝置。

繁體中文

# 2. BIOS 訊息

主板上的 Flash Memory 晶片存储了 BIOS 設置程序。啟動系統,在系統開機自檢 (POST) 的過程中按下 (F2) 键,就可進入 BIOS 設置程序,否則將繼續進行開機自檢之常規檢驗。如果需要在開機自檢後進入 BIOS 設置程序,請按下 (F1) + (F1)

## 3. 支援光碟訊息

本主板支援各種微軟 Windows®操作系統:Microsoft® Windows® 7/7 64 位元/Vista™/Vista™ 64 位元/XP/XP 多媒體中心/XP 64 位元。主板附帶的支援光碟包含各種有助於提高主板效能的必要驅動和實用程式。請將隨機支援光碟放入光碟機裡,如果系統的"自動運行"功能已啟用,銀幕將會自動顯示主菜單。如果主菜單不能自動顯示,請查閱支援光碟內 BIN 文件夾下的 ASSETUP. EXE 文件並雙點它,即可調出主菜單。