

OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

SPC621D8HM3

User Manual

English



Version 1.0

Published October 2021

Copyright©2021 ASRock Rack Inc. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

ASRock Rack's Website: www.ASRockRack.com

Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at www.ASRockRack.com; or you may contact your dealer for further information.

ASRock Rack Incorporation

6F., No.37, Sec. 2, Jhongyang S. Rd., Beitou District,

Taipei City 112, Taiwan (R.O.C.)

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	5
1.4 Motherboard Layout	6
1.5 I/O Panel	9
1.6 Block Diagram	10
Chapter 2 Installation	11
2.1 Screw Holes	11
2.2 Pre-installation Precautions	11
2.3 Installing the CPU and Heatsink	12
2.4 Installation of Memory Modules (DIMM)	18
2.5 Expansion Slots (PCI Express Slots)	20
2.6 Jumper Setup	21
2.7 Onboard Headers and Connectors	22
2.8 Unit Identification purpose LED/Switch	29
2.9 Driver Installation Guide	29
2.10 M.2_SSD (NGFF) Module Installation Guide (M2_1)	30
2.11 M.2_SSD (NGFF) Module Installation Guide (M2_2)	32
Chapter 3 UEFI Setup Utility	33
3.1 Introduction	33
3.1.1 UEFI Menu Bar	33
3.1.2 Navigation Keys	34

3.2	Main Screen	35
3.3	Advanced Screen	36
3.3.1	CPU Configuration	37
3.3.2	DRAM Configuration	40
3.3.3	Chipset Configuration	42
3.3.4	Storage Configuration	45
3.3.5	ACPI Configuration	47
3.3.6	USB Configuration	48
3.3.7	Super IO Configuration	49
3.3.8	Serial Port Console Redirection	50
3.3.9	H/W Monitor	53
3.3.10	Runtime Error Logging	54
3.3.11	Intel SPS Configuration	56
3.3.12	Intel(R) VMD Technology	57
3.3.13	Tls Auth Configuratio	59
3.3.14	Instant Flash	60
3.4	Security	61
3.4.1	Key Management	62
3.5	Boot Screen	66
3.5.1	CSM Parameters	68
3.6	Server Mgmt	70
3.6.1	System Event Log	71
3.6.2	BMC Network Configuration	72
3.6.3	BMC Tools	74

3.7	Event Logs	75
3.8	Exit Screen	76
Chapter 4 Software Support		77
4.1	Install Operating System	77
4.2	Support CD Information	77
4.2.1	Running The Support CD	77
4.2.2	Drivers Menu	77
4.2.3	Utilities Menu	77
4.2.4	Contact Information	77
Chapter 5 Troubleshooting		78
5.1	Troubleshooting Procedures	78
5.2	Technical Support Procedures	80
5.3	Returning Merchandise for Service	80

Chapter 1 Introduction

Thank you for purchasing ASRock Rack **SPC621D8HM3** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. You may find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: www.ASRockRack.com

*If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.
<http://www.asrockrack.com/support/>*

1.1 Package Contents

- ASRock Rack SPC621D8HM3 Motherboard
(Proprietary Form Factor: 17-in x 6.6-in, 43.18 cm x 16.7 cm)
- 2 x Screws for M.2 Sockets
- 1 x CPU Non-Fabric Carrier
- 2 x OCP3.0 Plastic Guide Rails



If any items are missing or appear damaged, contact your authorized dealer.

1.2 Specifications

SPC621D8HM3	
MB Physical Status	
Form Factor	Proprietary
Dimension	17" x 6.6" (43.18cm x 16.7 cm)
Processor System	
CPU	Supports 3rd Gen Intel® Xeon® Scalable processors
Socket	Single Socket P+ (LGA 4189)
Chipset	Intel® C621A
Thermal Design Power	300W
CPLD	Lattice LCMXO3LF-2100C
System Memory	
Capacity	8 DIMM slots (1DPC)
Type	Supports DDR4 288-pin RDIMM, LRDIMM, RDIMM/ LRDIMM-3DS, Intel® Optane™ Persistent Memory 200 series
DIM Size per DIMM	RDIMM: up to 64GB RDIMM-3DS: up to 256GB LRDIMM: up to 128GB LRDIMM-3DS: up to 256GB
DIMM Frequency	max. 3200MHz
Voltage	1.2V
PCIe Expansion Slots	
PCIe x 16	PCIe1: high-density PCIe4.0 x16 supports RBL16H_G4, RBL16H PCIe2: high-density PCIe4.0 x16 supports RB162SL_G4
M.2	1 M-key* (PCIe3.0 x4 or SATA 6Gb/s), supports 22110/2280 form factor 1 M-key (PCIe3.0 x4 or SATA 6Gb/s), supports 2280 form factor <i>* SATA DOM will be disabled when M.2_1 populated with SATA device</i>
OCuLink	2 OCuLink (PCIe3.0 x4 or 4 SATA 6Gb/s)
SlimSAS	2 (PCIe4.0 x8)
SATA/SAS Storage	
PCH Built-in Storage	Intel® C621A (11 SATA 6Gb/s; RAID 0/1/5/10): 2 OCuLink, 1 SATA 7-pin, 1 M.2, 1 M.2 or SATA DOM
Ethernet	
OCF Slot	1 OCP NIC 3.0 (PCIe4.0 x16)
Server Management	
BMC Controller	ASPEED AST2500
IPMI Dedicated GLAN	1 x Realtek RTL8211E for dedicated management GLAN
Graphics	
Controller	ASPEED AST2500

VRAM	DDR4 16MB
Rear I/O	
UID Button/ LED	1
VGA Port	1 Mini Display Port (VGA)
USB 3.2 Gen1 Port	2 Type-A (USB3.2 Gen1)
Dedicate LAN	1 dedicated IPMI
Internal Connectors/ Headers	
Power Connector	2 (8-pin, ATX 12V)
Other Power Connectors	1 (4-pin)
Auxiliary Panel Header	1 (18-pin): Include chassis intrusion, system fault LED, location button & LED, front LAN LED, SMBus
ITX Auxiliary Panel Header	1 (9-pin): Include chassis intrusion, system fault LED, front LAN LED
System Panel	1 (9-pin): power switch, reset switch, system power LED, HDD activity LED
COM Header	1
VGA Header	1
Speaker Header	1
Buzzer	1
Fan Header	4 (6-pin)
Thermal Sensor Header	1
TPM Header	1 (17-pin, LPC), 1 (13-pin, SPI)
VROC Header	1
SGPIO Header	2
IPMB Header	1
Clear CMOS	1 (contact pads)
ME/SPS Recovery	1
USB 3.2 (Gen1) Header	1 (19-pin, 2 USB3.2 Gen1)
USB 2.0 Header	1 (9-pin, 2 USB2.0)
NMI Button	1
SMBus Header	1
PSU SMBus	1
CPU1_HSBP_1	1
System BIOS	
Type	256Mb AMI UEFI Legal BIOS

Features	- Plug and Play (PnP) - ACPI 2.0 Compliance Wake Up Events - SMBIOS 2.8 Support - ASRock Rack Instant Flash
LED Indicators	
Standby PWR	1
LED 5vsb	
Fan Fail LED	4
Hardware Monitor	
Temperature	CPU, PCH, MB, Card side Temperature Sensing
Fan	- CPU/Rear/Front Fan Tachometer - CPU Quiet Fan (Allow Chassis Fan Speed Auto-Adjust by CPU Temperature) - CPU/Rear/Front Fan Multi-Speed Control
Voltage	+12V, +5V, +3.3V, CPU Vcore, DRAM, 1.05V_PCH, +BAT, 3.3VSB, 5VSB
Support OS	
OS	Microsoft® Windows® - Server 2016 (64 bit) - Server 2019 (64 bit) Linux® - Red Hat Enterprise Linux Server 7.9 (64 bit) - CentOS 7.9 (64 bit) - Ubuntu 20.04.1 (64 bit) Hypervisor: - VMWare® ESXi 6.7 U3 / vSphere 6.7 U3 - VMWare® ESXi 7.0.U1c / vSphere 7.0.U1c - Hyper-V Windows® Server 2016 - Hyper-V Windows® Server 2019 <i>* Please refer to our website for the latest OS support list.</i>
Environment	
Temperature	Operation temperature: 10°C ~ 35°C / Non operation temperature: -40°C ~ 70°C



This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.




If you install Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If you install the drivers only, it will pass the WHQL tests.

1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows you to update system BIOS without entering operating systems first like MS-DOS or Windows[®]. With this utility, you can press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to your USB flash drive, floppy disk or hard drive, then you can update your BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

1.4 Motherboard Layout

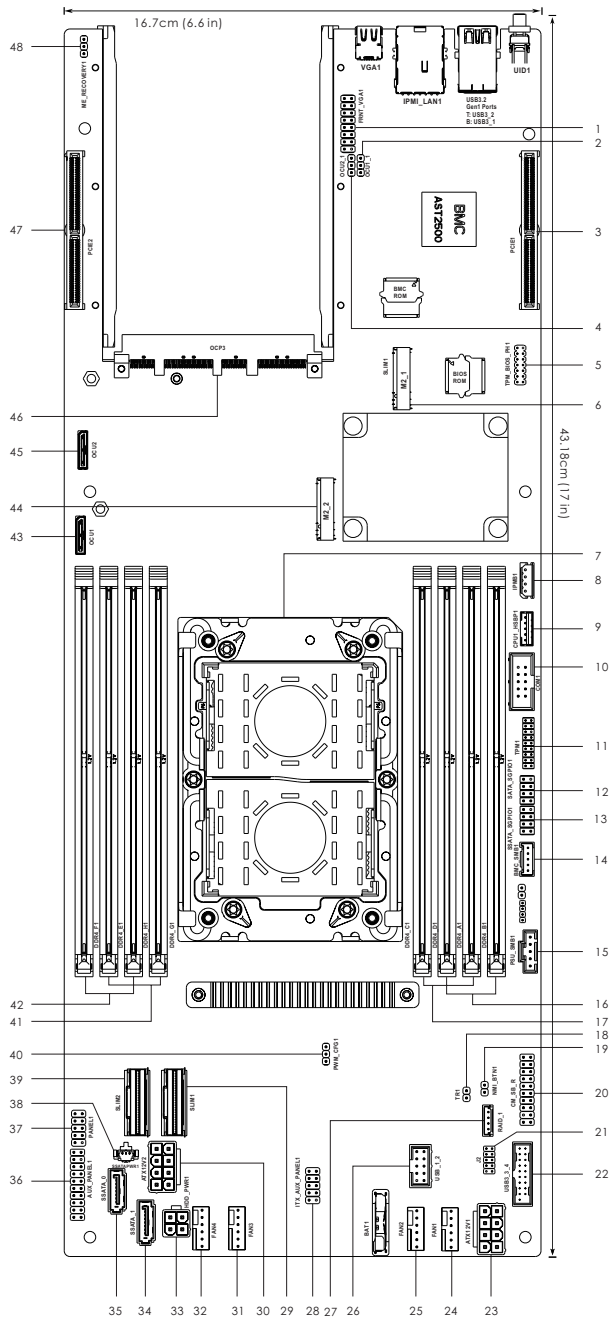


No.	Description
1	Front VGA Header (FRNT_VGA1)
2	OCuLink Jumper (OCU1_1)
3	PCI Express 4.0 x16 Slot (PCIE1)
4	OCuLink Jumper (OCU2_1)
5	SPI TPM Header (TPM_BIOS_PH1)
6	M.2 Socket (M2_1) (Type 2280/22110)
7	CPU Socket LGA4189 (socket P) (CPU1)
8	Intelligent Platform Management Bus Header (IPMB1)
9	Backplane PCI Express Hot-Plug Connector (CPU1_HSBP1)
10	Serial Port Header (COM1)
11	TPM Header (TPM1)
12	SATA SGPIO Connector (SATA_SGPIO1)
13	SATA SGPIO Connector (SSATA_SGPIO1)
14	BMC SMBus Header (BMC_SMB1)
15	PSU SMBus (PSU_SMB1)
16	2 x 288-pin DDR4 DIMM Slots (DDR4_B1, DDR4_D1)*
17	2 x 288-pin DDR4 DIMM Slots (DDR4_A1, DDR4_C1)*
18	Thermal Sensor Header (TR1)
19	Non Maskable Interrupt Button (NMI_BTN1)
20	CM Board Standby Power Header (CM_SB_R)
21	Additional Panel Header (J2)
22	USB 3.2 Gen1 Header (USB3_3_4)
23	ATX 12V Power Connector (ATX12V1)
24	System Fan Connector (FAN1)
25	System Fan Connector (FAN2)
26	USB 2.0 Header (USB_1_2)
27	Virtual RAID On CPUHeader (RAID_1)
28	Auxiliary Panel Header (ITX_AUX_PANEL1)
29	Slimline NVMe x8 Connector (SLIM1)
30	ATX 12V Power Connector (ATX12V2)
31	System Fan Connector (FAN3)
32	System Fan Connector (FAN4)
33	SATA Power Connector (HDD_PWR1)

No.	Description
34	SATA3 Connector (SSATA_1)
35	SATA3 Connector (SSATA_0)
36	Auxiliary Panel Header (AUX_PANEL1)
37	System Panel Header (PANEL1)
38	SATA Power Header (SSATAPWR1)
39	Slimline NVMe x8 Connector (SLIM2)
40	PWM Configuration Header (PWM_CFG1)
41	2 x 288-pin DDR4 DIMM Slots (DDR4_E1, DDR4_G1)*
42	2 x 288-pin DDR4 DIMM Slots (DDR4_F1, DDR4_H1)*
43	OCuLink x4 Connector (OCU1)
44	M.2 Socket (M2_2) (Type 2280)
45	OCuLink x4 Connector (OCU2)
46	OCP 3.0 Gen4 x16 Mezzanine Card Slot (OCP3)
47	PCI Express 4.0 x16 Slot (PCIE2)
48	ME Recovery Jumper (ME_RECOVERY1)

**For DIMM installation and configuration instructions, please see p.16 (Installation of Memory Modules (DIMM)) for more details.*


1.5 I/O Panel

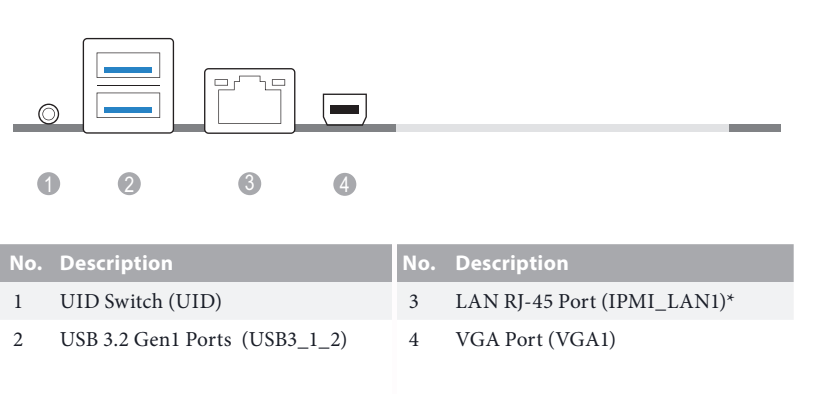

No.	Description	No.	Description
1	UID Switch (UID)	3	LAN RJ-45 Port (IPMI_LAN1)*
2	USB 3.2 Gen1 Ports (USB3_1_2)	4	VGA Port (VGA1)

LAN Port LED Indications

*There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

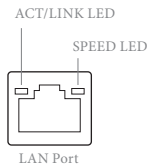

Dedicated IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10M bps connection or no link
Blinking Yellow	Data Activity	Yellow	100M bps connection
On	Link	Green	1Gbps connection

Chapter 2 Installation

This is a proprietary form factor (17" x 6.6", 43.18 cm x 16.7 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.




Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installing the CPU and Heatsink



1. Before you insert the CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.


1

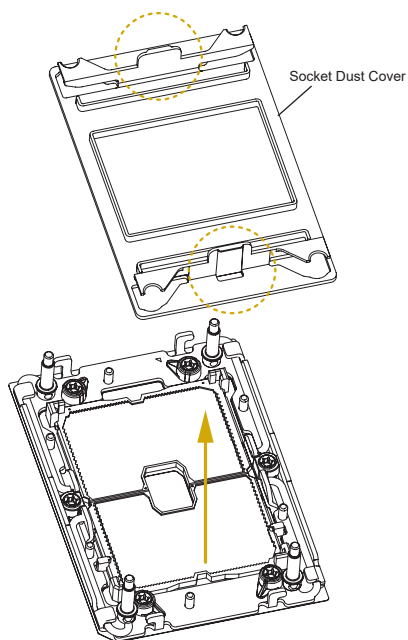




1. Before you installed the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation.
2. Illustration in this documentation are examples only. Heatsink or fan cooler type may differ.


2

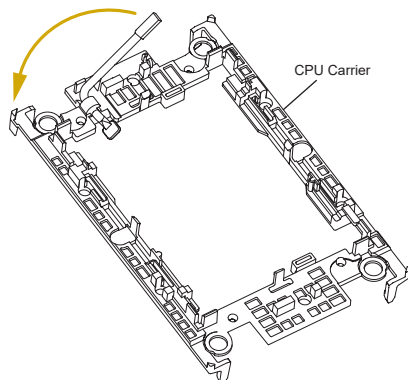


3

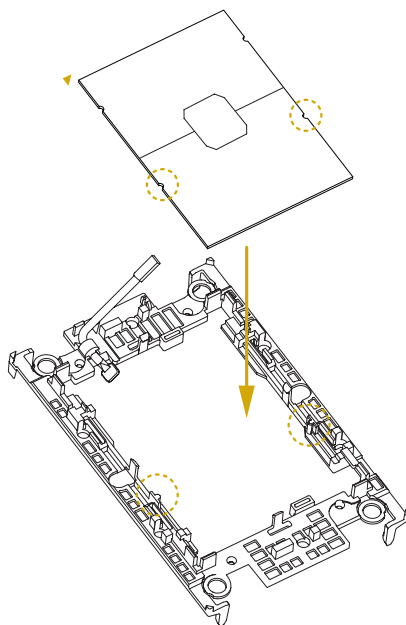


4

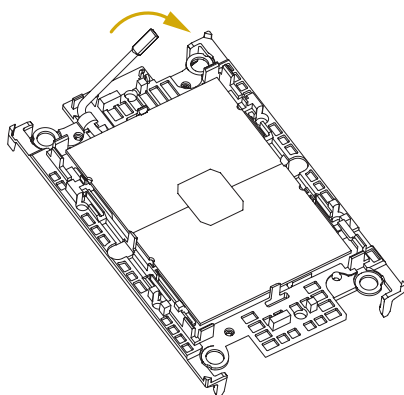


5

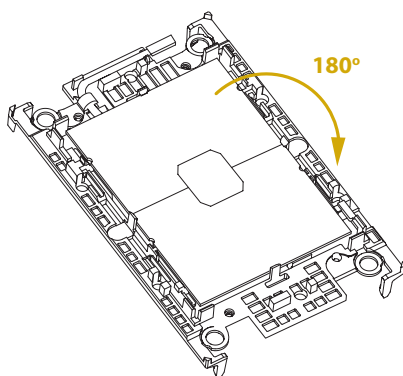


6

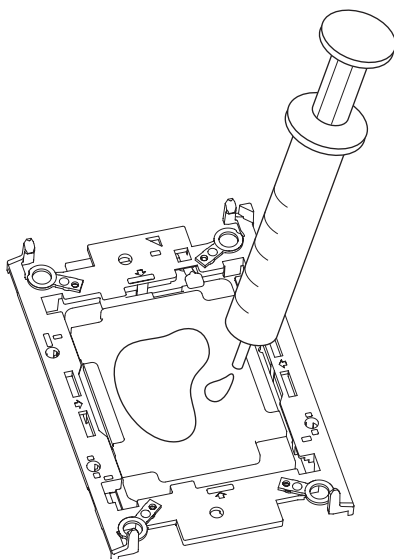


7

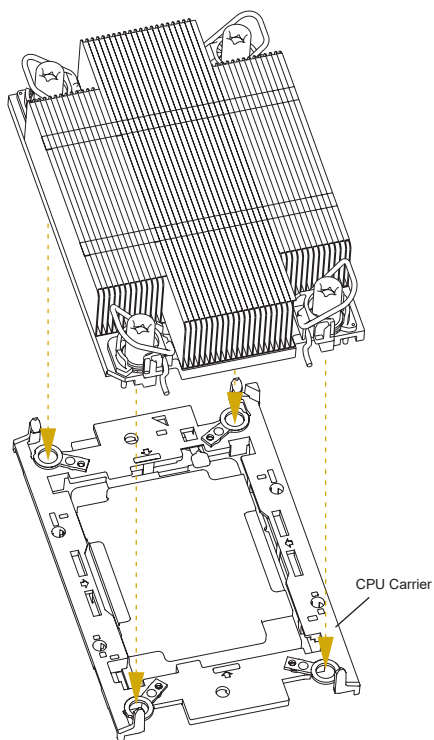


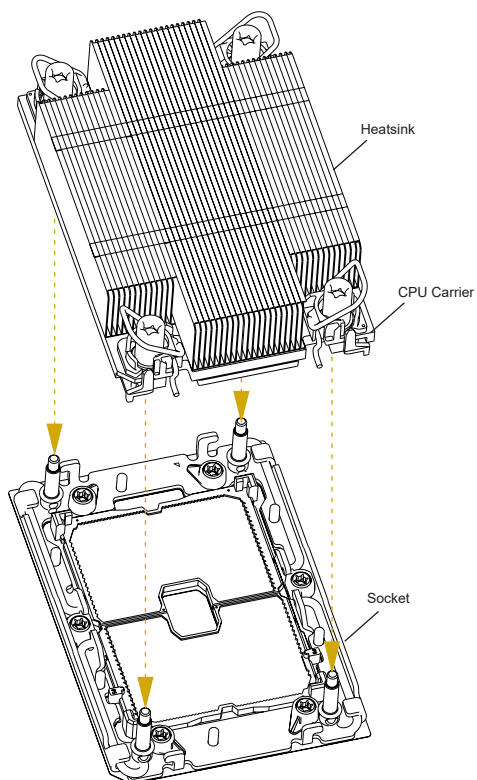

9

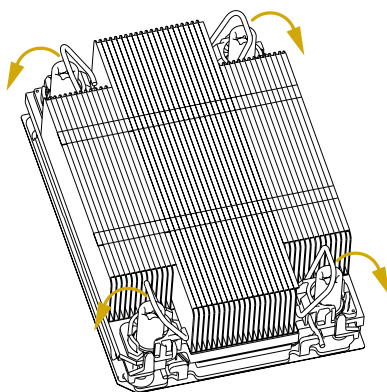

10

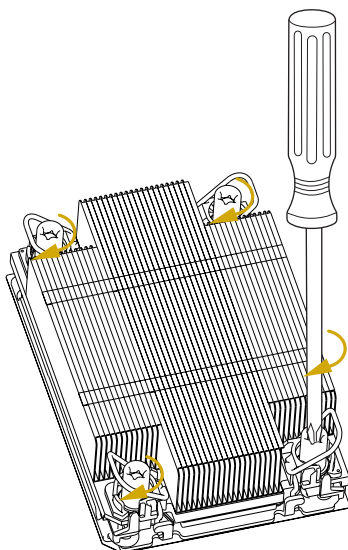

2.4 Installation of Memory Modules (DIMM)


This motherboard provides eight 288-pin DDR4 (Double Data Rate 4) DIMM slots in two groups, and supports Eight Channel Memory Technology.

	CPU1							
	A1	B1	C1	D1	E1	F1	G1	H1
1 DIMM			#					
2 DIMMS			#	#				
4 DIMMS	#	#					#	#
8 DIMMS	#	#	#	#	#	#	#	#




1. It is not allowed to install a DDR, DDR2 or DDR3 memory module into a DDR4 slot; otherwise, this motherboard and DIMM may be damaged.
2. For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR4 DIMM pairs.
3. It is unable to activate Dual Channel Memory Technology with only one or three memory module installed.
4. Some DDR4 1GB double-sided DIMMs with 16 chips may not work on this motherboard. It is not recommended to install them on this motherboard.


1

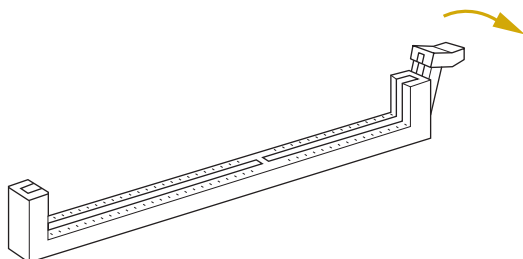

2

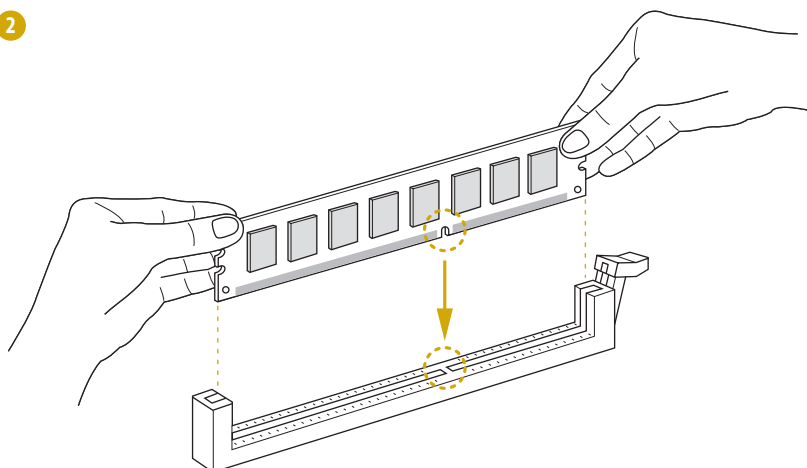

3

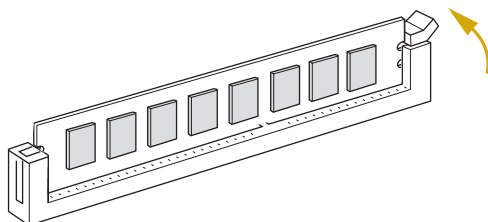

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

2.5 Expansion Slots (PCI Express Slots)

There are 2 PCI Express slots on this motherboard.

PCIE slot:

PCIE1 (PCIE 4.0 x16 slot, from CPU) is used for PCI Express x16 lane width cards.

PCIE2(PCIE 4.0 x16 slot, from CPU) is used for PCI Express x24 lane width cards.


Slot	Generation	Mechanical	Electrical	Source
PCIE1	4.0	x16	x16	CPU1
PCIE2	4.0	x16	x16	CPU1

Installing an expansion card

- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use on the chassis. Keep the screw for later use.
- Step 4. Install the PCIE card to the riser card.
- Step 5. Align the riser-card assembly connector with the slot on the system board. Press firmly until the riser-card assembly is completely seated on the slot.
- Step 6. Fasten the card to the chassis with the screw.
- Step 7. Replace the system cover.

2.6 Jumper Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.

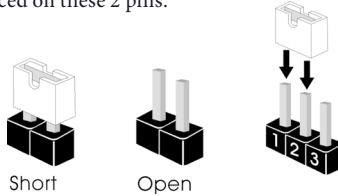

ME Recovery Jumper
(3-pin ME_RECOVERY1)
(see p.6, No. 48)



Normal Mode (Default)



ME Recovery Mode

OCU1 Jumper
(3-pin OCU1_1)
(see p.6, No. 2)



High = SATA



Low = PCIE (Default)

OCU2 Jumper
(3-pin OCU2_1)
(see p.6, No. 4)



High = SATA




Low = PCIE (Default)

2.7 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header
(9-pin PANEL1)
(see p.6, No. 37)

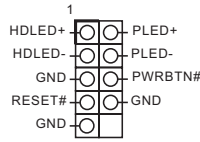

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



PWRBTN (Power Switch):
Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

 
RESET (Reset Switch):
Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):
Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):
Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.


The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Auxiliary Panel Header
(9-pin
ITX_AUX PANEL1)
(see p.6, No. 28)



This header supports multiple functions on the front panel, including the front panel SMB, system fault indicator and chassis intrusion pin.

Auxiliary Panel Header
(18-pin AUX_PANEL1)
(see p.6, No. 36)

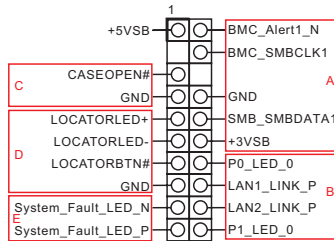

This header supports multiple functions on the front panel, including front panel SMB, internet status indicator.



A. Front panel SMBus connecting pin (6-1 pin FPSMB)

This header allows you to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

B. Internet status indicator (2-pin LAN1_LED, LAN2_LED)

These two 2-pin headers allow you to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.

C. Chassis intrusion pin (2-pin CHASSIS)

This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.


D. Locator LED (4-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

E. System Fault LED (2-pin LOCATOR)

This header is for the Fault LED on the system.


Front VGA Header
(15-pin FRNT_VGA1)
(see p.6, No. 1)

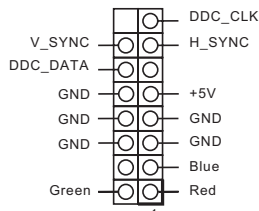

Please connect either end of VGA_2X8 cable to VGA header.

System Fan Connectors


- (6-pin FAN1)
(see p.6, No. 24)
- (6-pin FAN2)
(see p.6, No. 25)
- (6-pin FAN3)
(see p.6, No. 31)
- (6-pin FAN4)
(see p.6, No. 32)

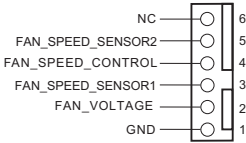

Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.

TPM Header


- (17-pin TPM1)
(see p.6, No. 11)

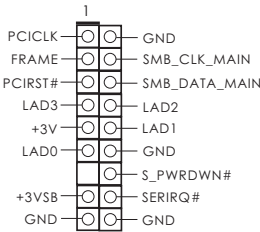

This connector supports Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

TPM-SPI Header


- (13-pin TPM_BIOS_PH1)
(see p.6, No. 5)

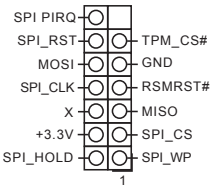

This connector supports Trusted Platform Module (TPM) system for SPI interface, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

Serial ATA3 Connectors

- (SSATA_0)
(see p.6, No. 35)
- (SSATA_1)
(see p.6, No. 34)

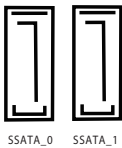


These four SATA3 connectors support SATA data cables for internal storage devices with up to 6.0 Gb/s data transfer rate.

Serial ATA3 DOM
Connectors
(SSATA_0)
(see p.6, No. 17)



The SATA3 DOM connectors support both a SATA DOM (Disk-On-Module) and a SATA data cable for internal storage device.

 PSU SMBus
(PSU_SMB1)
(see p.6, No. 15)




PSU SMBus monitors the status of the power supply, fan and system temperature.

Non Maskable Interrupt
Button Header
(NMI_BTN1)
(see p.6, No. 19)




Please connect a NMI device to this header.

 Intelligent Platform
Management Bus header
(4-pin IPMB1)
(see p.6, No. 8)




This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

 Baseboard Management
Controller SMBus Header
(5-pin BMC_SMB1)
(see p.6, No. 14)




This header is used for the SMBUS devices.

 ATX 12V Power
Connectors
(8-pin ATX12V1)
(see p.6, No. 23)
(8-pin ATX12V2)
(see p.6, No. 30)



This motherboard provides two 8-pin ATX 12V power connectors.

 SATA Power Connector
(4-pin HDD_PWR1)
(see p.6, No. 33)



Please use a SATA power cable to connect this SATA Power Connector and your SATA HDD for supplying power from the motherboard, when using DC-IN mode without SATA power supply.

OCuLink Connectors
(OCU1)
(see p.6, No. 43)
(OCU2)
(see p.6, No. 45)




OCU2



OCU1


Please connect PCIE SSDs to these connectors.

USB 3.2 Gen1 Header
(19-pin USB3_3_4)
(see p.6, No. 22)

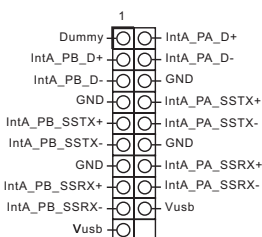


Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 header on this motherboard. This USB 3.2 Gen1 header can support two USB 3.2 Gen1 ports.

USB 2.0 Header
(9-pin USB_1_2)
(see p.6, No. 26)

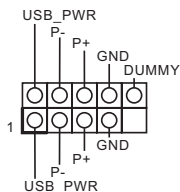


There is one USB 2.0 header on this motherboard. This USB 2.0 header can support two ports.

Serial Port Header
(9-pin COM1)
(see p.6, No. 10)

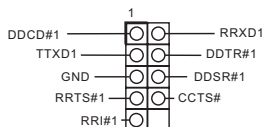


This COM header supports a serial port module.

 Serial General Purpose
Input/Output Headers
(7-pin SATA_SGPIO1)
(see p.6, No. 12)
(7-pin SSATA_SGPIO1)
(see p.6, No. 13)




The headers support Serial
Link interface for onboard
SATA connections.

 PWM Configuration
Header
(3-pin PWM_CFG1)
(see p.6, No. 40)




This header is used for PWM
configurations.

Backplane PCI Express
Hot-Plug Connector
(5-pin CPU1_HSBP1)
(see p.6, No. 9)

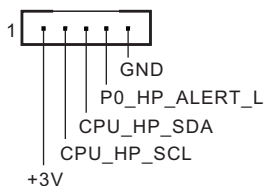

This header is used for the hot
plug feature of HDDs on the
backplane.

SLIMLINE NVMe x8
Connectors
(SLIM1)
(see p.6, No. 29)
(SLIM2)
(see p.6, No. 39)

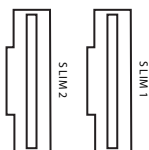


These connectors are used for
the NVME PCIE devices.

Thermal Sensor Header
(2-pin TR1)
(see p.6, No. 18)




Please connect on end of the
thermal sensor cable to this
header and the other end to
the device which you wish to
monitor its temperature.

 Additional Panel Header
(9-pin J2)
(see p.6, No. 21)




Connect this 9-pin header to
the dedicated cable for panel
features.

 SATA DOM Power
Connector
(3-pin SATAPWR1)
(see p.6, No. 38)




Please connect a SATA power cable to the SATA power connector.

CM Board Standby Power
Header
(19-pin CM_SB_R)
(see p.6, No. 20)

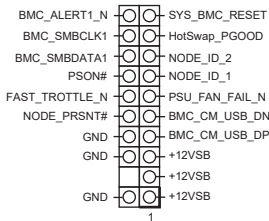

Connect this 19-pin header to the PSU for +12VSB and PSON PWROK.

Virtual RAID On CPU
Header
(4-pin RAID_1)
(see p.6, No. 27)

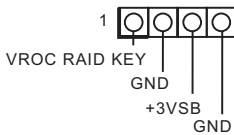

This connector supports Intel® Virtual RAID on CPU and NVME/AHCI RAID on CPU PCIE.

With the introduction of the Intel VROC product, there are three modes of operation:

SKU	HW key required	Key features
Pass-thru	Not needed	- Pass-thru only (no RAID) - LED Management - Hot Plug Support - RAID 0 support for Intel Fultondale NVMe SSDs
Standard	VROCSTANMOD	- Pass-thru SKU features - RAID 0, 1, 10
Premium	VROCPREMMOD	- Standard SKU features - RAID 5
ISS	VROCISSDMOD	RAID 5 Write Hole Closure

*Only Intel SSDs are supported.
*For further details on VROC, please refer to the official information released by Intel.

2.8 Unit Identification purpose LED/Switch

With the UID button, You are able to locate the server you're working on from behind a rack of servers.

Unit Identification
purpose LED/Switch
(UID)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.

2.9 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from top to bottom to install those required drivers. Therefore, the drivers you install can work properly.

 
2.10 M.2 SSD Module Installation Guide (M2_1)

The Ultra M.2 Socket (M2_1, Key M) supports a type 2280/22110 M.2 SATA3 6.0 Gb/s module or a M.2 PCI Express module up to Gen3 x4 (32Gb/s).




The diagrams in this documentation are for reference only. The actual supported M.2 type varies per motherboard.

Installing the M.2 SSD Module



Step 1


Prepare a M.2 SSD module and the screw.

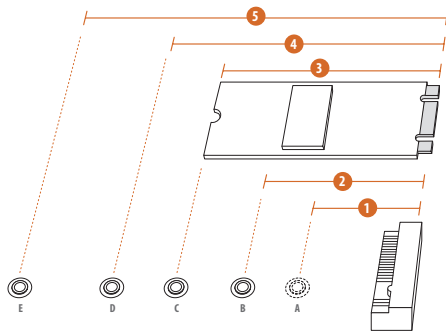

Step 2

Depending on the PCB type and length of your M.2 SSD module, find the corresponding nut location to be used.


No.	1	2
Nut Location	A	B
PCB Length	8cm	11cm
Module Type	Type2280	Type22110

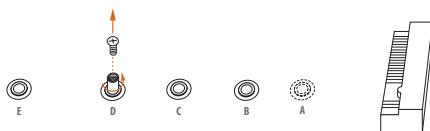**Step 3**


Move the standoff based on the module type and length.

Skip Step 3 and 4 and go straight to Step 5 if you are going to use the default nut.



Otherwise, release the standoff by hand.

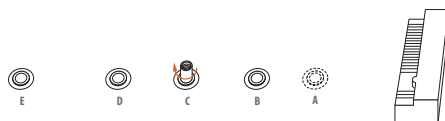**Step 4**

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

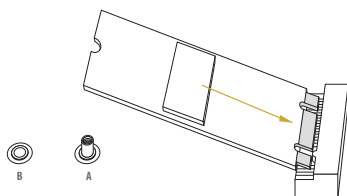**Step 5**

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

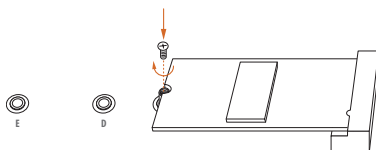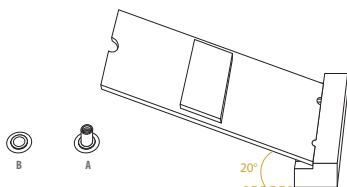**Step 6**

Tighten the screw with a screwdriver to secure the module into place.

Please do not overtighten the screw as this might damage the module.

 
2.11 M.2 SSD Module Installation Guide (M2_2)

The Ultra M.2 Socket (M2_2, Key M) supports a type 2280 SATA3 6.0 Gb/s module or a PCI Express module up to Gen3 x4 (32 Gb/s).




The diagrams in this documentation are for reference only. The actual supported M.2 type varies per motherboard.

Installing the M.2_SSD Module





Step 1

Prepare a M.2 SSD module and the screw.

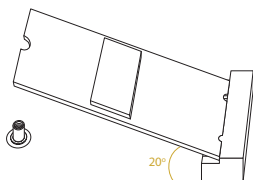

Step 2

 Gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

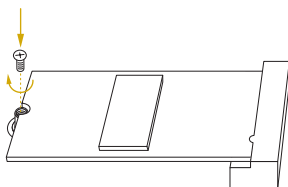

Step 3

Hand tighten the thumbscrew to secure the module into place. Please do not overtighten the screw as this might damage the module.

M.2 SSD Module Support List

For the latest updates of M.2 SSD module support list, please visit our website for details:
<http://www.asrockrack.com>

Chapter 3 UEFI Setup Utility

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure your system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. You may run the UEFI SETUP UTILITY when you start up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctrl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Server Mgmt	To manage the server
Event Logs	For event log configuration
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen


3.2 Main Screen

Once you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows you to set the system time and date.

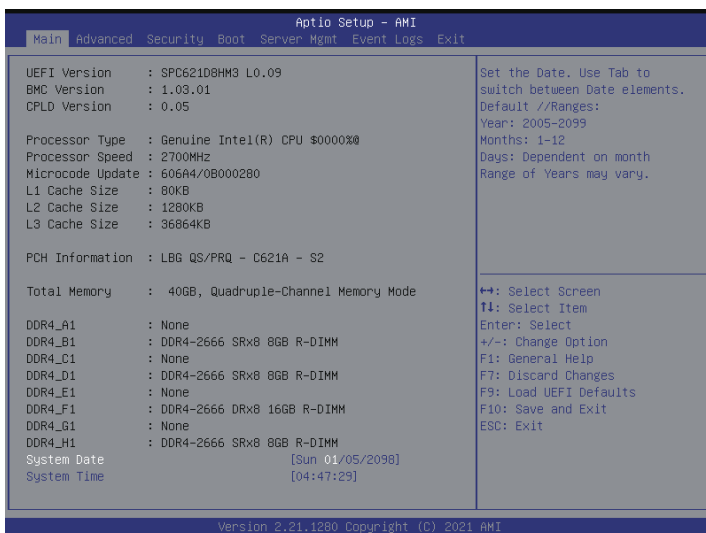


3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, DRAM Configuration, Chipset Configuration, Storage Configuration, ACPI Configuration, USB Configuration, Super IO Configuration, Serial Port Console Redirection, H/W Monitor, Runtime Error Logging, Intel SPS Configuration, Intel(R) VMD Technology, Tls Auth Configuration and Instant Flash.

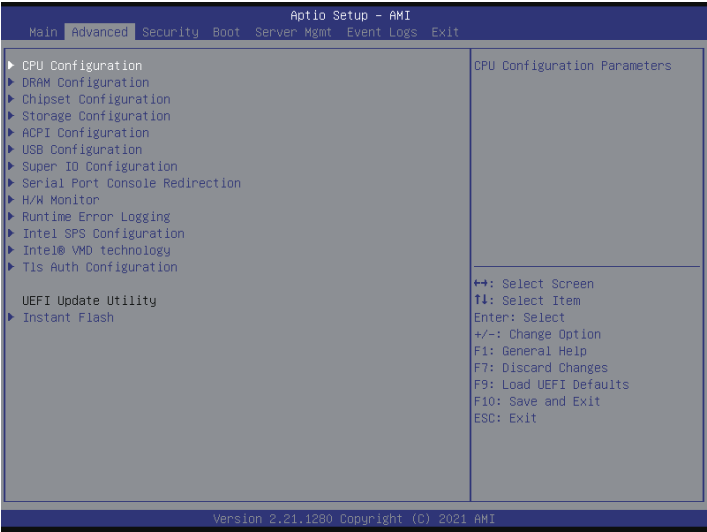

Setting wrong values in this section may cause the system to malfunction.

3.3.1 CPU Configuration

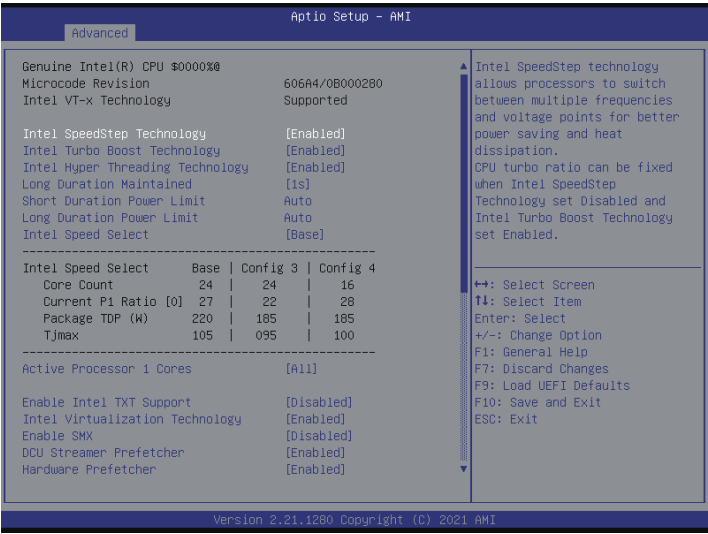

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology set Disabled and Intel Turbo Boost Technology set Enabled.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state.

Intel Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

Long Duration Maintained

Configure the period of time until the CPU ratio is lowered when the Long Duration Power Limit is exceeded.

Short Duration Power Limit

Configure Package Power Limit 2 in watts. When the limit is exceeded, the CPU ratio will be lowered immediately. A lower limit can protect the CPU and save power, while a higher limit may improve performance.

Long Duration Power Limit

Configure Package Power Limit 1 in watts. When the limit is exceeded, the CPU ratio will be lowered after a period of time. A lower limit can protect the CPU and save power, while a higher limit may improve performance.

Intel Speed Select

Intel Speed Select allows user to choose from up to two additional base frequency conditions.

Active Processor 1 Cores

Select the number of cores to enable in each processor package.

Enable Intel TXT Support

Enables Intel Trusted Execution Technology Configuration.

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Enable SMX

Use this item to enable Safer Mode Extensions.

DCU Streamer Prefetcher

DCU streamer prefetcher is an L1 data cache prefetcher (MSR 1A4h [2]).

Hardware Prefetcher

Automatically prefetch data and code for the processor. Enable for better performance.

Adjacent Cache Line Prefetch

Automatically prefetch the subsequent cache line while retrieving the currently requested cache line. Enable for better performance.

Package C State Support

Enable CPU, PCIe, Memory, Graphics C State Support for power saving.

CPU C6 State Support

Enable C6 deep sleep state for lower power consumption.

Enhanced Halt State(C1E)

Enable Enhanced Halt State (C1E) for lower power consumption.

Hardware P-States

Disable: Hardware chooses a P-state based on OS Request (Legacy P-States)

Native Mode: Hardware chooses a P-state based on OS guidance

Out of Band Mode: Hardware autonomously chooses a P-state (no OS guidance)

AES-NI

Use this item to enable or disable AES-NI support.

CPU Thermal Throttling

Enable CPU internal thermal control mechanisms to keep the CPU from overheating.

Delayed Authentication Mode (DAM) Override

Use this item to enable or disable overriding the state of the Delayed Authentication Mode (DAM).

UMA-Based Clustering

UMA Based Clustering options include Disable (ALL2ALL), Hemisphere (2 cluster), and Quadrant (4 cluster, not supported on ICX). These options are only valid when SNC is disabled. If SNC is enabled, UMA-Based Clustering is automatically disabled by BIOS.

Total Memory Encryption (TME)

Use this item to enable or disable Total Memory Encryption (TME).

SW Guard Extensions (SGX)

Use this item to enable or disable Software Guard Extensions (SGX).


Enable/Disable SGX Auto MP Registration Agent

The MP registration agent is responsible for register the platform.

SGX Registration Server

Use this item to choose which server should be used for SGX registration.

3.3.2 DRAM Configuration

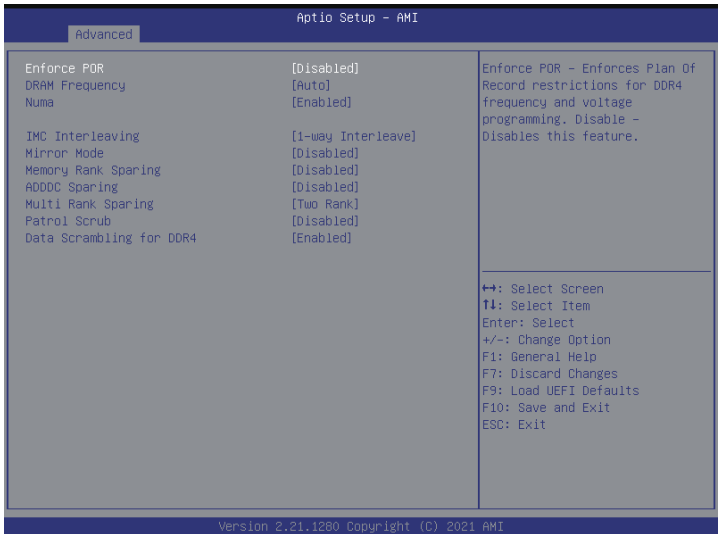

Enforce POR

Enforce POR - Enforces Plan Of Record restrictions for DDR4 frequency and voltage programming.
Disable - Disables this feature.

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assign the appropriate frequency automatically.

Numa

Use this item to enable or disable Non Uniform Memory Access (NUMA).

IMC Interleaving

Select to configure IMC Interleaving settings.

Mirror Mode

Mirror Mode will set entire 1LM/2LM memory in system to be mirrored, consequently reducing the memory capacity by half. Mirror Enable will disable XPT Prefetch.

Memory Rank Sparing

Enable or disable Memory Rank Sparing.

ADDDC Sparing

Enable or disable ADDDC Sparing.

Multi Rank Sparing

Set Multi Rank Sparing number. Default and the maximum is 2 ranks per channel.

Patrol Scrub

Patrol Scrub is a background activity initiated by the processor to seek out and fix memory errors. The default value is [Enabled].


Data Scrambling for DDR4

Enable - Enables data scrambling for DDR4.

Disable - Disables this feature.

Auto - Sets it to the MRC default setting; current default is Enable.

3.3.3 Chipset Configuration

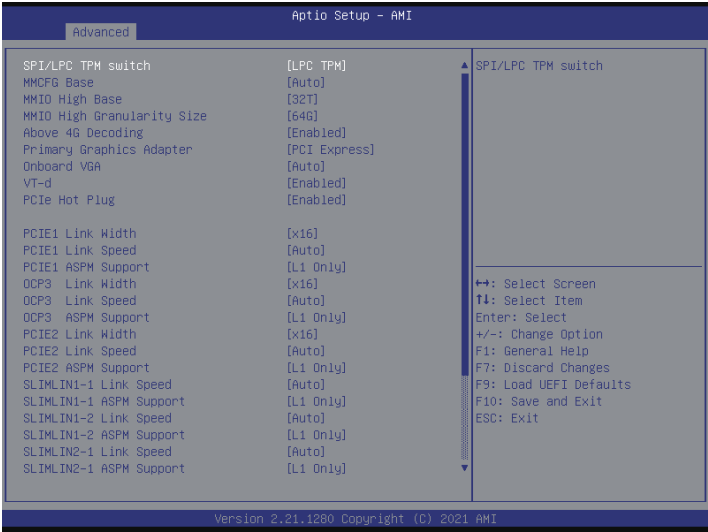

SPI/LPC TPM switch

Use this item to select SPI/LPC TPM switch.

MMCFG Base

Use this item to select MMCFG Base.

MMIO High Base

Use this item to select MMIO High Base.

MMIO High Granularity Size

Use this item to select the allocation size used to assign mmioh resources. Total mmioh space can be up to 32x granularity. Per stack mmioh resource assignments are multiples of the granularity where 1 unit per stack is the default allocation.

Above 4G Decoding

Enable or disable 64bit capable Devices to be decoded in Above 4G Address Space (only if the system supports 64 bit PCI decoding).

Primary Graphics Adapter

If PCI Express graphics card is installed on the motherboard, you may use this option to select PCI Express or Onboard VGA as the primary graphics adapter.

**If no PCI Express graphics card is installed, [Onboard VGA] is the default graphics adapter. There is no screen*

on monitor even if a HDMI display is connected. Select [Onboard Hdm] instead to use HDMI as output source.

Onboard VGA

Use this to enable or disable the Onboard VGA function. The default value is [Auto].

**This item is not available when the Primary Graphic Adapter is set to [Onboard VGA].*

VT-d

Intel(R) Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

PCIe Hot Plug

Use this item to enable or disable PCIe Hot Plug globally.

PCIe1 Link Width

This allows you to select PCIe1 Link Width. The default value is [x16].

PCIe1 Link Speed

This allows you to select PCIe Link Speed. The default value is [Auto].

PCIe1 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

OCP3 Link Width

This allows you to select OCP3 Link Width. The default value is [x16].

OCP3 Link Speed

This allows you to select PCIe Link Speed. The default value is [Auto].

OCP3 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

PCIe2 Link Width

This allows you to select PCIe2 Link Width. The default value is [x16].

PCIe2 Link Speed

This allows you to select PCIe Link Speed. The default value is [Auto].

PCIe2 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

SLIMLIN1-1 Link Speed

This allows you to select PCIE Link Speed. The default value is [Auto].

SLIMLIN1-1 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

SLIMLIN1-2 Link Speed

This allows you to select PCIE Link Speed. The default value is [Auto].

SLIMLIN1-2 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

SLIMLIN2-1 Link Speed

This allows you to select PCIE Link Speed. The default value is [Auto].

SLIMLIN2-1 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

SLIMLIN2-2 Link Speed

This allows you to select PCIE Link Speed. The default value is [Auto].

SLIMLIN2-2 ASPM Support

This option enables or disables the ASPM support for all CPU downstream devices.

OCU1 Reverse Switch

This allows you to configure OCU lanes reverse switch.

OCU2 Reverse Switch

This allows you to configure OCU lanes reverse switch.

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.

Restore AC Power Loss

This allows you to set the power state after a power failure. If [Power Off] is selected, the power will remain off when the power recovers. If [Power On] is selected, the system will start to boot up when the power recovers.

3.3.4 Storage Configuration



SATA Controller

Use this item to enable or disable SATA Controllers.

SATA/M.2_SATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

SATA ALPM

Use this item to enable or disable Support Aggressive Link Power Management.

M2_2(SATA)/SATA_4/SATA_5/SATA_6/SATA_7

Depending on how many SATA ports you have, you will see SATA_x (x means number) listed on the screen, with its status indicated as SATA device [(Model Name)] or [Not Detected].

sSATA Controller

Use this item to enable or disable SATA Controllers.

sSATA/M.2_SATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

sSATA ALPM

Use this item to enable or disable Support Aggressive Link Power Management.

sSATA_0/M2_1(SATA)/sSATA_1/sSATA_2/sSATA_3/sSATA_4/sSATA_5/
M2_1(PCIE)/M2_2(PCIE)

Depending on how many SATA ports you have, you will see SATA_x (x means number) listed on the screen, with its status indicated as SATA device [(Model Name)] or [Not Detected].

3.3.5 ACPI Configuration



PCIE Devices Power On

Allow the system to be waked up by a PCIE device and enable wake on LAN.

Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

RTC Alarm Power On

Allow the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.


3.3.6 USB Configuration



Legacy USB Support

Enable or disable Legacy OS Support for USB 2.0 devices. If you encounter USB compatibility issues it is recommended to disable legacy USB support.
Select UEFI Setup Only to support USB devices under the UEFI setup and Windows/Linux operating systems only.

3.3.7 Super IO Configuration

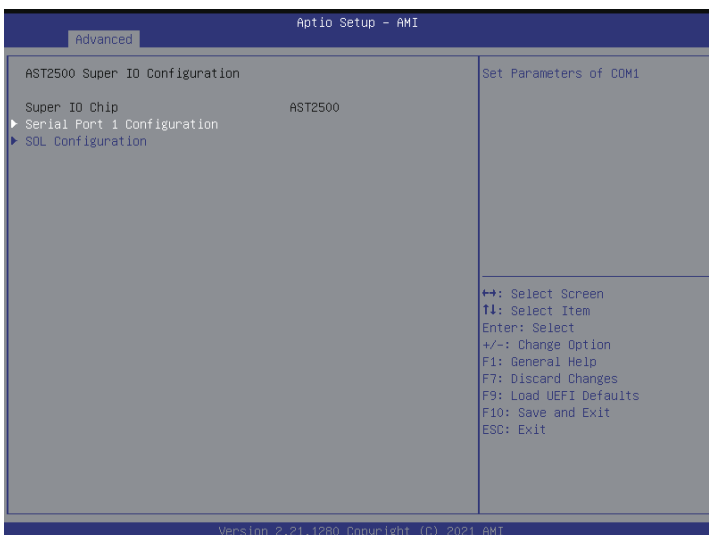

Serial Port 1 Configuration

Use this item to set parameters of SOL.

Serial Port 1 Port

Use this item to enable or disable SOL port.

Change Settings

Use this item to select an optimal setting for Super IO device.

SOL Configuration

Use this item to set parameters of SOL.

SOL Port

Use this item to enable or disable SOL port.

Change Settings

Use this item to select an optimal setting for Super IO device.

3.3.8 Serial Port Console Redirection



COM1/SOL

Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information. Both computers should have the same or compatible settings.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [38400], [57600] and [115200].

Data Bits

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

Parity

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space]. A parity bit can be sent with the data bits to detect some transmission errors. Mark and Space Parity do not allow for error detection. They can be used as an additional data bit.

Even: parity bit is 0 if the num of 1's in the data bits is even.

Odd: parity bit is 0 if num of 1's in the data bits is odd.

Mark: parity bit is always 1.

Space: Parity bit is always 0.

Stop Bits

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

Recorder Mode

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

Resolution 100x31

Use this item to enable or disable extended terminal resolution support.

Putty Keypad

Use this item to select Function Key and Keypad on Putty.

Legacy Console Redirection

Legacy Console Redirection Settings

Use this option to configure Legacy Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

Redirection COM Port

Use this item to select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

Resolution

On Legacy OS, the Number of Rows and Columns supported redirection.

Redirection After POST

If the [Bootloader] is selected, legacy console redirection is disabled before booting to legacy OS. If [Always Enable] is selected, legacy console redirection is enabled for legacy OS. The default value is [Always Enable].

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].


Data Bits

Parity

Stop Bits

3.3.9 H/W Monitor


In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

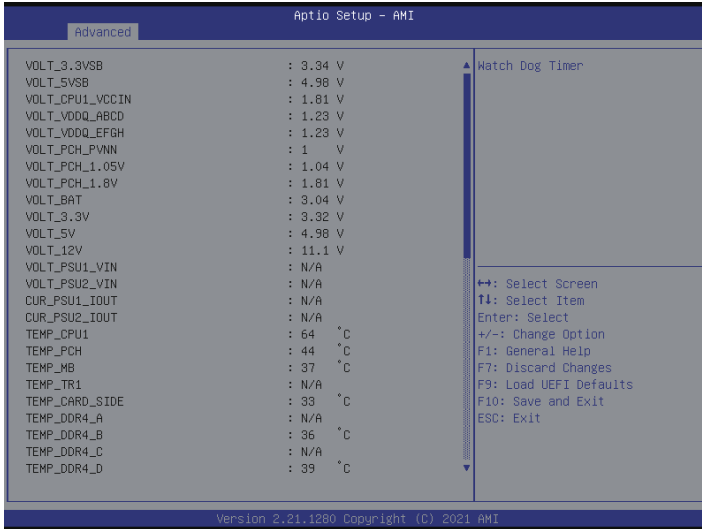

Watch Dog Timer

This allows you to enable or disable the Watch Dog Timer. The default value is [Disabled].

3.3.10 Runtime Error Logging

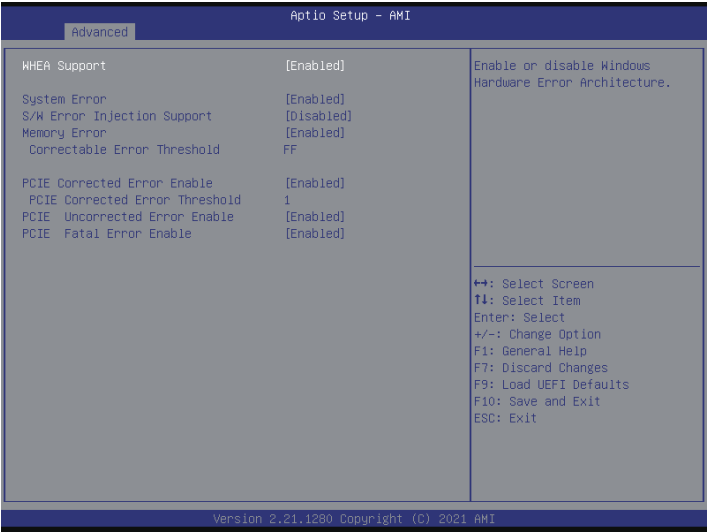

WHEA Support

Use this item to enable or disable Windows Hardware Error Architecture.

System Error

Use this item to enable or disable System Error feature. When it is set to [Enabled], you can configure Memory Error and PCIe Error log features.

S/W Error Injection Support

When it is set to [Enabled], S/W Error Injection is supported by unlocking MSR Ox790.

Memory Error

Memory enabling and logging setup option.

Correctable Error Threshold

Correctable Error Threshold (0 - 0x7FFF) used for sparing, tagging, and leaky bucket.

PCIe Corrected Error Enable

Use this item to enable or disable PCIe Correctable errors.

PCIe Corrected Error Threshold

PCIe Correctable Error Threshold (0x01-0xFF) used for sparing, tagging, and leaky bucket.


PCIe Uncorrected Error Enable

Use this item to enable or disable PCIe Uncorrectable errors.

PCIe Fatal Error Enable


Use this item to enable or disable PCIe Fatal errors.

3.3.11 Intel SPS Configuration

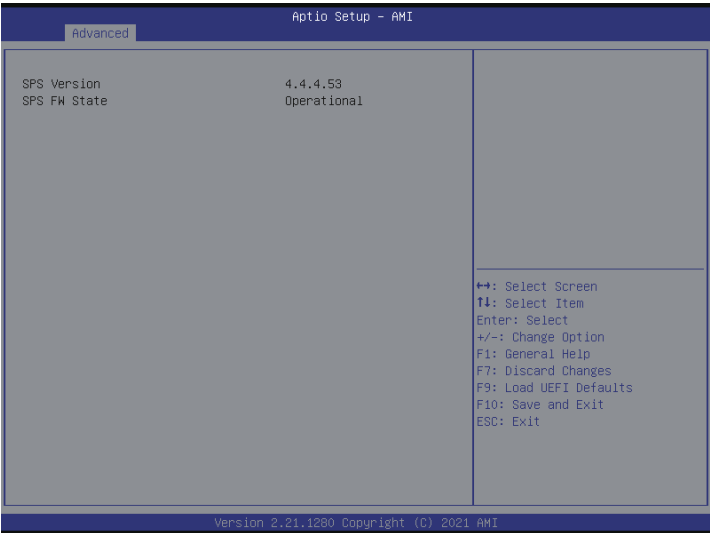

SPS screen displays the Intel SPS Configuration information, such as Operational Firmware Version and Firmware State.

3.3.12 Intel(R) VMD Technology

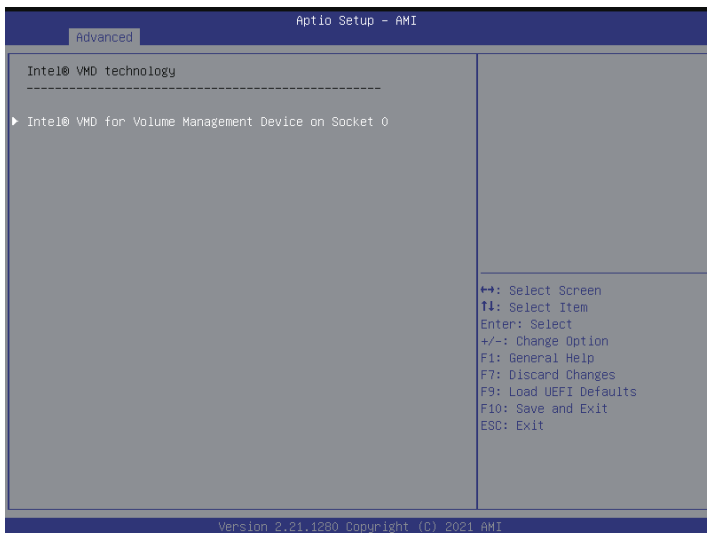

Intel(R) VMD for Volume Management Device on Socket 0

Intel(R) VMD for Volume Management Device Technology

Use this item to enable or disable Intel(R) Volume Management Device Technology in this Stack.

When [Enabled], users are allowed to configure the options below.

VMD port 1A

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

VMD port 1B

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

VMD port 1C

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

VMD port 1D

Use this item to enable or disable Intel(R) Volume Management Device Technology on

specific root port.

Hot Plug Capable

Use this item to enable or disable Hot Plug for PCIe Root Ports 1A-1D.

Intel(R) VMD for Volume Management Device Technology

Use this item to enable or disable Intel(R) Volume Management Device Technology in this Stack.

When [Enabled], users are allowed to configure the options below.

VMD port 3A

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

VMD port 3B

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

VMD port 3C

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.


VMD port 3D

Use this item to enable or disable Intel(R) Volume Management Device Technology on specific root port.

Hot Plug Capable

Use this item to enable or disable Hot Plug for PCIe Root Ports 3A-3D.

3.3.13 Tls Auth Configuratio

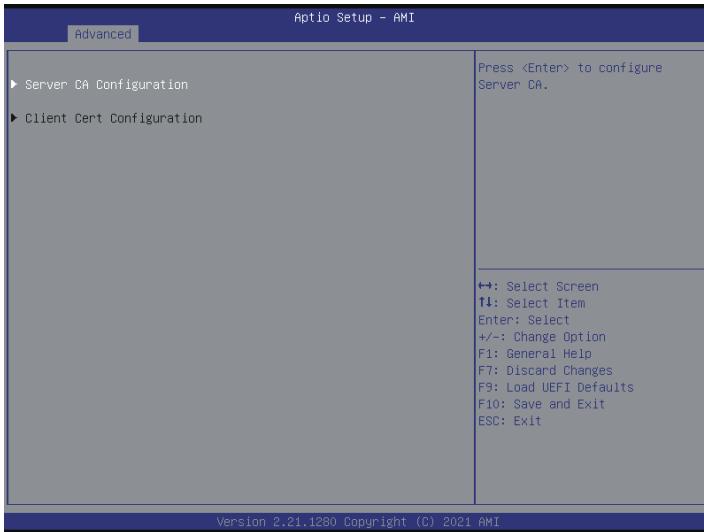

Server CA Configuration

Press <Enter> to configure Server CA.

Client Cert Configuration

Enroll Cert

Press <Enter> to enroll cert.

Delete Cert


Press <Enter> to delete cert.

3.3.14 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows[®]. Just save the new UEFI file to your USB flash drive, floppy disk or hard drive and launch this tool, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after the UEFI update process is completed.

3.4 Security

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

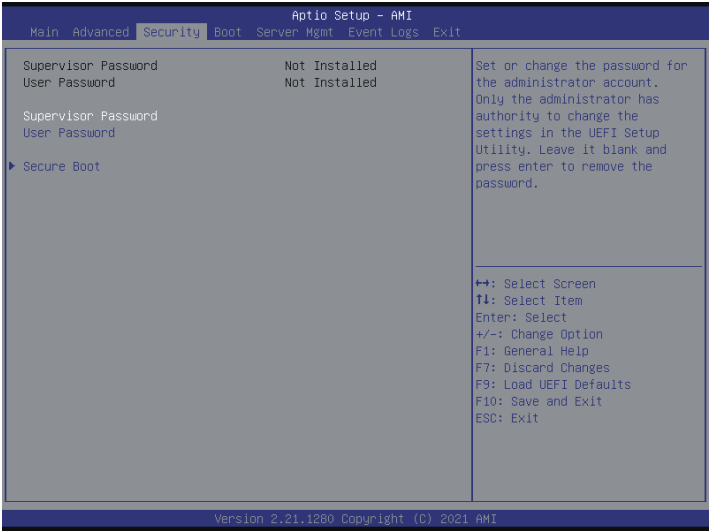

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot


Use this to enable or disable Secure Boot Control. The default value is [Disabled]. Enable to support Windows Server 2012 R2 or later versions Secure Boot.

Secure Boot Mode

Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

3.4.1 Key Management

In this section, expert users can modify Secure Boot Policy variables without full authentication.

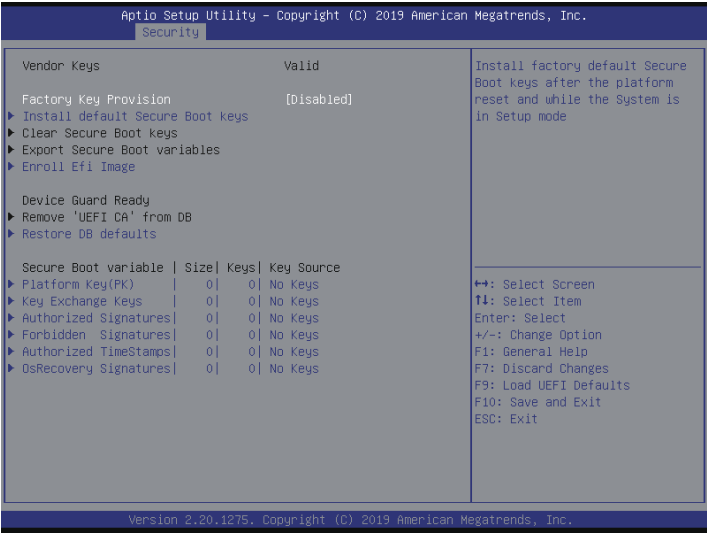

Factory Key Provision

Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time you use secure boot.

Clear Secure Boot keys

Force System to Setup Mode - clear all Secure Boot Variables. Change takes effect after reboot.

Export Secure Boot variables

Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.

Enroll Efi Image

Allow the image to run in Secure Boot mode. Enroll SHA256 Hash certificate of a PE image into Authorized Signature Database (db).

Remove 'UEFI CA' from DB

Device Guard ready system must not list 'Microsoft UEFI CA' Certificate in Authorized Signature database (db).

Restore DB Defaults

Restore DB variable to factory defaults.

Platform Key(PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

Key Exchange Keys

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

Authorized Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

Forbidden Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

Authorized TimeStamps

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

OsRecovery Signatures

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER encoded)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHA256, 384, 512


2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Default, External, Mixed, Test

3.5 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

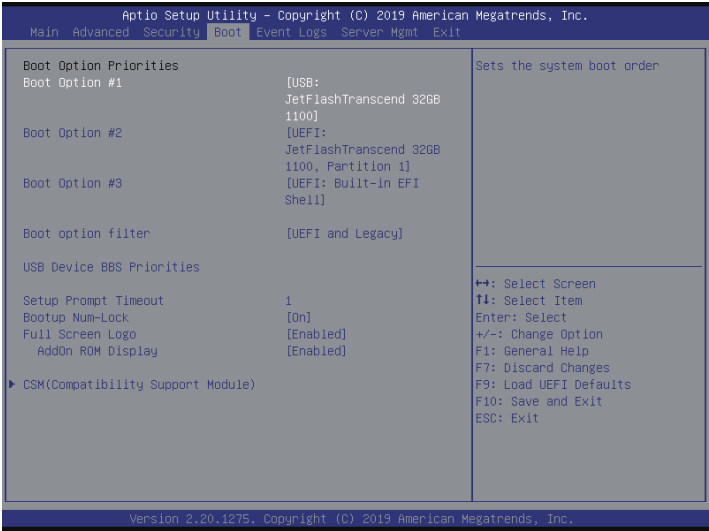

Boot Option #1

Use this item to set the system boot order.

Boot Option #2

Use this item to set the system boot order.

Boot Option #3

Use this item to set the system boot order.

Boot Option Filter

This option controls Legacy/UEFI ROMs priority.

USB Device BBS Priorities

This page will show only when system install USB Storage.

Setup Prompt Timeout

Configure the number of seconds to wait for the UEFI setup utility.

Bootup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.


Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Enabled].

AddOn ROM Display

Use this option to adjust AddOn ROM Display. If you enable the option “Full Screen Logo” but you want to see the AddOn ROM information when the system boots, please select [Enabled]. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled].

3.5.1 CSM Parameters

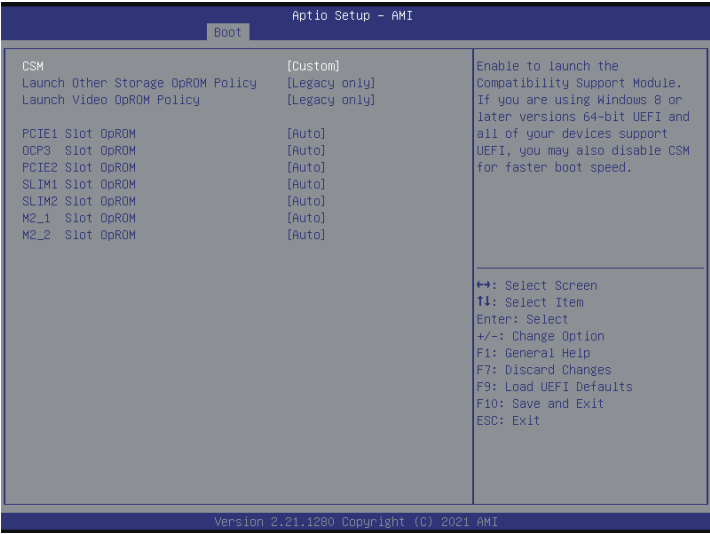

CSM

Enable to launch the Compatibility Support Module. Please do not disable unless you're running a WHCK test. If you are using Windows Server 2012 R2 or later versions 64-bit UEFI and all of your devices support UEFI, you may also disable CSM for faster boot speed.

Launch Other Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

Launch Video OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

PCIE1 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

OCP3 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

PCIE2 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

SLIM1 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

SLIM2 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

M2_1 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

M2_2 Slot OpROM

Use this item to select slot storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

3.6 Server Mgmt



Wait For BMC

Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 90 seconds to initialize Host to BMC interfaces.

Inventory Support

This will execute inventory function for system. Enabling this item will take some time at system boot.

3.6.1 System Event Log



SEL Components

Change this to enable or disable all features of System Event Logging during boot.

Erase SEL

Use this to choose options for erasing SEL.

When SEL is Full

Use this to choose options for reactions to a full SEL.


Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress code or both.

PCIe Device Degrade ELog Support

Use this item to enable or disable PCIe Device Degrade Error Logging Support.

3.6.2 BMC Network Configuration

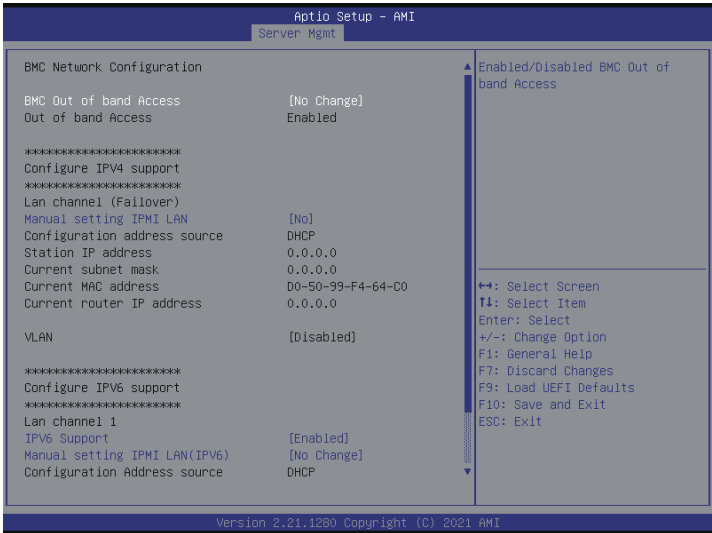

BMC Out of Band Access

Enabled/Disabled BMC Out of band Access.

Lan Channel (Failover)

Manual Setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If you prefer using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

Configuration Address Source

Select to configure BMC network parameters statically or dynamically (by BIOS or BMC). Configuration options: [Static] and [DHCP].

Static: Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

DHCP: IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



When [DHCP] or [Static] is selected, do NOT modify the BMC network settings on the IPMI web page.



The default login information for the IPMI web interface is:

Username: admin

Password: admin

For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/ipmi.asp>

VLAN

Enabled/Disabled Virtual Local Area Network.

IPv6 Support

Enabled/Disable LAN1 IPv6 Support.

Manual Setting IPMI LAN(IPV6)


Select to configure LAN channel parameters statically or dynamically(by BIOS or BMC).

Unspecified option will not modify any BMC network parameters during BIOS phase.

IPv6 Index

IPv6 Index - Set Selector for Static IP, range 0 to 15.

3.6.3 BMC Tools

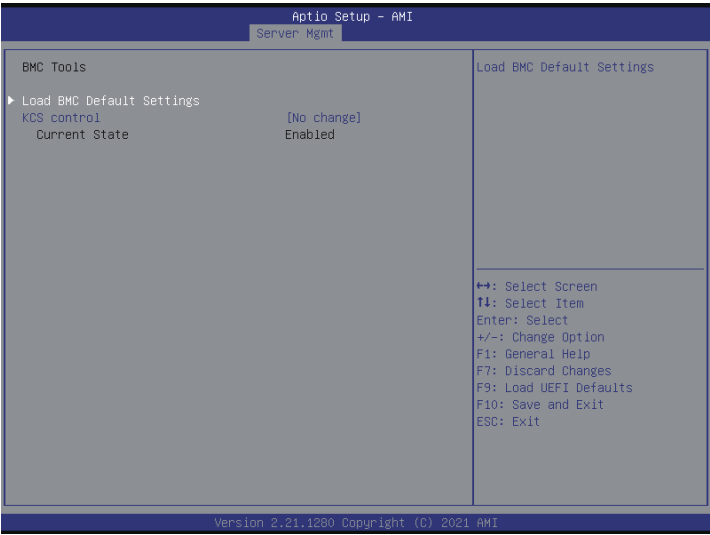

Load BMC Default Settings

Use this item to Load BMC Default Settings

KCS Control

Select this KCS interface state after POST end. If [Enabled] us selected, the BMC will remain KCS interface after POST stage. If [Disabled] is selected, the BMC will disable KCS interface after POST stage

3.7 Event Logs



Change Smbios Event Log Settings

This allows you to configure the Smbios Event Log Settings.

When entering the item, you will see the followings:

Smbios Event Log

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

Erase Event Log

The options include [No], [Yes, Next reset] and [Yes, Every reset]. If Yes is selected, all logged events will be erased.

When Log is Full

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

Log System Boot Event

Choose option to enable/disable logging of System boot event.


View Smbios Event Log

Press <Enter> to view the Smbios Event Log records.



All values changed here do not take effect until computer is restarted.

3.8 Exit Screen

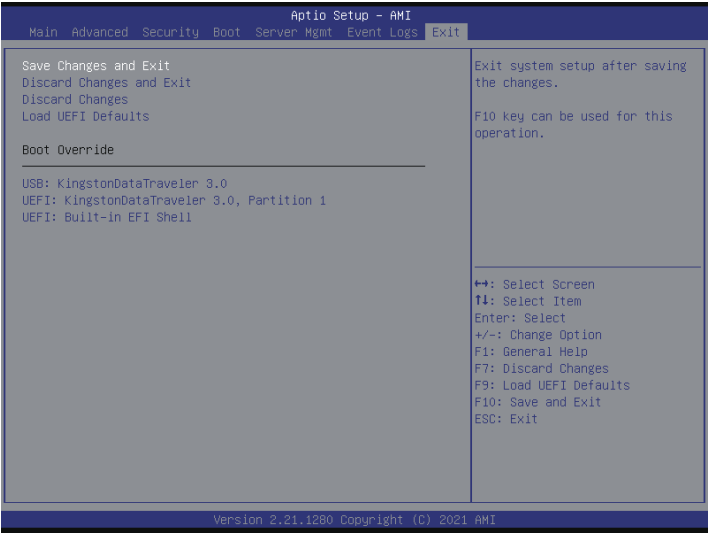

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop-out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Boot Override

These items displays the available devices. Select an item to start booting from the selected device.

Chapter 4 Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® Server / Linux compliant. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

**Please download the Intel® SATA Floppy Image driver from the ASRock Rack's website (www.asrockrack.com) to your USB drive or simply install the SATA driver from the Support CD while installing OS in SATA RAID mode.*

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard's features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double click on the file "ASRSetup.exe" from the root folder in the Support CD to display the menu.

4.2.2 Drivers Menu

The Drivers Menu shows the available device's drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the application softwares that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or you may contact your dealer for further information.

Chapter 5 Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot your system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries to you and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard.
Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR4 RDIMM/RDIMM-3DS/LRDIMM/LRDIMM-3DS.
3. If you have installed more than one DIMM modules, they should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether your power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to your problem on ASRock Rack's FAQ page:
<http://www.asrockrack.com/support>

5.2 Technical Support Procedures

If you have tried the troubleshooting procedures mentioned above and the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Your contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

You may contact ASRock Rack's technical support at:
<http://www.asrockrack.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of your invoice marked with the date of purchase is required. By calling your vendor or going to our RMA website (<http://event.asrockrack.com/tsd.asp>) you may obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when you return the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact your distributor first for any product related problems during the warranty period.