



OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

TURIND8HM3

User Manual

English



Version 1.30

Published Mar. 2026

Copyright©2026 ASRock Rack INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRock Rack Tel : +886-2-55599600 ext.123 (Standard International call charges apply)



WARNING

THIS PRODUCT CONTAINS A BUTTON BATTERY

If swallowed, a button battery can cause serious injury or death.

Please keep batteries out of sight or reach of children.

ASRock Rack's Website: www.ASRockRack.com



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related UKCA Directives. Full text of UKCA declaration of conformity is available at: <http://www.asrockrack.com>



ASRock Rack INC. hereby declares that this device is in compliance with the essential requirements and other relevant provisions of related Directives. Full text of EU declaration of conformity is available at: <http://www.asrockrack.com>

ASRock Rack follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRock Rack product is in line with global environmental regulations. In addition, ASRock Rack disclose the relevant information based on regulation requirements.

Please refer to <https://www.asrockrack.com/general/about.asp?cat=Responsibility> for information disclosure based on regulation requirements ASRock Rack is complied with.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	5
1.4 Motherboard Layout	6
1.5 Onboard LED Indicators	9
1.6 I/O Panel	11
1.7 Block Diagram	12
Chapter 2 Installation	13
2.1 Screw Holes	13
2.2 Pre-installation Precautions	13
2.3 Installing the CPU	14
2.4 Installing the Memory Modules (DIMM)	19
2.5 Expansion Slots (PCI Express Slots)	21
2.6 Onboard Headers and Connectors	22
2.7 Unit Identification purpose LED/Switch	36
2.8 Dr. Debug	37
2.9 M.2 SSD Module Installation Guide	43
Chapter 3 UEFI Setup Utility	45
3.1 Introduction	45
3.1.1 UEFI Menu Bar	45
3.1.2 Navigation Keys	46
3.2 Main Screen	47

3.2.1	Motherboard Information	48
3.2.2	Processor Information	48
3.2.3	Memory Information	49
3.3	Advanced Screen	50
3.3.1	CPU Configuration	51
3.3.2	Chipset Configuration	52
3.3.3	Storage Configuration	55
3.3.4	NVMe Configuration	56
3.3.5	ACPI Configuration	57
3.3.6	USB Configuration	58
3.3.7	Super IO Configuration	59
3.3.8	Serial Port Console Redirection	60
3.3.9	H/W Monitor	63
3.3.10	PCI Subsystem Settings	64
3.3.11	AMD CBS	65
3.3.12	AMD PBS	66
3.3.13	PSP Firmware Versions	68
3.3.14	Network Stack Configuration	69
3.3.15	Tls Auth Configuration	71
3.3.16	Instant Flash	72
3.4	Server Mgmt	73
3.4.1	BMC Network Configuration	75
3.4.2	DNS Configuration	77
3.4.3	System Event Log	79

3.4.4	BMC Tools	80
3.5	Event Logs	81
3.6	Security	82
3.6.1	Key Management	84
3.7	Boot Screen	88
3.8	Exit Screen	90
Chapter 4 Software Support		91
4.1	Download and Install Operating System	91
4.2	Download and Install Software Drivers	91
Chapter 5 Troubleshooting		92
5.1	Troubleshooting Procedures	92
5.2	Technical Support Procedures	94
5.3	Returning Merchandise for Service	94
Contact Information		95

Chapter 1 Introduction

Thank you for purchasing ASRock Rack **TURIND8HM3** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the software support.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. Find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: www.ASRockRack.com

*Please visit the website for technical support and specific information :
<http://www.asrockrack.com/support/>*

1.1 Package Contents

- ASRock Rack TURIND8HM3 motherboard
(Half form factor: 17" x 6.6", 43.2 cm x 16.8 cm)
- Quick installation guide
- 2 Screws for M.2 sockets
- 1 Mini-DP to D-SUB cable (10 cm)



If any items are missing or appear damaged, contact the authorized dealer.

1.2 Specifications

TURIND8HM3	
Physical Status	
Form Factor	Half-Width
Dimension	6.6" x 17" (16.8 cm x 43.2 cm)
Processor System	
CPU	Supports AMD EPYC™ 9005 / 9004 (with AMD 3D V-Cache™ Technology) and 97x4 series processors
Socket	1 Socket SP5 (LGA 6096)
Thermal Design Power (TDP)	Up to 400W
Chipset	System on Chip
System Memory	
Capacity	8 DIMM slots (1DPC)
Type	Supports DDR5 288-pin RDIMM, RDIMM 3DS
Max. Capacity per DIMM	RDIMM: 128GB (2Rx4) RDIMM 3DS: 256GB (2Rx4)
Max. DIMM Frequency	6400MHz
Voltage	1.1V
<i>Note: Memory capacity, frequency and voltage support is to be validated.</i>	
PCIe Expansion Slots (SLOT7 close to CPU)	
PCIe x8	SLOT3: Slim cool edge (PCIe 5.0 x8)
PCIe x16	SLOT2: Slim cool edge (PCIe 5.0 x16)
	SLOT1: Slim cool edge (PCIe 5.0 x16)
Other PCIe Expansion Connectors	
M.2	2 M-key (PCIe 5.0 x4 or SATA 6 Gb/s), supports 22110 / 2280 form factor
MCIO	2 MCIO* (PCIe 5.0 x8 or 8 SATA 6 Gb/s) 6 MCIO (PCIe 5.0 x8) <i>*Please consult with ASRock Rack team for supporting SATA interface.</i>
SATA/SAS Storage	
PCH Built-in Storage	AMD EPYC 9005 / 9004 (18 SATA 6 Gb/s): 2 MCIO, 2 M.2
Additional SATA Controller	ASM1061 (2 SATA 6 Gb/s): 1 OCuLink
Ethernet	
OCP Slot	1 OCP NIC 3.0 (PCIe 5.0 x16)
Server Management	
BMC Controller	ASPEED AST2600
Dedicated IPMI LAN	1 Realtek RTL8211F for dedicated management LAN
Graphics	
Controller	ASPEED AST2600
VRAM	DDR4 512 MB

Rear I/O	
UID Button/ LED	1 UID button w/LED
Video Port	1 Mini-DP (VGA, adapter cable required) <i>*The Mini Display Port provides VGA analog output. To connect to a D-Sub (VGA) display, an adapter cable is required. Please contact ASRock Rack for cable availability.</i>
USB Port	2 Type-A (USB 3.2 Gen1)
LAN Port	1 dedicated IPMI
Internal Connectors/Headers	
Power Connector	3 (8-pin, ATX 12V), 1 (19-pin, CM Board Standby Power 12V)
Other Power Connector	1 (6-pin) for HDD power
Auxiliary Panel Header	1 (18-pin): chassis intrusion, system fault LED, locate, SMBus 1 (9-pin): chassis intrusion, system fault LED, LAN activity LED
System Panel Header	1 (9-pin) power switch, reset switch, system power LED, HDD activity LED
NMI Header	1
COM Header	1
VGA Header	1
Speaker Header	1 (4-pin)
Fan Header	8 (6-pin)
Thermal Sensor Header	1
TPM Header	1 (13-pin, SPI)
HSBP	1
SGPIO Header	3
SMBus Header	1
PMbus Header	1
IPMB Header	1
USB Header	1 (19-pin, 2 USB 3.2 Gen1)
Clear CMOS	1 (contact pads)
Others	1 IPMI LAN LED header, 1 Front Panel Board header
LED Indicators	
Standby Power LED	1 (5VSB)
80 Debug Port LED	1
Fan Fail LED	8
BMC Heartbeat LED	1

System BIOS	
Type	AMI UEFI BIOS; 256 Mb (32 MB) SPI Flash ROM
Features	ASRock Rack Instant Flash, ACPI 6.4 (and above) compliance wake-up events, SMBIOS 3.5.0 and above, Plug and Play(PnP)
Hardware Monitor	
Temperature	CPU, MB, Card side, TR temperature sensing
Fan	Fan tachometer Quiet fan (allow chassis fan speed auto-adjust by CPU temperature) Fan multi-speed control
Voltage	VDDCR_CPU, VDDCR_SOC, VDDIO, VDD_18_S5, VDD_33_S5, VDD_11_S3, +3V, +5V, +12V, +BAT, +1V8SB, 3VSB, 5VSB
Support OS	
OS	Microsoft® Windows: (for EPYC 9004) - Server 2019 (64 bit) - Server 2022 (64 bit) Microsoft® Windows: (for EPYC 9005) - Server 2019 (64 bit) - Server 2022 (64 bit) - Server 2025 (64 bit) Linux: (for EPYC 9004) - RedHat Enterprise Linux Server 8.6 (64 bit) / Server 8.7 (64 bit) / Server 9.0 (64 bit) / Server 9.1 (64 bit) - SUSE SLES 15.4 (64 bit) - Ubuntu 20.04.5 (64 bit) / 22.04 (64 bit) / 22.10 (64 bit) Linux: (for EPYC 9005) - RedHat Enterprise Linux Server 8.10 (64bit) / Server 9.4 (64 bit) - SUSE SLES 15.6 (64 bit) - Ubuntu 22.04.5 (64 bit) / 24.04.2 (64 bit) Hypervisor: (for EPYC 9004) - VMWare® ESXi 7.0 U3i / 8.0 - CITRIX Hypervisor 8.2.1 <i>*Please refer to the website for the latest OS support list.</i>
Environment	
Temperature	Operating temperature: 10°C ~ 35°C Non-operating temperature: -40°C ~ 70°C
Humidity	Non-operating humidity: 20% ~ 90% (non-condensing)

NOTE: Please refer to the website for the latest specifications.



This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.




If installing Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If installing the drivers only, it will pass the WHQL tests.

1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows user to update system BIOS without entering operating systems first like MS-DOS or Windows®. With this utility, press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to the USB flash drive, floppy disk or hard drive, then updating the BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

English

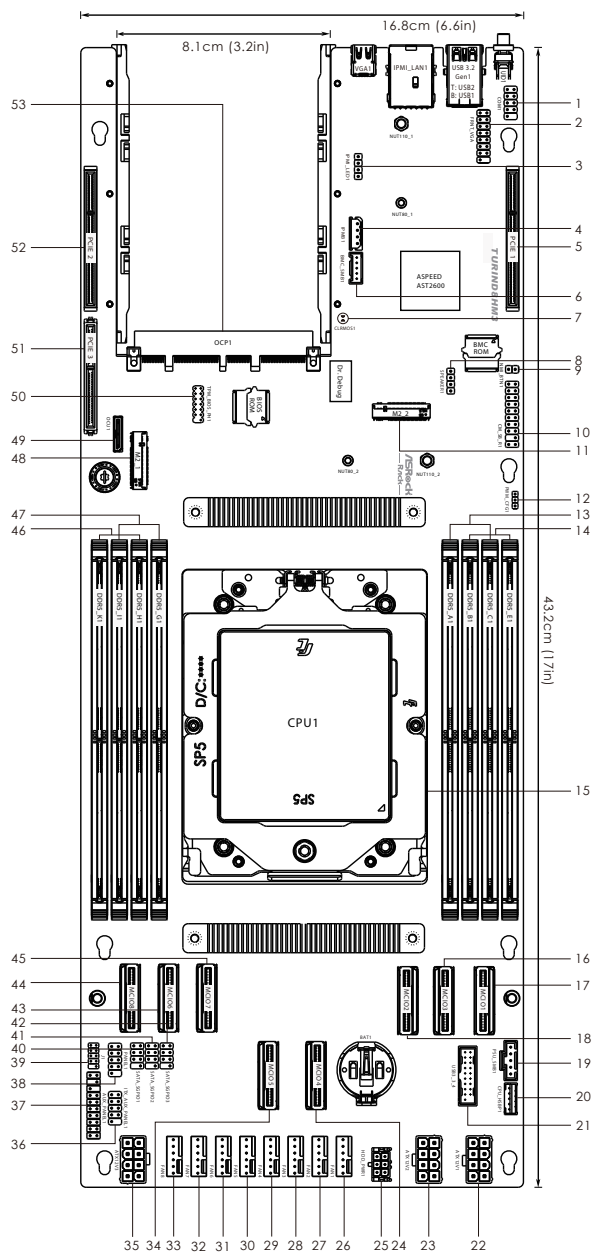


No.	Description
1	Serial Port Header (COM1)
2	Front VGA Header (FRNT_VGA)
3	IPMI LAN LED Header (IPMI_LED1)
4	Intelligent Platform Management Bus Header (IPMB1)
5	PCI Express 5.0 x16 Slot (PCIE1)
6	BMC SMBus Header (BMC_SMB1)
7	Clear CMOS Pad (CLRMOS1)
8	Speaker Header (SPEAKER1)
9	Non Maskable Interrupt Button (NMI_BTN1)
10	CM Board Standby Power Header (CM_SB_R1)
11	M.2 Socket (M2_2) (Type 2280 / 22110)
12	PWM Configuration Header (PWM_CFG1)
13	2 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_C1)*
14	2 x 288-pin DDR5 DIMM Slots (DDR5_B1, DDR5_E1)*
15	LGA 6096 CPU Socket (CPU1)
16	Mini Cool Edge IO Connector (MCIO3)
17	Mini Cool Edge IO Connector (MCIO1)
18	Mini Cool Edge IO Connector (MCIO2)
19	PSU SMBus Header (PSU_SMB1)
20	Backplane PCI Express Hot-Plug Connector (CPU1_HSBP1)
21	USB 3.2 Gen1 Header (USB3_3_4)
22	ATX 12V Power Connector (ATX12V1)
23	ATX 12V Power Connector (ATX12V2)
24	Mini Cool Edge IO Connector (MCIO4)
25	HDD Power Connector (HDD_PWR1)
26	System Fan Header (FAN1)
27	System Fan Header (FAN2)
28	System Fan Header (FAN3)
29	System Fan Header (FAN4)
30	System Fan Header (FAN5)
31	System Fan Header (FAN6)
32	System Fan Header (FAN7)
33	System Fan Header (FAN8)
34	Mini Cool Edge IO Connector (MCIO5)

No.	Description
35	ATX 12V Power Connector (ATX12V3)
36	ITX Auxiliary Panel Header (ITX_AUX_PANEL1)
37	Auxiliary Panel Header (AUX_PANEL1)
38	System Panel Header (PANEL1)
39	Front Panel Board Header (J1)
40	SATA SGPIO Connector (SATA_SGPIO1)
41	SATA SGPIO Connector (SATA_SGPIO2)
42	SATA SGPIO Connector (SATA_SGPIO3)
43	Mini Cool Edge IO Connector (MCIO6)
44	Mini Cool Edge IO Connector (MCIO8)
45	Mini Cool Edge IO Connector (MCIO7)
46	2 x 288-pin DDR5 DIMM Slots (DDR5_K1, DDR5_H1)*
47	2 x 288-pin DDR5 DIMM Slots (DDR5_I1, DDR5_G1)*
48	M.2 Socket (M2_1) (Type 2280 / 22110)
49	OCuLink Connector (2 SATA 6 Gb/s) (OCU1)
50	SPI TPM Header (TPM_BIOS_PH1)
51	PCI Express 5.0 x8 Slot (PCIE3)
52	PCI Express 5.0 x16 Slot (PCIE2)
53	OCP 3.0 Gen4 x16 Mezzanine Card Slot (OCP1)


**For DIMM installation and configuration instructions, please see p.19 (Installing the Memory Modules (DIMM)) for more details.*

1.5 Onboard LED Indicators

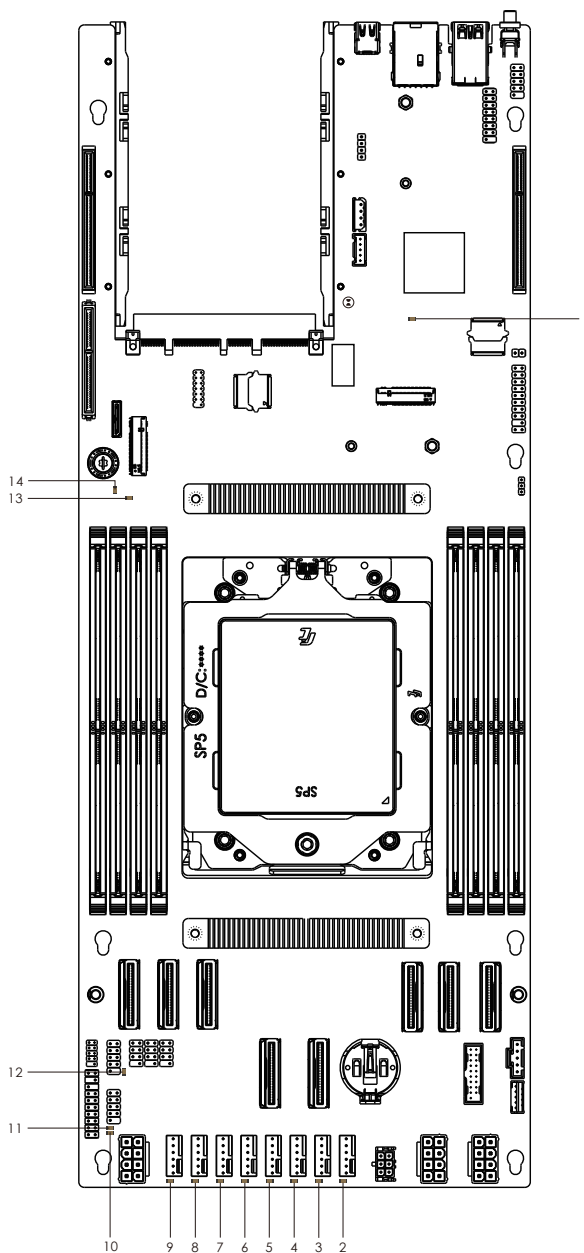

No.	Item	Status	Description
1	BMC_LED	Blinking four times and then off	Start initialization after AC power-on or BMC reset
		Blinking at 1Hz	BMC ready
		Steady on	Error
		Steady off Other frequency	(The actual behavior depends on the state at the time of failure)
2	FAN_LED1	Red	FAN1 failed
3	FAN_LED2	Red	FAN2 failed
4	FAN_LED3	Red	FAN3 failed
5	FAN_LED4	Red	FAN4 failed
6	FAN_LED5	Red	FAN5 failed
7	FAN_LED6	Red	FAN6 failed
8	FAN_LED7	Red	FAN7 failed
9	FAN_LED8	Red	FAN8 failed
10	SYS_LED1	Red	System Fault LED
11	SB_PWR1	Green	STB PWR ready
12	HDD_LED1	Green	HDD LED
13	SATA_LED1	Green	OCU1 SATA1 LED
14	SATA_LED2	Green	OCU1 SATA2 LED


1.6 I/O Panel

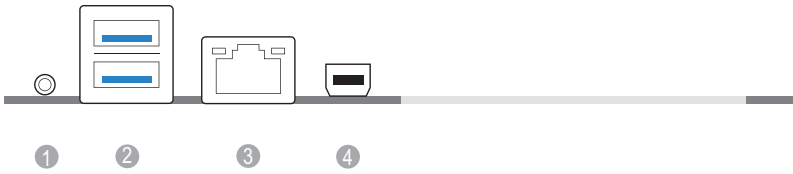

No.	Description	No.	Description
1	UID Switch (UID1)	3	LAN RJ-45 Port (IPMI_LAN1)*
2	USB 3.2 Gen1 Ports (USB3_1_2)	4	Mini DisplayPort (VGA1)

LAN Port LED Indications


*There is an LED on each side of IPMI LAN port. Please refer to the table below for the LAN port LED indications.

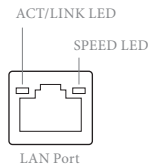

IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No link	Off	10M bps connection or no link
Blinking Yellow	Data activity	Yellow	100M bps connection
On	Link	Green	1Gbps connection

1.7 Block Diagram

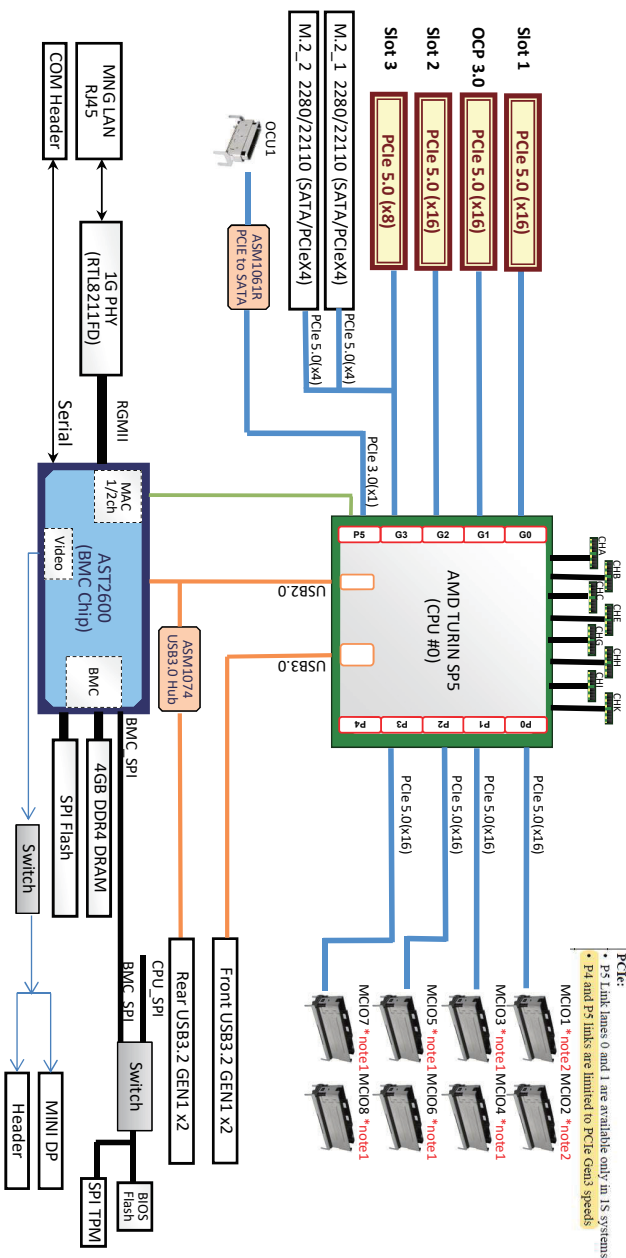

Chapter 2 Installation

This is a half form factor (17" x 6.6", 43.2 cm x 16.8 cm) motherboard. Before installing the motherboard, study the configuration of the chassis to ensure that the motherboard fits into it.



1. Ensure the motherboard battery is installed before unplugging the power cord or installing/removing the motherboard.
2. Before installing or removing any component, ensure that the power supply is off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions



Take note of the following precautions before installing motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place the motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before handling the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.


2.3 Installing the CPU




1. Before inserting the CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

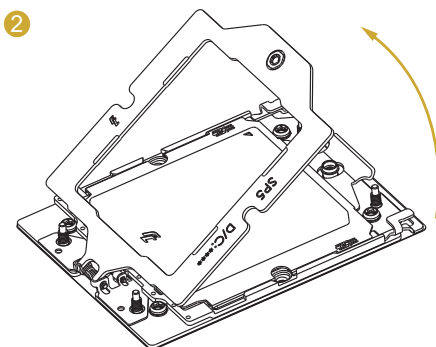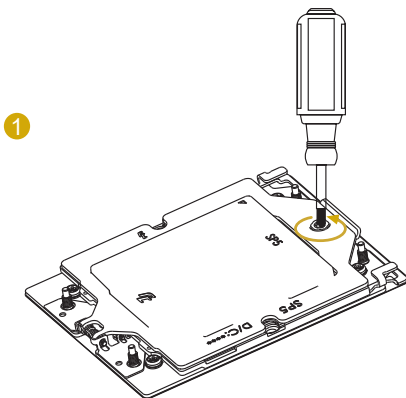


3

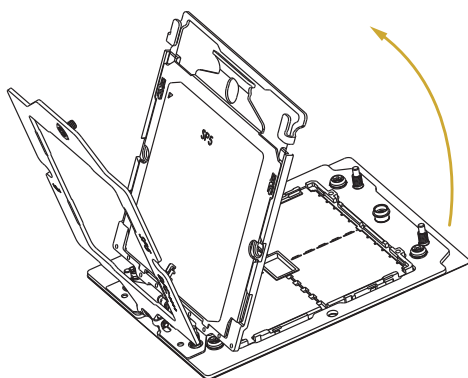


4

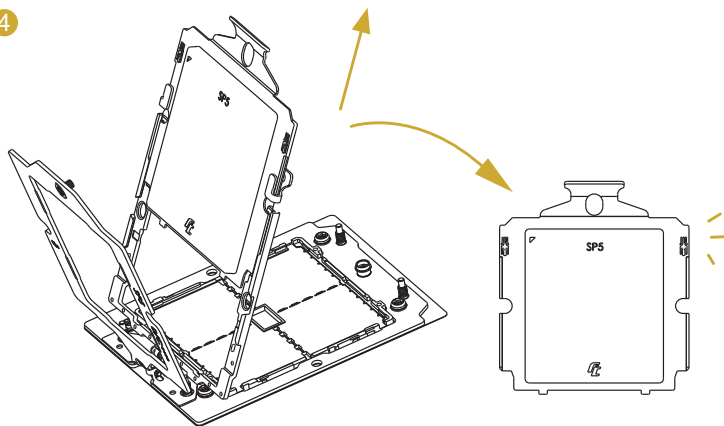

5

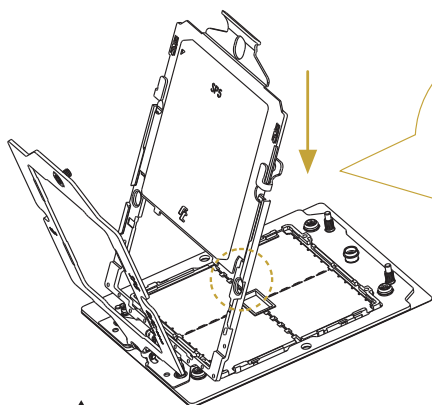

Carrier Frame with CPU

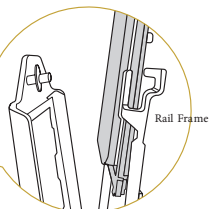


Rail Frame

Please make sure that the carrier frame with CPU is closely attached to the rail frame while inserting it.




Install the carrier frame with CPU. Don't separate them.


6


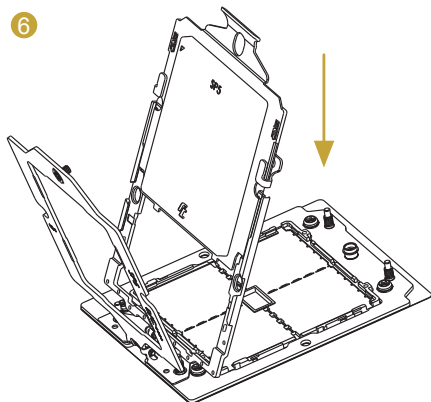


7

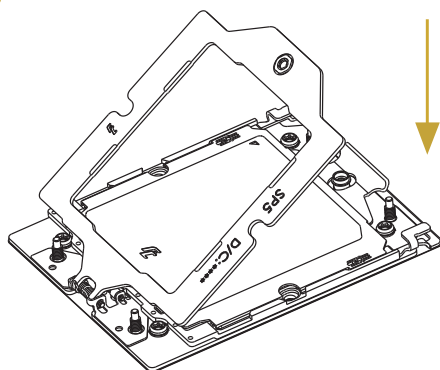

8

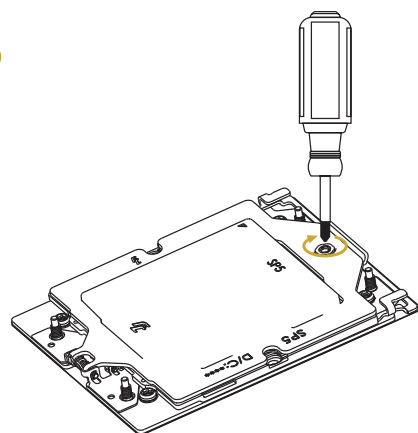

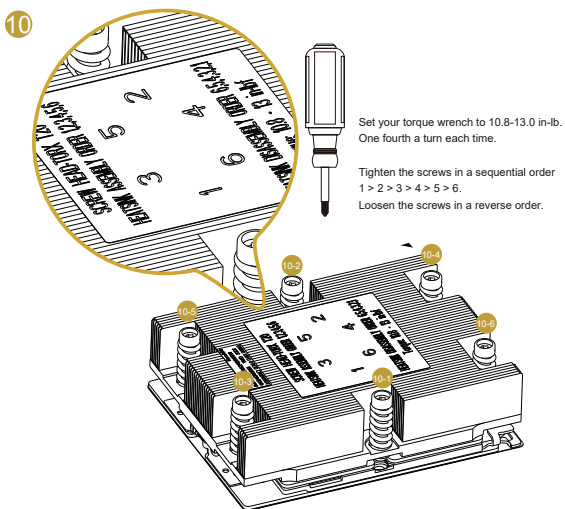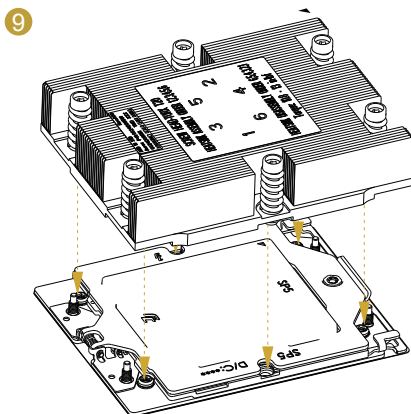

2.4 Installing the Memory Modules (DIMM)


This motherboard provides eight 288-pin DDR5 (Double Data Rate 5) DIMM slots in two groups, and supports Single Channel Memory Technology.

	CPU1							
	A1	B1	C1	E1	G1	H1	I1	K1
1 DIMM			#					
2 DIMMS			#	#				
4 DIMMS	#	#					#	#
8 DIMMS	#	#	#	#	#	#	#	#




- 1. It is not allowed to install a DDR, DDR2 or DDR3 memory module into a DDR4 slot; otherwise, this motherboard and DIMM may be damaged.
- 2. For dual channel configuration, it always needs to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.
- 3. It is unable to activate Dual Channel Memory Technology with only one or three memory module installed.
- 4. Some DDR5 1GB double-sided DIMMs with 16 chips may not work on this motherboard. It is not recommended to install them on this motherboard.


1

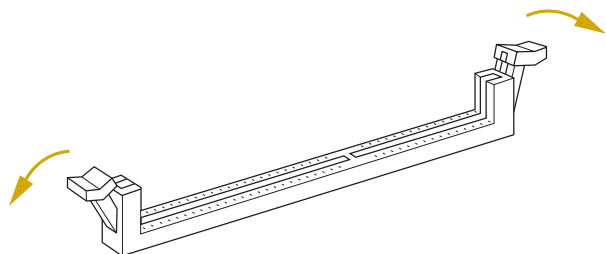

2

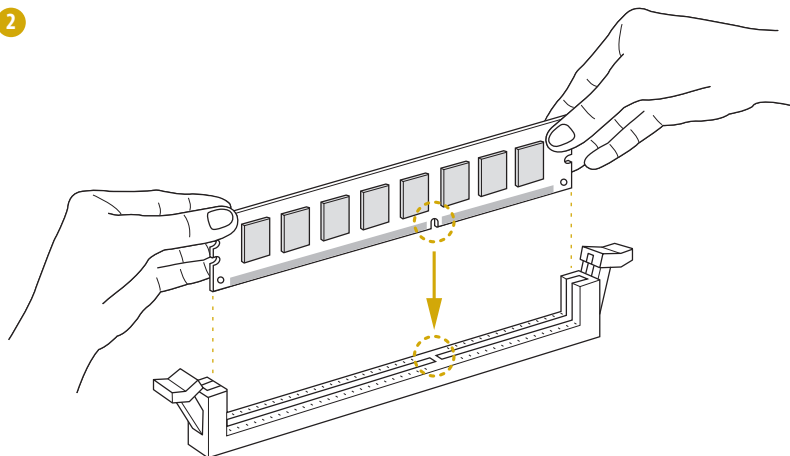

3

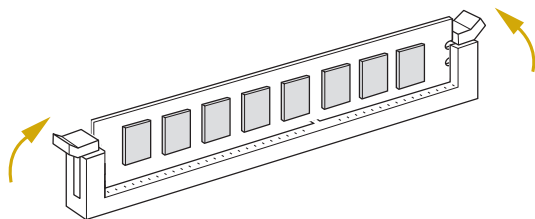

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if forcing the DIMM into the slot at incorrect orientation.

2.5 Expansion Slots (PCI Express Slots)

There are 3 PCI Express slots on this motherboard.

PCIe slots:

PCIE1 (PCIe 5.0 x16 slot, from CPU1) is used for PCI Express x16 lane width cards.

PCIE2 (PCIe 5.0 x16 slot, from CPU) is used for PCI Express x16 lane width cards.

PCIE3 (PCIe 5.0 x8 slot, from CPU) is used for PCI Express x8 lane width cards.

Slot	Generation	Mechanical	Electrical	Source
PCIE1	5.0	x16	x16	CPU1
PCIE2	5.0	x16	x16	CPU1
PCIE3	5.0	x8	x8	CPU1

Installing an expansion card:


- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before starting the installation.
- Step 2. Remove the system unit cover (if the motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that intending to use on the chassis.
Keep the screw for later use.
- Step 4. Install the PCIE card to the riser card.
- Step 5. Align the riser-card assembly connector with the slot on the system board.
Press firmly until the riser-card assembly is completely seated on the slot.
- Step 6. Fasten the card to the chassis with the screw.
- Step 7. Replace the system cover.

2.6 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header
(9-pin PANEL1)
(see p.6, No. 38)

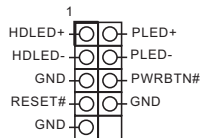

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



PWRBTN (Power Switch):
Connect to the power switch on the chassis front panel. Configure the way to turn off the system using the power switch.


RESET (Reset Switch):
Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):
Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):
Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting the chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Auxiliary Panel Header (18-pin AUX_PANEL1) (see p.6, No. 37)

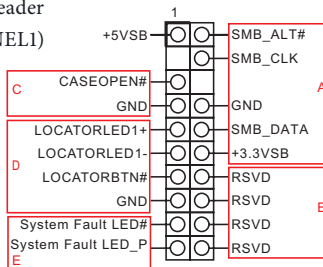

This header supports multiple functions on the front panel, including the front panel SMB, locator indicator, system status and chassis intrusion pin.



A. Front panel SMBus connecting pin (6-1 pin FPSMB)

This header allows user to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.

B. Reserved pin (4-pin RSVD)

These 4-pin are reserved for specified resource or device using.

C. Chassis intrusion pin (2-pin CHASSIS)

This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.

 
D. Locator LED (4-pin LOCATOR)

This header is for the locator switch and LED on the front panel.

E. System Fault LED (2-pin SYSTEM STATUS)


This header is for the Fault LED on the system.

ITX Auxiliary Panel Header (9-pin ITX_AUX_PANEL1) (see p.6, No. 36)




This header supports multiple functions on the front panel, including chassis intrusion, system fault LED, LAN activity LED.

Front Panel Board Header (9-pin J1) (see p.6, No. 39)

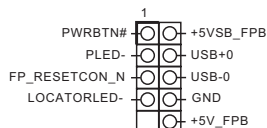

Connect this header to the Front Panel Board on the system.

Front VGA Header
(15-pin FRNT_VGA1)
(see p.6, No. 2)

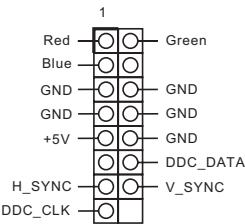


Please connect either end of VGA_2X8 cable to VGA header.

OCuLink Connector
(OCU1)
(see p.6, No. 49)




Please connect SATA SSDs to the connector.

USB 3.2 Gen1 Header
(19-pin USB3_3_4)
(see p.6, No. 21)

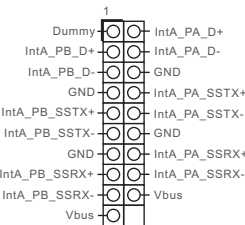


Besides two default USB 3.2 Gen1 ports on the I/O panel, there is one USB 3.2 Gen1 header on this motherboard. This USB 3.2 Gen1 header can support two USB 3.2 Gen1 ports.

 ATX 12V Power
Connectors
(8-pin ATX12V1)
(see p.6, No. 22)
(8-pin ATX12V2)
(see p.6, No. 23)
(8-pin ATX12V3)
(see p.6, No. 35)




This motherboard provides three 8-pin ATX 12V power connectors.

CM Board Standby Power
Headers
(19-pin CM_SB_R)
(see p.6, No. 10)

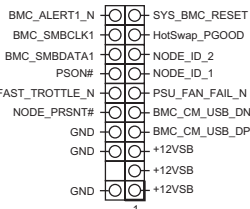


Connect this 19-pin header to the PSU for +12VSB and PSON PWROK.

 Speaker Header
(4-pin SPEAKER1)
(see p.6, No. 8)



Please connect the chassis speaker to this header.


System Fan Headers
(6-pin FAN1)
(see p.6, No. 26)
(6-pin FAN2)
(see p.6, No. 27)
(6-pin FAN3)
(see p.6, No. 28)
(6-pin FAN4)
(see p.6, No. 29)
(6-pin FAN5)
(see p.6, No. 30)
(6-pin FAN6)
(see p.6, No. 31)
(6-pin FAN7)
(see p.6, No. 32)
(6-pin FAN8)
(see p.6, No. 33)

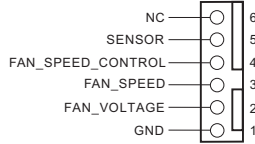

This motherboard provides eight 6-Pin CPU fan (Quiet Fan) headers. If connecting a 3-Pin CPU fan, please connect it to Pin 1-3. The fan max. current is 5A and the max. power is 60Watts.

**For more details, please refer to the Cooler QVL list on the ASRock Rack website.*

 PSU SMBus
(PSU_SMB1)
(see p.6, No. 19)




PSU SMBus monitors the status of the power supply, fan and system temperature.

Non Maskable Interrupt
Button Header
(NMI_BTN1)
(see p.6, No. 9)




Please connect a NMI device to this header.

 HDD Power Connector
(6-pin HDD_PWR1)
(see p.6, No. 25)




Please use a power cable to connect this connector and a HDD.

 Intelligent Platform
Management Bus Header
(4-pin IPMB1)
(see p.6, No. 4)




This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

SPI TPM Header
(13-pin TPM_BIOS_PH1)
(see p.6, No. 50)

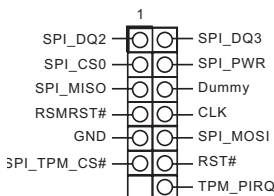


This connector supports SPI Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

Baseboard Management
Controller SMBus Header
(5-pin BMC_SMB1)
(see p.6, No. 6)

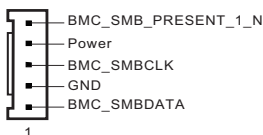


This header is used for the SMBUS devices.

Serial Port Header
(9-pin COM1)
(see p.6, No. 1)

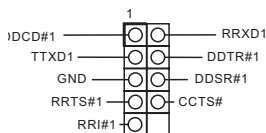


This COM1 header supports a serial port module.

 PWM Configuration
Header
(3-pin PWM_CFG1)
(see p.6, No. 12)




This header is used for PWM configurations.

Backplane PCI Express
Hot-Plug Connector
(5-pin CPU1_HSBP1)
(see p.6, No. 20)

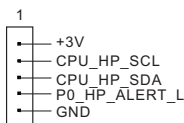


This header is used for the hot plug feature of HDDs on the backplane.

IPMI LAN LED Header
(5-pin IPMI_LED1)
(see p.6, No. 3)

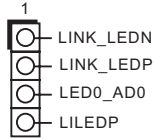

This header is used to connect to the LED indicators on the chassis.

SATA SGPIO Connectors
(7-pin SATA_SGPIO1)
(see p.6, No. 40)
(7-pin SATA_SGPIO2)
(see p.6, No. 41)
(7-pin SATA_SGPIO3)
(see p.6, No. 42)

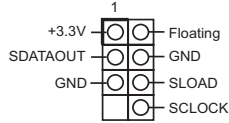


The headers support Serial Link interface for onboard SATA connections.

Clear CMOS Pad
(CLRMOS1)
(see p.6, No. 7)



CLRMOS1 allows user to clear the data in CMOS. To clear CMOS, take out the CMOS battery and short the Clear CMOS Pad.

 MCIO Connectors
(MCIO1)
(see p.6, No. 17)
(MCIO2)
(see p.6, No. 18)
(MCIO3)
(see p.6, No. 16)
(MCIO4)
(see p.6, No. 24)
(MCIO5)
(see p.6, No. 34)
(MCIO6)
(see p.6, No. 43)
(MCIO7)
(see p.6, No. 45)
(MCIO8)
(see p.6, No. 44)



The connectors are used for the PCIE or SATA devices.

MCIO1 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P0_RX_DN0	B2	P0_TX_DN0
A3	P0_RX_DP0	B3	P0_TX_DP0
A4	GND	B4	GND
A5	P0_RX_DN1	B5	P0_TX_DN1
A6	P0_RX_DP1	B6	P0_TX_DP1
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P0_RX_DN2	B14	P0_TX_DN2
A15	P0_RX_DP2	B15	P0_TX_DP2
A16	GND	B16	GND
A17	P0_RX_DN3	B17	P0_TX_DN3
A18	P0_RX_DP3	B18	P0_TX_DP3
A19	GND	B19	GND
A20	P0_RX_DN4	B20	P0_TX_DN4
A21	P0_RX_DP4	B21	P0_TX_DP4
A22	GND	B22	GND
A23	P0_RX_DN5	B23	P0_TX_DN5
A24	P0_RX_DP5	B24	P0_TX_DP5
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P0_RX_DN6	B32	P0_TX_DN6
A33	P0_RX_DP6	B33	P0_TX_DP6
A34	GND	B34	GND
A35	P0_RX_DN7	B35	P0_TX_DN7
A36	P0_RX_DP7	B36	P0_TX_DP7
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO2 Pin Definition

Pin	Definition	Pin	Definition
A1	GND	B1	GND
A2	P0_RX_DN8	B2	P0_TX_DN8
A3	P0_RX_DP8	B3	P0_TX_DP8
A4	GND	B4	GND
A5	P0_RX_DN9	B5	P0_TX_DN9
A6	P0_RX_DP9	B6	P0_TX_DP9
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSENT1_N
A13	GND	B13	GND
A14	P0_RX_DN10	B14	P0_TX_DN10
A15	P0_RX_DP10	B15	P0_TX_DP10
A16	GND	B16	GND
A17	P0_RX_DN11	B17	P0_TX_DN11
A18	P0_RX_DP11	B18	P0_TX_DP11
A19	GND	B19	GND
A20	P0_RX_DN12	B20	P0_TX_DN12
A21	P0_RX_DP12	B21	P0_TX_DP12
A22	GND	B22	GND
A23	P0_RX_DN13	B23	P0_TX_DN13
A24	P0_RX_DP13	B24	P0_TX_DP13
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSENT2_N
A31	GND	B31	GND
A32	P0_RX_DN14	B32	P0_TX_DN14
A33	P0_RX_DP14	B33	P0_TX_DP14
A34	GND	B34	GND
A35	P0_RX_DN15	B35	P0_TX_DN15
A36	P0_RX_DP15	B36	P0_TX_DP15
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO3 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P1_RX_DP0	B2	P1_TX_DP0
A3	P1_RX_DN0	B3	P1_TX_DN0
A4	GND	B4	GND
A5	P1_RX_DP1	B5	P1_TX_DP1
A6	P1_RX_DN1	B6	P1_TX_DN1
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P1_RX_DP2	B14	P1_TX_DP2
A15	P1_RX_DN2	B15	P1_TX_DN2
A16	GND	B16	GND
A17	P1_RX_DP3	B17	P1_TX_DP3
A18	P1_RX_DN3	B18	P1_TX_DN3
A19	GND	B19	GND
A20	P1_RX_DP4	B20	P1_TX_DP4
A21	P1_RX_DN4	B21	P1_TX_DN4
A22	GND	B22	GND
A23	P1_RX_DP5	B23	P1_TX_DP5
A24	P1_RX_DN5	B24	P1_TX_DN5
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P1_RX_DP6	B32	P1_TX_DP6
A33	P1_RX_DN6	B33	P1_TX_DN6
A34	GND	B34	GND
A35	P1_RX_DP7	B35	P1_TX_DP7
A36	P1_RX_DN7	B36	P1_TX_DN7
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO4 Pin Definition

Pin	Definition	Pin	Definition
A1	GND	B1	GND
A2	P1_RX_DP15	B2	P1_TX_DP15
A3	P1_RX_DN15	B3	P1_TX_DN15
A4	GND	B4	GND
A5	P1_RX_DP14	B5	P1_TX_DP14
A6	P1_RX_DN14	B6	P1_TX_DN14
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSENT1_N
A13	GND	B13	GND
A14	P1_RX_DP13	B14	P1_TX_DP13
A15	P1_RX_DN13	B15	P1_TX_DN13
A16	GND	B16	GND
A17	P1_RX_DP12	B17	P1_TX_DP12
A18	P1_RX_DN12	B18	P1_TX_DN12
A19	GND	B19	GND
A20	P1_RX_DP11	B20	P1_TX_DP11
A21	P1_RX_DN11	B21	P1_TX_DN11
A22	GND	B22	GND
A23	P1_RX_DP10	B23	P1_TX_DP10
A24	P1_RX_DN10	B24	P1_TX_DN10
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSENT2_N
A31	GND	B31	GND
A32	P1_RX_DP9	B32	P1_TX_DP9
A33	P1_RX_DN9	B33	P1_TX_DN9
A34	GND	B34	GND
A35	P1_RX_DP8	B35	P1_TX_DP8
A36	P1_RX_DN8	B36	P1_TX_DN8
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO5 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P3_RX_DP7	B2	P3_TX_DP7
A3	P3_RX_DN7	B3	P3_TX_DN7
A4	GND	B4	GND
A5	P3_RX_DP6	B5	P3_TX_DP6
A6	P3_RX_DN6	B6	P3_TX_DN6
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P3_RX_DP5	B14	P3_TX_DP5
A15	P3_RX_DN5	B15	P3_TX_DN5
A16	GND	B16	GND
A17	P3_RX_DP4	B17	P3_TX_DP4
A18	P3_RX_DN4	B18	P3_TX_DN4
A19	GND	B19	GND
A20	P3_RX_DP3	B20	P3_TX_DP3
A21	P3_RX_DN3	B21	P3_TX_DN3
A22	GND	B22	GND
A23	P3_RX_DP2	B23	P3_TX_DP2
A24	P3_RX_DN2	B24	P3_TX_DN2
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P3_RX_DP1	B32	P3_TX_DP1
A33	P3_RX_DN1	B33	P3_TX_DN1
A34	GND	B34	GND
A35	P3_RX_DP0	B35	P3_TX_DP0
A36	P3_RX_DN0	B36	P3_TX_DN0
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO6 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P3_RX_DP8	B2	P3_TX_DP8
A3	P3_RX_DN8	B3	P3_TX_DN8
A4	GND	B4	GND
A5	P3_RX_DP9	B5	P3_TX_DP9
A6	P3_RX_DN9	B6	P3_TX_DN9
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P3_RX_DP10	B14	P3_TX_DP10
A15	P3_RX_DN10	B15	P3_TX_DN10
A16	GND	B16	GND
A17	P3_RX_DP11	B17	P3_TX_DP11
A18	P3_RX_DN11	B18	P3_TX_DN11
A19	GND	B19	GND
A20	P3_RX_DP12	B20	P3_TX_DP12
A21	P3_RX_DN12	B21	P3_TX_DN12
A22	GND	B22	GND
A23	P3_RX_DP13	B23	P3_TX_DP13
A24	P3_RX_DN13	B24	P3_TX_DN13
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P3_RX_DP14	B32	P3_TX_DP14
A33	P3_RX_DN14	B33	P3_TX_DN14
A34	GND	B34	GND
A35	P3_RX_DP15	B35	P3_TX_DP15
A36	P3_RX_DN15	B36	P3_TX_DN15
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO7 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P2_RX_DN0	B2	P2_TX_DN0
A3	P2_RX_DP0	B3	P2_TX_DP0
A4	GND	B4	GND
A5	P2_RX_DN1	B5	P2_TX_DN1
A6	P2_RX_DP1	B6	P2_TX_DP1
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P2_RX_DN2	B14	P2_TX_DN2
A15	P2_RX_DP2	B15	P2_TX_DP2
A16	GND	B16	GND
A17	P2_RX_DN3	B17	P2_TX_DN3
A18	P2_RX_DP3	B18	P2_TX_DP3
A19	GND	B19	GND
A20	P2_RX_DN4	B20	P2_TX_DN4
A21	P2_RX_DP4	B21	P2_TX_DP4
A22	GND	B22	GND
A23	P2_RX_DN5	B23	P2_TX_DN5
A24	P2_RX_DP5	B24	P2_TX_DP5
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P2_RX_DN6	B32	P2_TX_DN6
A33	P2_RX_DP6	B33	P2_TX_DP6
A34	GND	B34	GND
A35	P2_RX_DN7	B35	P2_TX_DN7
A36	P2_RX_DP7	B36	P2_TX_DP7
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

MCIO9 Pin Definition

Pin	Defeinition	Pin	Defeinition
A1	GND	B1	GND
A2	P2_RX_DN8	B2	P2_TX_DN8
A3	P2_RX_DP8	B3	P2_TX_DP8
A4	GND	B4	GND
A5	P2_RX_DN9	B5	P2_TX_DN9
A6	P2_RX_DP9	B6	P2_TX_DP9
A7	GND	B7	GND
A8	-	B8	SCL1
A9	WAKE_N	B9	SDA1
A10	GND	B10	GND
A11	DP1	B11	PERST_BUF1_N
A12	DN1	B12	PRSNT1_N
A13	GND	B13	GND
A14	P2_RX_DN10	B14	P2_TX_DN10
A15	P2_RX_DP10	B15	P2_TX_DP10
A16	GND	B16	GND
A17	P2_RX_DN11	B17	P2_TX_DN11
A18	P2_RX_DP11	B18	P2_TX_DP11
A19	GND	B19	GND
A20	P2_RX_DN12	B20	P2_TX_DN12
A21	P2_RX_DP12	B21	P2_TX_DP12
A22	GND	B22	GND
A23	P2_RX_DN13	B23	P2_TX_DN13
A24	P2_RX_DP13	B24	P2_TX_DP13
A25	GND	B25	GND
A26	-	B26	SCL2
A27	-	B27	SDA2
A28	GND	B28	GND
A29	DP2	B29	PERST_BUF2_N
A30	DN2	B30	PRSNT2_N
A31	GND	B31	GND
A32	P2_RX_DN14	B32	P2_TX_DN14
A33	P2_RX_DP14	B33	P2_TX_DP14
A34	GND	B34	GND
A35	P2_RX_DN15	B35	P2_TX_DN15
A36	P2_RX_DP15	B36	P2_TX_DP15
A37	GND	B37	GND
75	NP_NC_1	76	NP_NC_2
77	PGND_1	78	PGND_3
79	PGND_2	80	PGND_4

2.7 Unit Identification purpose LED/Switch

Use the UID button to locate the server working on behind a rack of servers.

Unit Identification
purpose LED/Switch
(UID1)



When the UID button on the front or rear panel is pressed, the front/rear UID blue LED indicator will be turned on. Press the UID button again to turn off the indicator.



1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.
2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.

2.8 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

Code	Description
0x10	PEI_CORE_STARTED
0x11	PEI_CAR_CPU_INIT
0x15	PEI_CAR_NB_INIT
0x19	PEI_CAR_SB_INIT
0x31	PEI_MEMORY_INSTALLED
0x32	PEI_CPU_INIT
0x33	PEI_CPU_CACHE_INIT
0x34	PEI_CPU_AP_INIT
0x35	PEI_CPU_BSP_SELECT
0x36	PEI_CPU_SMM_INIT
0x37	PEI_MEM_NB_INIT
0x3B	PEI_MEM_SB_INIT
0x4F	PEI_DXE_IPL_STARTED
0x60	DXE_CORE_STARTED
0x61	DXE_NVRAM_INIT
0x62	DXE_SBRUN_INIT

0x63 DXE_CPU_INIT

0x68 DXE_NB_HB_INIT

0x69 DXE_NB_INIT

0x6A DXE_NB_SMM_INIT

0x70 DXE_SB_INIT

0x71 DXE_SB_SMM_INIT

0x72 DXE_SB_DEVICES_INIT

0x78 DXE_ACPI_INIT

0x79 DXE_CSM_INIT

0x90 DXE_BDS_STARTED

0x91 DXE_BDS_CONNECT_DRIVERS

0x92 DXE_PCI_BUS_BEGIN

0x93 DXE_PCI_BUS_HPC_INIT

0x94 DXE_PCI_BUS_ENUM

0x95 DXE_PCI_BUS_REQUEST_RESOURCES

0x96 DXE_PCI_BUS_ASSIGN_RESOURCES

0x97 DXE_CON_OUT_CONNECT

0x98 DXE_CON_IN_CONNECT

0x99	DXE_SIO_INIT
0x9A	DXE_USB_BEGIN
0x9B	DXE_USB_RESET
0x9C	DXE_USB_DETECT
0x9D	DXE_USB_ENABLE
0xA0	DXE_IDE_BEGIN
0xA1	DXE_IDE_RESET
0xA2	DXE_IDE_DETECT
0xA3	DXE_IDE_ENABLE
0xA4	DXE_SCSI_BEGIN
0xA5	DXE_SCSI_RESET
0xA6	DXE_SCSI_DETECT
0xA7	DXE_SCSI_ENABLE
0xA8	DXE_SETUP_VERIFYING_PASSWORD
0xA9	DXE_SETUP_START
0xAB	DXE_SETUP_INPUT_WAIT
0xAD	DXE_READY_TO_BOOT
0xAE	DXE_LEGACY_BOOT

0xAF	DXE_EXIT_BOOT_SERVICES
0xB0	RT_SET_VIRTUAL_ADDRESS_MAP_BEGIN
0xB1	RT_SET_VIRTUAL_ADDRESS_MAP_END
0xB2	DXE_LEGACY_OPROM_INIT
0xB3	DXE_RESET_SYSTEM
0xB4	DXE_USB_HOTPLUG
0xB5	DXE_PCI_BUS_HOTPLUG
0xB6	DXE_NVRAM_CLEANUP
0xB7	DXE_CONFIGURATION_RESET
0xF0	PEI_RECOVERY_AUTO
0xF1	PEI_RECOVERY_USER
0xF2	PEI_RECOVERY_STARTED
0xF3	PEI_RECOVERY_CAPSULE_FOUND
0xF4	PEI_RECOVERY_CAPSULE_LOADED
0xE0	PEI_S3_STARTED
0xE1	PEI_S3_BOOT_SCRIPT
0xE2	PEI_S3_VIDEO_REPOST

0xE3	PEI_S3_OS_WAKE
0x50	PEI_MEMORY_INVALID_TYPE
0x53	PEI_MEMORY_NOT_DETECTED
0x55	PEI_MEMORY_NOT_INSTALLED
0x57	PEI_CPU_MISMATCH
0x58	PEI_CPU_SELF_TEST_FAILED
0x59	PEI_CPU_NO_MICROCODE
0x5A	PEI_CPU_ERROR
0x5B	PEI_RESET_NOT_AVAILABLE
0xD0	DXE_CPU_ERROR
0xD1	DXE_NB_ERROR
0xD2	DXE_SB_ERROR
0xD3	DXE_ARCH_PROTOCOL_NOT_AVAILABLE
0xD4	DXE_PCI_BUS_OUT_OF_RESOURCES
0xD5	DXE_LEGACY_OPROM_NO_SPACE
0xD6	DXE_NO_CON_OUT
0xD7	DXE_NO_CON_IN

0xD8 DXE_INVALID_PASSWORD

0xD9 DXE_BOOT_OPTION_LOAD_ERROR

0xDA DXE_BOOT_OPTION_FAILED

0xDB DXE_FLASH_UPDATE_FAILED

0xDC DXE_RESET_NOT_AVAILABLE

0xE8 PEI_MEMORY_S3_RESUME_FAILED

0xE9 PEI_S3_RESUME_PPI_NOT_FOUND

 
0xEA PEI_S3_BOOT_SCRIPT_ERROR

0xEB PEI_S3_OS_WAKE_ERROR

2.9 M.2 SSD Module Installation Guide


The M.2 Socket (M2_2, Key M) supports type 2280/22110 M.2 SATA3 6.0 Gb/s module or M.2 PCI Express module up to Gen4 x4 (16GT/s x4).

Installing the M.2 SSD Module



Step 1



Prepare a M.2 SSD module and the screw.

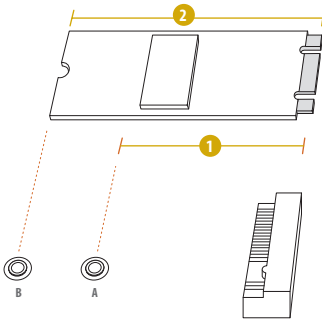

Step 2


Depending on the PCB type and length of the M.2 SSD module, find the corresponding nut location to be used.

No.	1	2
Nut Location	A	B
PCB Length	8cm	11cm
Module Type	Type 2280	Type 22110

 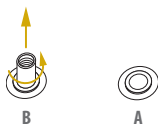


Step 3

 Move the standoff based on the module type and length. Skip Step 3 and 4 and go straight to Step 5 if using the default nut. Otherwise, release the standoff by hand.





Step 4

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

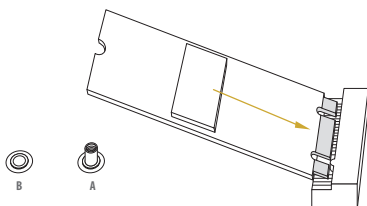

Step 5

Align and gently insert the M.2 SSD module into the M.2 slot. Please be aware that the M.2 SSD module only fits in one orientation.

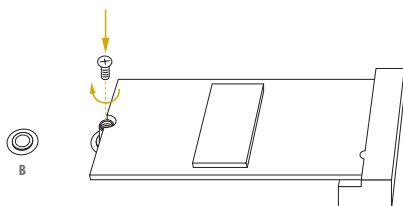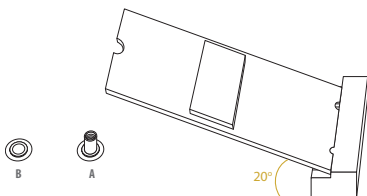

Step 6

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

Chapter 3 UEFI Setup Utility

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure the system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. Run the UEFI SETUP UTILITY when starting up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

Restart the system by pressing <Ctrl> + <Alt> + <Delete> to enter the UEFI SETUP UTILITY after POST, or by pressing the reset button on the system chassis. This allows user to restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what seeing on the screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
Server Mgmt	To manage the server
Event Logs	For event log configuration
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen


3.2 Main Screen

Once entering the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows user to set the system time and date.

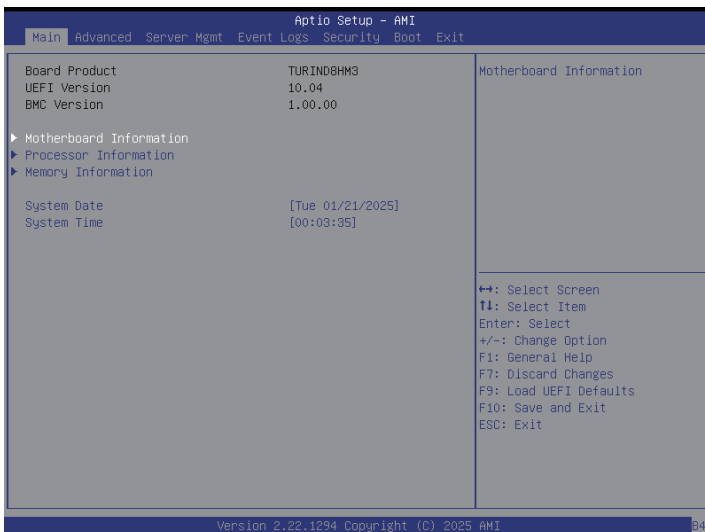

3.2.1 Motherboard Information

Press <Enter> to view the information of the motheboard.

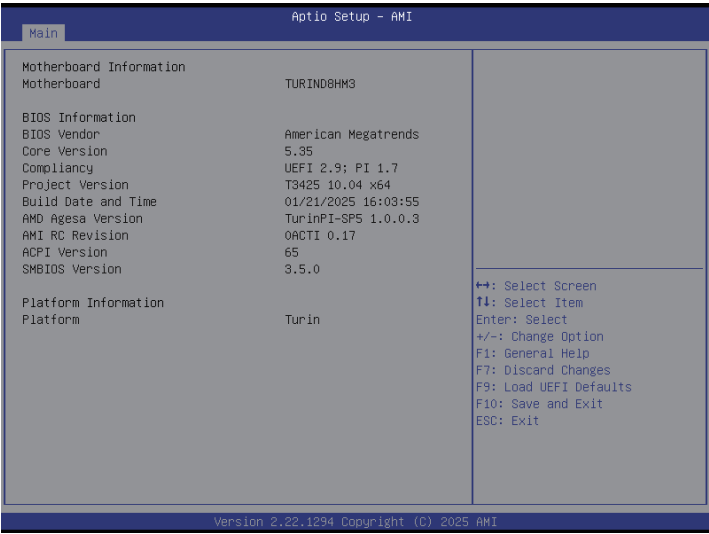


3.2.2 Processor Information

Press <Enter> to view the information of the processor.




3.2.3 Memory Information

Press <Enter> to view the information of the memory.

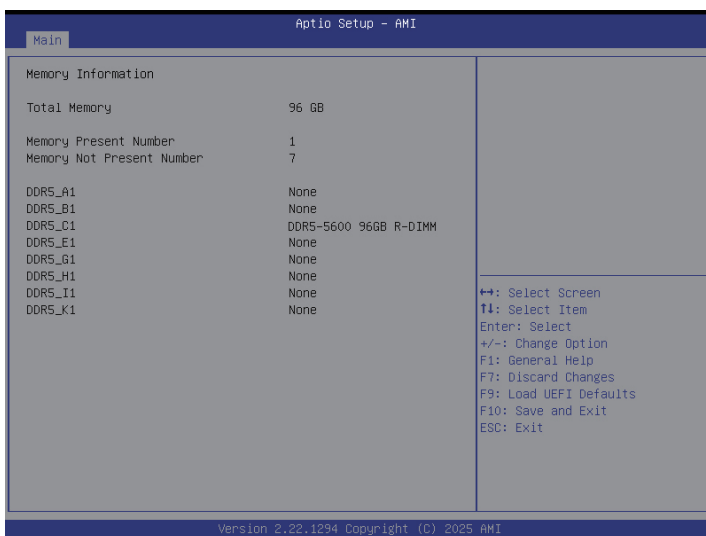

3.3 Advanced Screen

In this section, set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, NVMe Configuration, ACPI Configuration, USB Configuration, Super IO Configuration, Serial Port Console Redirection, H/W Monitor, PCI Subsystem Settings, AMD CBS, AMD PBS, PSP Firmware Versions, Network Stack Configuration, Tls Auth Configuration and Instant Flash.

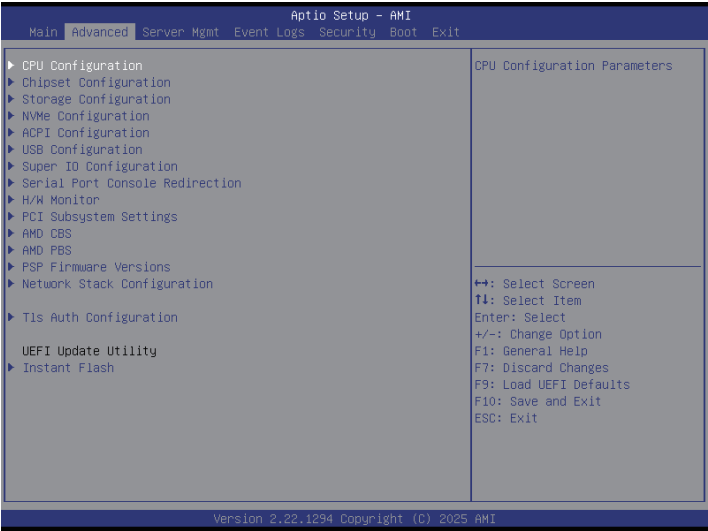

Setting wrong values in this section may cause the system to malfunction.


3.3.1 CPU Configuration



SVM Mode

Enable or disable CPU Virtualization.

3.3.2 Chipset Configuration

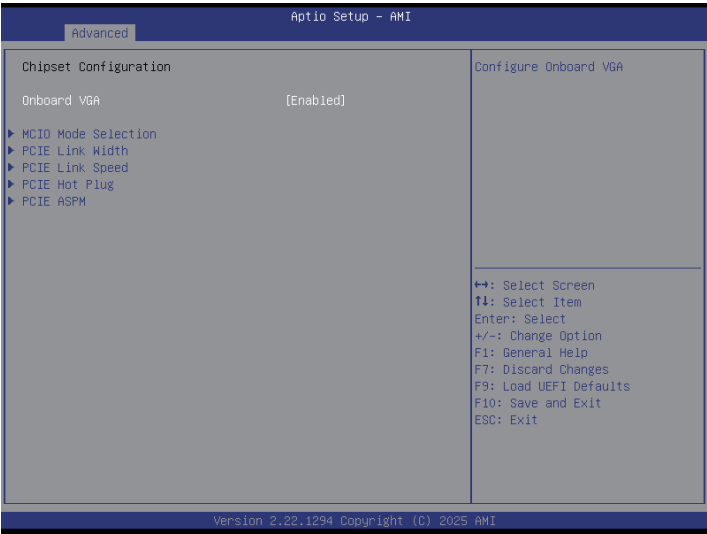

Onboard VGA

Configure Onboard VGA.

MCIO Mode Selection

Configure MCIO1 or MCIO2 Mode selection.

PCIE Link Width

Configure AMD PCIE Link Width.

PCIE1/PCIE2 Link Width

Select this item to configure PCIE1 Link Width. The options include [x16], [x8x8], [x8x4x4], [x4x4x8] and [x4x4x4x4]. The default value is [x16].

PCIE3 Link Width

Select this item to configure PCIE3 Link Width. The options include [x8] and [x4x4]. The default value is [x8].

MCIO2/MCIO1 Link Width

Select this item to configure MCIO2/MCIO1 Link Width. The options include [x16], [x8x8], [x8/x4x4], [x4x4/x8] and [x4x4/x4x4]. The default value is [x4x4/x4x4].

MCIO4/MCIO3 Link Width

Select this item to configure MCIO4/MCIO3 Link Width. The options include [x16], [x8x8],

[x8/x4x4], [x4x4/x8] and [x4x4/x4x4]. The default value is [x4x4/x4x4].

MCIO6/MCIO5 Link Width

Select this item to configure MCIO6/MCIO5 Link Width. The options include [x16], [x8x8], [x8/x4x4], [x4x4/x8] and [x4x4/x4x4]. The default value is [x4x4/x4x4].

MCIO8/MCIO7 Link Width

Select this item to configure MCIO8/MCIO7 Link Width. The options include [x16], [x8x8], [x8/x4x4], [x4x4/x8] and [x4x4/x4x4]. The default value is [x4x4/x4x4].

PCIe Link Speed

Configure PCIe Link Speed.

PCIE1/PCIE2/PCIE3 Link Speed

Select this item to configure PCIE1, PCIE2, or PCIE3 Link Speed. The default value is [Auto].

OCP3 Link Speed

Select this item to configure OCP3 Link Speed. The default value is [Auto].

M2_1/M2_2 Link Speed

Select this item to configure M2_1 or M2_2 Link Speed. The default value is [Auto].

PCIe Hot Plug

Configure PCIe Hotplug.

MCIO1/MCIO2/MCIO3/MCIO4/MCIO5/MCIO6/MCIO7/MCIO8 Hot Plug

Select this item to configure PCIe Hotplug.

PCIE1/PCIE2/PCIE3 Hot Plug

Select this item to configure PCIe Hotplug.

OCP3 Hot Plug

Select this item to configure PCIe Hotplug.

PCIe ASPM

Select this item to configure the PCIe ASPM.

PCI-E ASPM Support (Global)

Select this item to enable or disable the ASPM support to all PCIe root ports.

PCIE1/PCIE2/PCIE3 ASPM Support

Use this item to configure the ASPM support to PCIE1, PCIE2, or PCIE3.

OCP3 ASPM Support

Use this item to configure the ASPM support to OCP3.

MCIO1/MCIO2/MCIO3/MCIO4/MCIO5/MCIO6/MCIO7/MCIO8 ASPM Support

Use this item to configure the ASPM support to MCIO1, MCIO2, MCIO3, MCIO4, MCIO5, MCIO6, MCIO7, or MCIO8.

M2_2/M2_1 ASPM Support

Enables or disables the M.2 ASPM support.

3.3.3 Storage Configuration




Hard Disk S.M.A.R.T.

S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

SATA Hot Plug

Use this item to enable or disable the SATA Hot Plug Function.

3.3.4 NVMe Configuration

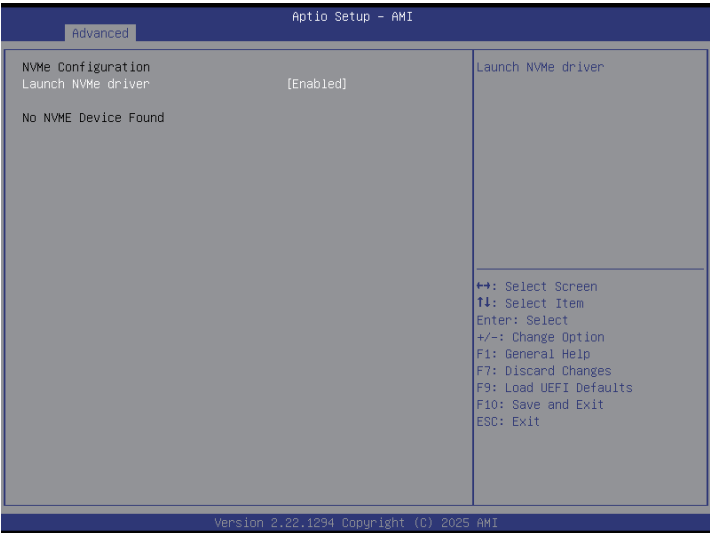


The NVMe Configuration displays the NVMe Driver and Device information.

Launch NVMe driver

Use this item to enable or disable launch NVMe driver.

3.3.5 ACPI Configuration

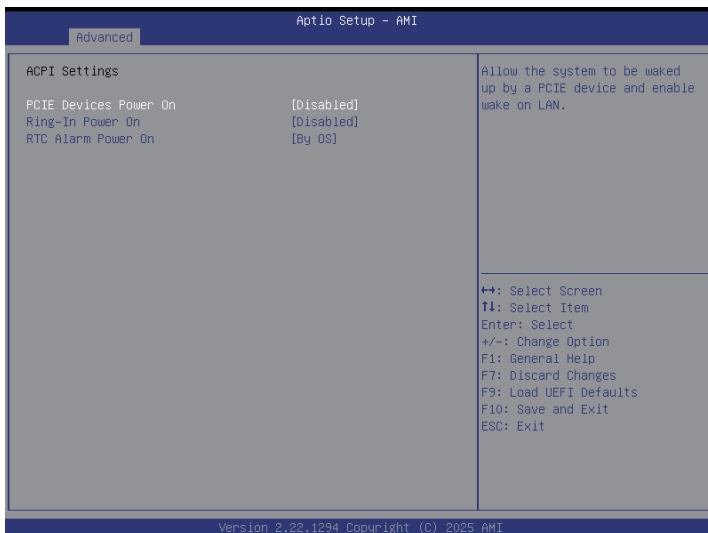

PCIE Devices Power On

Allow the system to be waked up by a PCIE device and enable wake on LAN.

Ring-In Power On

Allow the system to be waked up by onboard COM port modem Ring-In signals.

RTC Alarm Power On

Allow the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by the operating system.

RTC Alarm Date

Set Date of RTC power on feature.

RTC Alarm Hour

Set Hour of RTC power on feature.


RTC Alarm Minute

Set Minute of RTC power on feature.

RTC Alarm Second


Set Second of RTC power on feature.

3.3.6 USB Configuration

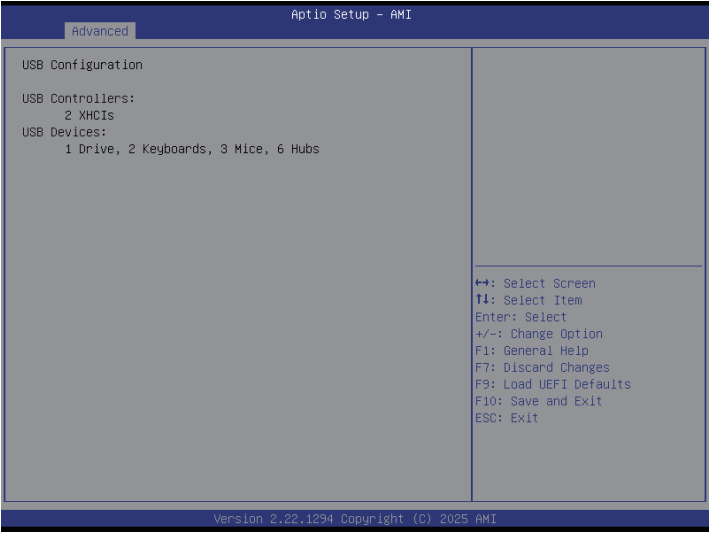

This displays the USB Controllers and Devices information.

3.3.7 Super IO Configuration

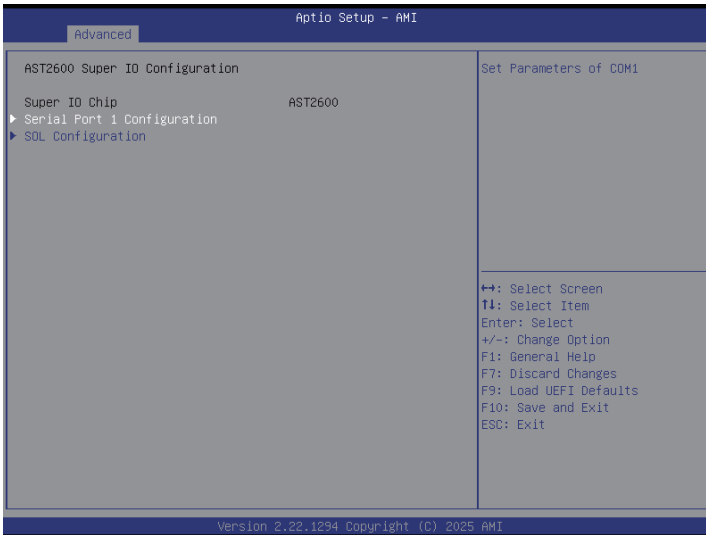

Serial Port 1 Configuration

Use this item to set parameters of COM1.

Serial Port

Use this item to enable or disable the Serial Port (COM).

Change Settings

Use this item to select an optimal setting for Super IO Device.

SOL Configuration

Use this item to set parameters of SOL.


SOL Port

Use this item to enable or disable the SOL Port.

Change Settings

Use this item to select an optimal setting for Super IO Device.

3.3.8 Serial Port Console Redirection

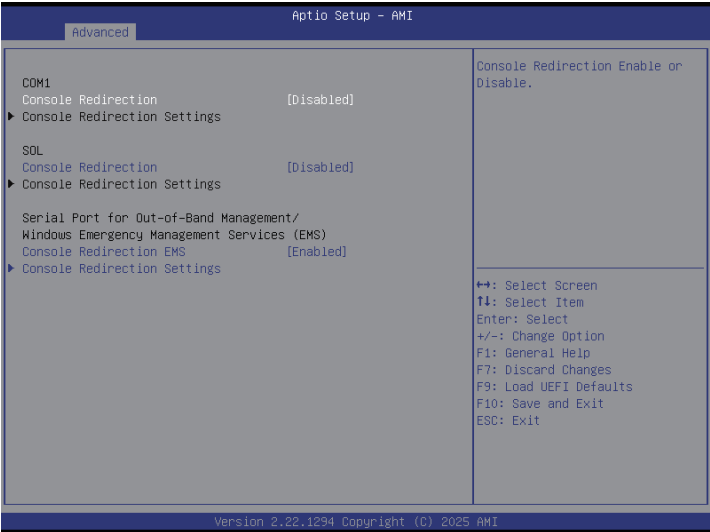

COM1 / SOL

Console Redirection

Use this item to enable or disable Console Redirection. Set this item to Enabled to select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how the host computer and the remote computer to which are connected exchange information. Both computers should have the same or compatible settings.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
ANSI	Extended ASCII character set
VT100	ASCII character set
VT100Plus	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [38400], [57600] and [115200].

Data Bits

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

Parity

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space].

Stop Bits

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

Recorder Mode

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

Resolution 100x31

Use this item to enable or disable extended terminal resolution support.

Putty Keypad

Use this item to select Function Key and Keypad on Putty.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)**Console Redirection EMS**

Use this item to enable or disable Console Redirection. Set this item to Enabled to select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how the host computer and the remote computer to which are connected exchange information.

Out-of-Band Mgmt Port

Microsoft Windows Emergency Management Services (EMS) allows for remote management of a Windows Server OS through a serial port.

Terminal Type EMS

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second EMS

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Flow Control EMS

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].


Data Bits EMS

Parity EMS


Stop Bits EMS

3.3.9 H/W Monitor

In this section, it allows user to monitor the status of the hardware on the system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

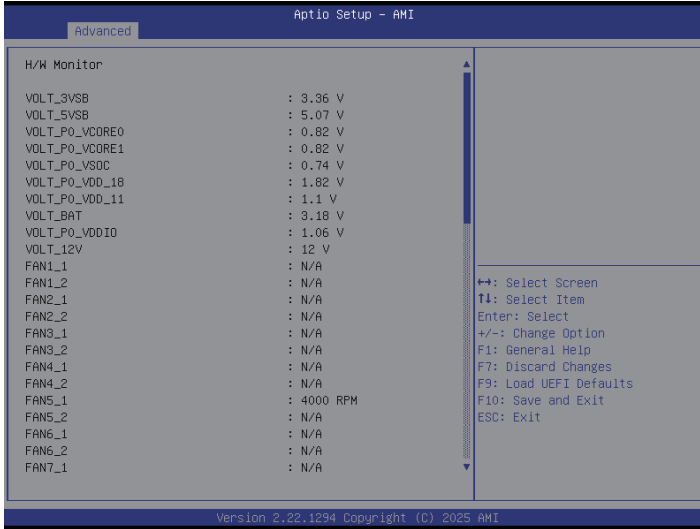

3.3.10 PCI Subsystem Settings

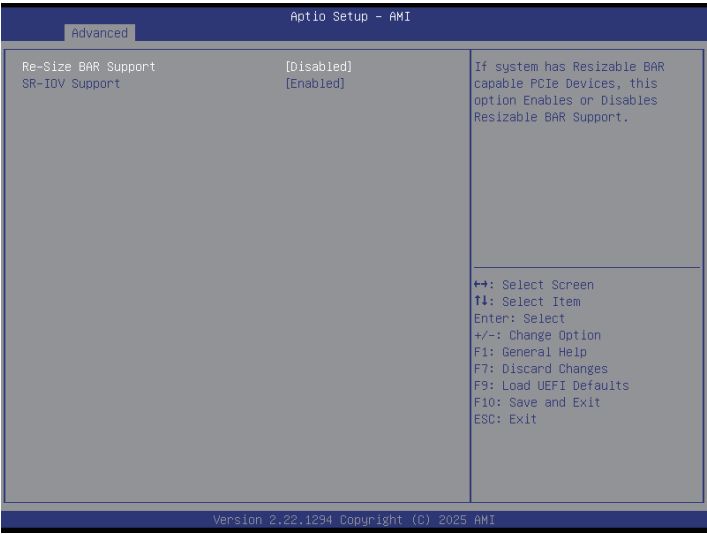


Re-Size BAR Support

Enable or disable this item to Re-Size BAR supported upon the system has resizable BAR capable PCIe Devices.

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.

3.3.11 AMD CBS

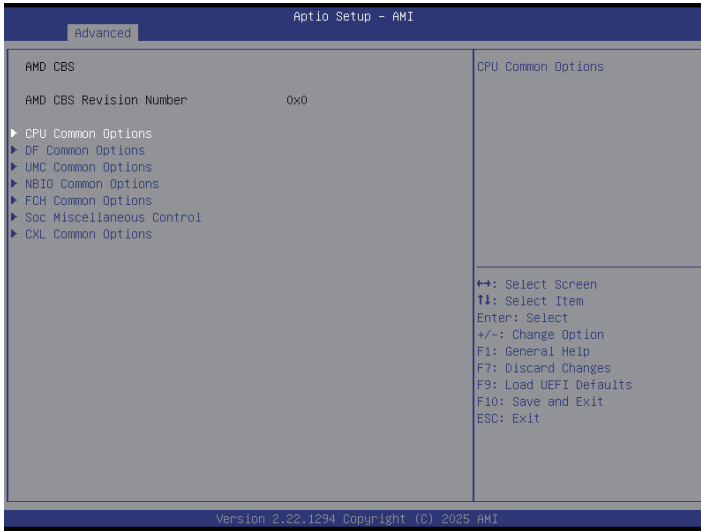

CPU Common Options

Use this item to configure CPU Common options.

DF Common Options

Use this item to configure DF Common options.

UMC Common Options

Use this item to configure UMC Common options.

NBIO Common Options

Use this item to configure NBIO Common options.

FCH Common Options

Use this item to configure FCH Common options.

Soc Miscellaneous Control

Use this item to configure Soc Miscellaneous Control options.

CXL Common Options

Use this item to configure CXL Common options.

3.3.12 AMD PBS



RAS

Use this item to configure AMD CPM RAS related settings.

RAS Periodic SMI Control

Use this to enable or disable Periodic SMI for polling [MCA Threshold] error.

SMI Threshold

This limits the number of [MCA Threshold and Deferred Error SMI source] per a unit time.

SMI Scale

Use this to define the time scale.

SMI Scale Unit

Use this to define the unit of time scale.

SMI Period

Use this to define the polling interval with ms unit. Input 0 value to disable this function.

GHEs Notify Type

This specifies the notification type for deferred/corrected errors.

GHEs UnCorr Notify Type

This specifies the notification type for uncorrected errors.

PCIe GHEs Notify Type

This specifies the notification type for PCIe corrected errors.

PCIe UnCorr GHES Notify Type

This specifies the notification type for PCIe uncorrected errors.

PCIe Root Port Corr Err Mask Reg

Use this to initialize the PCIe AER corrected error mask register of root port.

PCIe Root Port UnCorr Err Mask Reg

Use this to initialize the PCIe AER uncorrected error mask register of root port.

PCIe Root Port UnCorr Error Sev Reg

Use this to initialize the PCIe AER uncorrected error severity registers of root port.

PCIe Device Corr Err Mask Reg

Use this to initialize the PCIe AER corrected error mask register of PCIe device.

PCIe Device UnCorr Err Mask Reg

Use this to initialize the PCIe AER uncorrected error mask register of PCIe device.

PCIe Device UnCorr Error Sev Reg

Use this to initialize the PCIe AER uncorrected error severity registers of PCIe device

CXL DP CIE Mask Enable

Use this to enable or disable masking of CXL DP correctable error-internal error.

DRAM Hard Post Package Repair

Use this to enable or disable the spare DRAM rows to replace malfunctioning rows via an in-field repair mechanism.

HEST DMC Structure Support

Use this to enable or disable HEST DMC (Deferred Maching Check) structure support.

CXL Error Report Support

Use this to enable or disable CXL error reporting.

Range Encryption

Configure AMD range encryption setting.

Range 1/2/3/4/5/6/7 Memory Base

Use this item to enter memory range base address.


Range 1/2/3/4/5/6/7 Memory Limit

Use this item to enter memory range limit address.

Start Range Encryption


Use this item to encrypt all memory ranges.

3.3.13 PSP Firmware Versions

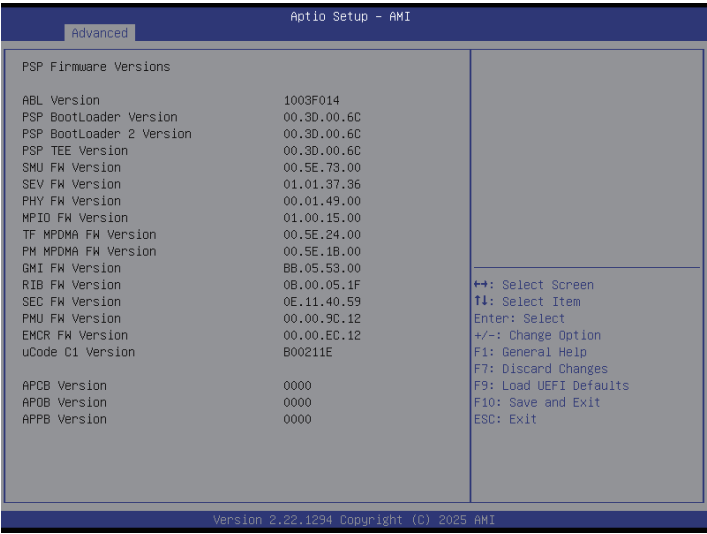

The PSP Firmware Versions displays the version information of ABL, PSP BootLoader, PSP BootLoader 2, PSP TEE, SMU FW, SEV FW, PHY FW, MPIO FW, TF MPDMA FW, PM MPDMA FW, GMI FW, RIB FW, SEC FW, PMU FW, EMCR FW, uCode C1, APCB, APOB, and APPB.

3.3.14 Network Stack Configuration

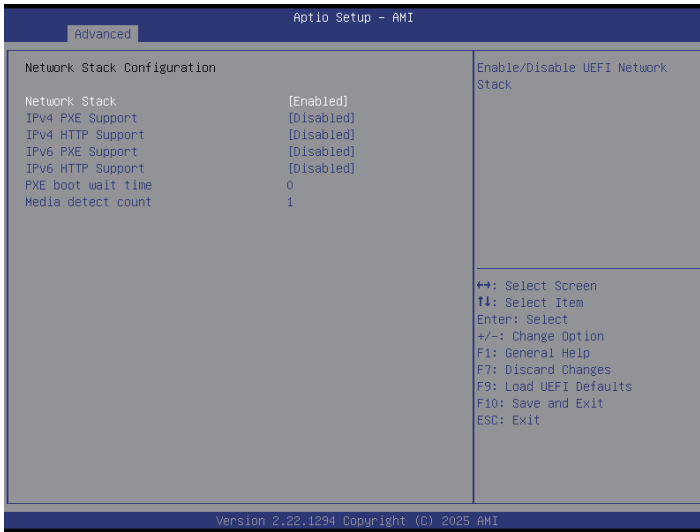

Network Stack

Use this item to enable or disable UEFI Network Stack.

IPv4 PXE Support

Use this to enable or disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.

IPv4 HTTP Support

Use this to enable or disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.

IPv6 PXE Support

Use this to enable or disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.

IPv6 HTTP Support

Use this to enable or disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.

PXE boot wait time

Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.

Media detect count

Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.

3.3.15 Tls Auth Configuration



Server CA Configuration

Press <Enter> to configure Server CA.

Enroll Cert

Press <Enter> to enroll cert.

Delete Cert


Press <Enter> to delete cert.

Client Cert Configuration

3.3.16 Instant Flash

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI updatetool allows user to update system UEFI without entering operating systems first like MSDOS or Windows®. Just save the new UEFI file to the USB flash drive, floppy disk or hard drive and launch this tool, then update the UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. Execute the Instant Flash utility, the utility will show the UEFI files and the respective information. Select the proper UEFI file to update UEFI, and reboot the system after the UEFI update process is completed.

3.4 Server Mgmt

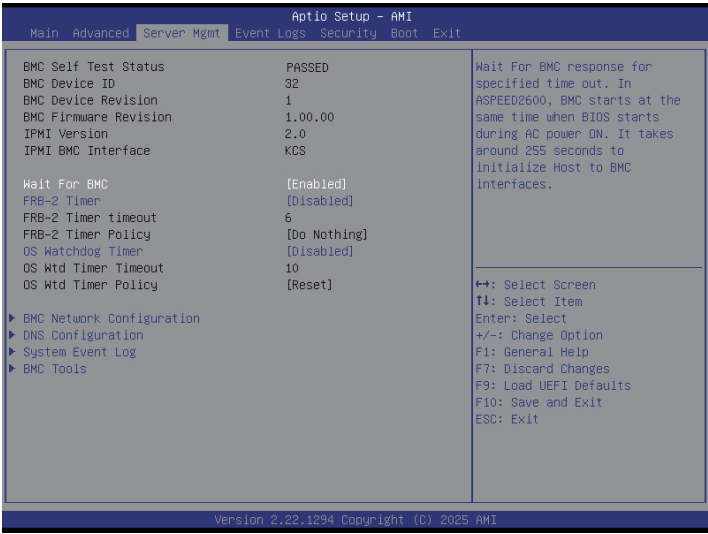

Wait For BMC

Wait For BMC response for specified time out. BMC starts at the same time when BIOS starts during AC power ON. It takes around 255 seconds to initialize Host to BMC interfaces.

FRB-2 Timer

Use this item to enable or disable FRB-2 timer (POST timer)

FRB-2 Timer Timeout

Use this to define the FRB-2 Time Expiration between 1 to 30 value.

FRB-2 Timer Policy

Configure how the system should respond. If the FRB-2 Timer expires is disabled, this item is not available.

OS Watchdog Timer

Use this item to enable or disable OS Watchdog Timer. If enabled, starts a BIOS timer which can only be shut off by Management Software after the OS loads.

OS Wtd Timer Timeout

Configure the OS Boot Watchdog Timer Expiration between 1 to 30 min value. If the OS Boot Watchdog Timer is disabled, this item is not available.

OS Wtd Timer Policy

Configure how the system should respond if the OS Boot Watchdog Timer expires. If the OS Boot Watchdog Timer is disabled, this item is not available.

BMC Network Configuration

Use this to configure BMC network parameters.

DNS Configuration

Use this to configure DNS parameters.


System Event Log

Press <Enter> to change the SEL event log configuration.

BMC Tools

Use this item to configure about KCS control, restore AC power loss and load BMC default settings.

3.4.1 BMC Network Configuration

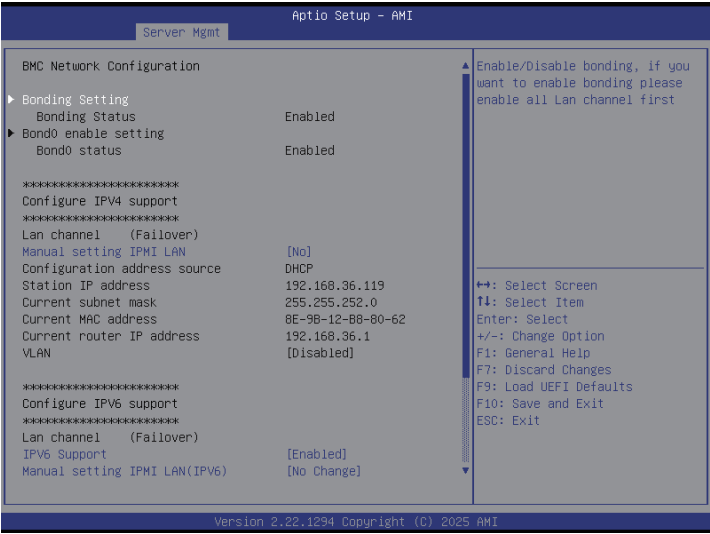

Bonding Setting

Select this item to enabled or disabled bonding. Please enable all lan channel first when want to enable bonding.

Lan channel (Failover)

Manual Setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

Configuration Address Source

Select to configure BMC network parameters statically or dynamically(by BIOS or BMC). Configuration options: [Static] and [DHCP].

Static: Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

DHCP: IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



The default login information for the IPMI web interface is:

Username: admin

Password: admin

For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/faq.asp>

VLAN

Enable or disable Virtual Local Area Network.

If [Enabled] is selected, configure the items below.

VLAN ID: Select this item to configure the VLAN ID setting, the Maximum value is 4094 and the Minimum value is 1.

VLAN Priority: Select this item to configure the VLAN Priority setting. the Maximum value is 7 and the Minimum value is 0.


IPv6 Support

Enable or disable LAN IPv6 Support.

Manual Setting IPMI LAN(IPV6)

Select to configure LAN channel parameters statically or dynamically(by BIOS or BMC). Unspecified option will not modify any BMC network parameters during BIOS phase.

3.4.2 DNS Configuration

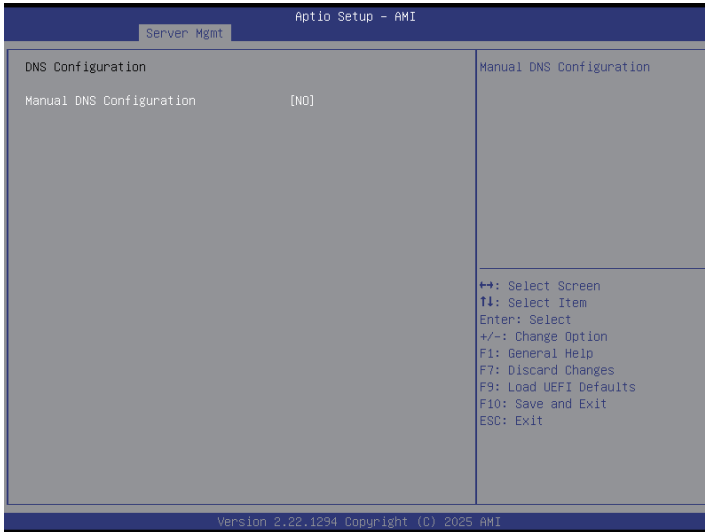

Manual DNS Configuration

Select this item to manual configure DNS.

If [YES] is selected, configure the items below.

DNS Service

Use this item to enable or disable DNS Service Configuration.

Host Name Settings

Use this item to automatic or manual Host Name Settings.

Bond Register BMC

Use this item to enable or disable Bond Register BMC.

Bond Register Method

Use this item to configure Bond Register Method with Nsupdate or DHCP client FQDN/Hostname.

Domain Setting

This item supports Manual, Bond0_v4 and Bond0_v6 Domain Settings.


Domain Name Server Setting

This item supports Manual and Bond0 DNS Server Settings.

IP Priority

This item supports IPV4 and IPV6 IP Priority.

3.4.3 System Event Log

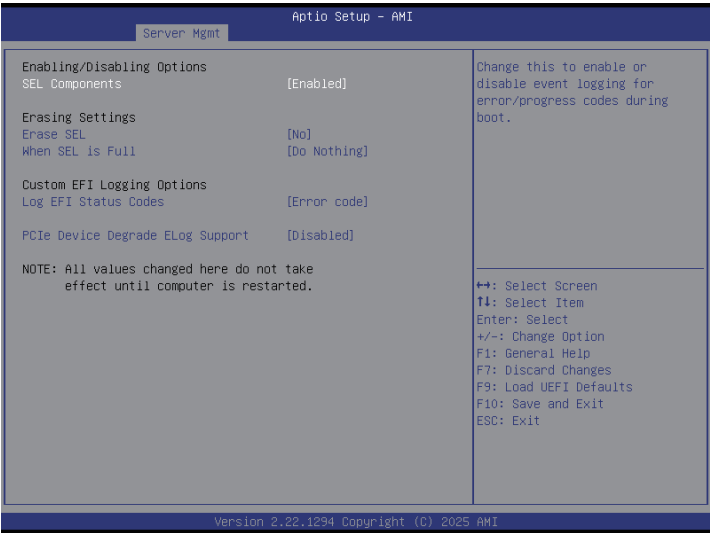

SEL Components

Change this to enable or disable event logging for error/progress codes during boot.

Erase SEL

Use this to choose options for erasing SEL.

When SEL is Full

Use this to choose options for reactions to a full SEL.


Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress code or both.

PCIe Device Degrade ELog Support

Use this item to enable or disable PCIe Device Degrade Error Logging Support.

3.4.4 BMC Tools

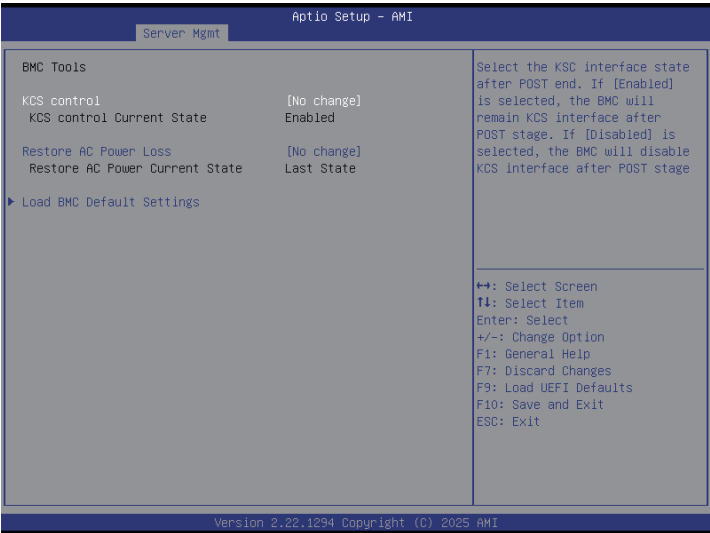

KCS Control

Select this KCS interface state after POST end. If [Enabled] is selected, the BMC will remain KCS interface after POST stage. If [Disabled] is selected, the BMC will disable KCS interface after POST stage


Restore AC Power Loss

This allows user to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

Load BMC Default Settings

Use this item to Load BMC Default Settings

3.5 Event Logs

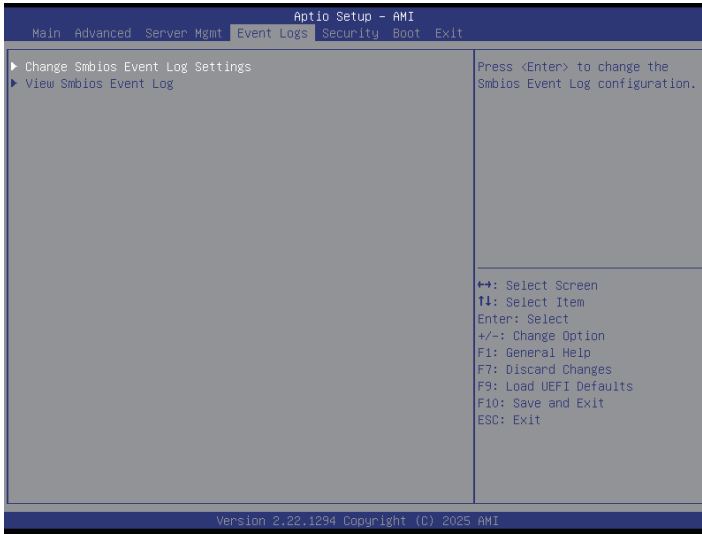

Change Smbios Event Log Settings

Use this item to configure the Smbios Event Log Settings.

When entering the item, the screen displays following sub-items:

Smbios Event Log

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

Erase Event Log

Choose options for erasing Smbios Event Log. Erasing is done prior to any logging activation during reset.

When Log is Full

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

Log System Boot Event

Choose option to enable/disable logging of System boot event.

View Smbios Event Log


Press <Enter> to view the Smbios Event Log records.



All values changed here do not take effect until computer is restarted.

3.6 Security

This section allows user to set or change the supervisor/user password for the system. For the user password item is allowed user to clear it.

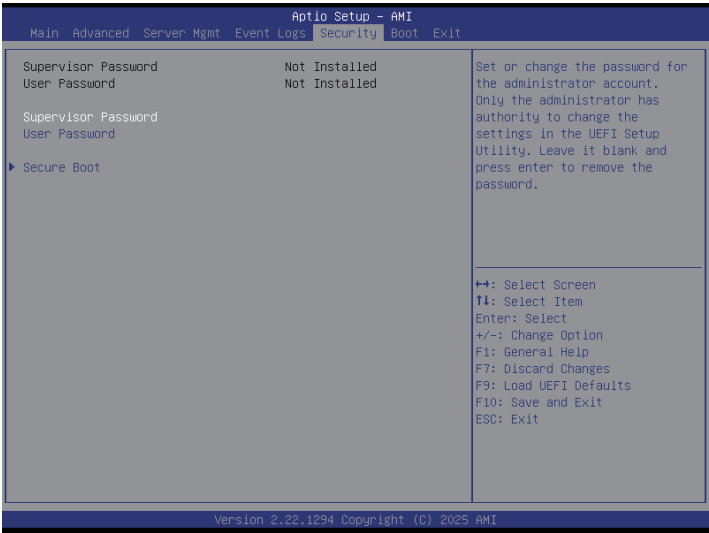

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Use this to enable or disable Secure Boot Control. The default value is [Disabled]. Enable to support Windows Server 2012 R2 or later versions Secure Boot.

Secure Boot Mode

Secure Boot mode selector: Standard/Custom. In Custom mode Secure Boot Variables can be configured without authentication.

Install Default Secure Boot Keys


Please install default secure boot keys if it's the first time to use secure boot.

Clear Secure Boot Keys

This force system to setup Mode-Clear all Secure Boot Variables. Change takes effect after reboot.

3.6.1 Key Management

In this section, expert users can modify Secure Boot Policy variables without full authentication.

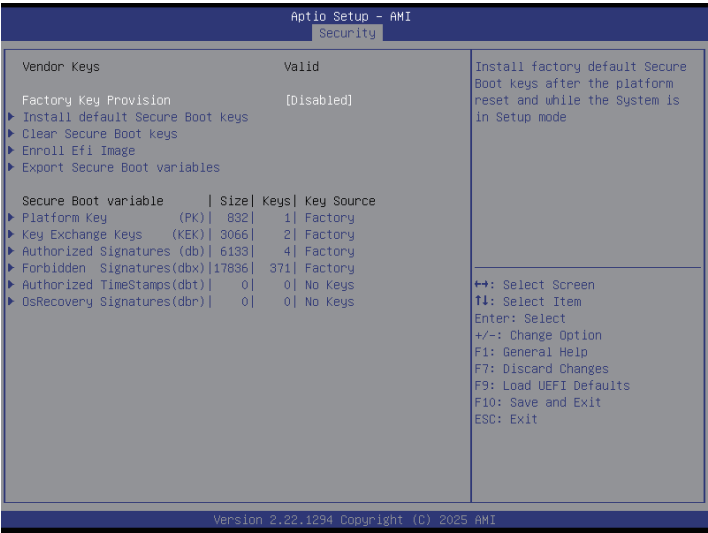

Factory Key Provision

Install factory default Secure Boot keys after the platform reset and while the System is in Setup mode.

Install Default Secure Boot Keys

Please install default secure boot keys if it's the first time to use secure boot.

Clear Secure Boot Keys

This force system to setup Mode-Clear all Secure Boot Variables. Change takes effect after reboot.

Enroll Efi Image

Allow the image to run in Secure Boot mode. Enroll SHA256 hash of the binary into Authorized Signature Database (db).

Export Secure Boot Variables

Copy NVRAM content of Secure Boot variables to files in a root folder on a file system device.

Platform Key (PK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Key Exchange Keys (KEK)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Authorized Signatures (db)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

- a) EFI_SIGNATURE_LIST
- b) EFI_CERT_X509 (DER)
- c) EFI_CERT_RSA2048 (bin)
- d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Forbidden Signatures (dbx)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

Authorized TimeStamps (dbt)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX

2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

OsRecovery Signatures (dbr)

Enroll Factory Defaults or load certificates from a file:

1. Public Key Certificate in:

a) EFI_SIGNATURE_LIST

b) EFI_CERT_X509 (DER)

c) EFI_CERT_RSA2048 (bin)

d) EFI_CERT_SHAXXX


2. Authenticated UEFI Variable

3. EFI PE/COFF Image(SHA256)

Key Source: Factory, External, Mixed

3.7 Boot Screen

In this section, it will display the available devices on the system for configuring the boot settings and the boot priority.

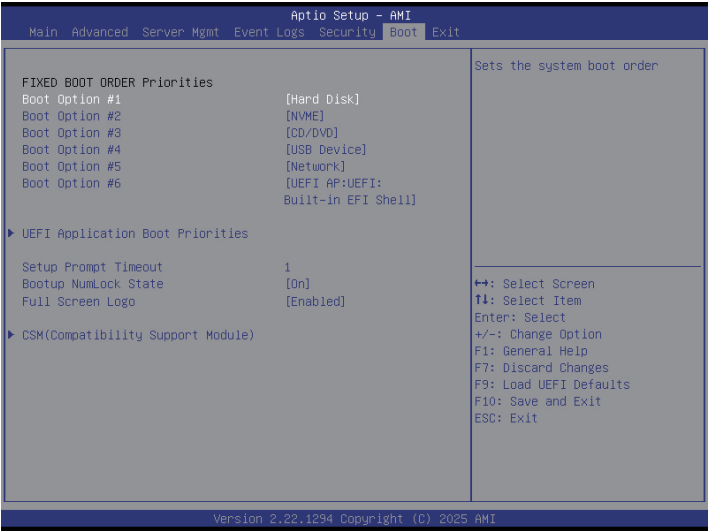

Boot Option #1/#2/#3/#4/#5/#6

Use this to set the system boot order.

UEFI Application Boot Priorities

Specifies the Boot Device Priority sequence from available UEFI Application.

Setup Prompt Timeout

Configure the number of seconds to wait for the UEFI setup utility.

Bootup NumLock State

Select whether Num Lock should be turned on or off when the system boots up.


Full Screen Logo

Enable to display the boot logo or disable to show normal POST message.

CSM(Compatibility Support Module)

Enable to launch the Compatibility Support Module. If using Windows 8 or later versions 64-bit UEFI and all of the devices support UEFI, it may also disable CSM for faster boot speed.

3.8 Exit Screen

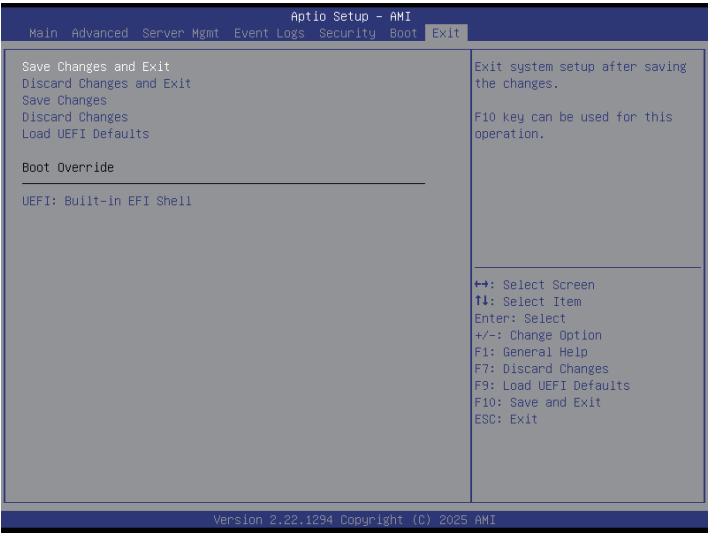

Save Changes and Exit

When selecting this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When selecting this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Save Changes

When selecting this option, the following message “Save changes?” will pop-out. Select [Yes] to save all changes.

Discard Changes

When selecting this option, the following message “Discard changes?” will pop-out. Select [Yes] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Chapter 4 Software Support

After all the hardware has been installed, it suggests to go to the official website at <http://www.ASRockRack.com> and make sure if there are any new updates of the BIOS / BMC firmware for the motherboard.

4.1 Download and Install Operating System

This motherboard supports various Microsoft® Windows® Server / Linux compliant operating systems. Please download the operating system from the OS manufacturer. Please refer to the OS documentation for more instructions.

4.2 Download and Install Software Drivers

This motherboard supports various Microsoft® Windows® compliant drivers. Please download the required drivers from the website at <http://www.ASRockRack.com>.

To download necessary drivers, go to the product page, click on the "Download" tab, choose the operating system that is used, and then download the using driver.

Chapter 5 Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot the system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard.
Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR5 RDIMM/RDIMM 3DS.
3. Install more than one DIMM modules that should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether the power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to the related problem on ASRock Rack's FAQ page:
<http://www.asrockrack.com/support>

5.2 Technical Support Procedures

If the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

Contact ASRock Rack's technical support at:
<http://www.asrockrack.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of the invoice marked with the date of purchase is required. By calling the vendor or going to RMA website (<http://event.asrockrack.com/tsd.asp>) to obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when returning the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact the distributor first for any product related problems during the warranty period.

Contact Information

If it needs to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

ASRock Rack Incorporation

e-mail: ASRockRack_sales@asrockrack.com

ASRock Rack Europe B.V.

Bijsterhuizen 11-11

6546 AR Nijmegen

The Netherlands

Phone: +31-24-345-44-33

ASRock Rack America Inc.

4331 Eucalyptus Ave., Chino, CA 91710 U.S.A.

Phone: +1-909-590-8308

Fax: +1-909-590-1026