

Steps to Update the Renoir Supported BIOS

Requirements:

1. EFI bootable USB disk

(To create a EFI bootable disk, please unzip the EFI.zip and place the entire EFI folder into your USB disk root directory)

Download the EFI.zip from the following link:

<https://download.asrock.com/TSD/Desktop/RBU/EFI.zip>

2. BIOS update package

Download the BIOS update package from the following link:

X570_Extreme4

https://download.asrock.com/TSD/Desktop/RBU/X570_Extreme4.zip

Update steps:


Step 1. Extract the **X570_Extreme4.zip** and place the entire folder **X570_Extreme4** into EFI bootable disk.

Step 2. Remove all storage devices from your system.

Step 3. Insert the EFI bootable disk to a USB port.

Step 4. Boot the system and press F11 key to enter the boot menu.

Step 5. Select the EFI USB drive and press the enter key to boot into your USB drive.

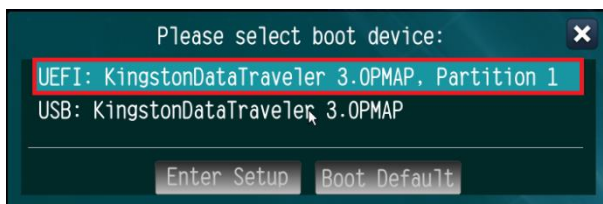

Step 6. Change the root to your USB drive by typing the following command:

Fs0:

```
Shell> fs0:
```

Step 7. Go into the **X570_Extreme4** folder by typing the following command:

cd X570_Extreme4

```
fs0:\> cd X570_Extreme4
```

Step 8. Update the BIOS by typing the command:

BIOSUPDATE.nsh

```
fs0:\X570_Extreme4> BIOSUPDATE.nsh_
```