



OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

1U2S-C262/F10

User Manual

English



Version 1.00

Published Sep. 2026

Copyright©2026 ASRock Rack Inc. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this server motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

Setting up the Server in a Restricted Access Location/Restricted Access Area

- Access can only be gained by service persons aware the reasons for the restrictions applied to the location and about any precautions that shall be taken.
- Access is through the use of a tool or lock and key, or other means of security, and is controlled by the authority responsible for the location.
- Leave enough clearance (25 inches in the front and 30 inches in the back of the rack) to allow the front door to be opened completely and to allow for sufficient airflow.
- This product is for installation merely in a Restricted Access Location.
- This product is not suitable for use with visual display work place devices according to §2 of the German Ordinance for Work with Visual Display Units.
- Only skilled person can remove the chassis covers to access the inside of the system.

ASRock Rack's Website: www.ASRockRack.com

Replaceable Batteries

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

Piles remplaçables


ATTENTION

**RISQUE D'EXPLOSION SI LA PILE EST REMPLACÉE PAR UN TYPE INCORRECT.
ÉLIMINEZ LES PILES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS**

Warning

When removal of the chassis lid required for servicing:

- Turn off power and unplug any power cords/cables, and
- Reinstall the chassis lid before restoring power.

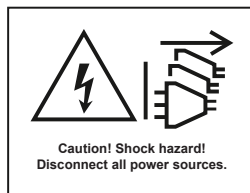

Avertissement

Lorsque le retrait du couvercle du boîtier est nécessaire pour l'entretien :

- Coupez l'alimentation et débranchez tous les cordons/câbles d'alimentation, et
- Réinstallez le couvercle du boîtier avant de rétablir l'alimentation.

Important Safety Instructions

Pay close attention to the following safety instructions before performing any of the operation. Basic safety precautions should be followed to protect yourself from harm and the product from damage:

- Operation of the product should be carried out by suitably trained, qualified, and certified personnel only to avoid risk of injury from electrical shock or energy hazard.
- Disconnect the power cord from the power source when installing or removing main system components, such as the server motherboard and power supply unit.
- Place the system on a stable and flat surface.
- Use extreme caution when working with high-voltage components.
- When handling parts, use a grounded wrist strap designed to prevent static discharge.
- Keep the area around the system clean and clutter-free.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags when not in use.
- Handle a board by its edges only; do not touch its components, peripheral chips, memory modules or contacts.
- The power cord must be connected to a socket or outlet with a ground connection.

Contents

Chapter 1 Introduction	1
1.1 Shipping Box Contents	2
1.2 Specifications	3
Chapter 2 Server System Overview	6
2.1 System Components	6
2.2 Internal Features	7
2.3 System Front Panel	8
2.4 System Rear Panel	8
2.5 I/O Panel	9
2.6 PSU LED	12
Chapter 3 Hardware Installation and Maintenance	13
3.1 Server Top Cover	15
3.2 Hard Drive	16
3.3 Power Supply	19
3.4 System Fan	21
3.5 Add-in Card	22
Chapter 4 Server Motherboard (EC262D4-4L)	24
4.1 Layout	24
4.2 Block Diagram	27
4.3 Installing the CPU (LGA1700 Socket)	28
4.4 Installing the Heatsink	30
4.5 Installing the Memory Modules (DIMM)	31
4.6 Replacing the CMOS Battery	32
Appendix	34
Installing the Server in a Rack	34

Chapter 1 Introduction

Thank you for purchasing 1U2S-C262/FIO, a reliable barebone system produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

This guide provides the instructions of insertion and extraction of chassis components, such as chassis covers, system fans, power supplies, hard drive trays, and other main components this system supports. If the system is pre-installed a server motherboard, refer to the server motherboard user manual for the information of the server motherboard components, specifications and BIOS settings.

System	ASRock Rack Server Motherboard
1U2S-C262/FIO	EC262D4-4L



Because the hardware specifications might be updated, the content of this documentation will be subject to change without notice.



The illustrations shown in this manual are for reference purposes only and may not exactly match the model purchased.



If requiring technical support related to this system, please visit the website for specific information about the using model.
<https://www.asrockrack.com/support/>

1.1 Shipping Box Contents

Item	Quantity
Server Barebone: 1U2S-C262/FIO	1
CPU Heatsink	1
Rail Kit	1
Accessory Box	1
- 2 Power Cords (18AWG)	
- 1 Screw for M.2 Socket	

 *If any items are missing or appear damaged, contact the authorized dealer.*

1.2 Specifications

1U2S-C262/FIO	
System	
Form Factor	1U Rackmount
Dimension	365.9 x 430 x 43.5 mm (14.41" x 16.93" x 1.71")
Support Motherboard	EC262D4-4L
Front Panel	
Button	Power, UID
LED	Power, UID, System event, HDD activity
I/O Port	1 DB15 (VGA) 1 DB9 (COM) 2 Type-A (USB 3.2 Gen1) 4 RJ45 (1 GbE)
IPMI LAN	1 Dedicated IPMI
Drive Bay / Storage	
Internal Side	2 Fixed 2.5" SATA (7mm) drive bays 1 M-key (PCIe4.0 x4); supports 2280/2260/2242/2230 form factor [PCH]
Power Supply	
Type	1+1 RPSU
Output Watt	450W
Efficiency	80-PLUS Platinum
System Fan	
Fan	3 PWM 40 x 56 mm dual-roter fans
Processor System	
CPU	Supports Intel® Xeon® 6300-series, Xeon® E-2400 series, and Pentium® Gold G7400/G7400T processors
Socket	Single Socket LGA1700
Thermal Design Power	Max. up to 95W (TDP)
Chipset	Intel® C262

System Memory	
Supported DIMM Quantity	4 DIMM slots (2DPC)
Supported Type	DDR5 288-pin ECC UDIMM
Max. Capacity per DIMM	32GB
Max. DIMM Frequency	4400MT/s (2SPC - 1DIMM) 4000MT/s (2SPC - 2DIMM 1R) 3600MT/s (2SPC - 2DIMM 2R)
Voltage	1.1V
PCIe Expansion Slot	
PCIe x16	1 FHHL PCIe5.0 x16 via RB1UX16R_G5 (SLOT6)
Ethernet	
Additional Ethernet Controller	4 RJ45 (1 GbE) by Intel® i210
Server Management	
BMC Controller	ASPEED AST2600
Dedicated IPMI LAN	1 RJ45 dedicated IPMI LAN port by Realtek RTL8211F
Graphics	
Controller	ASPEED AST2600: 1 DB15 (VGA)
System BIOS	
BIOS Type	AMI 256Mb SPI Flash ROM
BIOS Feature	Plug and Play, ACPI 6.4 (and above) compliance wake-up events, SMBIOS 2.8 and above, ASRock Rack Instant Flash

Hardware Monitor	
Temperature	CPU, Temp MB1 ~ MB4, DDR5, PCH, M.2, TR1 temperature sensing
Fan	Fan tachometer CPU quiet fan (allows chassis fan speed auto-adjust by CPU temperature) Fan multi-speed control
Voltage	3VSB, 5VSB, CPU_VCORE, VCCIN_AUX, VDD2, 1.05V_PCH, 0V82SB_PCH, 1V8SB, VCCSA, BAT, 3V, 5V, 12V
Environment	
Temperature	Operating temperature: 10°C ~ 35°C Non-operating temperature: -40°C ~ 70°C
Humidity	Non-operating humidity: 20% ~ 90% (non-condensing)




The specification is subject to change without notice in advance.


Chapter 2 Server System Overview

This chapter provides diagrams showing the location of important components of the server system.

2.1 System Components

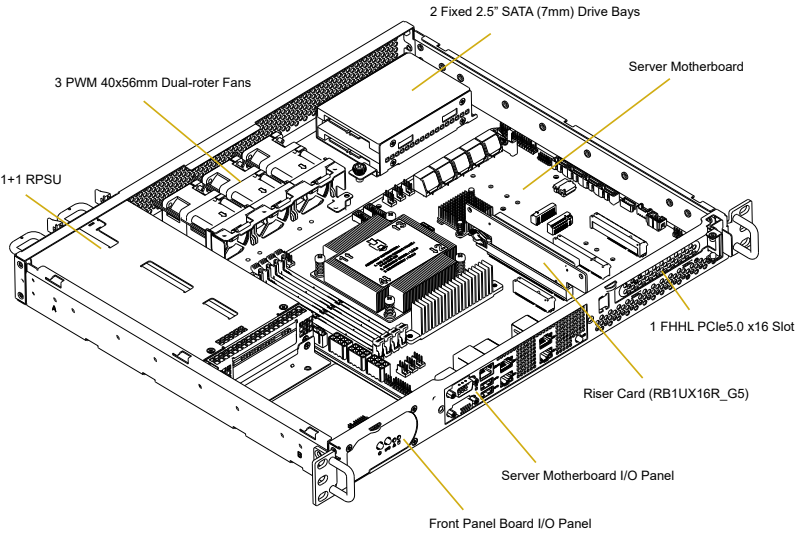


2.2 Internal Features

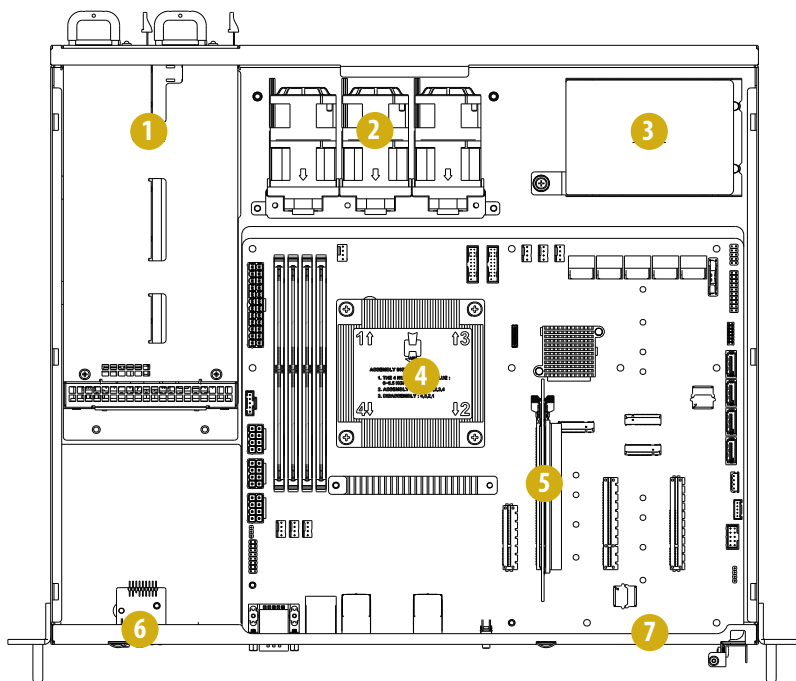


No.	Description
1	1+1 RPSU
2	3 PWM 40 x 56 mm dual-roter fans
3	2 Fixed 2.5" SATA (7 mm) drive bays
4	Server motherboard (MB)
5	Riser Card (RB1UX16R_G5)
6	Front panel board (FPB)
7	1 FHHL PCIe5.0 x16 slot

2.3 System Front Panel

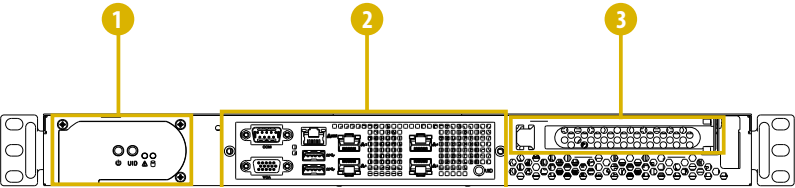

No.	Description
1	Front panel board I/O panel
2	Server motherboard I/O panel
3	1 FHHL PCIe5.0 x16 slot


2.4 System Rear Panel

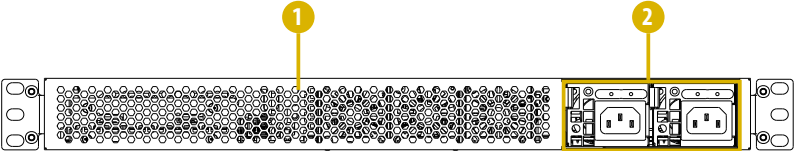

No.	Description
1	Rear vent
2	1+1 RPSU


2.5 I/O Panel

FPB I/O Panel

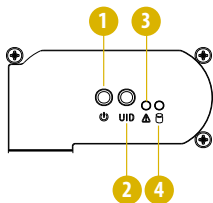

No.	Description
1	Power button w/ LED
2	UID button w/ LED
3	System event LED
4	HDD activity LED

MB I/O Panel

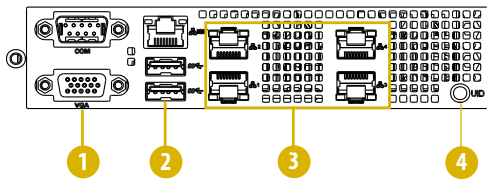

No.	Description
1	Top: 1 DB9 (COM) port Bottom: 1 DB15 (VGA) port
2	Top: 1 Dedicated IPMI LAN port Bottom: 2 Type-A (USB 3.2 Gen1) ports
3	4 RJ45 (1 GbE) LAN ports
4	UID button w/ LED

Power Button

Press the power switch button to toggle the system power on and standby/sleep modes. To remove all power from the system completely, disconnect the power cord from the server.

UID Button

Press the UID buttons to toggle the UID LEDs on and off.



1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.

2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.

Status LED Definitions


Power LED	
Status	Description
Off	Power off
Green	Power on

UID LED	
Status	Description
Off	System identification is disabled.
Blue	System identification is active.

System Event LED	
Status	Description
Off	Normal
Red	System fault

HDD Activity LED	
Status	Description
Off	Drive inactive
Blinking Yellow	Drive active


Front Dedicated IPMI LAN Port

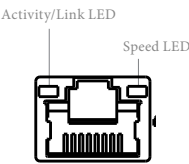

Activity/Link LED	
Status	Description
Off	No link
Blinking Yellow	Data activity
On	Link

Speed LED	
Status	Description
Off	10Mbps connection or no link
Orange	100Mbps connection
Green	1Gbps connection


Front RJ45 (1 GbE) LAN Port

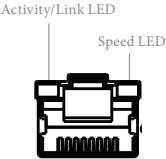

Activity/Link LED	
Status	Description
Off	No link
Blinking Yellow	Data activity
On	Link

Speed LED	
Status	Description
Off	10Mbps connection or no link
Orange	100Mbps connection
Green	1Gbps connection

2.6 PSU LED

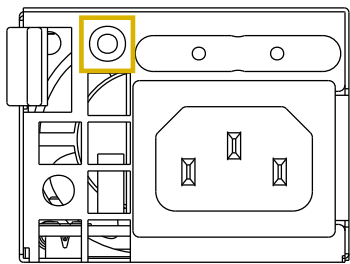

Status	Description
Off	No AC power to all PSUs
1Hz Blinking Red	No AC power to the blinking PSU only
Red	Power supply failure
1Hz Blinking Green	AC present/only standby output on
Green	Power supply DC output ON and OK
1 Hz Blinking Red/Green	Power supply warning

Chapter 3 Hardware Installation and Maintenance

This chapter helps user to assemble the chassis and install components.

Before You Begin

Before working with the server, pay close attention to the “Important Safety Instructions” at the beginning of this manual.



1. Ensure the motherboard battery is installed before unplugging the power cord or installing/removing the motherboard.
2. Before installing or removing any component, ensure that the power supply is off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.



1. Veuillez vous assurer que la batterie de la carte mère est installée avant de débrancher le cordon d'alimentation ou d'installer/retirer la carte mère.
2. Avant d'installer ou de retirer n'importe quel composant, veuillez vous assurer que l'appareil est hors tension ou que le cordon d'alimentation est débranché de sa source d'alimentation. Le non-respect de cette consigne peut causer de graves dommages à la carte mère, aux périphériques et/ou aux composants.

1. Make sure the server is powered off.

Power down the server if it is still running.

- (1) Press the Power button to power off the server from full-power mode to standby-power (sleep) mode. The Power LED at the front turns from solid green to blinking green.
- (2) Disconnect the power cord first from the AC outlet and then from the server. The power LED turns off.



The server is not completely powered down when pressing the Power button on the front panel. The Power button lets the server toggle between Power On and Standby (Sleep) modes. Some internal circuitry remain active in the Standby mode. To remove all power from the system completely, be sure to disconnect the power cord from the server.



Le serveur n'est pas complètement hors tension lorsque vous appuyez sur le bouton d'alimentation situé sur le panneau avant. Le bouton d'alimentation permet au serveur de basculer entre les modes Marche et Veille (Sleep). Certains circuits internes restent actifs en mode veille. Pour couper complètement l'alimentation du système, veillez à débrancher le cordon d'alimentation du serveur.

2. Ensure having a clean and stable working environment. Avoid dust and dirt because contaminants may cause malfunctions.
3. Ground properly before touching any system component. A discharge of static electricity may damage components. Wear a grounded wrist strap if available.



1. *Some components are already pre-installed. Simply properly connect the relevant cables before or after installation.*
2. *Refer to the server motherboard user manual for instructions on how to install server motherboard components.*

3.1 Server Top Cover

Removing the Server Top Cover




1. Before removing the top cover, power off the server and unplug the power cord.
2. The system must be operated with the chassis top cover installed to ensure proper cooling.




1. Avant de retirer le couvercle supérieur, mettez le serveur hors tension et débranchez le cordon d'alimentation.
2. Le système doit être utilisé avec le couvercle supérieur du boîtier installé pour assurer un refroidissement correct.

1. Hand-release the thumbscrew securing the top cover to the chassis.
2. Push the cover toward the FRONT of the chassis to release the cover from the locked position. Lift up and remove the cover.

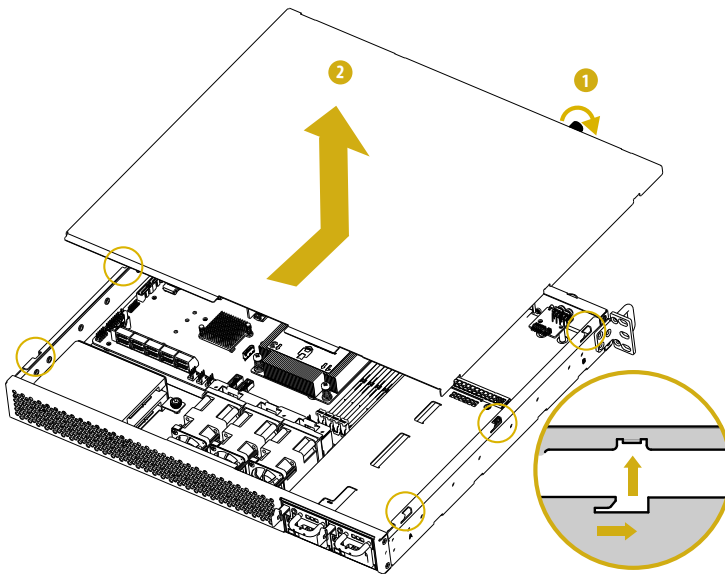

Installing the Server Top Cover


1. Lower the top cover on the chassis, making sure the side latches align with the cutouts.
Slide the top cover toward the REAR of the chassis.
2. Secure the top cover in place with the thumbscrew.

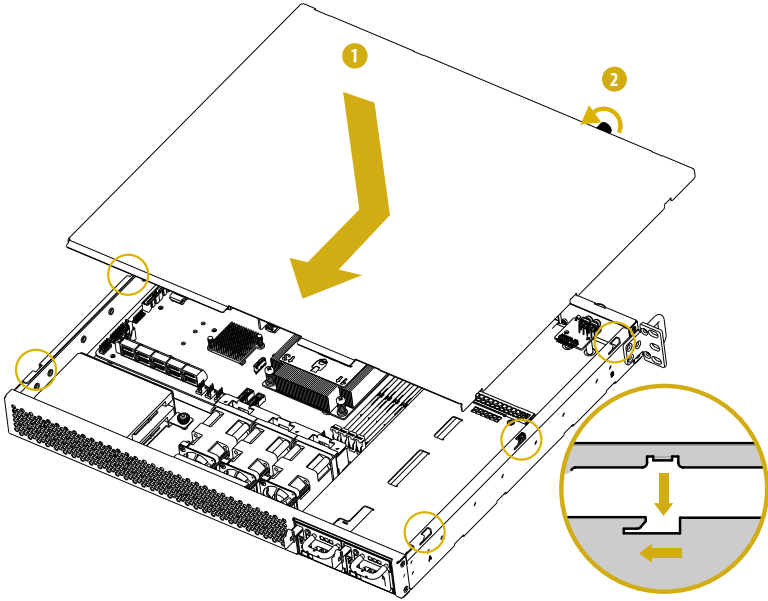


3.2 Drive

Installing 2.5" Drive to the Chassis


1. Hand-release the thumbscrew securing the drive tray to the chassis.
2. Push the tray toward the fans to release the tray from the locked position. Lift up and remove the tray.

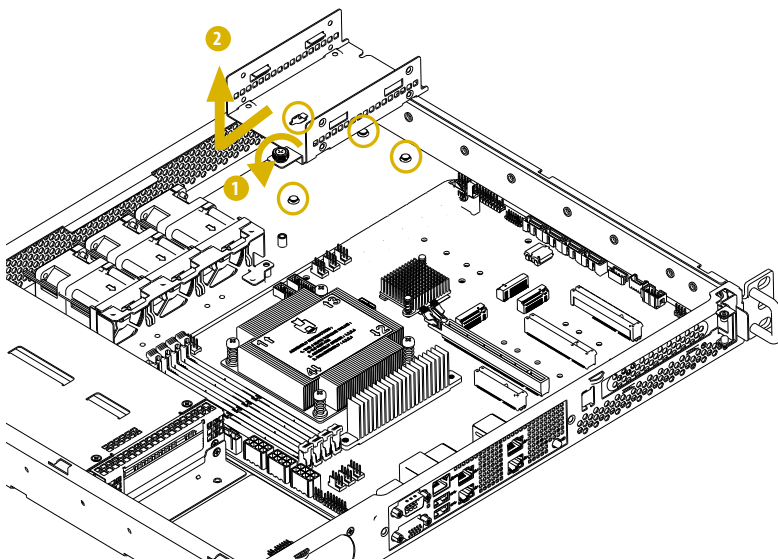

3. Place the 2.5" drives into the tray. Align the mounting holes in the drives and the tray.
4. Secure the drives to the tray with the screws.

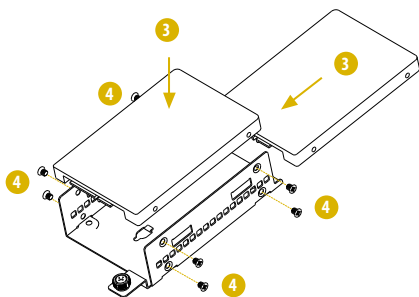

5. Place the drive assembly back to the chassis.
6. Secure the assembly to the chassis with the thumbscrew.

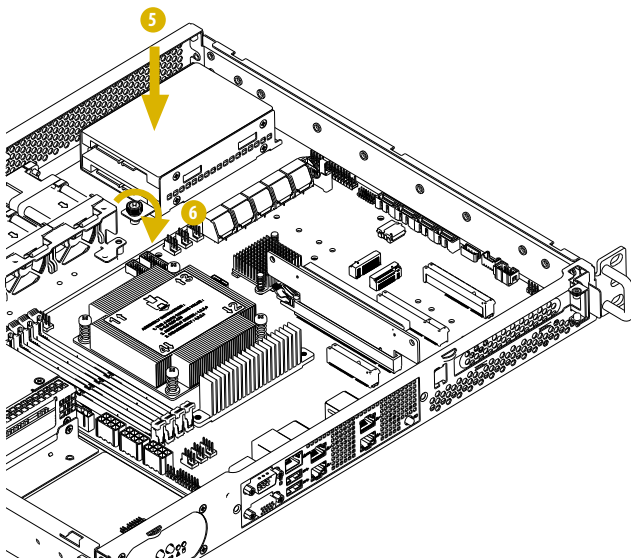

3.3 Power Supply

The system can accommodate 2 power supply units in the bay at the rear of the chassis. 1 PSU is required for full load operation, with the other PSU purely as redundant, load-sharing backup. 1 PSU can be removed without affecting system operation.

Removing the Power Supply Unit




1. Before replacing the power supply, power off the server, unplug the power cord, and disconnect all wiring from the power supply.
2. The redundant system does not require powering down the server.

1. Hold onto the power supply handle while pressing the locking lever towards the power supply handle.


Note: The illustration is for references only. The actual PSU type may be slightly different by models.

2. Pull out the PSU from the chassis.

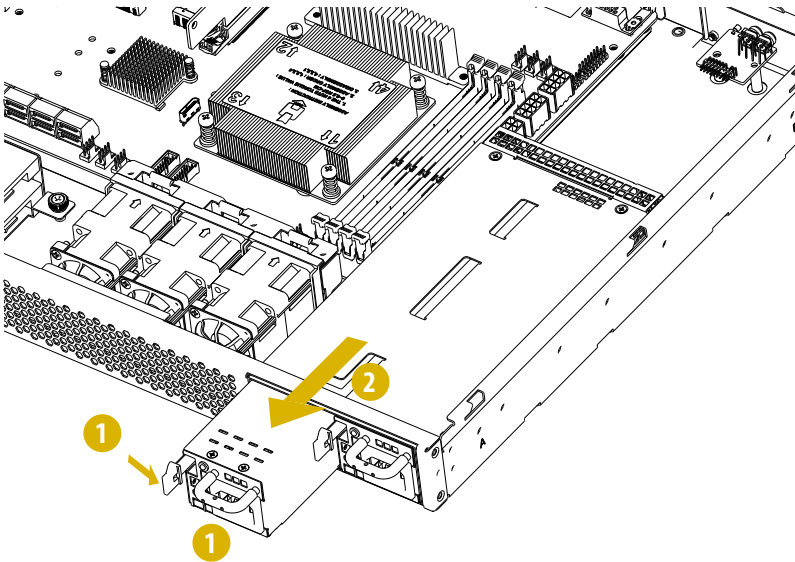

Installing the Power Supply Unit


1. Align the power supply unit with the power supply bay.
2. Carefully slide the PSU all the way into the power supply bay until it clicks in place.

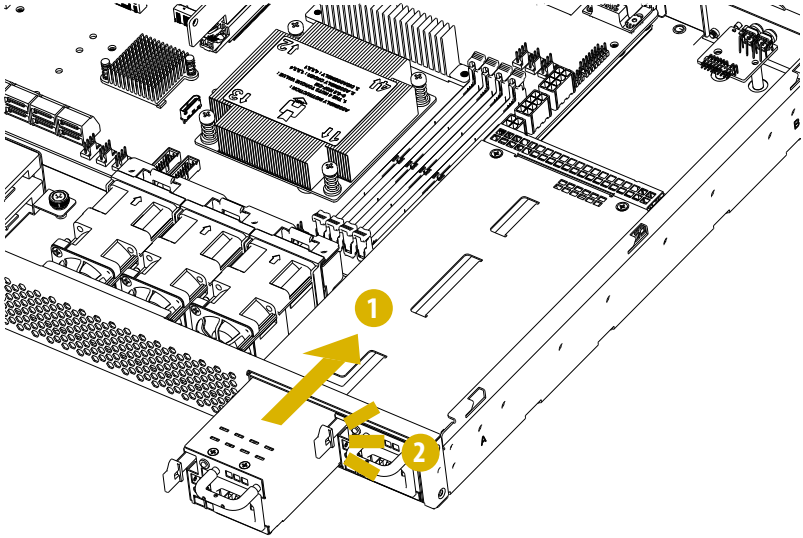

3.4 System Fan

Replacing the System Fan

1. Unplug the fan connector.
2. Press the clip and remove the failed fan.
3. Align the mounting holes on the fan bar with the fan mounts on the replacement fan.
4. Gently place the fan on the fan bar. Make sure the fan is well seated.
5. Plug the fan connector.

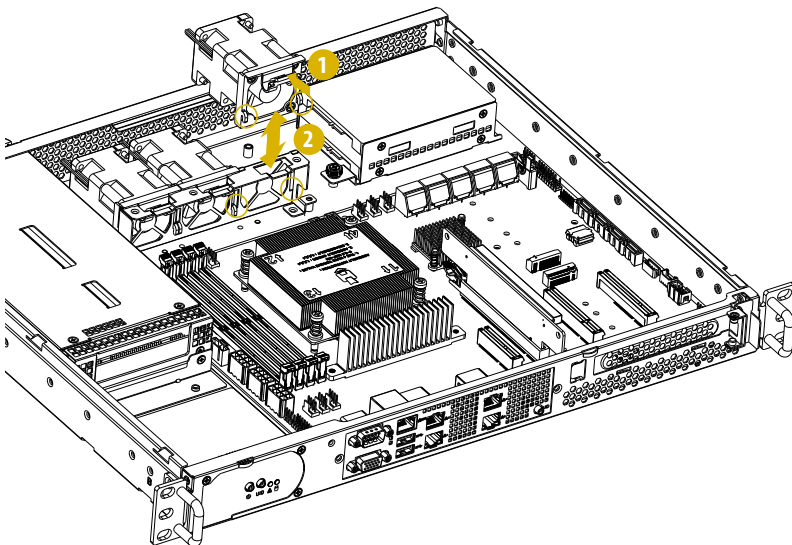

3.5 Add-in Card




Before installing the add-in card, power off the server and unplug the power cord.




Avant d'installer la carte d'extension, mettez le serveur hors tension et débranchez le cordon d'alimentation.

Installing the Add-in Card

1. Remove the screw securing the blanking plate on the chassis.
2. Rotate the latch down.
3. Slide the blanking plate to the right to release it from the locked position. Remove the blanking plate.

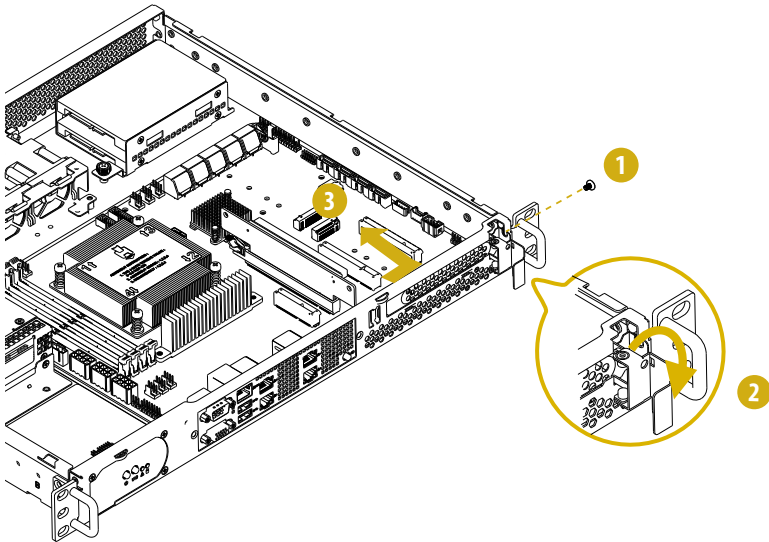


4. Install the add-in card to the riser card on the server motherboard.
5. Rotate the latch up.
6. Secure the latch with the screw.

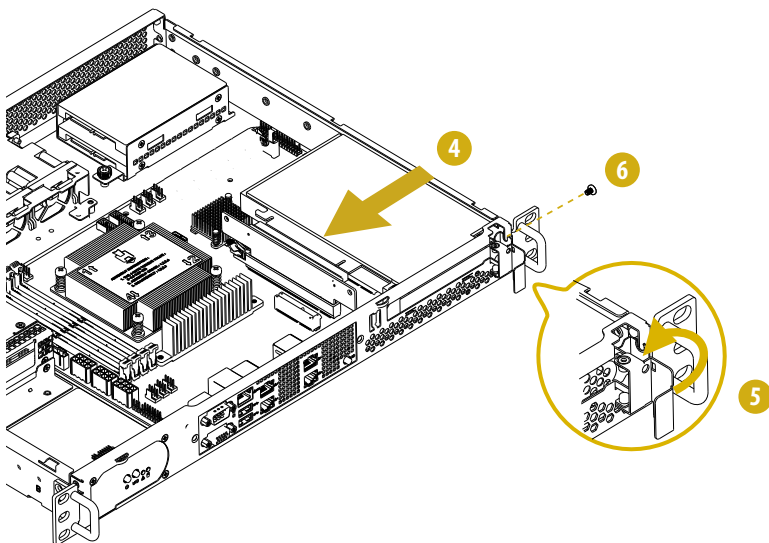

Chapter 4 Server Motherboard (EC262D4-4L)

4.1 Layout

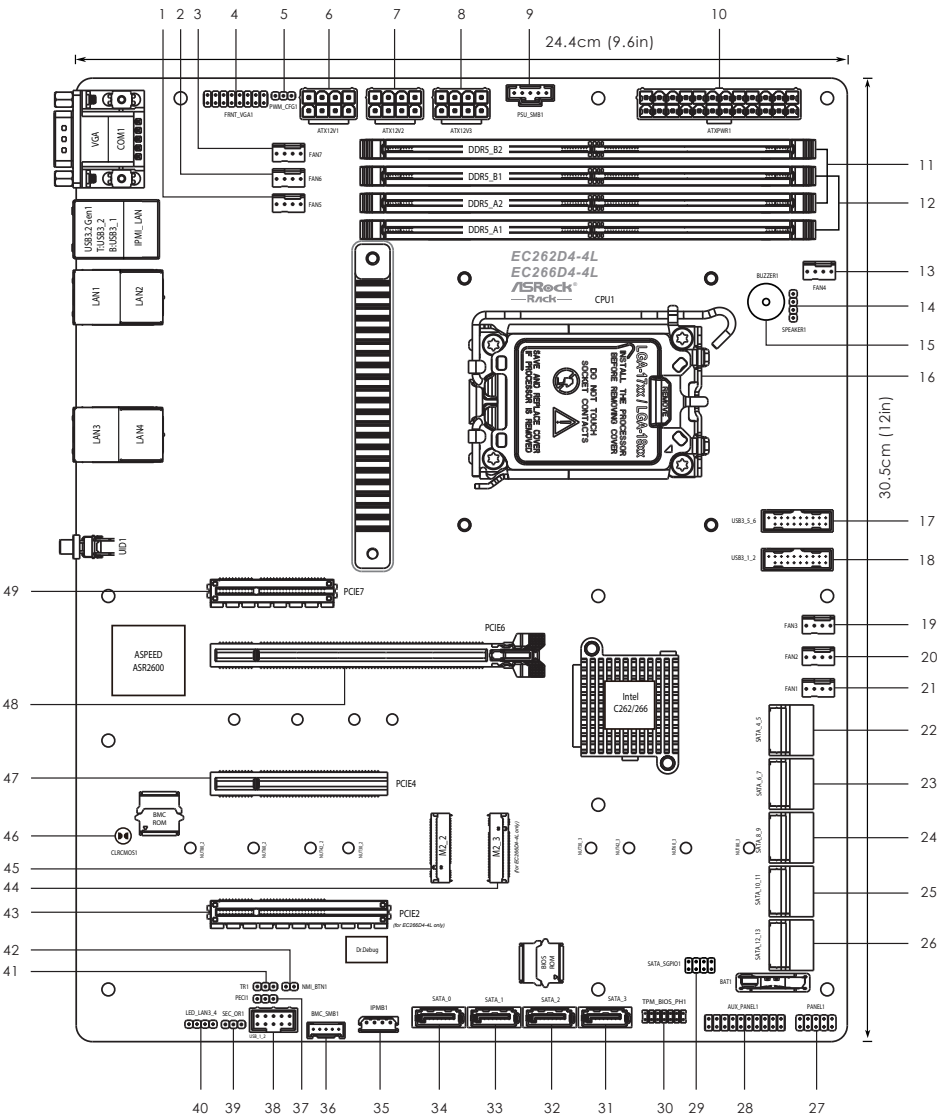

No.	Description
1	Chassis Fan Header (FAN5)
2	Chassis Fan Header (FAN6)
3	Chassis Fan Header (FAN7)
4	Front VGA Header (FRNT_VGA1)
5	PWM Configuration Header (PWM_CFG1)
6	ATX 12V Power Connector (ATX12V1)
7	ATX 12V Power Connector (ATX12V2)
8	ATX 12V Power Connector (ATX12V3)
9	PSU SMBus Header (PSU_SMB1)
10	ATX Power Connector (ATXPWR1)
11	2 x 288-pin DDR5 DIMM Slots (DDR5_A2, DDR5_B2)
12	2 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_B1)
13	Chassis Fan Header (FAN4)
14	Chassis Speaker Header (SPEAKER1)
15	BUZZER1
16	LGA1700 CPU Socket (CPU1)
17	USB 3.2 Gen1 Header (USB3_5_6)
18	USB 3.2 Gen1 Header (USB3_1_2)
19	Chassis Fan Header (FAN3)
20	Chassis Fan Header (FAN2)
21	Chassis Fan Header (FAN1)
22	SATA3 Connectors (SATA_4)(Lower), (SATA_5)(Upper)
23	SATA3 Connectors (SATA_6)(Lower), (SATA_7)(Upper)
24	SATA3 Connectors (SATA_8)(Lower), (SATA_9)(Upper)
25	SATA3 Connectors (SATA_10)(Lower), (SATA_11)(Upper)
26	SATA3 Connectors (SATA_12)(Lower), (SATA_13)(Upper)
27	System Panel Header (PANEL1)
28	Auxiliary Panel Header (AUX_PANEL1)
29	SATA SGPIO Connector (SATA_SGPIO1)
30	SPI TPM Header (TPM_BIOS_PH1)
31	SATA3 Connector (SATA_3)
32	SATA3 Connector (SATA_2)
33	SATA3 Connector (SATA_1)
34	SATA3 Connector (SATA_0)


No.	Description
35	Intelligent Platform Management Bus Header (IPMB1)
36	BMC SMBus Header (BMC_SMB1)
37	CPU PECI Mode Jumper (PECI1)
38	USB 2.0 Header (USB_1_2)
39	Security Override Jumper (SEC_OR1)
40	Front LAN LED Connector (LED_LAN3_4)
41	Thermal Sensor Header (TR1)
42	Non Maskable Interrupt Button (NMI_BTN1)
43	PCI Express 4.0 x4 Slot (PCIE2) <i>(for EC266D4-4L only)</i>
44	M.2 Socket (M2_3) (Type 2230/2242/2260/2280) <i>(for EC266D4-4L only)</i>
45	M.2 Socket (M2_2) (Type 2230/2242/2260/2280)
46	Clear CMOS Pad (CLRCMOS1)
47	PCI Express 5.0 x8 Slot (PCIE4)
48	PCI Express 5.0 x16/x8 Slot (PCIE6)
49	PCI Express 4.0 x4 Slot (PCIE7)

4.3 Installing the CPU (LGA 1700 Socket)




1. Before inserting the 1700-Pin CPU into the socket, please check if the **PnP cap** is on the socket, if the CPU surface is unclean, or if there are any **bent pins** in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.


1

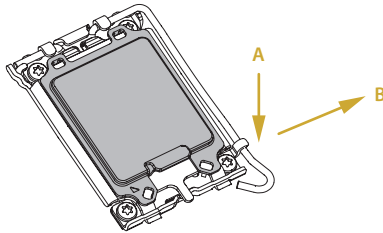


2

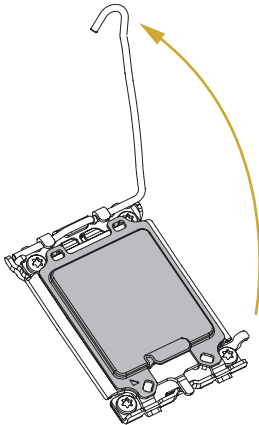

3

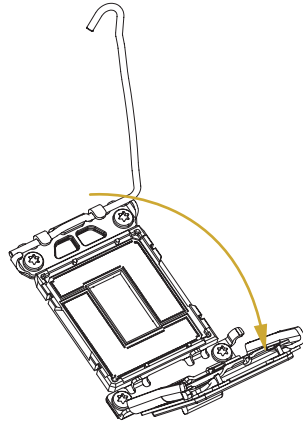


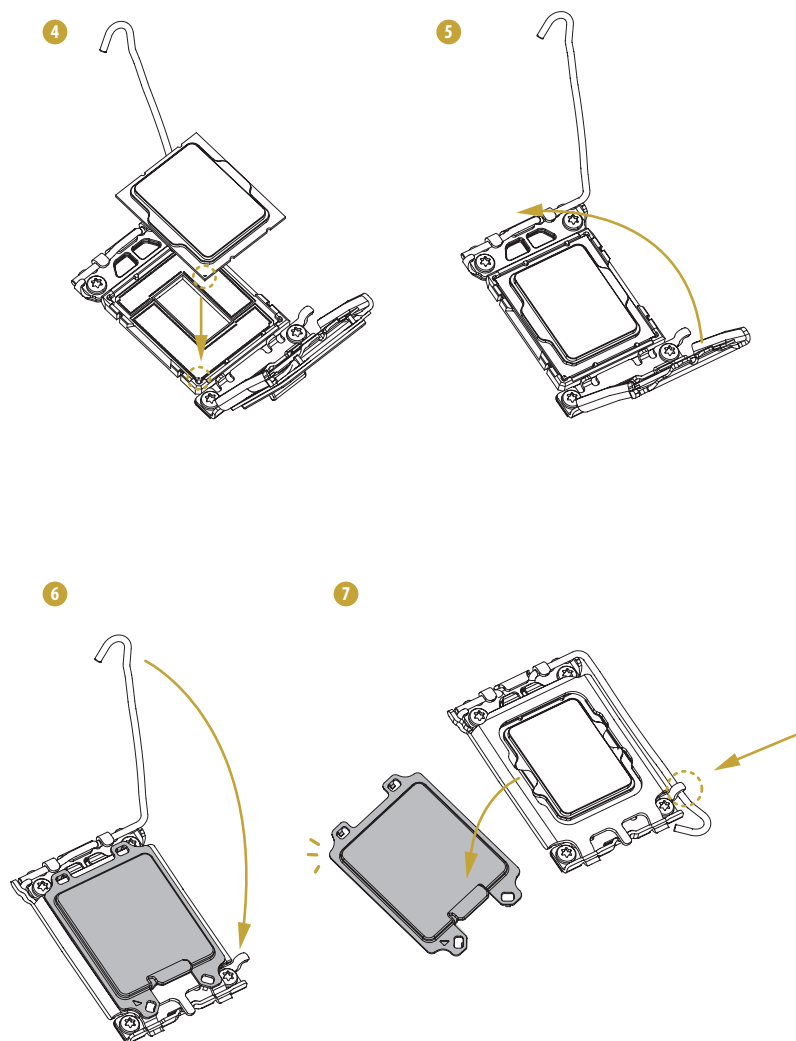


Please save and replace the cover if the processor is removed. The cover must be placed if wishing to return the motherboard for after service.

4.4 Installing the Heatsink

1

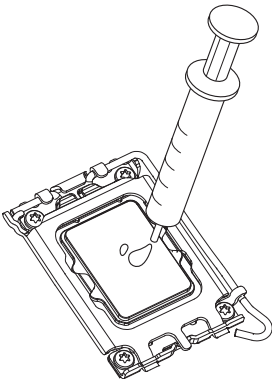

2

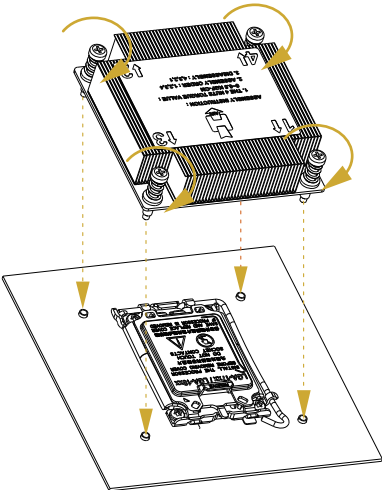


4.5 Installing the Memory Modules (DIMM)




The DIMM only fits in one correct orientation. It will cause permanent damage to the server motherboard and the DIMM if forcing the DIMM into the slot at incorrect orientation. For more information about DIMM installation, refer to the server motherboard user manual.


1

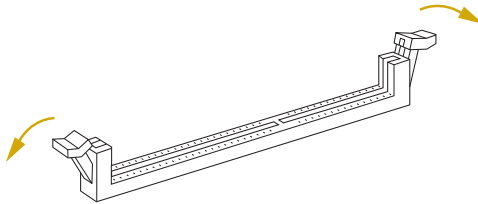

2

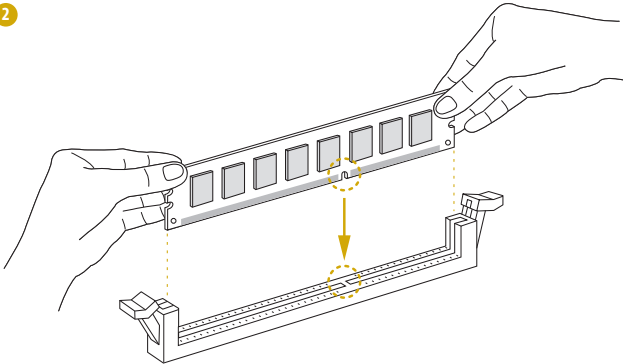

3

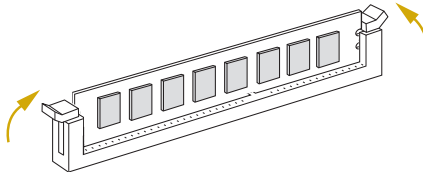

Illustrations in this User Manual are provided for reference only and may slightly differ from actual product appearances.

4.6 Replacing the CMOS Battery




1. Ensure the battery is installed before unplugging the power cord or installing/removing the motherboard.
2. Always turn off the system and unplug the power cord before replacing the battery.
3. For safety, please replace the battery with the same or equivalent type recommended by the manufacturer.
4. Dispose of the used batteries in accordance with local regulations.

Refer to the section **4.1 Layout** to locate the battery.

**The illustration is for reference only. The actual installation may be slightly different by socket design.*


Replacing the Flat Battery

1. Shut down and unplug the system. Gently press the socket clip.
2. Remove the battery when it pops up. Or press down on one end of the battery to pop it up and remove it.
3. Insert a new battery into the socket with the positive side (+ sign) facing up.
4. Press the battery down until it clicks into place.

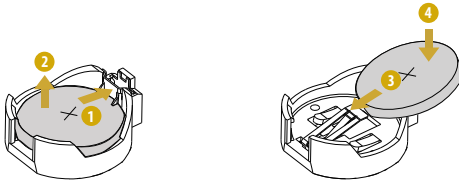

Replacing the Upright Battery

1. Shut down and unplug the system. Gently push the socket clip away from the battery.
2. Remove the battery.
3. Insert a new battery into the socket with the positive side (+ sign) facing the open side of the socket clip.
4. Press the battery down until it clicks into place.

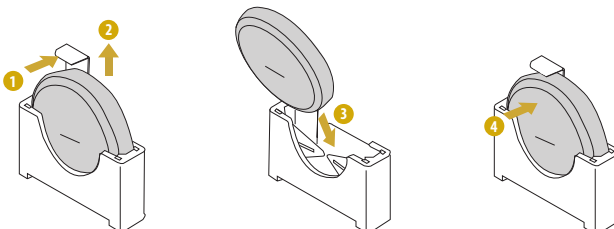

Replacing the Wired Battery

To replace a wired CMOS battery, completely power down the system and unplug it from the power source. Locate the old battery, carefully trace its wires to the small connector on the motherboard, and unplug it. Install a new battery in its place and connect it to the motherboard.




Appendix

Installing the Server in a Rack

This section describes how to rackmount the server with slide rail assembly.

☆ *The rails installation instructions in this manual are example only, the actual rail assembly procedure may differ slightly.*


The rail assembly consists of outer, middle and inner rail.

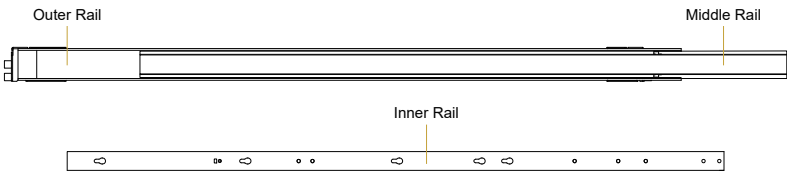

☆ *Each slide rail is labeled with either L or R, please identify prior to rail installation. Please install the rail labeled with L on the left side of rack, and the rail labeled with R on the right side of rack.*


Release the inner rail from the outer rail

Fully extend the inner rail from the rail assembly. Press the release latch on the inner rail to remove it.

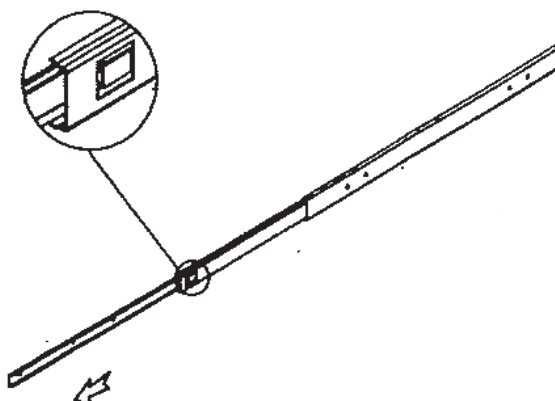


Attach the inner rail to the chassis

Secure 2 inner rails to the chassis with 12 M4 screws.

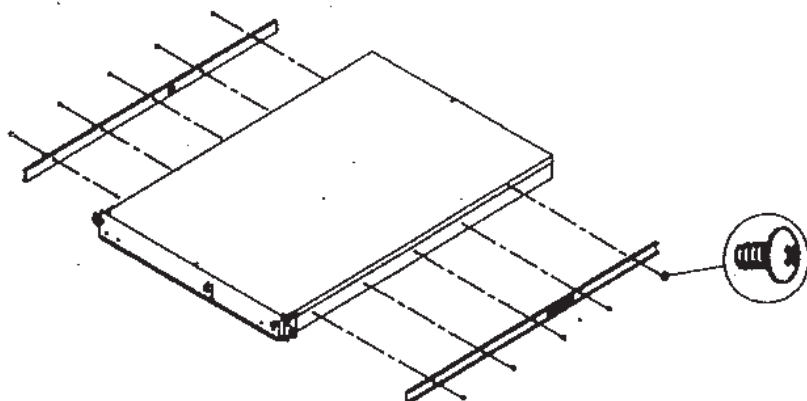


Attach the outer rail to the rack


1. Secure the L-shaped bracket to the outer rail with the black round-head screw.

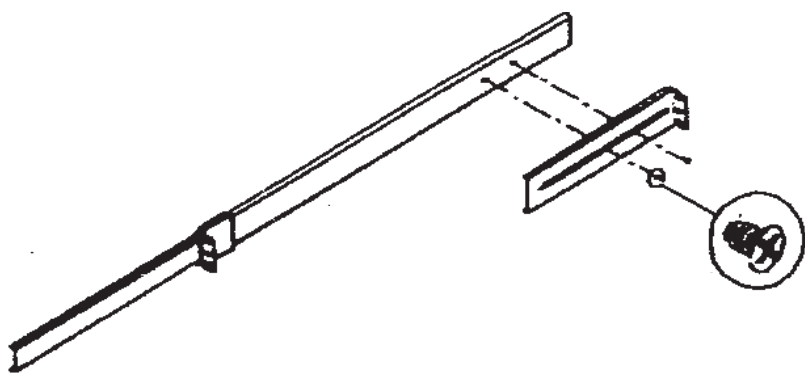


2. Tighten the M4 screw.

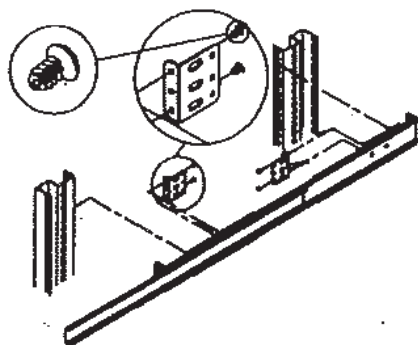

3. Tighten the M5 screw.

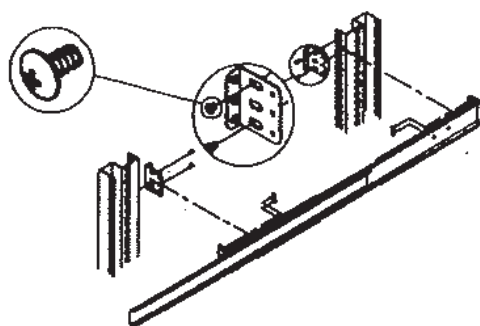


4. Tighten the M4 screw.

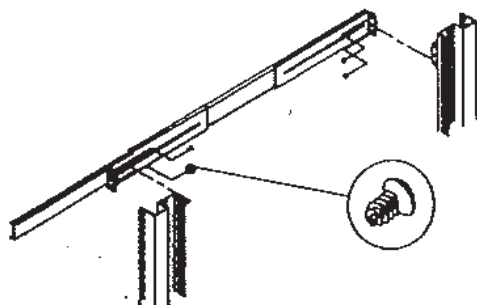

Mount the server in rack

Make sure the outer rail is locked to rack securely. Fully extend the middle rail out of the outer rail until locked. Aim the rail and slide the server into rack.

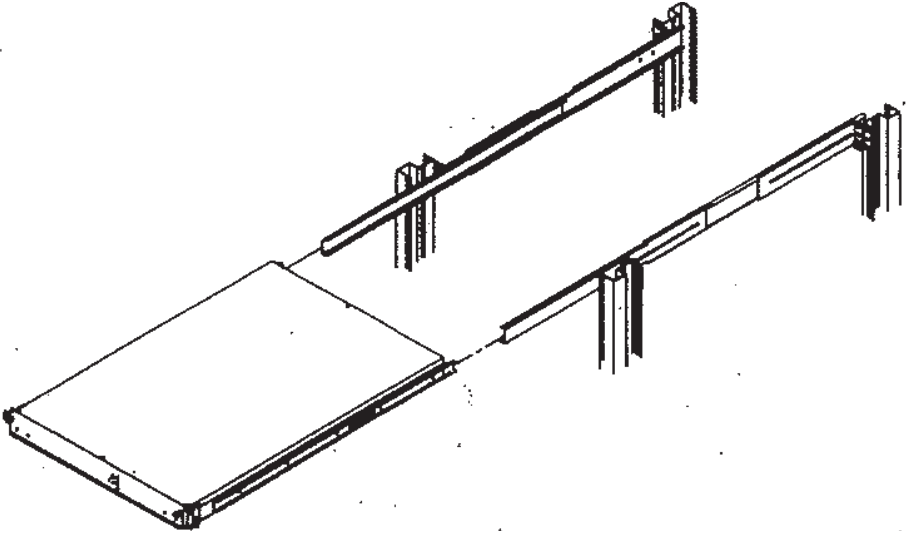

The server is heavy. For safe lifting, two or more persons are required to install the server into the rack.



When connecting cables to the server, make sure there is enough cable slack so sliding the server in and out of the rack without accidentally unplugging a cable.

Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

ASRock Rack Incorporation

e-mail: ASRockRack_sales@asrockrack.com

ASRock Rack EUROPE B.V.

Bijsterhuizen 11-11
6546 AR Nijmegen
The Netherlands
Phone: +31-24-345-44-33

ASRock Rack America, Inc.

4331 Eucalyptus Ave, Chino, CA 91710 U.S.A.
Phone: +1-909-590-8308
Fax: +1-909-590-1026