



OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

4UXGM-TURIN2

User Manual

English



Version 1.00

Published Jul. 2026

Copyright © 2026 ASRock Rack Inc. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this server motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

ASRock Rack’s Website: www.ASRockRack.com

Setting up the Server in a Restricted Access Location/Restricted Access Area

- Access can only be gained by service persons or by users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken.
- Access is through the use of a tool or lock and key, or other means of security, and is controlled by the authority responsible for the location.
- Leave enough clearance (25 inches in the front and 30 inches in the back of the rack) to allow the front door to be opened completely and to allow for sufficient airflow.
- This product is for installation merely in a Restricted Access Location.
- This product is not suitable for use with visual display work place devices according to §2 of the the German Ordinance for Work with Visual Display Units.
- Only skilled person and Instructed person can remove the chassis covers to access the inside of the system.

Replaceable Batteries

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

Warning

When removal of the chassis lid required for servicing:

- Turn off power and unplug any power cords/cables, and
- Reinstall the chassis lid before restoring power.



Important Safety Instructions

Pay close attention to the following safety instructions before performing any of the operation. Basic safety precautions should be followed to protect yourself from harm and the product from damage:

- Operation of the product should be carried out by suitably trained, qualified, and certified personnel only to avoid risk of injury from electrical shock or energy hazard.
- Disconnect the power cord from the wall outlet when installing or removing main system components, such as the server motherboard and power supply unit.
- Place the system on a stable and flat surface.
- Use extreme caution when working with high-voltage components.
- When handling parts, use a grounded wrist strap designed to prevent static discharge.
- Keep the area around the system clean and clutter-free.
- Keep all components and printed circuit boards (PCBs) in their antistatic bags when not in use.
- Handle a board by its edges only; do not touch its components, peripheral chips, memory modules or contacts.
- The power cord must be connected to a socket or outlet with a ground connection.

Contents

Chapter 1 Introduction	1
1.1 Shipping Box Contents	2
1.2 Specifications	3
Chapter 2 Server System Overview	6
2.1 System Components	6
2.2 Internal Features	7
2.3 System Front Panel	9
2.4 System Rear Panel	10
2.5 I/O Panel	11
2.6 LEDs	15
Chapter 3 Hardware Installation and Maintenance	18
3.1 Server Top Cover	19
3.2 E1.S Drive	21
3.3 Power Supply	23
3.4 System Fan	25
3.5 GPU Card and Add-in Card	27
Chapter 4 Server Motherboard (TURIN2D24XGM/500W)	33
4.1 Layout	33
4.2 Block Diagram	36
4.3 Installing the CPU and Heatsink (LGA 6906 Socket)	37
4.4 Installing the Memory Modules (DIMM)	42
Appendix	43
Installing the Server in a Rack	43

Chapter 1 Introduction

Thank you for purchasing 4UXGM-TURIN2, a reliable barebone system produced under ASRock Rack’s consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack’s commitment to quality and endurance.

This guide provides the instructions of insertion and extraction of chassis components, such as chassis covers, system fans, power supplies, drive trays, and other main components this system supports. If the system is pre-installed a server motherboard, refer to the server motherboard user manual for the information of the server motherboard components, specifications and BIOS settings.

System	ASRock Rack Server Motherboard
4UXGM-TURIN2	TURIN2D24XGM/500W



Because the hardware specifications might be updated, the content of this documentation will be subject to change without notice.



The illustrations shown in this manual are for reference purposes only and may not exactly match the model purchased.



If requiring technical support related to this system, please visit the website for specific information about the model.
<http://www.asrockrack.com/support/>

1.1 Shipping Box Contents

Items	Quantity
Server Barebone: 4UXGM-TURIN2	1
CPU Heatsink	2
Rail Kit	1
Accessory Box	2
- 8 GPU Brackets	
- 1 GPU Bracket Screw Kit	
- 4 Power Cords	
- 1 Cable Tie	
- 2 Screws for M.2 Sockets	

 If any items are missing or appear damaged, contact the authorized dealer.

1.2 Specifications

4UXGM-TURIN2	
System	
Form Factor	4U NVIDIA® MGX™
Dimensions	800 x 438 x 176.5 mm (31.5" x 17.2" x 6.9")
Support Motherboard	TURIN2D24XGM/500W
Front Panel	
Button	Power button w/ LED, Reset button, NMI button, UID button w/ LED
LED	System fault LED, HDD activity LED, LAN1/LAN2 activity LEDs
I/O Port	2 Type-A (USB 3.2 Gen1)
Drive Bay / Storage	
Front Side Drive Bay	16 Hot-swap E1.S (PCIe5.0 x4) drive bays, support 9.5 mm /15 mm width
Internal Side	1 M-key (PCIe3.0 x4), supports 2280 form factor [CPU0] 1 M-key (PCIe3.0 x4), supports 2280 form factor [CPU1]
Power Supply	
Type	3+1 CRPS
Output Watt	1200W @ 100-127Vac input 3200W @ 200-240Vac input
Efficiency	80-PLUS Titanium
AC Input	Low-line: 100-127Vrms, 50/60Hz High-line: 200-240Vrms, 50/60Hz
System Fan	
Fan	10 Hot-swap 80 x 80 mm fans
Processor System	
CPU	Supports AMD EPYC™ 9005/9004 (with AMD 3D V-Cache™ Technology) and 97x4 series processors
Socket	Dual Socket SP5 (LGA 6096)
Thermal Design Power	Up to 500W
Chipset	System on Chip

System Memory	
Supported DIMM Quantity	12+12 DIMM slots (1DPC)
Supported Type	Supports DDR5 288-pin RDIMM, RDIMM-3DS
Max. Capacity per DIMM	RDIMM: 128GB (2Rx4) RDIMM-3DS: 256GB (2Rx4)
Max. DIMM Frequency	6400 MHz
Voltage	1.1V
PCIe Expansion Slot	
PCIe x16	Rear: 8 FHFL dual-slot PCIe5.0 x16 5 FHHL PCIe5.0 x16 1 HHHL PCIe5.0 x16
Ethernet	
Additional Ethernet Controller	Intel® i350: 2 RJ45 (1 GbE)
Server Management	
BMC Controller	ASPEED AST2600
Dedicated IPMI LAN	1 Realtek RTL8211F for dedicated management LAN
Graphics	
Controller	ASPEED AST2600
VRAM	DDR4 512MB
Rear I/O	
UID Button/ LED	1 UID button
Other Button/ LED	1 Power button, 1 System fault LED
Video Port	1 Mini-DisplayPort
USB Port	1 Type-A (USB 3.2 Gen1)
RJ45	2 RJ45 (1 GbE) by Intel® i350 1 Dedicated IPMI

System BIOS	
BIOS Type	AMI UEFI BIOS; 256Mb (32MB) SPI Flash ROM
BIOS Feature	ASRock Rack Instant Flash, ACPI 6.4 (and above) compliance wake-up events, SMBIOS 3.5.0 and above, Plug and Play (PnP)
Hardware Monitor	
Temperature	CPU, MB, Card side Temperature Sensing
Fan	Fan tachometer CPU quiet fan (allows chassis fan speed auto-adjust by CPU temperature) Fan multi-speed control
Voltage	P0_VDDCR_CPU0, P0_VDDCR_CPU1, P0_VDDCR_SOC, P0_VDD_18_DUAL, P0_VDD_11_S3, P0_VDDIO, P1_VDDCR_CPU0, P1_VDDCR_CPU1, P1_VDDCR_SOC, P1_VDD_18_DUAL, P1_VDD_11_S3, P1_VDDIO, +BAT, +12V, +3VSB, +5VSB
Environment	
Temperature	Operating temperature: 10°C ~ 30°C Non-operating temperature: -40°C ~ 70°C
Humidity	Non-operating humidity: 20% ~ 90% (non-condensing)




The functions are supported depending on the type of the server motherboard. Refer to the server motherboard manual for more information.


Chapter 2 Server System Overview

This chapter provides diagrams showing the location of important components of the server system.

2.1 System Components

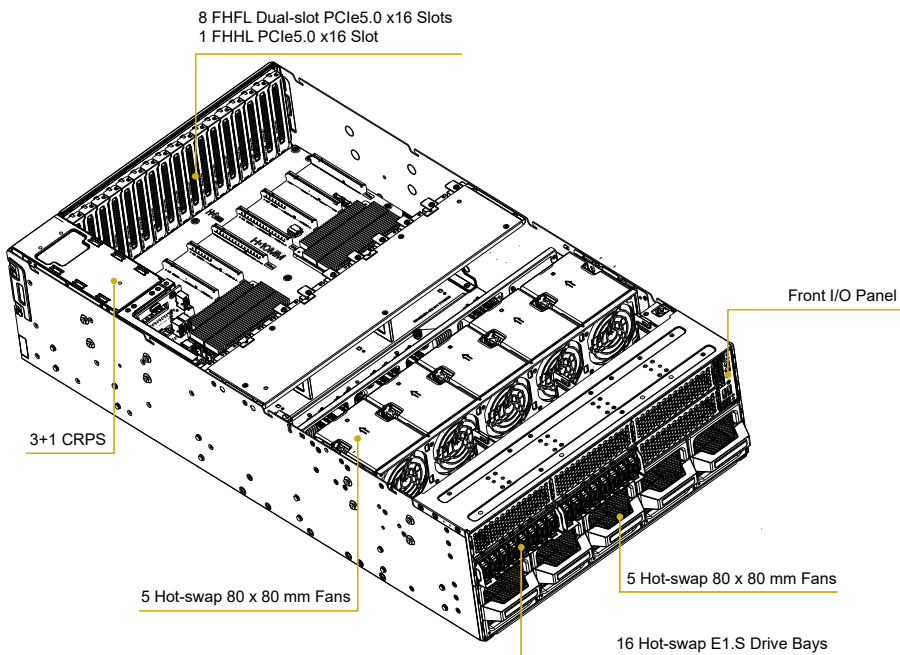


2.2 Internal Features

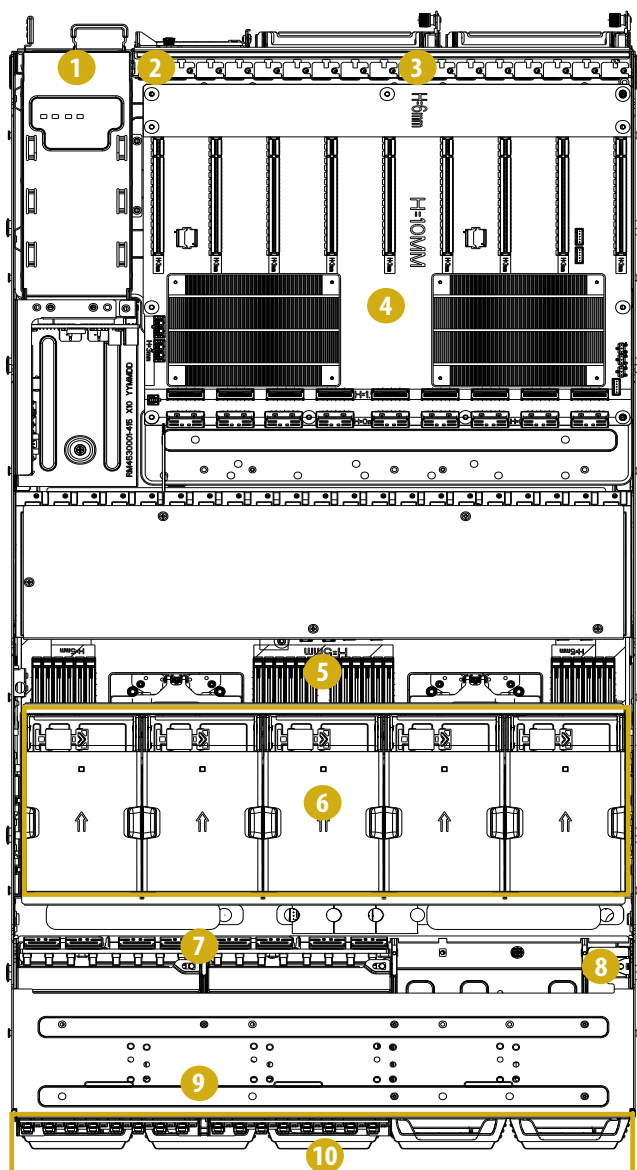


No.	Description
1	3+1 CRPS
2	1 FHHL PCIe5.0 x16 slot
3	8 FHFL dual-slot PCIe5.0 x16 slots
4	1 Switch board
5	1 Server motherboard
6	5 Hot-swap 80 x 80 mm top fans (FAN6 ~ FAN10)
7	2 E1.S backplanes
8	1 Front panel board
9	16 Hot-swap E1.S (PCIe5.0 x4) drive bays, support 9.5 mm / 15 mm width
10	5 Hot-swap 80 x 80 mm front fans (FAN1 ~ FAN5)

2.3 System Front Panel

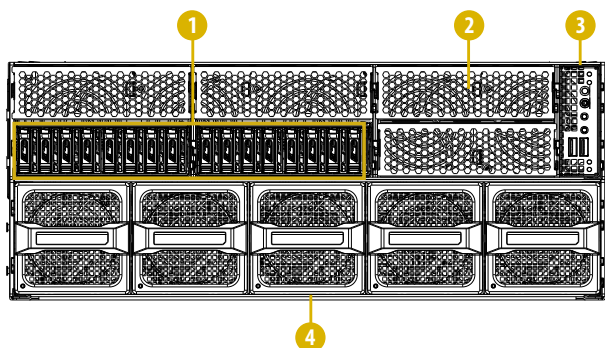

No.	Description
1	16 Hot-swap E1.S (PCIe5.0 x4) drive bays, support 9.5 mm / 15 mm width
2	Front vent
3	Front I/O panel
4	5 Hot-swap 80 x 80 mm front fans (FAN1 ~ FAN5)


2.4 System Rear Panel

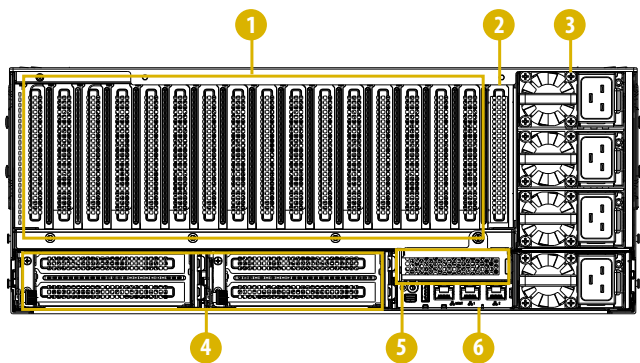

No.	Description
1	8 FHFL dual-slot PCIe5.0 x16 slots (PCIE1 ~ PCIE8)
2	1 FHHL PCIe5.0 x16 slot (PCIE9)
3	3+1 CRPS
4	4 FHHL PCIe5.0 x16 slots Top: PCIE11, PCIE13 Bottom: PCIE10, PCIE12
5	1 HHHL PCIe5.0 x16 slot (PCIE14)
6	Rear I/O panel


2.5 I/O Panel

Front I/O Panel

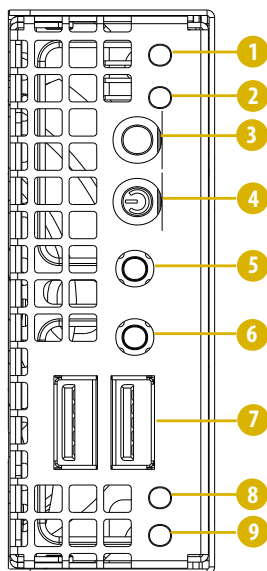

No.	Description
1	1 LAN2 activity LED
2	1 LAN1 activity LED
3	1 UID button w/ LED
4	1 Power button w/ LED
5	1 Reset button
6	1 NMI button
7	2 Type-A (USB 3.2 Gen1) ports
8	1 HDD activity LED
9	1 System fault LED

Rear I/O Panel

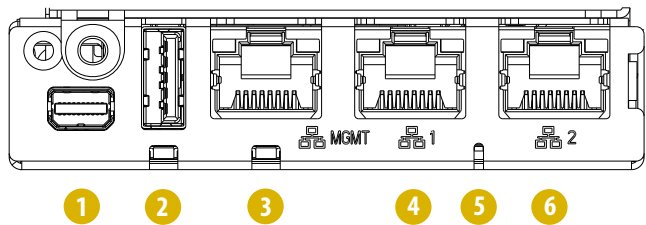

No.	Description
1	1 Mini-DisplayPort
2	Top: 1 Type-A (USB 3.2 Gen1) port Bottom: 1 Power button
3	Top: 1 Dedicated IPMI LAN port Bottom: 1 UID button
4	1 RJ45 (1 GbE) LAN port by Intel® i350 (LAN1)
5	1 System fault LED
6	1 RJ45 (1 GbE) LAN port by Intel® i350 (LAN2)

UID Button

Press the UID button to toggle the front UID LED on and off. Use the UID button to locate the server working on behind a rack of servers



1. Press and hold the UID button for 4 seconds, the BMC will trigger an external reset.
2. Press and hold the UID button for 10 seconds, the BMC will reset and load default values.

Power Button

Press the front power switch button or use the paperclip to press the rear power button to toggle the system power on and standby/sleep modes. To remove all power from the system completely, disconnect the power cord from the server.

Reset Button

When the system is completely unresponsive, press the system reset button to reboot the server without shutting it off and initialize the system.

NMI (Nonmaskable Interrupt) Button

Press the NMI button with a paper clip or pin to generate a nonmaskable interrupt and to put the server in a halt state for examination.

Status LED Definitions

LAN Activity LED	
Status	Description
Off	No LAN present
Amber	LAN present
Blinking Amber	Network access

UID LED	
Status	Description
Off	System identification is disabled.
Blue	System identification is active.



Power LED	
Status	Description
Off	Power off
Green	Power on

HDD Activity LED	
Status	Description
Off	Drive trays idle
Blinking Green	Drive trays active

System Fault LED	
Status	Description
Off	Running or normal operation.
Red	At least one sensor has critical alert.

Rear Dedicated IPMI LAN Port

RJ45 (1 GbE) LAN Port

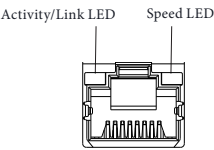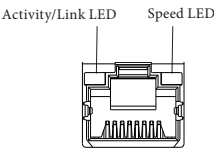


Activity/Link LED	
Status	Description
Off	No link
Blinking Yellow	Data activity
On	Link

Speed LED	
Status	Description
Off	10Mbps connection or no link
Yellow	100Mbps connection
Green	1Gbps connection

2.6 LEDs


PSU LED

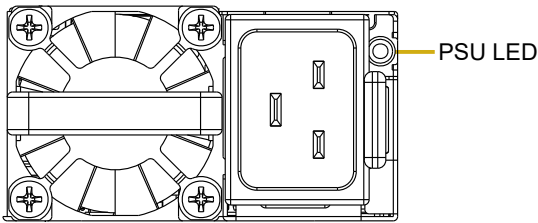

Status	Description
Off	No AC power to all power supplies
Green	Output on and ok
Blinking Green (1Hz)	- PSU standby state AC present/Only 12VSB on - Power supply is cold standby state or always standby state as defined in the Cold Redundancy section of the CRPS Common Requirements Specification
Blinking Green (2Hz)	FW updating for power supply
Amber	- AC cord unplugged, or AC power lost; with a second power supply in parallel still with AC input power. - Power supply critical event is causing a shutdown; failure, over current, short circuit, over voltage, fan failure, over temperature
Blinking Amber (1Hz)	Power supply warning events where the power supply continues to operate; high temp, high power, high current, slow fan


Top Fan LED

The top fan LED on the top of fan is used for indicating the internal fan behavior.

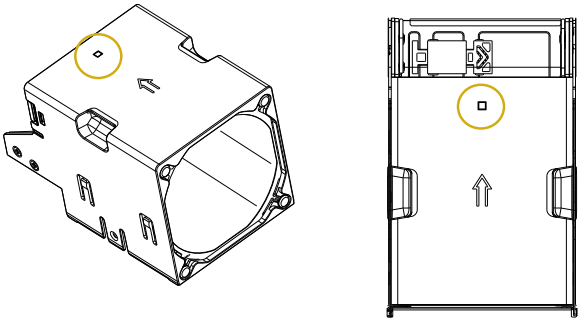


Front Fan LED

The front fan LED on the lower left of fan is used for indicating the front fan behavior.

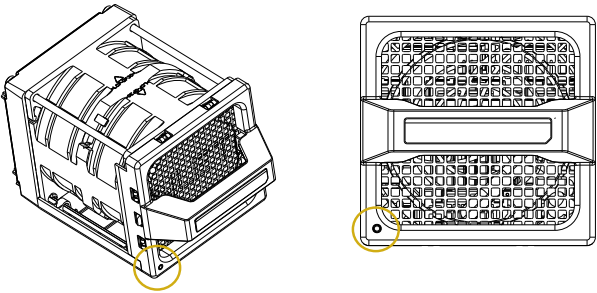

Status	Description
Off	No power
Green	Fan normal activity
Red	Fan failure

Drive Tray LED

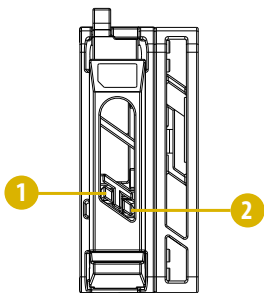

No.	Description
1	Drive tray power LED (Green)
2	Drive tray activity LED (Amber)

Chapter 3 Hardware Installation and Maintenance

This chapter helps user to assemble the chassis and install components.

Before You Begin

Before working with the server, pay close attention to the “Important Safety Instructions” at the beginning of this manual.



1. Ensure the motherboard battery is installed before unplugging the power cord or installing/removing the motherboard.
2. Before installing or removing any component, ensure that the power supply is off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

1. Make sure the server is powered off.

Power down the server if it is still running.

- (1) Press the Power button to power off the server from full-power mode to standby-power (sleep) mode. The Power LED at the front turns from solid green to blinking green.
- (2) Disconnect the power cord first from the AC outlet and then from the server.
The power LED turns off.



The server is not completely powered down when pressing the Power button on the front panel. The Power button lets the server toggle between Power On and Standby (Sleep) modes. Some internal circuitry remain active in the Standby mode. To remove all power from the system completely, be sure to disconnect the power cord from the server.

2. Ensure having a clean and stable working environment. Avoid dust and dirt because contaminants may cause malfunctions.
3. Ground properly before touching any system component. A discharge of static electricity may damage components. Wear a grounded wrist strap if available.



1. Some components are already pre-installed. Simply properly connect the relevant cables before or after installation.
2. Refer to the server motherboard user manual for instructions on how to install server motherboard components.


3.1 Server Top Cover

Removing the Server Top Cover




1. Before removing the top covers, power off the server and unplug the power cord.
2. The system must be operated with all the chassis top covers installed to ensure proper cooling.

Press the tabs on the cover and push straight REAR to release the cover from the locked position. Lift up and remove the cover.

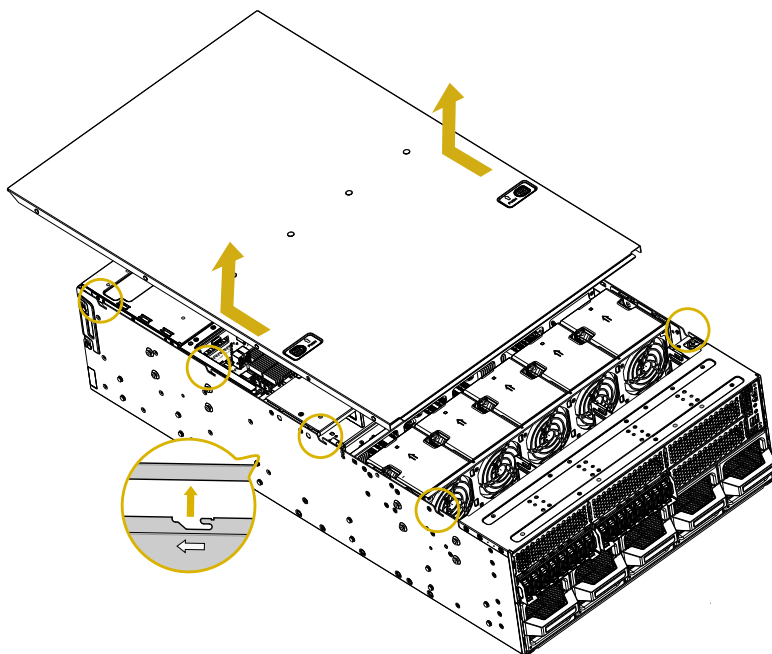

Installing the Server Top Cover


Lower the top cover on the chassis, making sure the side latches align with the cutouts. Slide the cover toward the FRONT of the chassis.

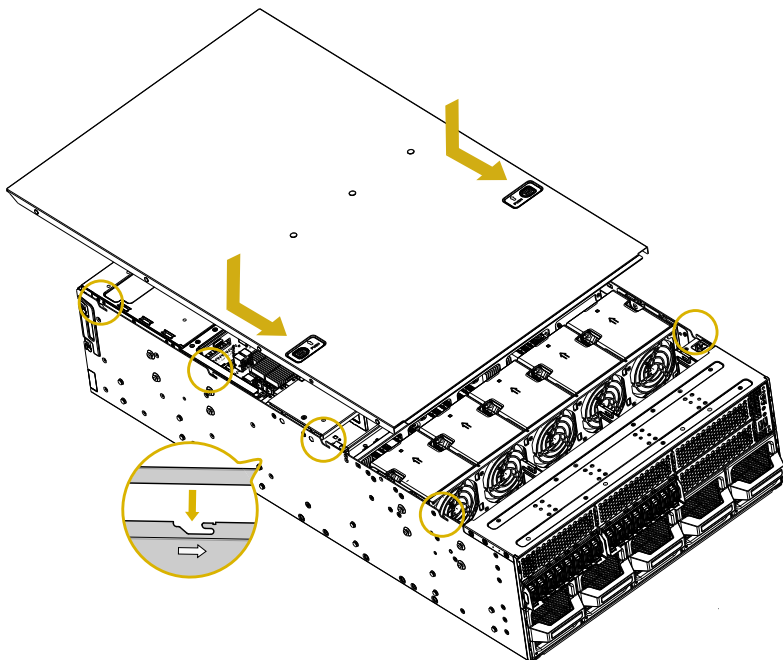


3.2 E1.S Drive

Installing E1.S Drive to the Chassis


1. Press the latch on the drive tray to unlock the locking lever.
2. Pull the drive tray out.

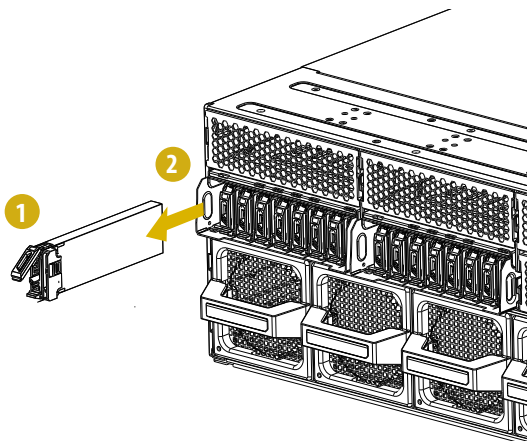


3. Remove the screws on the drive tray.
4. Remove the dummy out.

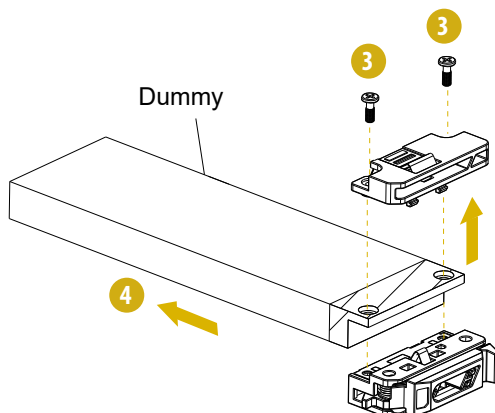

5. Install the E1.S drive to the drive tray.
6. Secure the E1.S drive with the screws.

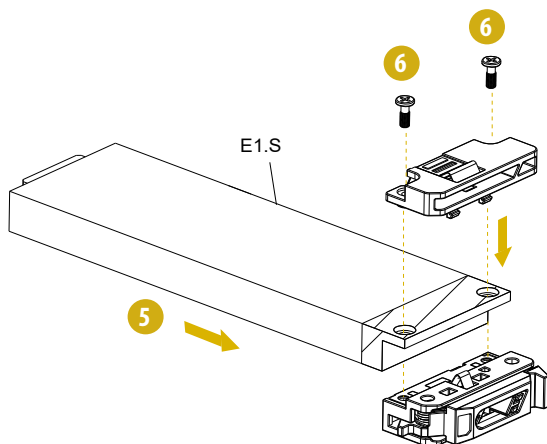

7. Slide the E1.S assembly into the drive bay until the assembly is fully seated.
8. Push in the lever to lock the assembly in place.

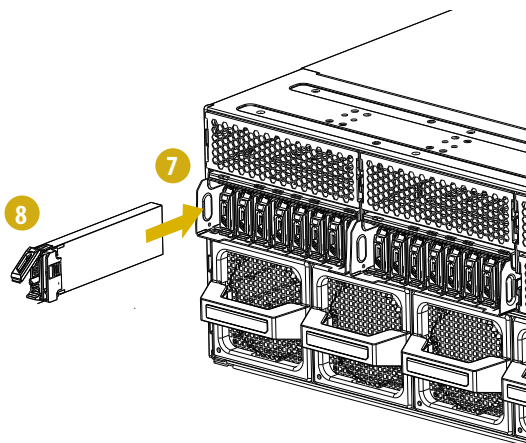

3.3 Power Supply

This system can accommodate 4 power supply units in the bay at the rear of the chassis. 3 PSUs are required for full load operation, with the fourth PSU purely as redundant, load-sharing backup. 1 PSU can be removed without affecting system operation.




The installation should be operated by service persons or by users who have been well trained.

Removing the Power Supply Unit


To remove a failed power supply unit, identify the failed PSU by checking the PSU LEDs on the PSUs.

1. Hold onto the power supply handle while pressing the locking tab towards the power supply handle.
2. Pull to remove the PSU from the chassis.

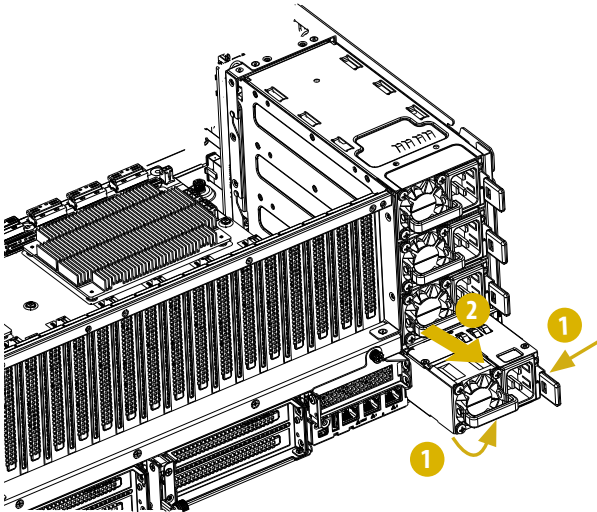

Installing the Power Supply Unit


1. Align the power supply unit with the power supply bay. Carefully slide the power supply unit all the way into the power supply bay.
2. Make sure the PSU clicks in place and is well installed.

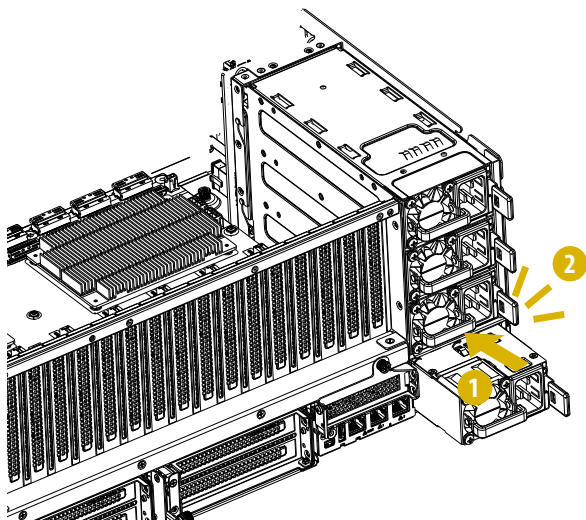

3.4 System Fan


Replacing the Top Fan

1. Lift to remove the failed fan.
2. Make sure the arrow on the fan points to the REAR of the chassis.
3. Gently place a new fan into the fan frame.
4. Make sure the fan is well seated.

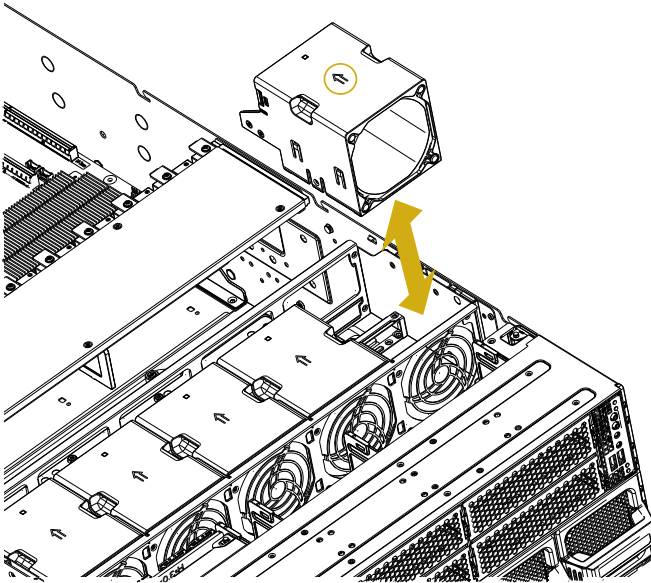

Replacing the Front Fan

1. Press and hold on the inside of handle to release the fan latch. Pull the fan out.
2. Install a new fan into the fan bay and ensure the LED appears on the lower left.
3. Make sure the fan is well seated.

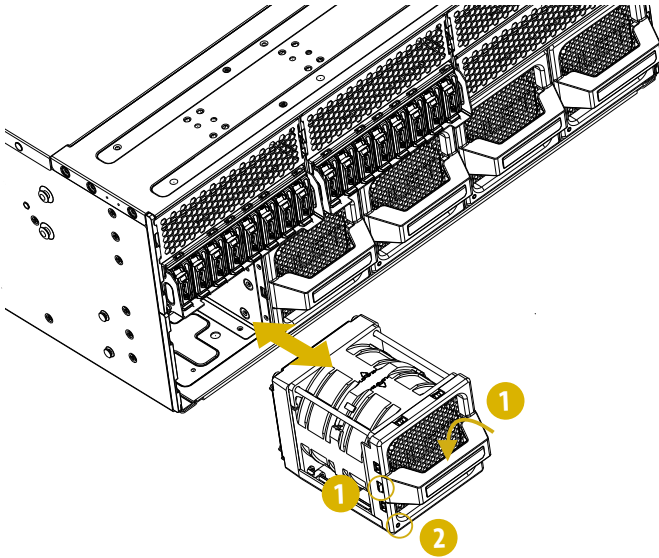


3.5 GPU Card and Add-in Card




Before replacing the GPU card or add-in card, power off the server and unplug the power cord.

Installing the Add-in Card / GPU Card to PCIe1 ~ PCIe9 Slots

1. Remove the screw(s) securing the blanking plate(s).
2. Remove the blanking plate(s) out of the chassis.

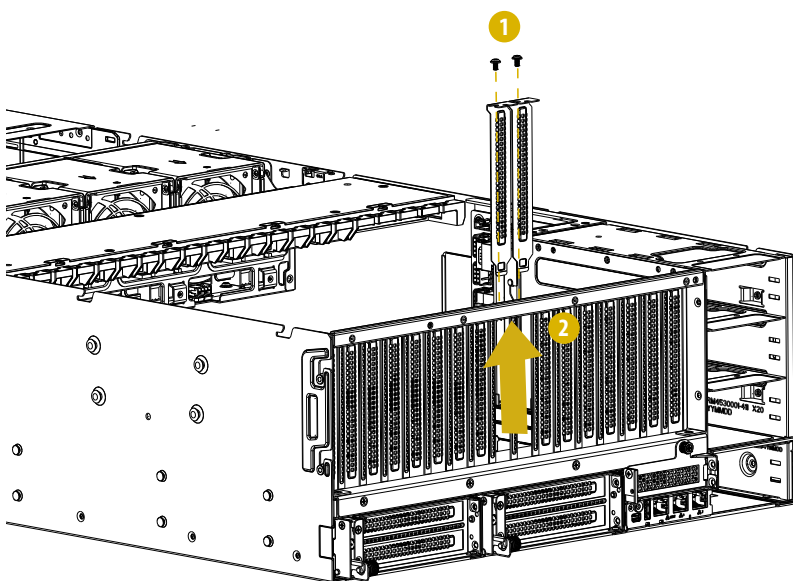


3. Remove the GPU brackets and the GPU screw kit out of the accessory box. Fasten the screws of GPU bracket to the GPU card. (Skip this step for single-length add-in card.)
4. Install the card assembly into the chassis.
5. Secure the card assembly with the screw(s).

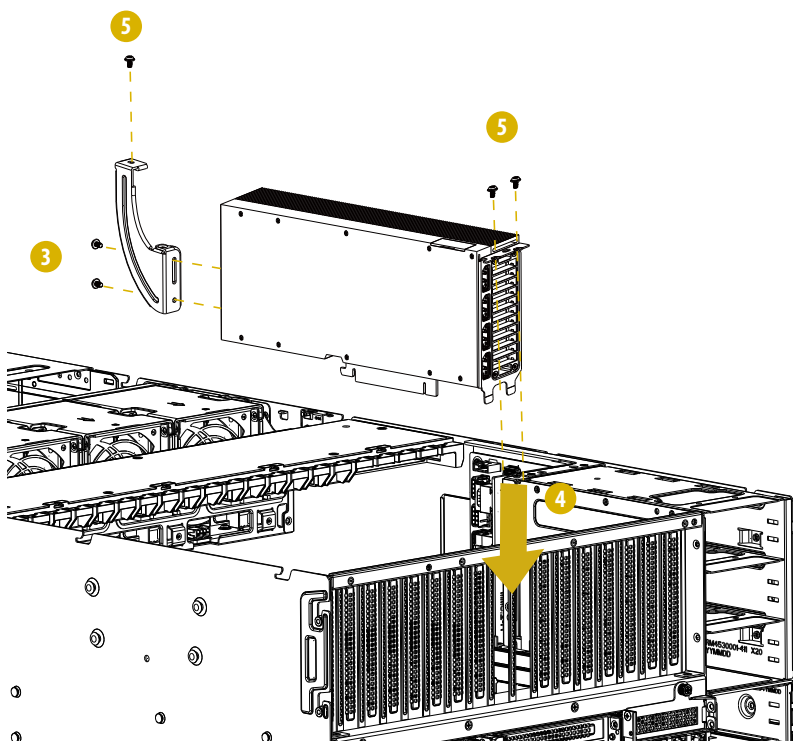


Installing the Add-in Card to PCIE10 ~ PCIE13 Slots


1. Hand-release the thumbscrew securing the tray to the chassis.
2. Pull the tray out.

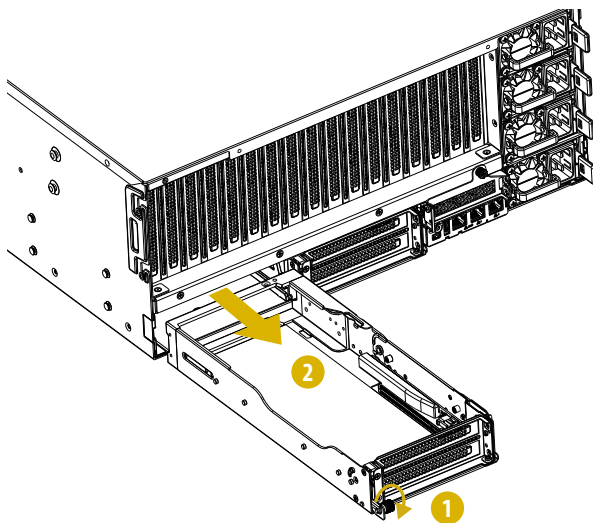


3. Remove 4 screws securing the bracket to the tray. Remove the bracket from the tray.
4. Remove 2 screws and slide the blanking plates out sideways.

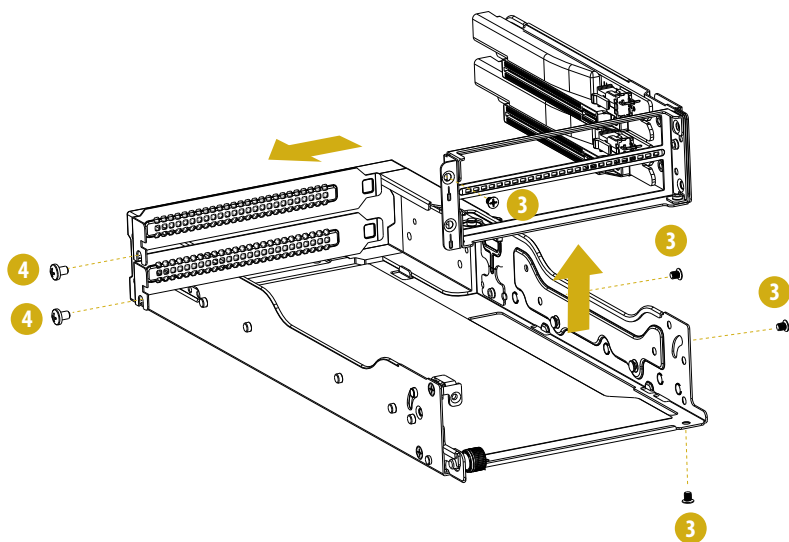

5. Install the add-in cards to the bracket with 2 screws.
6. Secure the add-in card assembly to the tray with 4 screws.

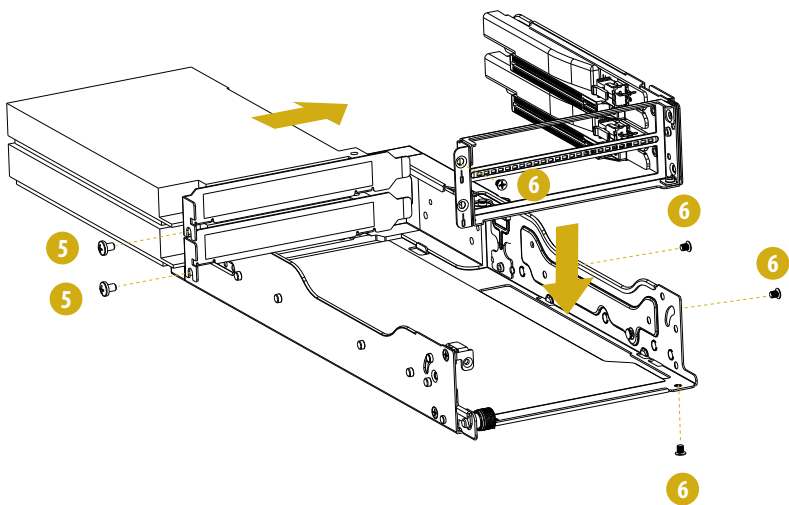


7. Slide the tray with add-in card assembly to the chassis.
8. Hand-tighten the thumbscrew and make sure the tray is locked in place.

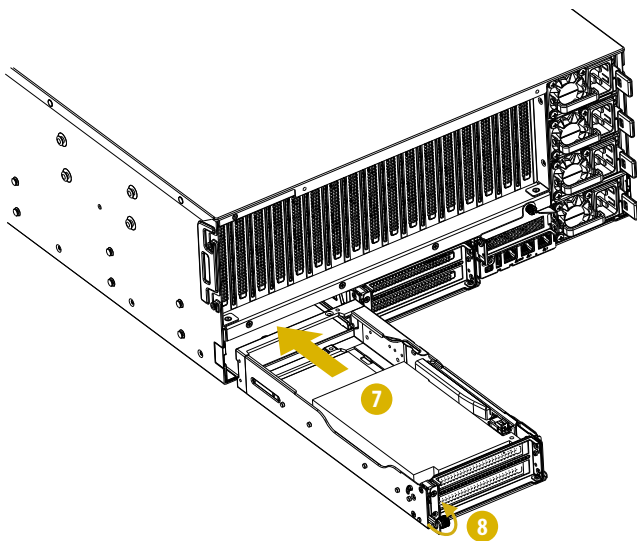


Installing the Add-in Card to PCIe14 Slot


1. Hand-release the thumbscrew securing the tray to the chassis.
2. Pull the tray out.

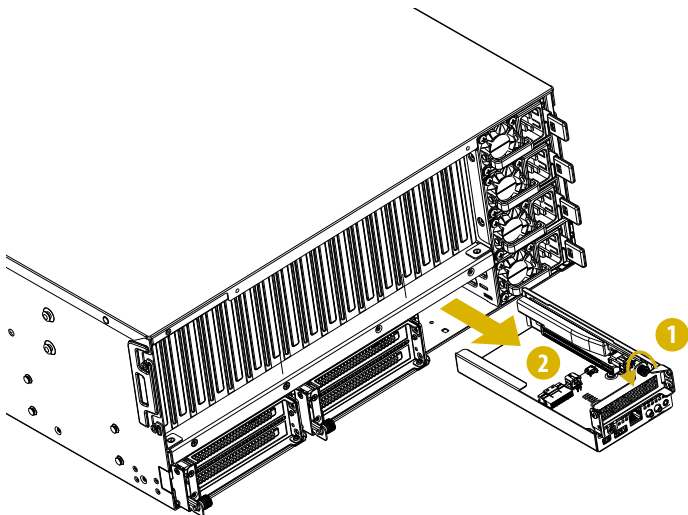


3. Remove the screw securing the blanking plate to the bracket.
4. Slide the blanking plate out sideways.

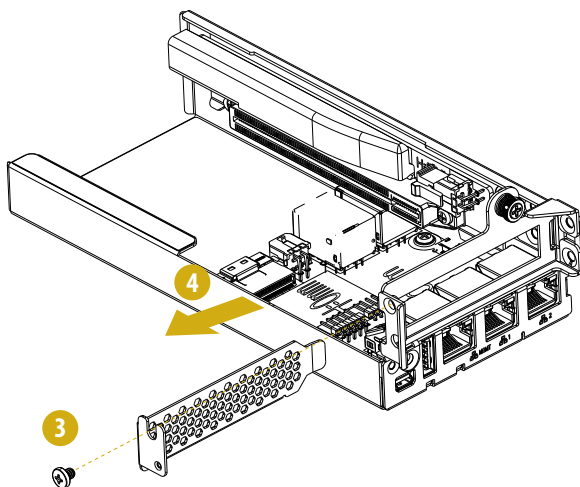


5. Install the add-in card to the bracket.
6. Secure the add-in card to the bracket with the screw.

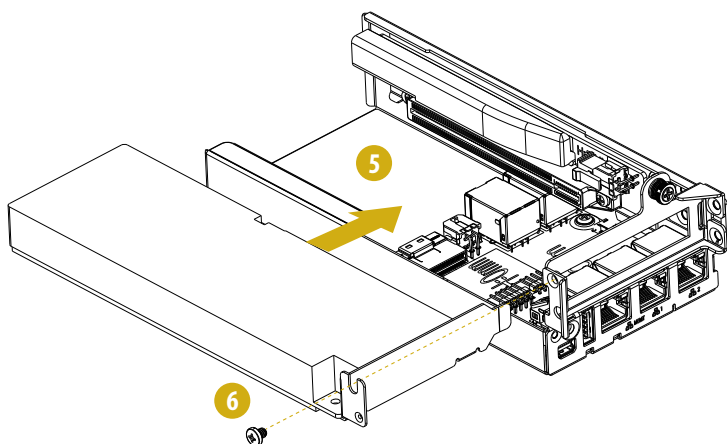

7. Slide the add-in card assembly into the bay.
8. Hand-tighten the thumbscrew.

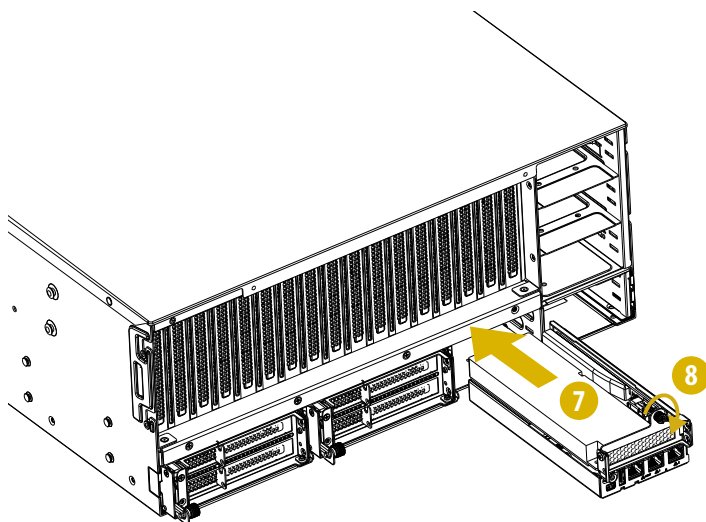


4.1 Layout

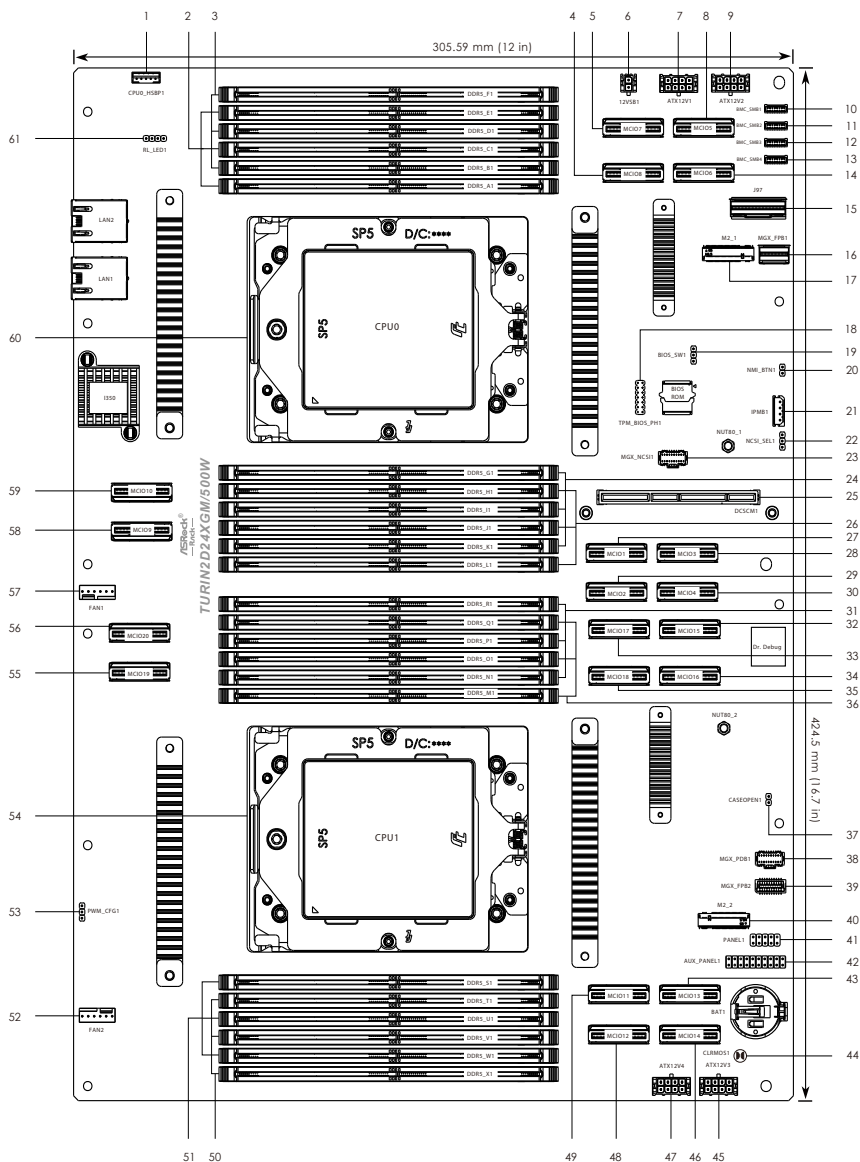

No.	Description
1	Backplane PCI Express Hot-Plug Connector (CPU0_HSBP1)
2	3 DDR5 DIMM Slots (DDR5_A1, DDR5_C1, DDR5_E1)
3	3 DDR5 DIMM Slots (DDR5_B1, DDR5_D1, DDR5_F1)
4	Mini Cool Edge IO Connector (MCIO8)
5	Mini Cool Edge IO Connector (MCIO7)
6	12V Micro-fit Power Connector (12VSB1)
7	ATX 12V Power Connector (ATX12V1)
8	Mini Cool Edge IO Connector (MCIO5)
9	ATX 12V Power Connector (ATX12V2)
10	BMC SMBus Header (BMC_SMB1)
11	BMC SMBus Header (BMC_SMB2)
12	BMC SMBus Header (BMC_SMB3)
13	BMC SMBus Header (BMC_SMB4)
14	Mini Cool Edge IO Connector (MCIO6)
15	I/O Card Connector (J97)
16	Front Panel Board Connector (MGX_FPBI)
17	M.2 Socket (M2_1) (Type 2280)
18	SPI TPM Header (TPM_BIOS_PH1)
19	BIOS Selection Jumper (BIOS_SW1)
20	Non Maskable Interrupt Button (NMI_BTN1)
21	Intelligent Platform Management Bus Header (IPMB1)
22	NCSI Mode Jumper (NCSI_SEL1)
23	Network Controller Sideband Interface Header (MGX_NCSI1)
24	3 DDR5 DIMM Slots (DDR5_G1, DDR5_I1, DDR5_K1)
25	Datacenter-ready Secure Control Module Slot (DCSCM1)
26	3 DDR5 DIMM Slots (DDR5_H1, DDR5_J1, DDR5_L1)
27	Mini Cool Edge IO Connector (MCIO1)
28	Mini Cool Edge IO Connector (MCIO3)
29	Mini Cool Edge IO Connector (MCIO2)
30	Mini Cool Edge IO Connector (MCIO4)
31	3 DDR5 DIMM Slots (DDR5_N1, DDR5_P1, DDR5_R1)
32	Mini Cool Edge IO Connector (MCIO15)
33	Mini Cool Edge IO Connector (MCIO17)
34	Mini Cool Edge IO Connector (MCIO16)

No.	Description
35	Mini Cool Edge IO Connector (MCIO18)
36	3 DDR5 DIMM Slots (DDR5_M1, DDR5_O1, DDR5_Q1)
37	Chassis Intrusion Header (CASEOPEN_1)
38	Power Distribution Board Header (MGX_PDB1)
39	Front Panel Board Connector (MGX_FPB2)
40	M.2 Socket (M2_2) (Type 2280)
41	System Panel Header (PANEL1)
42	Auxiliary Panel Header (AUX_PANEL1)
43	Mini Cool Edge IO Connector (MCIO13)
44	Clear CMOS Pad (CLRMOS1)
45	ATX 12V Power Connector (ATX12V3)
46	Mini Cool Edge IO Connector (MCIO14)
47	ATX 12V Power Connector (ATX12V4)
48	Mini Cool Edge IO Connector (MCIO12)
49	Mini Cool Edge IO Connector (MCIO11)
50	3 DDR5 DIMM Slots (DDR5_T1, DDR5_V1, DDR5_X1)
51	3 DDR5 DIMM Slots (DDR5_S1, DDR5_U1, DDR5_W1)
52	System Fan Header (FAN2)
53	PWM Configuration Header (PWM_CFG1)
54	Socket SP5 (LGA6096) (CPU1)
55	Mini Cool Edge IO Connector (MCIO19)
56	Mini Cool Edge IO Connector (MCIO20)
57	System Fan Header (FAN1)
58	Mini Cool Edge IO Connector (MCIO9)
59	Mini Cool Edge IO Connector (MCIO10)
60	Socket SP5 (LGA6096) (CPU0)
61	Rear Panel LAN LED (RL_LED)


4.2 Block Diagram

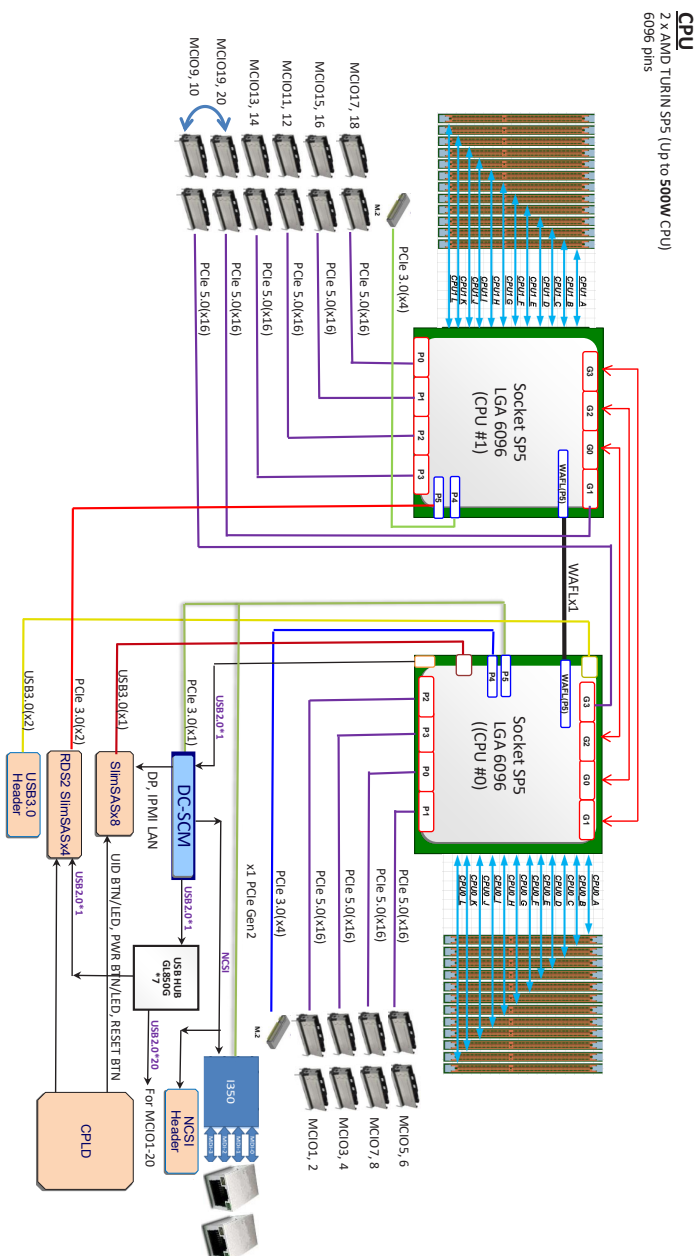


4.3 Installing the CPU and Heatsink (LGA 6096 Socket)




1. Before inserting the CPU into the socket, check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

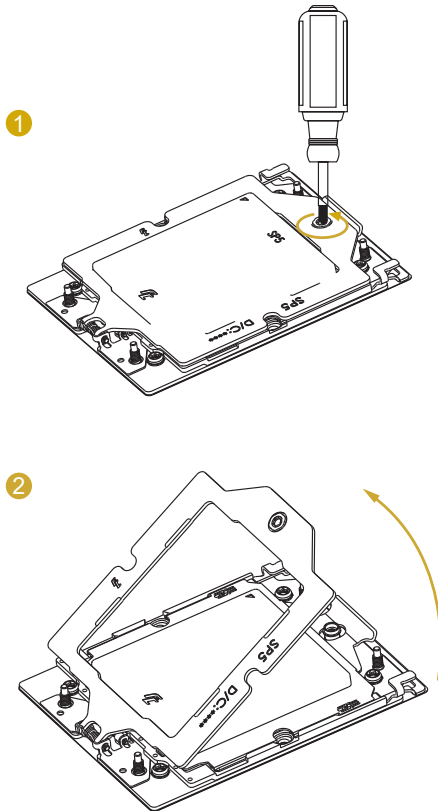


3

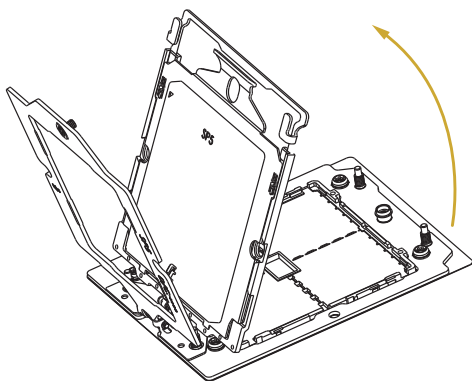

4

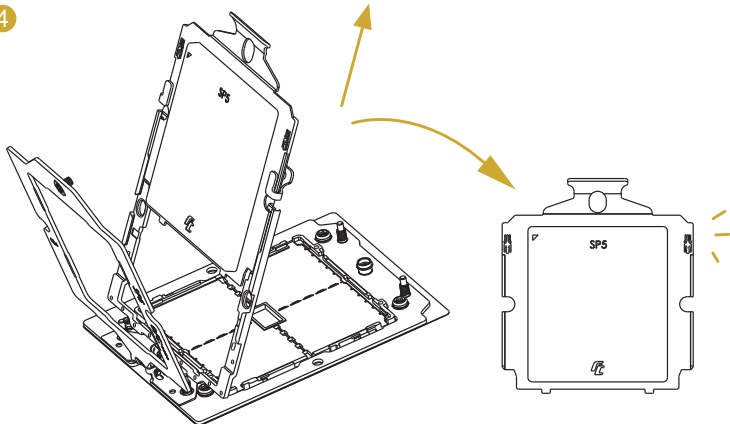

5

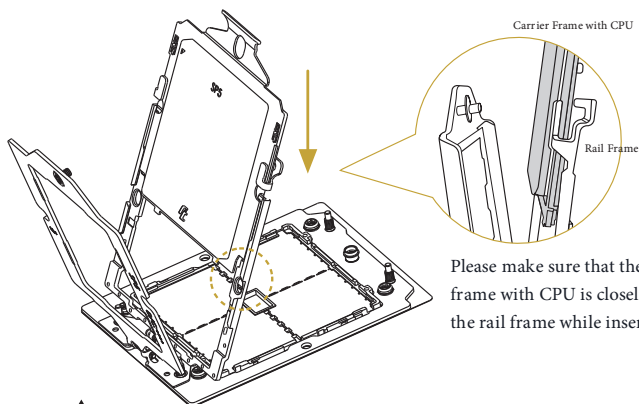


Please make sure that the carrier frame with CPU is closely attached to the rail frame while inserting it.




Install the carrier frame with CPU. Don't separate them.


6

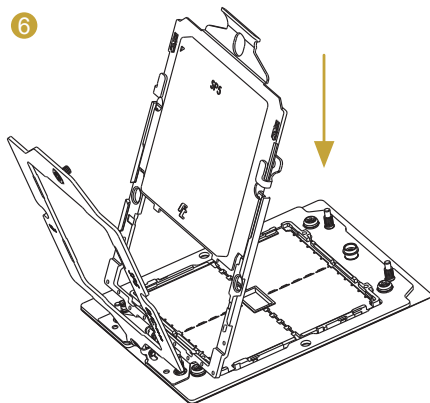


7

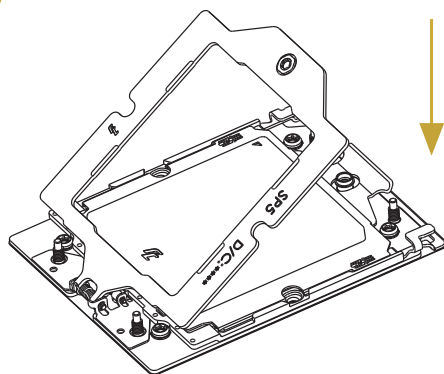


8

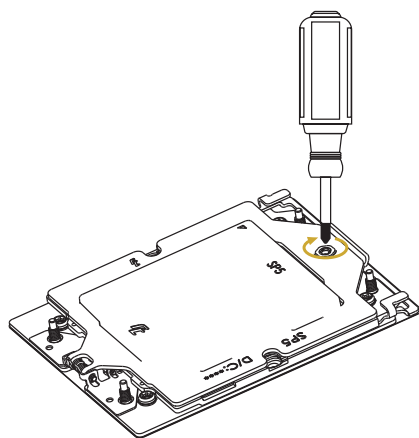

9

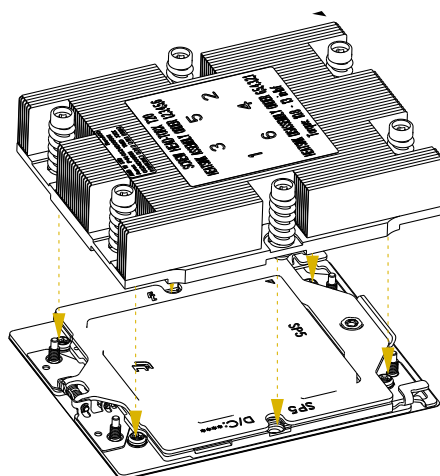


10

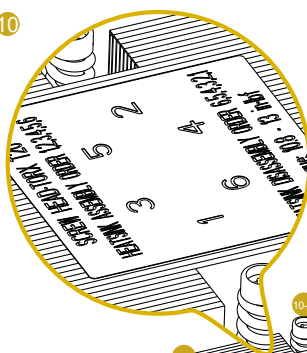

Set the torque wrench to 10.8-13.0 in.-lb.
One fourth a turn each time.

Tighten the screws in a sequential order
1 > 2 > 3 > 4 > 5 > 6.
Loosen the screws in a reverse order.

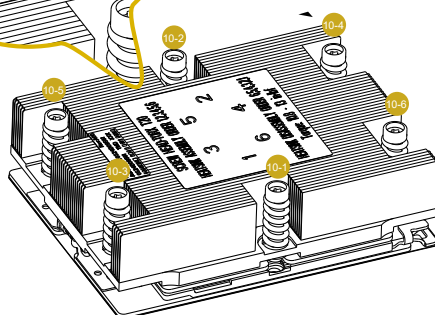


4.4 Installing the Memory Modules (DIMM)




The DIMM only fits in one correct orientation. It will cause permanent damage to the server motherboard and the DIMM if forcing the DIMM into the slot at incorrect orientation. For more information about DIMM installation, refer to the server motherboard user manual.


1

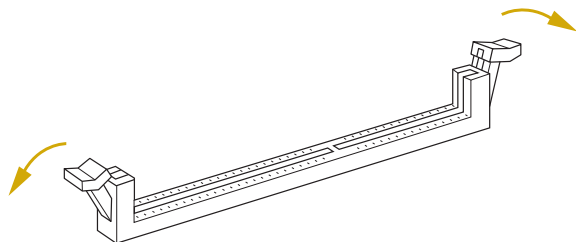

2

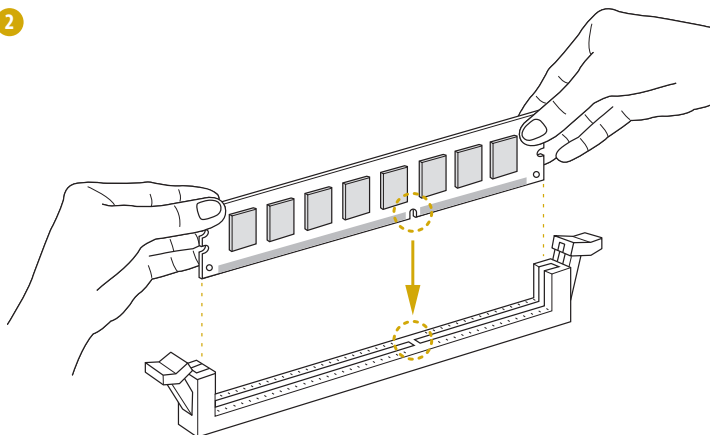

3

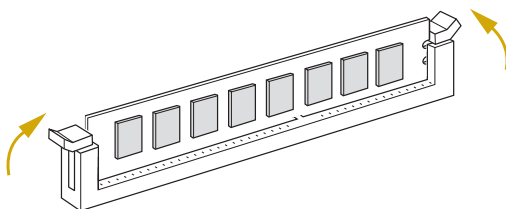

Appendix


Installing the Server in a Rack

This section describes how to rackmount the server with slide rail assembly.




The rails installation instructions in this manual are example only. The actual rail assembly procedure may differ slightly.

The rail assembly consists of outer, middle and inner rail.

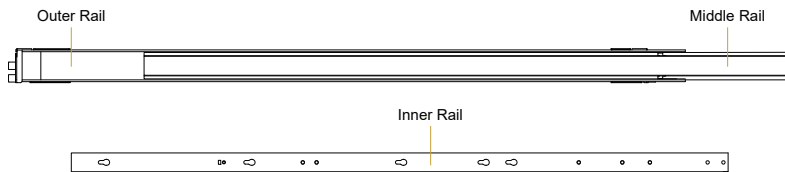


Some slide rails are labeled with either L or R, please identify prior to rail installation. Install the rail labeled with L on the left side of rack, and the rail labeled with R on the right side.


1. Remove the inner rail.

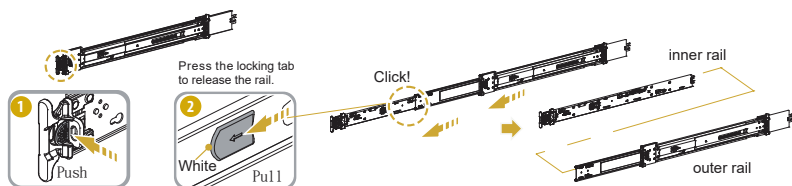


2. Rotate the latch (a) and slide middle rail back.

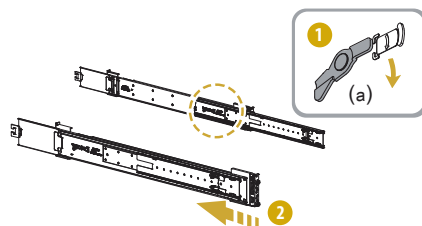

3. Install the inner rail onto the chassis. (This rail kit can be installed forward and reversely.)




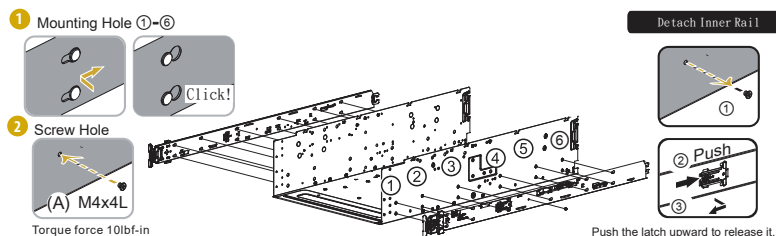


4. Mount the outer rail/bracket assembly to the rack post.


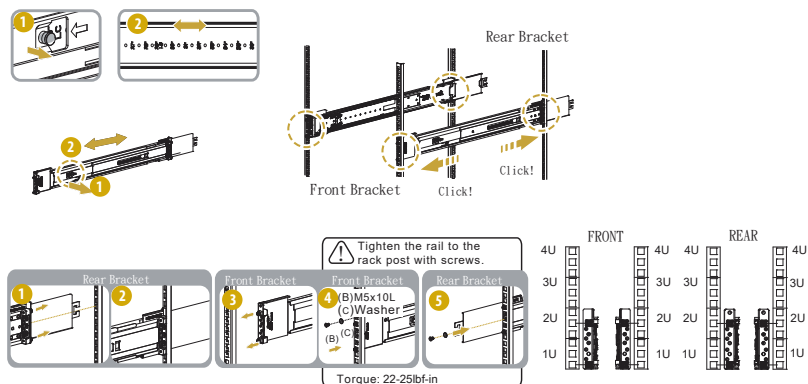


5. Insert the chassis to complete the installation.

- ❶❷ Extend the middle rail to the locked position and ensure that the ball bearing retainer is at the front.
- ❸ Using a server lift to install. Align inner rail to middle-outer rail, keep chassis horizontally when inserting.
- ❹ When the rail hit the stop, press the blue release tab to unlock it.

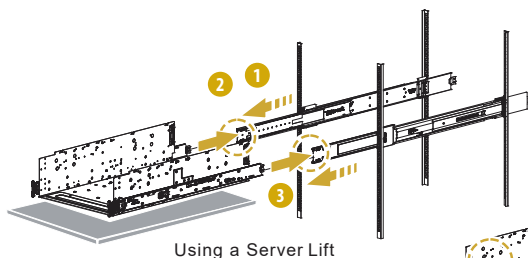
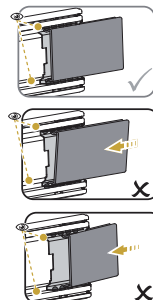
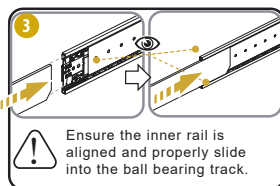
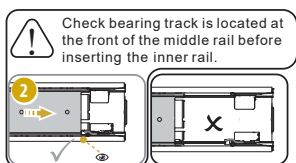


Using a Server Lift





Using a Server Lift

Remove the chassis from rack

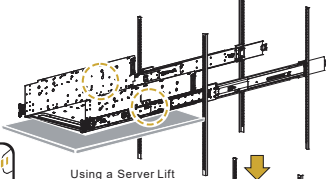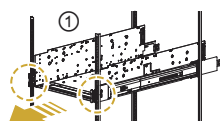

Using a Server Lift

Detach Bracket From Rack Post

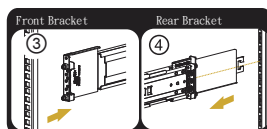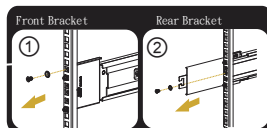

Contact Information

Contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at <http://www.asrockrack.com>; or contact the dealer for further information. For technical questions, please submit a support request form at <https://event.asrockrack.com/tsd.asp>

ASRock Rack Incorporation

e-mail: ASRockRack_sales@asrockrack.com

ASRock Rack EUROPE B.V.

Bijsterhuizen 11-11
6546 AR Nijmegen
The Netherlands
Phone: +31-24-345-44-33

ASRock Rack America, Inc.

4331 Eucalyptus Ave, Chino, CA 91710 U.S.A.
Phone: +1-909-590-8308
Fax: +1-909-590-1026