



BMC

Baseboard Management Controller

USER GUIDE

AST2500, Rev. 1.06

Copyright © 2022 ASRock Rack Inc.
All Rights Reserved.

Contents

1.0	Introduction	10
2.0	BMC Web User Interface Service	11
2.1	BMC WebUI Login URL	11
2.1.1	Configuring BMC IP Address by UEFI BIOS	11
2.1.1.1	Obtain BMC IP Address from DHCP mode	11
2.1.1.2	Setting Static BMC IP Address through UEFI BIOS	14
2.2	Username and Password	15
2.3	Accessing BMC WebUI Service	17
2.3.1	Menu Bar	18
2.3.2	Quick Link and User Information	20
2.3.2.2	User Information	21
2.4	Dashboard	22
2.4.1	Power-On Hours	23
2.4.2	Pending Deassertions	23
2.4.3	Access Log	23
2.4.4	Product Information	23
2.4.5	Firmware Information	23
2.4.6	Network Information	23
2.4.7	Today and 30 Days	24
2.4.8	Sensor Monitoring	24
2.5	Sensor	25
2.5.1	Sensor Detail	26
2.6	System Information	27
2.6.1	System Inventory	28
2.6.1.1	Processor	29
2.6.1.2	Memory Controller	30
2.6.1.3	PCIE Device	31
2.6.1.4	PCIE Function	32
2.6.1.5	Storage	33
2.6.2	FRU Information	35
2.6.2.1	Chassis Information	36
2.6.2.2	Board Information	36
2.6.2.3	Product Information	36
2.6.3	Power Source	38
2.6.4	SMBIOS Information	40
2.7	Logs & Reports	41
2.7.1	IPMI Event Log	42
2.7.2	System Log	44
2.7.3	Audit Log	45
2.7.4	Video Log	46
2.7.5	Post Code	48
2.7.6	Debug Log	49
2.8	Settings	50
2.8.1	Captured BSOD	52
2.8.2	Date & Time	53
2.8.3	External User Services	55
2.8.3.1	LDAP/E-Directory Settings	56
2.8.3.1.1	General LDAP/E-Directory Settings	57
2.8.3.1.2	Role Groups	59

2.8.3.2	Active Directory Settings	61
2.8.3.2.1	General Active Directory Settings	62
2.8.3.2.2	Role Groups	64
2.8.3.3	RADIUS Settings	66
2.8.3.3.1	General RADIUS Settings	67
2.8.3.3.2	Advanced RADIUS Settings	68
2.8.4	KVM Mouse Setting	69
2.8.5	Log Settings	70
2.8.5.1	SEL Log Settings Policy	71
2.8.5.2	Advanced Log Settings	72
2.8.6	Media Redirection	74
2.8.6.1	General Settings	75
2.8.6.2	VMedia Instance Settings	77
2.8.6.3	Remote Session	78
2.8.6.4	Active Redirections	80
2.8.7	Network Settings	81
2.8.7.1	Network IP Settings	82
2.8.7.2	Network Bond Configuration	84
2.8.7.3	DNS Configuration	85
2.8.8	PAM Order Settings	88
2.8.9	Platform Event Filters	89
2.8.9.1	Event Filters	90
2.8.9.2	Alert Policies	94
2.8.9.3	LAN Destinations	96
2.8.10	Services	98
2.8.11	SMTP Settings	101
2.8.12	SSL Settings	103
2.8.12.1	View SSL Certificate	104
2.8.12.2	Generate SSL Certificate	106
2.8.12.3	Upload SSL Certificate	108
2.8.13	System Firewall	109
2.8.13.1	General Firewall Settings	110
2.8.13.1.1	Existing Firewall Settings	111
2.8.13.1.2	Add Firewall Settings	113
2.8.13.2	IP Firewall Rules	115
2.8.13.2.1	Existing IP Rules	116
2.8.13.2.2	Add New IP Rule	118
2.8.13.3	Port Firewall Rules	119
2.8.13.3.1	Existing Port Rules	120
2.8.13.3.2	Add New Port Rule	122
2.8.14	User Management	124
2.8.15	Video Recording	128
2.8.15.1	Auto Video Settings	129
2.8.15.1.1	Video Trigger Settings	130
2.8.15.1.2	Video Remote Storage	132
2.8.15.1.3	Pre-Event Video Recordings	134
2.8.16	IPMI Interfaces	135
2.8.17	Keep Share NIC Link Up	136
2.8.18	FAN Settings	137
2.8.18.1	Open Loop Control Table	138
2.8.18.2	Close Loop Control Table	140
2.8.18.3	Temperature Sensor and Corresponding Fan Table	142
2.8.18.4	FAN Mode	144
2.8.19	Power Restore Policy	146

2.8.20	Password Settings	147
2.9	Remote Control	149
2.9.1	H5Viewer	150
2.9.2	JViewer	156
2.10	Image Redirection	165
2.10.1	Remote Images	166
2.11	Power Control	168
2.12	Miscellaneous	169
2.12.1	UID Control	170
2.12.2	Post Snoop	171
2.13	Maintenance	172
2.13.1	Backup Configuration	173
2.13.2	Firmware Image Location	174
2.13.3	Firmware Update	175
2.13.4	BIOS Update	176
2.13.6	FPGA Update	179
2.13.7	Retimer Update	180
2.13.8	Backplane Update	181
2.13.9	CPLD Update	182
2.13.10	Preserve Configuration	183
2.13.11	Restore Configuration	185
2.13.12	Restore Factory Defaults	186
2.13.13	Reset	188
2.14	Sign Out	189
3.0	OEM IPMI Commands	190
3.1	Supported OEM IPMI Commands	190
3.1.1	0x52 - Master Write Read	191
3.1.2	0x67 - Get Boot Complete	191
3.1.3	0x82 - Set Sensor Monitor	191
3.1.4	0x83 - Get Sensor Monitor	191
4.0	LED Indicator	192
4.1	BMC Heartbeat LED	192
4.2	UID LED	192
4.3	System Fault LED	193
4.4	FAN Fault LED	193

Figures

Figure 1. Snapshot of BMC Network Configuration Page	12
Figure 2. Snapshot of BMC IP Address Shown in Screen During UEFI BIOS POST.....	13
Figure 3. Snapshot of BIOS LOGO Screen with BMC IP Address.....	13
Figure 4. Snapshot of Configure BMC Static IP Address	14
Figure 5. Snapshot of BMC WebUI Service Login Page.....	15
Figure 6. Snapshot of BMC WebUI Service Main Page	17
Figure 7. Snapshot of Menu Bar	18
Figure 8. Snapshot of Quick Link and User Information	20
Figure 9. Snapshot of User Information and Popup Window	21
Figure 10. Snapshot of Dashboard Page	22
Figure 11. Snapshot of Sensor Reading Page	25
Figure 12. Snapshot of Sensor Detail Page	26
Figure 13. Snapshot of System Information Page.....	27
Figure 14. Snapshot of System Inventory Page	29
Figure 15. Snapshot of Memory Controller Page.....	30
Figure 16. Snapshot of PCIE Device Page	31
Figure 17. Snapshot of PCIE Function Page.....	32
Figure 18. Snapshot of Storage Page.....	33
Figure 19. Snapshot of FRU Information Page	35
Figure 20. Snapshot of Power Source Page	38
Figure 21. Snapshot of SMBIOS Information Page	40
Figure 22. Snapshot of IPMI Event Log Page	42
Figure 23. Snapshot of System Log Page	44
Figure 24. Snapshot of Audit Log Page	45
Figure 25. Snapshot of Video Log Page	46
Figure 26. Snapshot of Post Code Page	48
Figure 27. Snapshot of Debug Log Page.....	49
Figure 28. Snapshot of Settings Page.....	51
Figure 29. Snapshot of BSOD Page.....	52
Figure 30. Snapshot of Date & Time Page.....	53
Figure 31. Snapshot of External User Services Page	55
Figure 32. Snapshot of LDAP/E-Directory Settings Page.....	56
Figure 33. Snapshot of General LDAP/E-Directory Settings Page	57
Figure 34. Snapshot of Role Groups Slots.....	59
Figure 35. Snapshot of Add Role Groups Page	59
Figure 36. Snapshot of Active Directory Settings Page.....	61
Figure 37. Snapshot of General Active Directory Settings Page	62
Figure 38. Snapshot of Role Groups Slots.....	64
Figure 39. Snapshot of Add Role Groups Page	64
Figure 40. Snapshot of RADIUS Settings Page.....	66
Figure 41. Snapshot of General RADIUS Settings Page	67
Figure 42. Snapshot of Advanced RADIUS Settings Page	68
Figure 43. Snapshot of KVM Mouse Setting Page	69
Figure 44. Snapshot of Log Settings Page	70
Figure 45. Snapshot of SEL Log Settings Policy Page.....	71
Figure 46. Snapshot of Advanced Log Settings Page.....	72
Figure 47. Snapshot of Media Redirection Page	74
Figure 48. Snapshot of General Settings Page	75
Figure 49. Snapshot of VMedia Instance Settings Page	77

Figure 50. Snapshot of Remote Session Page	78
Figure 51. Snapshot of Active Redirections Page	80
Figure 52. Snapshot of Network Settings Page	81
Figure 53. Snapshot of Network IP Settings Page	82
Figure 54. Snapshot of Network Bond Configuration Page	84
Figure 55. Snapshot of DNS Configuration Page	85
Figure 56. Snapshot of PAM Order Settings Page	88
Figure 57. Snapshot of Platform Event Filters Page	89
Figure 58. Snapshot of Platform Event Filters Slot List Page	90
Figure 59. Snapshot of Event Filters Configuration Page	91
Figure 60. Snapshot of Alert Policies Page	94
Figure 61. Snapshot of Alert Policies Configuration Page	95
Figure 62. Snapshot of LAN Destinations Page	96
Figure 63. Snapshot of LAN Destinations Configuration Page	97
Figure 64. Snapshot of Services Page	98
Figure 65. Snapshot of Services Configuration Page	99
Figure 66. Snapshot of Services Sessions Page	100
Figure 67. Snapshot of SMTP Settings Page	101
Figure 68. Snapshot of SSL Settings Page	103
Figure 69. Snapshot of View SSL Certificate Page	104
Figure 70. Snapshot of Generate SSL Certificate Page	106
Figure 71. Snapshot of Upload SSL Certificate Page	108
Figure 72. Snapshot of System Firewall Page	109
Figure 73. Snapshot of General Firewall Settings Page	110
Figure 74. Snapshot of Existing Firewall Settings Page of General Firewall Settings	111
Figure 75. Snapshot of Existing Firewall Settings Instance Page of General Firewall Settings	111
Figure 76. Snapshot of Add Firewall Settings page of General Firewall Settings	113
Figure 77. Snapshot of IP Firewall Rules Page	115
Figure 78. Snapshot of Existing IP Rules Page	116
Figure 79. Snapshot of Existing IP Rules Instance Page of IP Firewall Rules	116
Figure 80. Snapshot of Add IP Rules Instance Page of IP Firewall Rules	118
Figure 81. Snapshot of Port Firewall Rules Page	119
Figure 82. Snapshot of Existing Port Rules Page	120
Figure 83. Snapshot of Existing Port Rules Instance Page of Port Firewall Rules	120
Figure 84. Snapshot of Add Port Rules Instance Page of Port Firewall Rules	122
Figure 85. Snapshot of User Management Page	124
Figure 86. Snapshot of User Management Configuration Page	125
Figure 87. Snapshot of Video Recording Page	128
Figure 88. Snapshot of Auto Video Recording Page	129
Figure 89. Snapshot of Video Trigger Settings Page	130
Figure 90. Snapshot of Video Remote Storage Page	132
Figure 91. Snapshot of Pre-Event Video Recordings Page	134
Figure 92. Snapshot of IPMI Interfaces Page	135
Figure 93. Snapshot of Keep Share NIC Link Up Page	136
Figure 94. Snapshot of FAN Settings Page	137
Figure 95. Snapshot of Open Loop Control Table Page	138
Figure 96. Snapshot of Close Loop Control Table Page	140
Figure 97. Snapshot of Temperature Sensor and Corresponding Fan Table Page	142
Figure 98. Snapshot of FAN Mode Page	144
Figure 99. Snapshot of Power Restore Policy Page	146
Figure 100. Snapshot of Password Settings Page	147
Figure 101. Snapshot of Remote Control Page	149
Figure 102. Snapshot of H5Viewer KVM Page	150

Figure 103. Snapshot of JViewer KVM Application.....	156
Figure 104. Snapshot of Virtual Media Application.....	160
Figure 105. Snapshot of Video Record Window.....	162
Figure 106. Snapshot of Image Redirection Page.....	165
Figure 107. Snapshot of Remote Images Page.....	166
Figure 108. Snapshot of Power Control Page.....	168
Figure 109. Snapshot of Miscellaneous Page.....	169
Figure 110. Snapshot of UID Control Page.....	170
Figure 111. Snapshot of Post Snoop Page.....	171
Figure 112. Snapshot of Maintenance Page.....	172
Figure 113. Snapshot of Backup Configuration Page.....	173
Figure 114. Snapshot of Firmware Image Location Page.....	174
Figure 115. Snapshot of Firmware Update Page.....	175
Figure 116. Snapshot of BIOS Update Page.....	176
Figure 117. Snapshot of PSU Update Page.....	178
Figure 118. Snapshot of FPGA Update Page.....	179
Figure 119. Snapshot of Retimer Update Page.....	180
Figure 120. Snapshot of Backplane Update Page.....	181
Figure 121. Snapshot of CPLD Update Page.....	182
Figure 122. Snapshot of Preserve Configuration Page.....	183
Figure 123. Snapshot of Restore Configuration Page.....	185
Figure 124. Snapshot of Restore Factory Defaults Page.....	186
Figure 125. Snapshot of Reset Page.....	188
Figure 126. Snapshot of Sign Out Button on the Current User Window.....	189

Tables

Table 1. BMC Heartbeat LED Status	192
Table 2. UID LED Status	192
Table 3. System Fault LED Status	193
Table 4. FAN Fault LED Status	194

Revision History

Revision	Description	Date
1.06	● Add LED Indicator description.	September 2022
1.05	● Restructure document.	May 2022

1.0 Introduction

This user guide is written for system administrators and end-users who intend to configure the Intelligence Platform Management Interface (IPMI) settings supported by ASPEED AST2500 Baseboard Management Controller (BMC), which is integrated into the mainboard. This document provides detailed information on configuring the BMC settings supported by the AST2500 controller.

Note: All screenshots in this document are provided for illustrative purposes only and may vary from the actual product.

2.0 BMC Web User Interface Service

The BMC firmware provides an embedded web server that allows users to configure the BMC settings through the BMC Web User Interface (WebUI) service. The detailed information is listed in the following sections.

2.1 BMC WebUI Login URL

BMC WebUI service supports login the service by URL with either HyperText Transfer Protocol (HTTP) or HyperText Transfer Protocol Secure (HTTPS) methods. For security reasons, it is recommended that users use HTTPS to access the BMC WebUI service.

2.1.1 Configuring BMC IP Address by UEFI BIOS


To access the BMC WebUI service by URL, users can configure or obtain the BMC IP address from UEFI BIOS.

2.1.1.1 Obtain BMC IP Address from DHCP mode

1. Boot to UEFI BIOS SETUP page.
2. Select the **Server Mgmt** page.
3. Select the **BMC Network Configuration** page.


4. Obtain BMC IP Address from the field of **Station IP Address** if **Configuration address source** is set to **DHCP** or

Figure 1. Snapshot of BMC Network Configuration Page

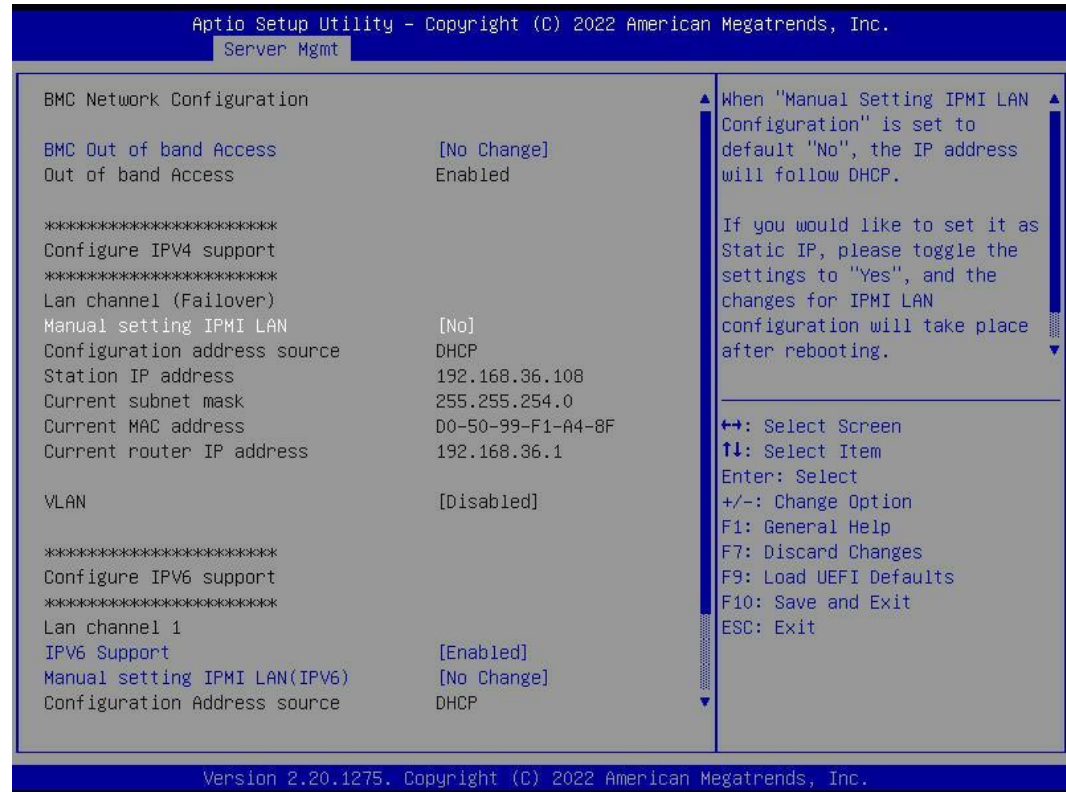


5. Obtain the BMC IP address from the UEFI BIOS POST screen or

Figure 2. Snapshot of BMC IP Address Shown in Screen During UEFI BIOS POST



6. Obtain the BMC IP address from the UEFI BIOS LOGO screen.


Figure 3. Snapshot of BIOS LOGO Screen with BMC IP Address

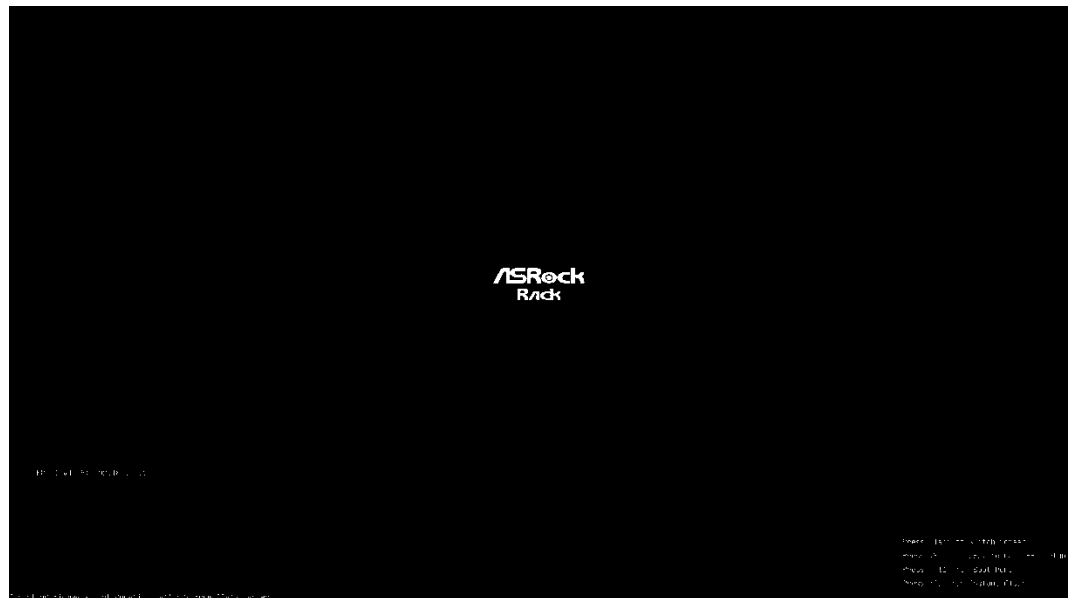

2.1.1.2 Setting Static BMC IP Address through UEFI BIOS

1. Boot to UEFI BIOS SETUP page.
2. Select the **Server Mgmt** page.
3. Select the **BMC Network Configuration** page.
4. Navigate to **Manual setting IPMI LAN** and select the **[Yes]**.
5. Navigate to **Configuration address source** and select the **[Static]**.
6. Once the **Configuration address source** is **Static**, the field of **Station IP Address, Current subnet mask, and Current router IP address** will display **0.0.0.0** and configurable, which indicates users can fill the new setting value into these fields. After filling the new value into these fields, press **<F10>** to save the values and reboot the system to enable these configured settings values.


Figure 4. Snapshot of Configure BMC Static IP Address

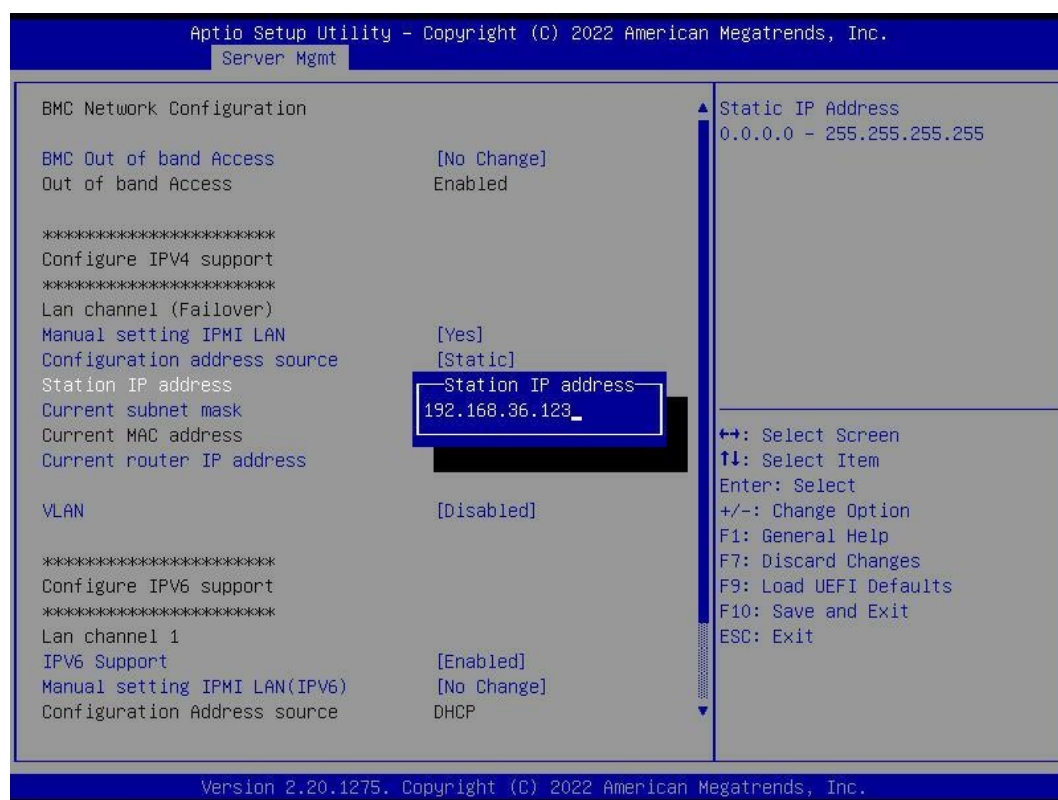

2.2 Username and Password

Once users connect to the BMC WebUI service through the browser, the BMC WebUI service login page will display on the browser.

Figure 5. Snapshot of BMC WebUI Service Login Page

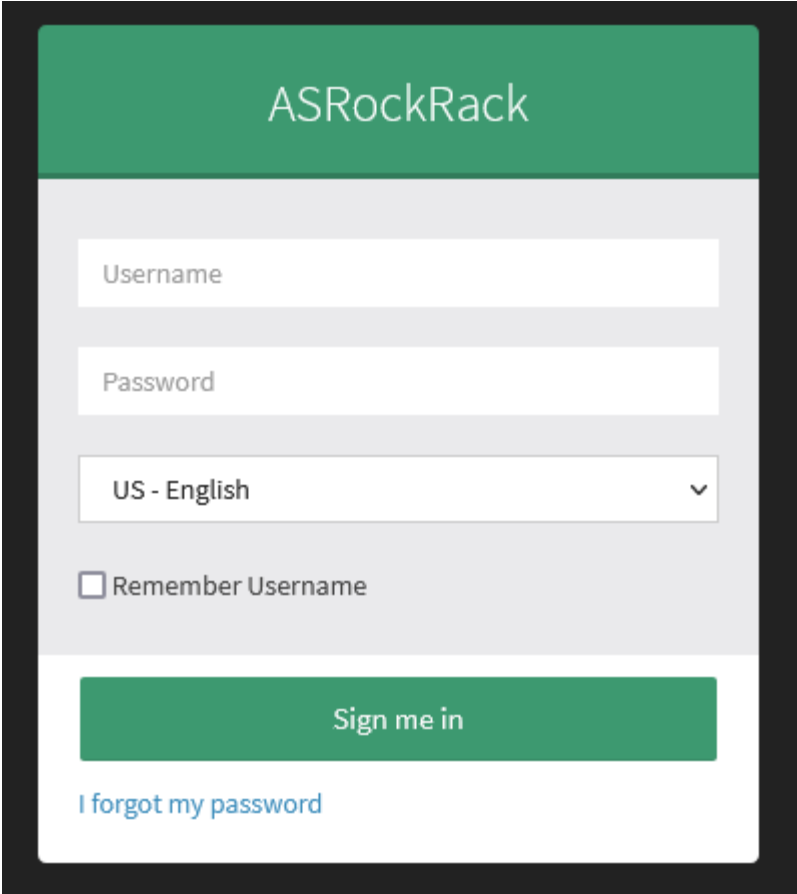A screenshot of the ASRockRack BMC WebUI login page. The page has a green header with the text "ASRockRack". Below the header is a light gray box containing the login fields: a "Username" text input, a "Password" text input, a language dropdown menu currently showing "US - English", and a checkbox labeled "Remember Username". Below the gray box is a green "Sign me in" button. At the bottom of the form is a blue link that says "I forgot my password".

The fields description is shown as follows:

- **Username:** Enter the user identifier (UID) of the account to who wants to log in.
- **Password:** Enter the password of the account to which wants to log in.
- **Language Menu:** Changes BMC WebUI supported language.
- **Remember Username:** Check the box if users want to keep the username in the browser settings.
- **Sign me in:** After entering the required credentials, click the **Sign me in** to log in to the BMC WebUI service.
- **I forgot my password:** The user can generate a new password using

this link if the user forgot the password.

- **Default Username and Password:**

- **Username:** admin


- **Password:** admin

Note: If the user uses the default username and password to log in to the BMC WebUI service for the first time, the BMC will require the user to change the password.

2.3 Accessing BMC WebUI Service

The BMC WebUI service consists of various items, including menu, graphics, table, options, and configuration. The detailed information is listed in the following subsections.


Figure 6. Snapshot of BMC WebUI Service Main Page

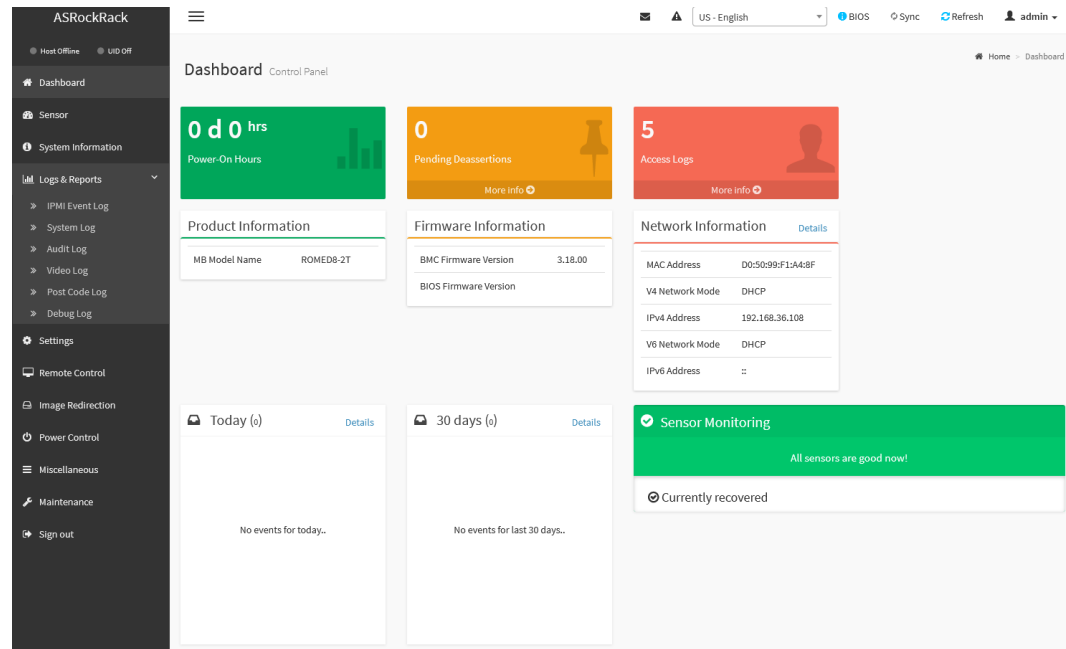

2.3.1 Menu Bar

The Menu Bar provides a group of functional feature tabs for users to configure the BMC configuration. The Menu Bar is located on the left side of BMC WebUI.

Figure 7. Snapshot of Menu Bar

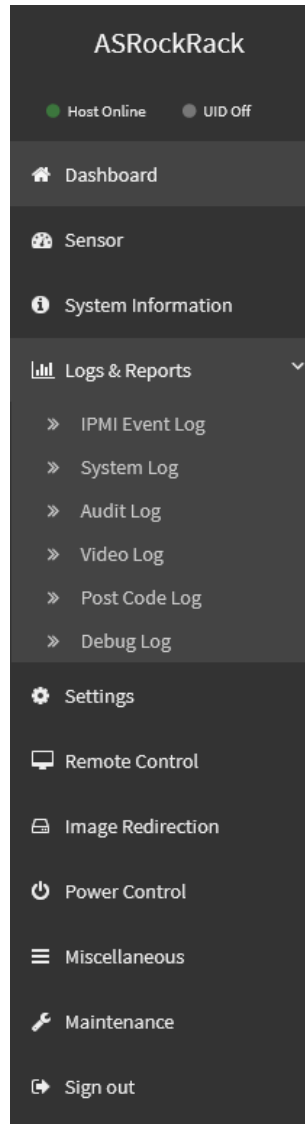

The supported feature tabs are listed in the following:

- **Dashboard**
- **Sensor**
- **System Information**

- **Logs and Reports**
 - **IPMI Event Log**
 - **System Log**
 - **Audit Log**
 - **Video Log**
 - **Post Code log**
 - **Debug Log**
- **Settings**
- **Remote Control**
- **Image Redirection**
- **Power Control**
- **Miscellaneous**
- **Maintenance**
- **Sign Out**


The **Host Online/Host Offline** icon indicates the system power state is **Power ON/Power Off**. Click the icon, then navigate to the Power Control page.

The **UID On/UID Off** icon indicates the current UID LED status. Click the icon, then navigate to the UID Control page.

2.3.2 Quick Link and User Information

The Quick Link and User Information are located in the upper right corner of BMC WebUI. It provides various functional feature links for users quickly view the information or change the specific configuration.

Figure 8. Snapshot of Quick Link and User Information

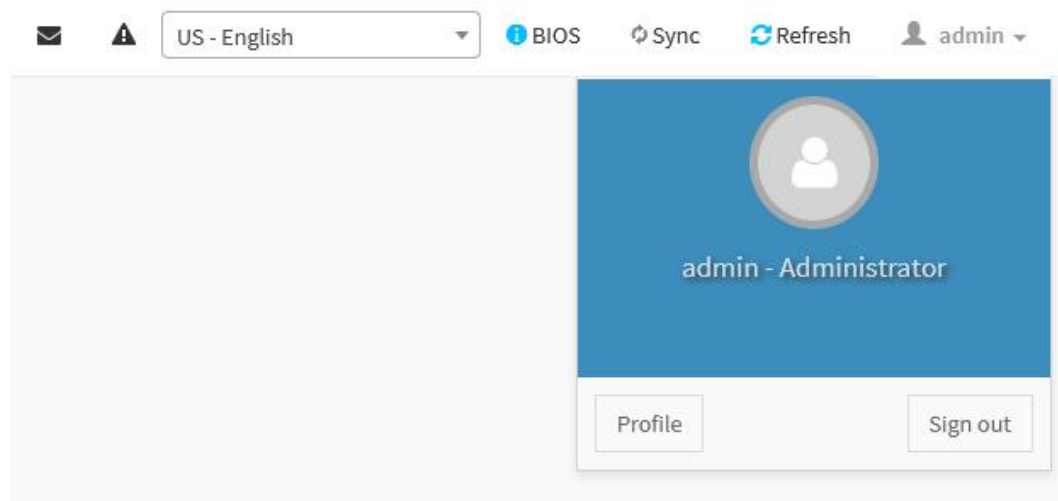

2.3.2.1 Quick Links

The supported Quick Links and their actions are listed in the following:

- **Message:** Click **Message** (✉) Quick Link to quickly view the received event logs or alert messages in the popup window. Click the message listed in the popup window, then navigates to the Logs and Reports page to view the details.
- **Notification:** Click **Notification** (⚠) Quick Link to quickly view the received notification in the popup window.
- **Language Menu:** Click **Language Menu** (US - English) to change the supported BMC WebUI language.
- **BIOS:** Click **BIOS** (i BIOS) Quick Link to view the BIOS settings.
- **Sync:** Click **Sync** (↻ Sync) Quick Link to turn on/off the sync feature. Turn on this feature that syncs the latest Sensor and Event Log updates.
- **Refresh:** Click **Refresh** (↻ Refresh) Quick Link to reload current page.

2.3.2.2 User Information


The User Information shows the logged-in user information.

Click **User Information** ( admin ▼) Quick Link to show more information on the currently logged-in user. The currently logged-in user's username will show on the Quick Link.

Click the **Profile** button in the popup window, then navigate to the User Management Configuration page of the currently logged-in user.

Click the **Sign out** button in the popup window, and sign out the current session.

Figure 9. Snapshot of User Information and Popup Window

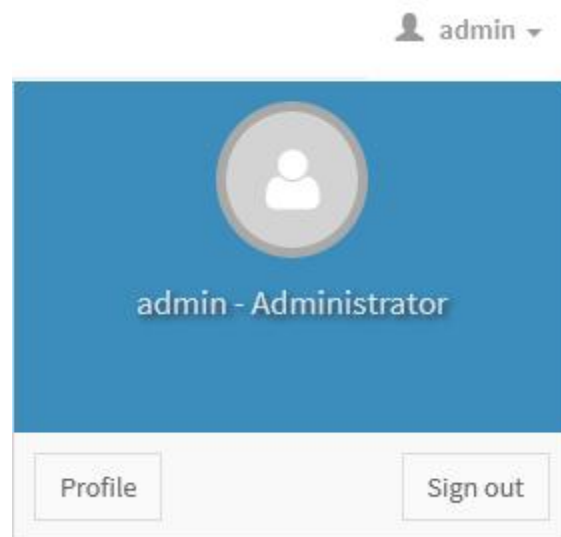

2.3.2.3 User Privilege

BMC WebUI service provides five user privilege levels for the administrator to manage user account privilege. The details in the following:


- **None:** Not allow login and access BMC WebUI Service.
- **User:** Only perform the allowed commands.
- **Operator:** All commands are allowed except configuration commands that can change the behavior of the out-of-band interfaces.
- **OEM:** All OEM commands are allowed.
- **Administrator:** All commands are allowed.

2.4 Dashboard

BMC Dashboard provides overall information on system status.

To view the Dashboard page, click the **Dashboard** tab from the menu bar.

Figure 10. Snapshot of Dashboard Page

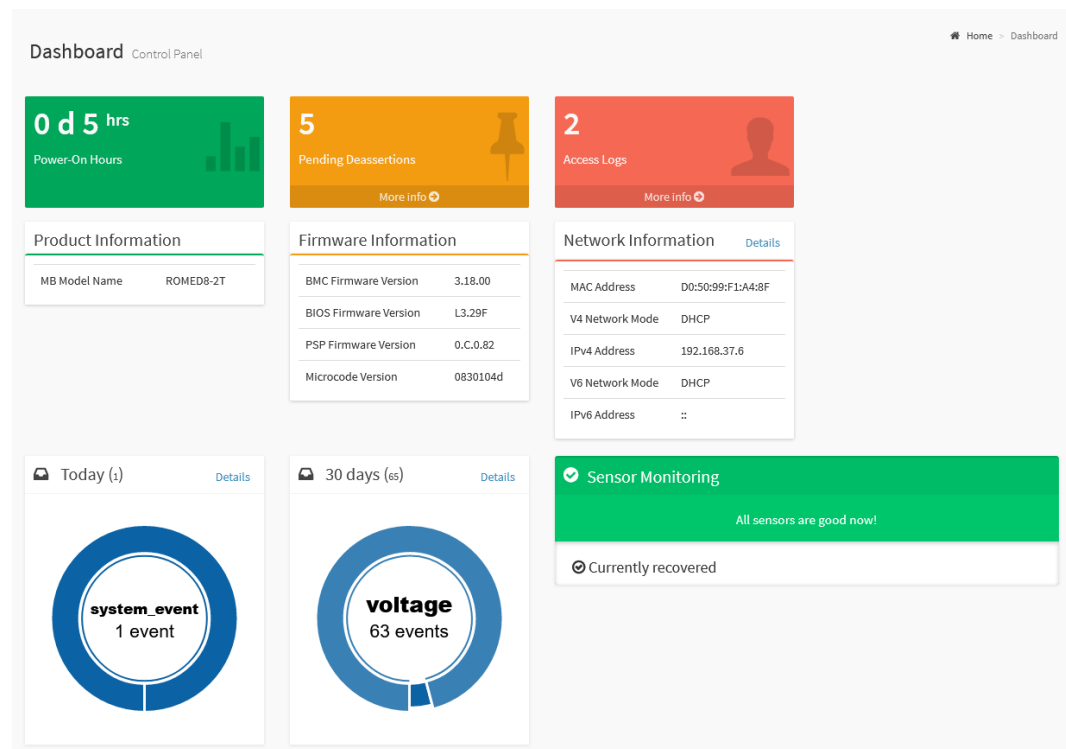

The items on the Dashboard page are described in the following subsections.

2.4.1 Power-On Hours

It indicates the system power-on time and keeps on accumulating when the system is powered. After flashing a new BMC firmware image, the data of power-on time to be cleared to zero.

2.4.2 Pending Deassertions

It indicates the number of all pending events which are generated by various sensors and waiting for de-asserted.

Click the **More Info** link, then navigate to the Event Log page to view all the event logs information.

2.4.3 Access Log

It indicates the number of Access Logs which are generated by users accessing the BMC WebUI.

Click the **More Info** link then navigate to the Audit Log page to view all of the access logs information.

2.4.4 Product Information

It lists related components' names, such as mainboard name, system name, etc.

2.4.5 Firmware Information

It lists related firmware components information such as BMC firmware version, BIOS firmware version, CPLD firmware version, microcode version, etc.

2.4.6 Network Information

It lists related network configuration information such as BMC MAC address,

IPv4/IPv6 address, IPv4/IPv6 network mode, etc.

Click the **Details** link then navigate to the **Network IP Settings** page to view more network configuration information or configure network settings.

2.4.7 Today and 30 Days

This item lists all the event logs which are generated by various sensors.

Click the **Details** link on today and 30 days item then navigate to the Event Log page to view all event logs, which are filtered by today and 30 days respectively.

2.4.8 Sensor Monitoring

It lists all the critical sensors on the system.


Click the listed critical sensor, then navigate to the Sensor detail page to view all information on the selected sensor.

2.5 Sensor

The Sensor Reading page provides related information on all sensors in the system.

To view the Sensor Reading page, click the **Sensor** tab from the menu bar.


Figure 11. Snapshot of Sensor Reading Page

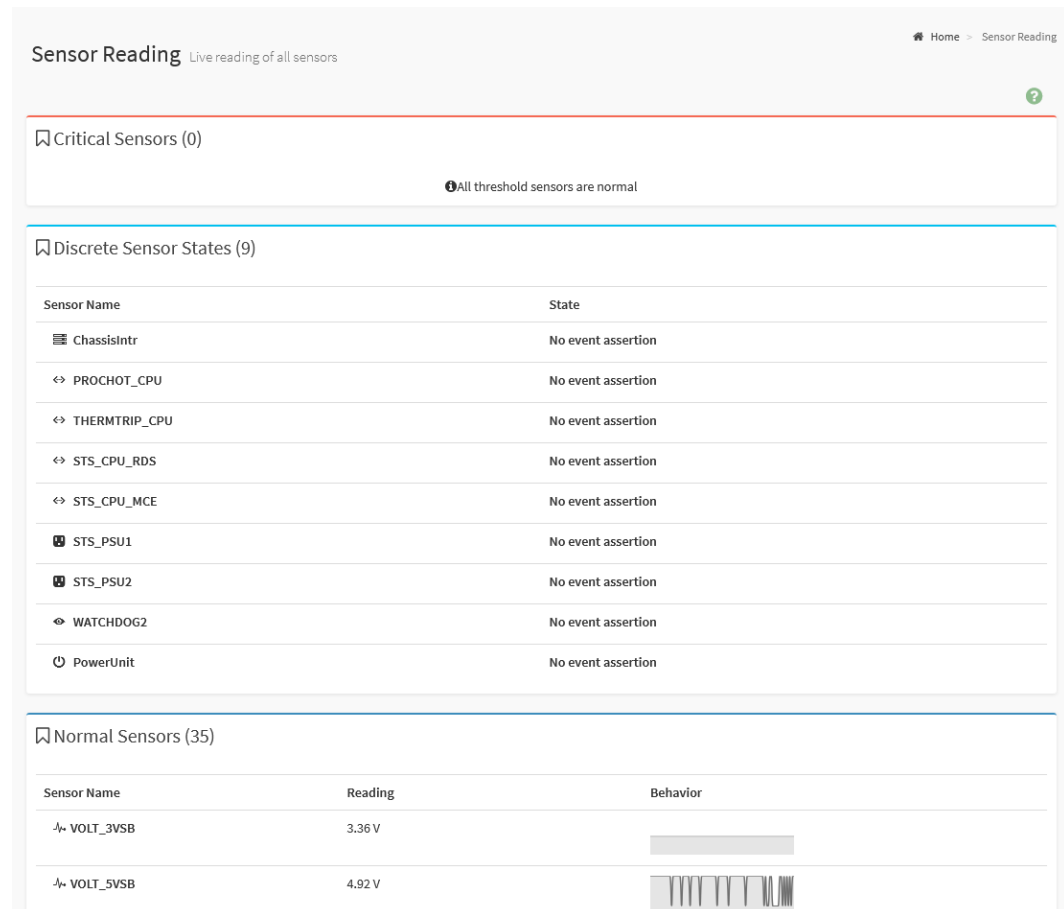

2.5.1 Sensor Detail

Click on the specific sensor from the Sensor Reading page then navigate to the Sensor detail page to view more information about the selected sensor, including sensor threshold values, events, and graphical representation.

Figure 12. Snapshot of Sensor Detail Page

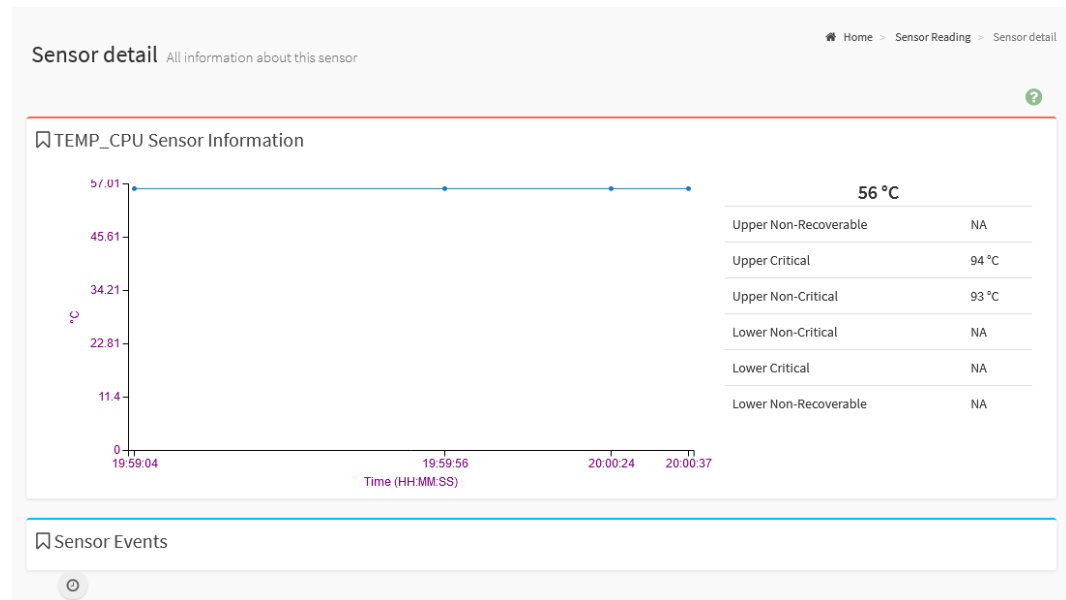

There are six types of threshold values are listed on the page:


- **Upper Non-Recoverable (UNR)**
- **Upper Critical (UC)**
- **Upper Non-Critical (UNC)**
- **Lower Non-Critical (LNC)**
- **Lower Critical (LC)**
- **Lower Non-Recoverable (LNR)**

The event triggered by the selected sensor will be listed in the Sensor Events group.

2.6 System Information

System Information page provides devices information of the system, including System Inventory, FRU Information, Power, and SMBIOS information.

Figure 13. Snapshot of System Information Page

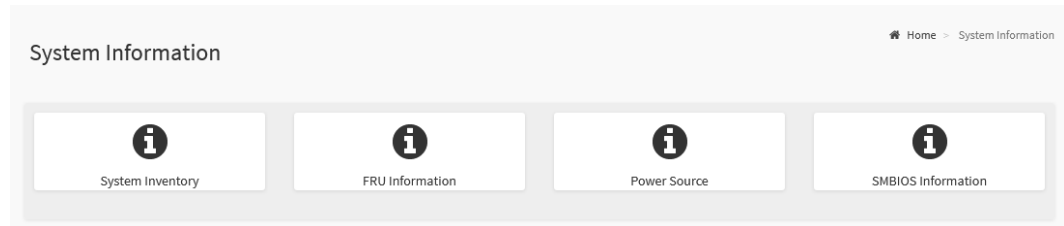

The details about each feature are listed in the following.

2.6.1 System Inventory

System Inventory page provides information on devices that are installed in the host, including Processor, Memory Controller, PCIe Device, PCIe function, and Storage.


To view the System Inventory page, click the **System Inventory** tab from the System Information page.

The details about each feature are listed in the following.

2.6.1.1 Processor

Processor page provides various information about each processor installed in the host.

Figure 14. Snapshot of System Inventory Page

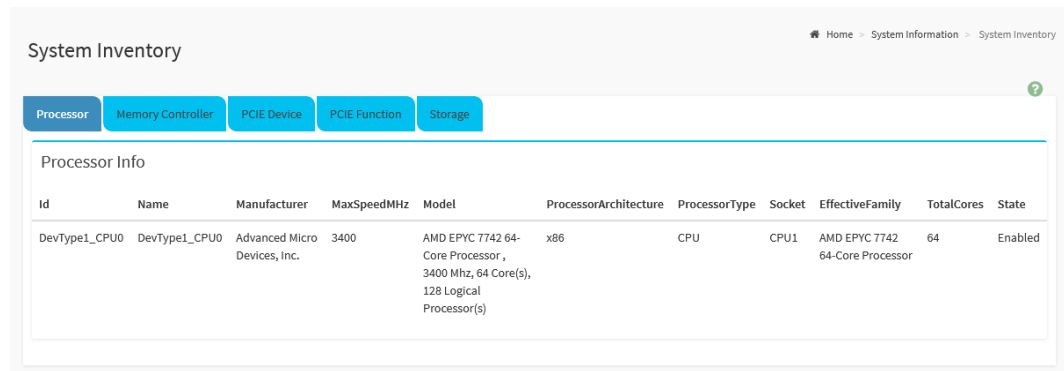

System Inventory

Home > System Information > System Inventory

Processor Memory Controller PCIe Device PCIe Function Storage

Processor Info

Id	Name	Manufacturer	MaxSpeedMHz	Model	ProcessorArchitecture	ProcessorType	Socket	EffectiveFamily	TotalCores	State
DevType1_CPU0	DevType1_CPU0	Advanced Micro Devices, Inc.	3400	AMD EPYC 7742 64-Core Processor, 3400 Mhz, 64 Core(s), 128 Logical Processor(s)	x86	CPU	CPU1	AMD EPYC 7742 64-Core Processor	64	Enabled


The information listed on the page includes

- **Id**
- **Name**
- **Manufacturer**
- **MaxSpeedMHz**
- **Model**
- **ProcessorArchitecture**
- **ProcessorType**
- **Socket**
- **EffectiveFamily**
- **TotalCores**
- **State**

2.6.1.2 Memory Controller

Memory Controller page provides various information about each memory module installed in the host.

Figure 15. Snapshot of Memory Controller Page

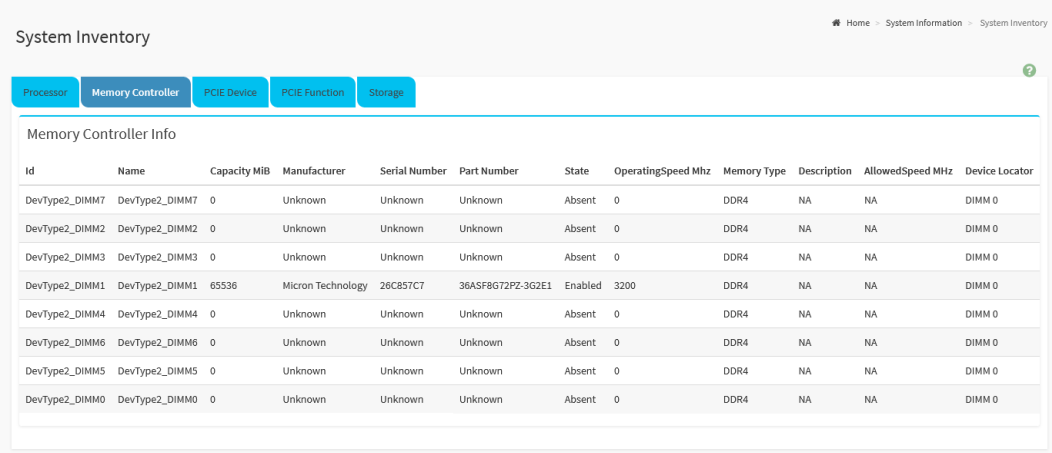

The screenshot shows the 'System Inventory' page with the 'Memory Controller' tab selected. It displays a table titled 'Memory Controller Info' with 12 columns: Id, Name, Capacity Mib, Manufacturer, Serial Number, Part Number, State, OperatingSpeed Mhz, Memory Type, Description, AllowedSpeed Mhz, and Device Locator. The table lists 10 memory modules, with one (DevType2_DIMM1) being enabled and the others absent.

Id	Name	Capacity Mib	Manufacturer	Serial Number	Part Number	State	OperatingSpeed Mhz	Memory Type	Description	AllowedSpeed Mhz	Device Locator
DevType2_DIMM7	DevType2_DIMM7	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM2	DevType2_DIMM2	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM3	DevType2_DIMM3	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM1	DevType2_DIMM1	65536	Micron Technology	26C857C7	36ASF8G72PZ-3G2E1	Enabled	3200	DDR4	NA	NA	DIMM 0
DevType2_DIMM4	DevType2_DIMM4	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM6	DevType2_DIMM6	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM5	DevType2_DIMM5	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0
DevType2_DIMM0	DevType2_DIMM0	0	Unknown	Unknown	Unknown	Absent	0	DDR4	NA	NA	DIMM 0


The information listed on the page includes

- **Id**
- **Name**
- **Capacity Mib**
- **Manufacturer**
- **Serial Number**
- **Part Number**
- **State**
- **OperatingSpeed Mhz**
- **Memory Type**
- **Description**
- **AllowedSpeed Mhz**
- **Device Locator**

2.6.1.3 PCIE Device

PCIE Device page provides various information about each PCIe device installed in the host.

Figure 16. Snapshot of PCIE Device Page

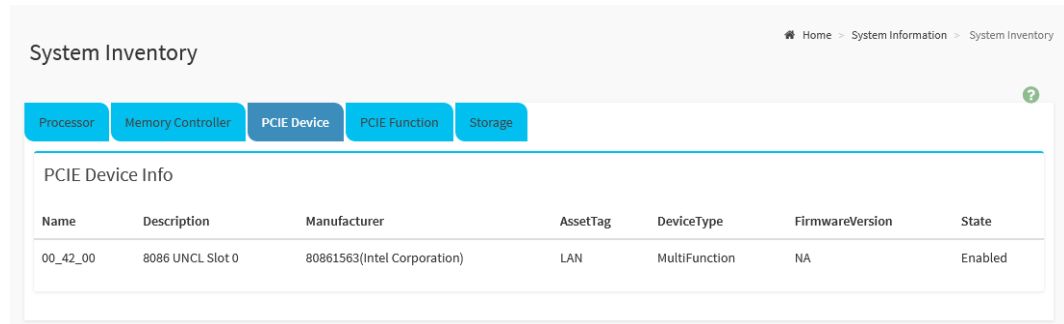

The screenshot shows a web interface titled "System Inventory" with a breadcrumb trail: Home > System Information > System Inventory. Below the title is a navigation bar with five tabs: Processor, Memory Controller, PCIE Device (selected), PCIE Function, and Storage. A green question mark icon is visible in the top right corner of the content area. The main content is titled "PCIE Device Info" and contains a table with the following data:

Name	Description	Manufacturer	AssetTag	DeviceType	FirmwareVersion	State
00_42_00	8086 UNCL Slot 0	80861563(Intel Corporation)	LAN	MultiFunction	NA	Enabled

The information listed on the page includes

- **Name**
- **Description**
- **Manufacturer**
- **AssetTag**
- **DeviceType**
- **FirmwareVersion**
- **State**

2.6.1.4 PCIE Function

PCIE Function page provides various information about each PCIe device installed in the host.

Figure 17. Snapshot of PCIE Function Page

System Inventory											
Home > System Information > System Inventory											
Processor Memory Controller PCIE Device PCIE Function Storage											
PCIE Function Info											
Id	Name	Device Linked	Device Class	Class Code	Device Id	Vendor Id	Function Id	Revision Id	Sub System Id	Sub System Vendor Id	State
DevType3_LANN_Deindex2C	DevType3_LANN_Deindex2C	00_42_00	NetworkController	0x020000	0x1563	0x8086	0	0x01	0x1563	0x1849	Enabled
DevType3__Deindex2D	DevType3__Deindex2D	00_42_00	NetworkController	0x020000	0x1563	0x8086	1	0x01	0x1563	0x1849	Enabled

The information listed on the page includes

- **Id**
- **Name**
- **Device Linked**
- **Device Class**
- **Device Code**
- **Device Id**
- **Vendor Id**
- **Revision Id**
- **Sub System Id**
- **Sub System Vendor Id**
- **State**

2.6.1.5 Storage

Storage page provides various information about each storage drive and storage controller installed in the host.

Figure 18. Snapshot of Storage Page

The screenshot shows the 'System Inventory' page with the 'Storage' tab selected. It contains two tables: 'Storage Drive Info' and 'Storage Controller Info'.

System Inventory									
Home > System Information > System Inventory									
Processor Memory Controller PCIE Device PCIE Function Storage									
Storage Drive Info									
Name	SerialNumber	Manufacturer	Location	Protocol	Model	Revision	EncryptionStatus	MediaType	State
Information Not Available									
Storage Controller Info									
MemberId	SerialNumber	Model	FirmwareVersion	SpeedGbps	State				
5	Not Available	Not Available	Not Available	6	Enabled				
2	Not Available	Not Available	1.10	3	Enabled				
0	Not Available	Not Available	1.10	3	Enabled				
6	Not Available	Not Available	Not Available	6	Enabled				
3	Not Available	Not Available	Not Available	6	Enabled				
4	Not Available	Not Available	Not Available	6	Enabled				
1	Not Available	Not Available	1.10	3	Enabled				

The information listed on the page includes:

- **Storage Drive**
 - **Name**
 - **SerialNumber**
 - **Manufacturer**
 - **Location**
 - **Protocol**
 - **Model**
 - **Revision**
 - **EncryptionStatus**
 - **MediaType**
 - **State**
- **Storage Controller**
 - **MemberId**
 - **SerialNumber**

- **Model**
- **FirmwareVersion**
- **SpeedGbps**
- **State**

2.6.2 FRU Information

FRU Information page provides various information on BMC FRU devices. Three types of information are listed on the FRU Information page includes Chassis Information, Board Information, and Product Information.

To view the FRU Information page, click the **FRU Information** tab from the System Information page

Figure 19. Snapshot of FRU Information Page

The screenshot displays the 'FRU Information' page with the breadcrumb 'Home > System Information > FRU Information'. The page title is 'FRU Information' with the subtitle 'Field Replaceable Units'. A green help icon is in the top right. Below the title is a section 'Available FRU Devices' containing a table with two rows: 'FRU Device ID' with value '0' and 'FRU Device Name' with value 'BMC_FRU'. Below this are three panels: 'Chassis Information', 'Board Information', and 'Product Information'. Each panel contains a table of attributes and values.

Chassis Information	
Chassis Information Area Format Version	1
Chassis Type	Main Server Chassis
Chassis Part Number	
Chassis Serial Number	
Chassis Manufacturer(Extra)	
Chassis version(Extra)	
Chassis asset tag(Extra)	
Chassis sku number(Extra)	
Chassis model(Extra)	

Board Information	
Board Information Area Format Version	1
Language	25
Manufacture Date Time	Mon Sep 21 21:22:00 2020
Board Manufacturer	ASRock Rack Inc.
Board Product Name	ROMED8-2T
Board Serial Number	
Board Part Number	R2.01
FRU File ID	
Board version(Extra)	
Board asset tag(Extra)	

Product Information	
Product Information Area Format Version	1
Language	25
Product Manufacturer	ASRock Rack Inc.
Product Name	
Product Part Number	
Product Version	00
Product Serial Number	1623920000003
Asset Tag	
FRU File ID	
product UUID(Extra)	028111b21dd221da9e6fd05099f1a48f
product sku number(Extra)	
product family(Extra)	

The information listed on the page includes

Available FRU Devices:

- **FRU Device ID**
- **FRU Device Name**

Chassis Information

Board Information

Product Information

2.6.2.1 Chassis Information

- Chassis Information Area Format Version
- Chassis Type
- Chassis Part Number
- Chassis Serial Number
- Chassis Manufacturer (Extra)
- Chassis Version (Extra)
- Chassis Asset Tag (Extra)
- Chassis SKU Number (Extra)
- Chassis Model (Extra)

2.6.2.2 Board Information

- Board Information Area Format Version
- Language
- Manufacture Date Time
- Board Manufacturer
- Board Product Name
- Board Serial Number
- Board Part Number
- FRU File ID
- Board Version (Extra)
- Board Asset Tag (Extra)

2.6.2.3 Product Information

- Product Information Area Format Version
- Language
- Product Manufacturer
- Product Name
- Product Part Number
- Product Version
- Product Serial Number
- Asset Tag
- FRU File ID
- Product UUID (Extra)
- Product SKU Number (Extra)


- **Product Family (Extra)**

2.6.3 Power Source

Power Source page provides various information about each system power supply installed in the host.

To view the Power Source page, click the **Power Source** tab from the System Information page

Figure 20. Snapshot of Power Source Page

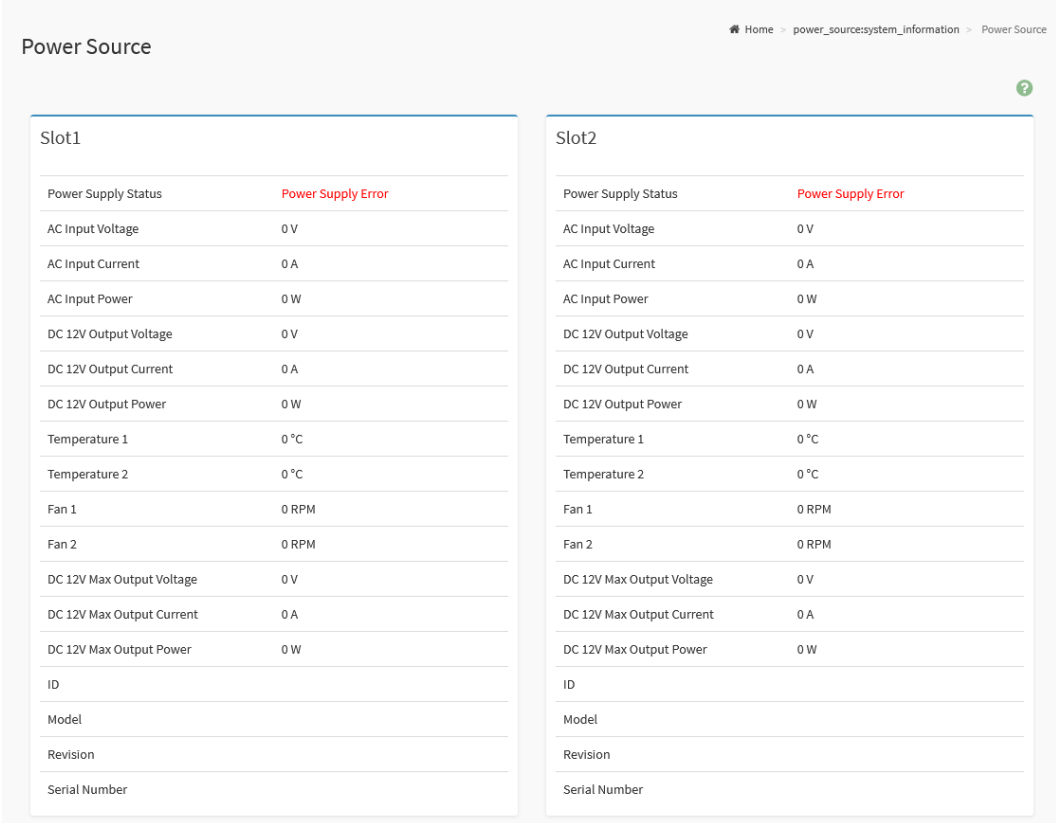

The screenshot shows the 'Power Source' page with a breadcrumb trail: Home > power_source:system_information > Power Source. A green question mark icon is in the top right. The page is divided into two main sections: Slot1 and Slot2. Each section contains a table of power supply metrics. In Slot1, the 'Power Supply Status' is 'Power Supply Error' in red. In Slot2, it is 'Power Supply Error' in red. Both slots show identical values for all other metrics: 0 V for AC Input Voltage, 0 A for AC Input Current, 0 W for AC Input Power, 0 V for DC 12V Output Voltage, 0 A for DC 12V Output Current, 0 W for DC 12V Output Power, 0 °C for Temperature 1 and 2, 0 RPM for Fan 1 and 2, 0 V for DC 12V Max Output Voltage, 0 A for DC 12V Max Output Current, 0 W for DC 12V Max Output Power, and empty fields for ID, Model, Revision, and Serial Number.

Slot1	
Power Supply Status	Power Supply Error
AC Input Voltage	0 V
AC Input Current	0 A
AC Input Power	0 W
DC 12V Output Voltage	0 V
DC 12V Output Current	0 A
DC 12V Output Power	0 W
Temperature 1	0 °C
Temperature 2	0 °C
Fan 1	0 RPM
Fan 2	0 RPM
DC 12V Max Output Voltage	0 V
DC 12V Max Output Current	0 A
DC 12V Max Output Power	0 W
ID	
Model	
Revision	
Serial Number	

Slot2	
Power Supply Status	Power Supply Error
AC Input Voltage	0 V
AC Input Current	0 A
AC Input Power	0 W
DC 12V Output Voltage	0 V
DC 12V Output Current	0 A
DC 12V Output Power	0 W
Temperature 1	0 °C
Temperature 2	0 °C
Fan 1	0 RPM
Fan 2	0 RPM
DC 12V Max Output Voltage	0 V
DC 12V Max Output Current	0 A
DC 12V Max Output Power	0 W
ID	
Model	
Revision	
Serial Number	

The information listed on the page includes:

Slot 1 and Slot 2:

- **Power Supply Status**
- **AC Input Voltage**
- **AC Input Current**
- **AC Input Power**
- **DC 12V Output Voltage**
- **DC 12V Output Current**


- **DC 12V Output Power**
- **Temperature 1**
- **Temperature 2**
- **Fan 1**
- **Fan 2**
- **DC 12V Max Output Voltage**
- **DC 12V Max Output Current**
- **DC 12V Max Output Power**
- **ID**
- **Model**
- **Revision**
- **Serial Number**

2.6.4 SMBIOS Information

SMBIOS Information page provides various information about SMBIOS. Refer to related SMBIOS specifications for more details.

To view the SMBIOS Information page, click the **SMBIOS Information** tab from the System Information page

Figure 21. Snapshot of SMBIOS Information Page

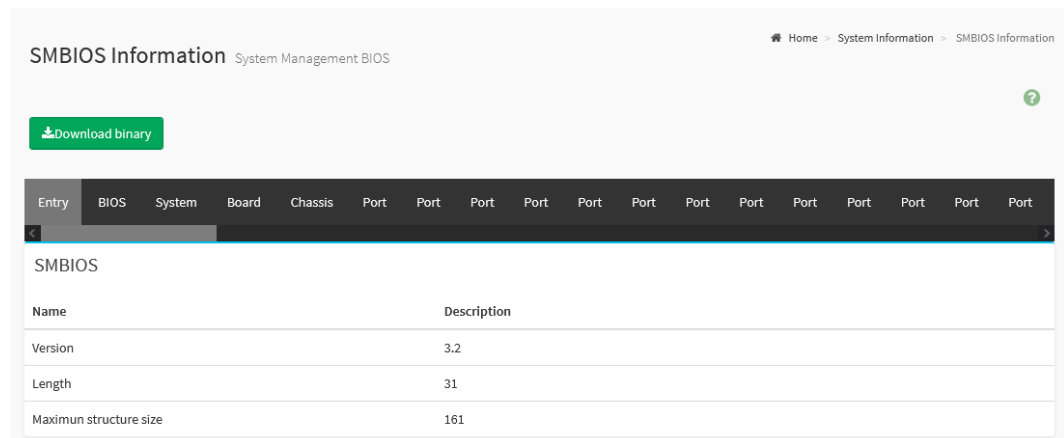

Click the **Download binary** button on SMBIOS Information to download the raw data of SMBIOS.

2.7 Logs & Reports

Logs & Reports provides various functional features for users to audit the logs triggered by multiple devices or conditions.

Supported features are listed in the following subsections including

- **IPMI Event Log**
- **System Log**
- **Audit Log**
- **Video Log**
- **Post Code Log**
- **Debug Log**

The **Logs & Reports** tab is located at the menu bar, click **Log & Reports** tab to expand all the supported features tabs.

2.7.1 IPMI Event Log

IPMI Event Log page provides various event logs information which is generated by different sensors for users to monitor system status.

To view the IPMI Event Log page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **IPMI Event Log** tab from the sub-menu bar.

Figure 22. Snapshot of IPMI Event Log Page

Event Log All sensor event logs

Filter by Date: Start Date [] End Date [] Filter by type: All Events All Sensors Filter by severity: All Severities

☐ BMC Timezone ☒ Client Timezone UTC Offset: GMT + 8:0

[Clear Event Logs](#) [Download Event Logs](#) [Download Event Logs Raw Data](#)

Event Log: 73 out of 73 event entries

EventID	Timestamp	Severity	GenID	Sensor Name	Sensor Number	Sensor Type	Sensor TypeCode	EvtDir	Event Data1	Event Data2	Event Data3	Description
0073	Monday, April 11th 2022, 11:14:36 am	Info	0001h	BIOS	00h	System Event	12h	6fh	05h	80h	ffh	Timestamp Clock Synch - Asserted Event Data1 Timestamp Clock Synch Event Data2 N/A Event Data3 N/A
0072	Pre-init Timestamp	Info	0001h	BIOS	00h	System Event	12h	6fh	05h	00h	ffh	Timestamp Clock Synch - Asserted Event Data1 Timestamp Clock Synch Event Data2 N/A Event Data3 N/A
0071	Wednesday, April 6th 2022, 11:39:51 am	Info	0001h	BIOS	00h	System Event	12h	6fh	05h	80h	ffh	Timestamp Clock Synch - Asserted Event Data1 Timestamp Clock Synch Event Data2 N/A Event Data3 N/A
0070	Pre-init Timestamp	Info	0001h	BIOS	00h	System Event	12h	6fh	05h	00h	ffh	Timestamp Clock Synch - Asserted Event Data1 Timestamp Clock Synch Event Data2 N/A Event Data3 N/A
0069	Thursday, March 31st 2022, 7:20:46 pm	Health	0020h	FANM_1	63h	Fan	04h	81h	50h	13h	0ah	Lower Non-critical - going low - Deasserted Event Data1 Lower Non-critical - going low Event Data2 Reading that triggered event: 1900RPM Event Data3 Threshold value that triggered event: 1000RPM
0068	Thursday, March 31st 2022, 7:17:26 pm	Warning	0020h	FANM_1	63h	Fan	04h	01h	50h	00h	0ah	Lower Non-critical - going low - Asserted Event Data1 Lower Non-critical - going low Event Data2 Reading that triggered event: 0RPM Event Data3 Threshold value that triggered event: 1000RPM
0067	Thursday, March 31st 2022, 7:16:46 pm	Info	0001h	BIOS	00h	System Event	12h	6fh	05h	80h	ffh	Timestamp Clock Synch - Asserted Event Data1 Timestamp Clock Synch Event Data2 N/A Event Data3 N/A

The fields on the IPMI Event Log page include:

- **Filter by Date:** Filter the records by specific Start Date and End Date using Calendar.
- **Filter by Type:** Filter the records by specific Event Type and Sensor Type.
- **BMC and Client Time Zone:** Select either one to switch the current UTC offset value. The timestamp value will be updated when the option has been changed.
- **UTC Offset:** Display the current UTC Offset value.
- **Clear Event Logs:** Click the **Clear Event Logs** button to clear the records.

- **Download Event Logs:** Click the **Download Event Logs** button to download all records information with the specific data format.
- **Download Event Logs Raw Data:** Click the **Download Event Logs** button to download all records information in the raw data format.

The information listed on the page includes

- **EventID**
- **Timestamp**
- **Severity**
- **GenID**
- **Sensor Name**
- **Sensor Number**
- **Sensor Type**
- **Sensor TypeCode**
- **EvtDir Type**
- **Event Data1**
- **Event Data2**
- **Event Data3**
- **Description**


2.7.2 System Log

System Log page provides various system events information which is generated by the BMC system.

To view the System Log page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **System Log** tab from the sub-menu bar.

Note: To configure this feature, users can view the Advanced Log Settings page. Click the **Settings** tab from the menu bar -> **Log Settings** -> **Advanced Log Settings**.

Figure 23. Snapshot of System Log Page

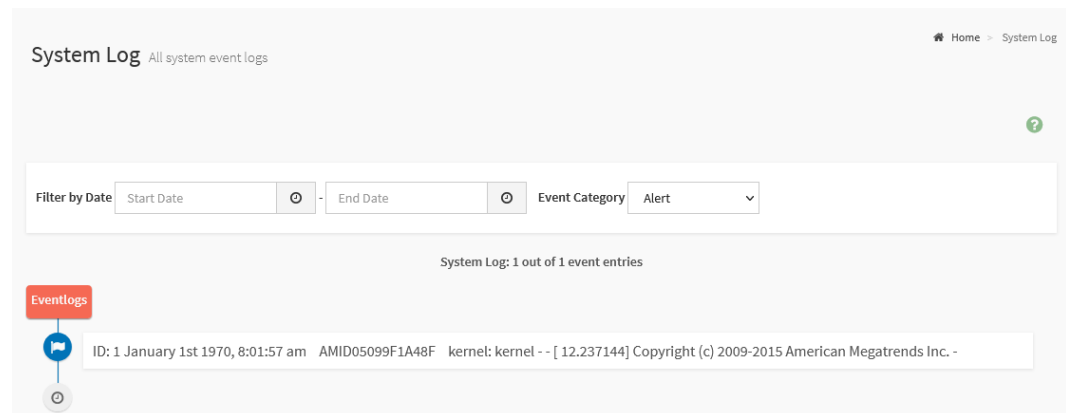

The fields on the System Log page include

- **Filter by Date:** Filter the records by specific Start Date and End Date using Calendar.
- **Event Category:** Select the target event to view related events, including Alert, Critical, Error, Notification, Warning, Debug, Emergency, and information.


2.7.3 Audit Log

Audit Log page provides user login information log for users to monitor the BMC WebUI access.

To view the Audit Log page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **Audit Log** tab from the sub-menu bar.

Note: To configure this feature, users can view the Advanced Log Settings page. Click the **Settings** tab from the menu bar -> **Log Settings** -> **Advanced Log Settings**.

Figure 24. Snapshot of Audit Log Page

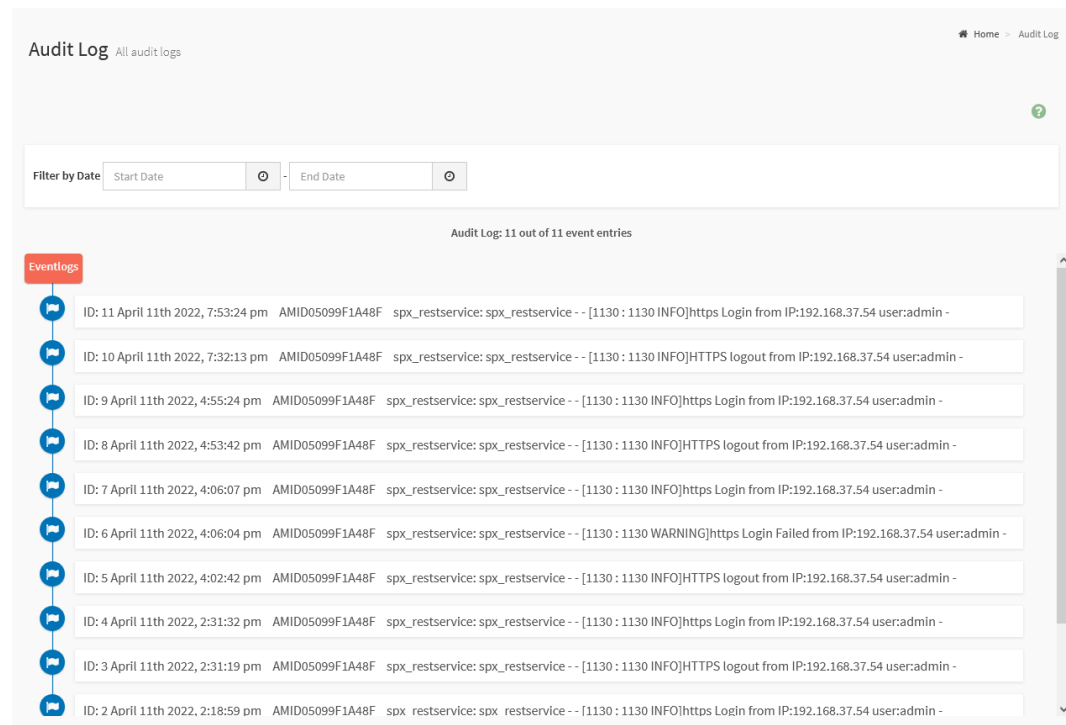

The fields on the Audit Log page include

- **Filter by Date:** Filter the records by specific Start Date and End Date using Calendar.


2.7.4 Video Log

Video Log provides the feature that records the video when a specific event is triggered.

To view the Video Log page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **Video Log** tab from the sub-menu bar.

Note: To configure this feature, users can view the Video Trigger Settings. Click the **Settings** tab from the menu bar -> **Video Recording** -> **Auto Video Settings** -> **Video Trigger Settings**.

Figure 25. Snapshot of Video Log Page

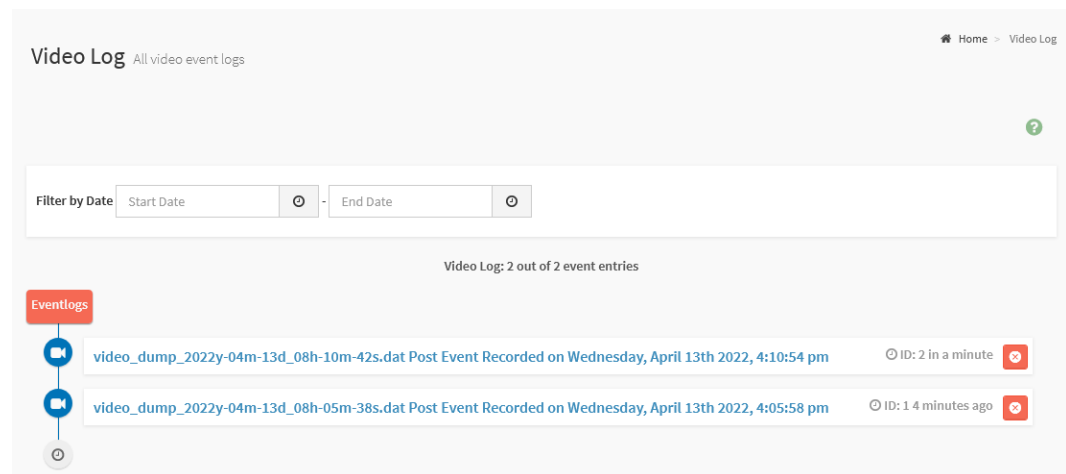

Click the record listed on the page to view the recorded video triggered by events.

The fields on the Video Log page include

- **Filter by Date:** Filter the records by specific Start Date and End Date using Calendar.
- **Delete:** Click the **Delete** (🗑️) to delete this record and its video.
- **Download:** Click the **Download** (📄) to save the video file.
- **Play:** Click the **Play** (▶️) to view the recorded video.
- **Pause:** Click the **Pause** (⏸️) to pause the video.

- **Close:** Click the Close () to pause the video play.
- **Duration:** Indicates the playback time () of the video.

2.7.5 Post Code

Post Code page provides the BIOS POST code information for users to monitor the BIOS POST process and the system power-on status.

To view the Post Code page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **Post Code Log** tab from the sub-menu bar.

Figure 26. Snapshot of Post Code Page

The screenshot displays the 'Post Code Log' interface. At the top, there's a breadcrumb trail: 'Home > Post Code Log'. Below this, a sidebar on the left contains an 'Eventlogs' button. The main content area is divided into two sections, each with a flag icon and a title. The first section, 'January 2nd 1970, 4:12:02 am Current Post Codes', lists 128 hex values in a single row. The second section, 'January 1st 1970, 8:00:00 am Previous Post Codes', lists 128 hex values in a single row. At the bottom right, there is a green button labeled 'Download Post Code Log'.

Post Code Log All Post Code Logs

Home > Post Code Log

Eventlogs

January 2nd 1970, 4:12:02 am Current Post Codes

00A5 00F2 00A6 00AB 00B4 00AC 00CF 00B7 E0FE AD68 E0B1 E098 E099 E0B7 E0B8 E0BB E0BE E001 E046 E003 E002 E03E
E03E E03F E03E E03E E03E E03E E03E E03F E005 E0B4 E0B7 E105 E0D4 E0D5 E090 E092 E091 E0C4 E102 E0D2 E0C4
E0CD E0D1 E014 E015 E014 E015 E0BB E0BE E0C4 E0CD E0D1 E014 E015 E0BB E0BE
E0C4 E0CD E0D2 E0C4 E0CD E0CC E1C0 E2C0 E3C0 E4C0 E5C0 E6C0 E7C0 E8C0 E1C0 E2C0 E3C0 E4C0 E5C0 E6C0 E8C0 E1C0
E2C0 E3C0 E4C0 E5C0 E6C0 E7C0 E8C0 E108 E0D0 E0C1 E051 E092 E0B4 E0B7 E098 E099 E323 E0CD E326 E0C1 00A8 00B5
E0D2 E04F E0C4 E102 E0C2 E0C4 E0D3 E0C8 E04E E0C4 E0CD E155 E055 E056 E102 E108 E102 E0C9 E054 E059 E05A E057
E058 E0CA E0C4 E0CD E0FE 00B0 00B3 00EA 00ED 00EA 00EC 00E9 00EA 00ED 00E9 00EA 00ED 00E9 00EA 00ED 00EA 00ED
00E9 00EA 00ED 00E9 00EA 00EC 00ED 00EE 00EE 00EE 00EE 00EE 00EE 0000 00FF 00D1 0004 0011 0015 AF10 AF4F AF41
AF43 AF40 AF47 AF42 AF44 AF48 AF11 A900 A901 AD50 AF12 AF13 A904 A950 A905 A914 A915 A954 A955 A521 A522 0C30
0C3F A955 AC50 AC51 ACE1 ACE0 A920 A546 A547 A952 A954 A955 A12B A13F A133 A132 A13B A14F A160 A161 A19A A162
0C39 AD55 ADE5 A902 A903 A906 A907 A5E4 A90E A90F A916 ADE8 A917 A923 AC55 AC90 AC91 AC94 ACE5 A523 A527 A524
A563 AC56 AC58 A525 A526 A568 A569 A56A AF14 AF5F AF50 AF52 AF55 AF57 AF51 AF15 AF70 AF17 A004 A005 ADE9 A536
AF20 AF21 AF18 AF19 A535 A527 A528 A5D2 00BF A536 A52D A925 0C3D AC5D AC79 AC90 AC91 AC92 AC93 AC94 AC93 AC94
AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94
AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94 AC93 AC94
AF07 A5EB A592 A95A A95B A992 A992 A999 A991 A992 A992 A992 A992 A997 A9B2 A998 A99D A99A A99C A9B4 A998 A9B4
A99D A99A A99C A99D A99A A99C A9B4 A9B4 A9B4 A9B4 A998 A9B4 A992 A999 A992 A972 A9A0 A9A2 A9A2 A9A2 A9A2
A9A2 A9A2 A9A2 A9A2 A972 A9A0 A9A2 A9A2 A9A2 A9A2 A9A2 A9A2 A9A2 A992 A972 A9A0 A9A2 A9A2 A9A2 A9A2 A9A2
A9A2 A9A2 A9A2 A972 A9A0 A9A2 A9A2 A9A2 A9A2 A9A2 A9A2 A9A2 A9A2 A992 A90C A90D A001 A002 A0A9 A0AB

January 1st 1970, 8:00:00 am Previous Post Codes

00A1 00A3 00A2 00A4 00A5 00F2 00A6 00AB 00B4 00AC 00CF 00B7 E0FE AD68 E0B1 E098 E099 E0B7 E0B8 E0BB E0BE E001
E046 E003 E002 E03E E03F E03E E03F E03E E03E E03F E03E E03E E03E E03F E005 E0FA E0B4 E0B7 E105 E0D4 E0D5
E090 E092 E091 E0C4 E102 E0D2 E0C4 E0CD E0D1 E014 E015 E015 E0BB E0BE E0C4 E0CD E0D1 E014 E015 E0BB E0BE
E0C4 E0CD E0D1 E014 E015 E0BB E0BE E050 E0C4 E0CD E0D2 E0C4 E0CD E0CC E1C0 E2C0 E3C0 E4C0 E5C0 E6C0 E7C0 E8C0
E1C0 E2C0 E3C0 E4C0 E5C0 E6C0 E8C0 E1C0 E2C0 E3C0 E4C0 E5C0 E6C0 E7C0 E8C0 E108 E0D0 E0C1 E051 E092 E0B4 E0B7

Download Post Code Log

The fields on the Post Code page include


- **Download Post Code Log:** Click the **Download Post Code Log** to save all BIOS POST code logs.

2.7.6 Debug Log

Debug Log page provides the feature that downloads the debug log file, which for users to download all debug logs stored in the BMC system and diagnostics the BMC system status.

To view the Debug Log page, click **Logs & Reports** tab from the menu bar to expand the sub-menu bar, then click the **Debug Log** tab from the sub-menu bar.

Figure 27. Snapshot of Debug Log Page

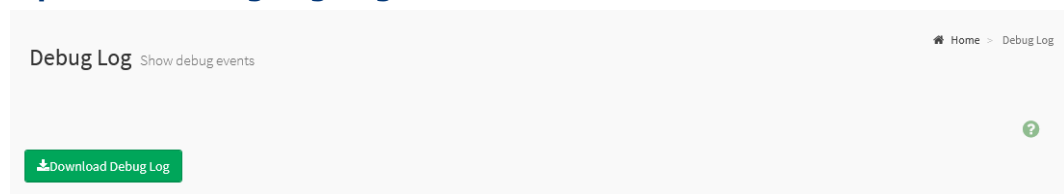

The fields on the Debug Log page include

- **Download Debug Log:** Click the **Download Debug Log** to save all BMC system debug logs.


2.8 Settings

Settings page provides various functional features for users to configure all the BMC supports services, including

- **Captured BSOD**
- **Date & Time**
- **External User Services**
- **KVM Mouse Setting**
- **Log Settings**
- **Media Redirection Settings**
- **Network Settings**
- **PAM Order Settings**
- **Platform Event Filter**
- **Services**
- **SMTP Settings**
- **SSL Settings**
- **System Firewall**
- **User Management**
- **Video Recording**
- **IPMI Interface**
- **Keep Share NIC Link Up**
- **FAN Settings**
- **Power Restore Policy**
- **Password Settings**

To view the Settings page, click the **Settings** tab from the menu bar.

Figure 28. Snapshot of Settings Page

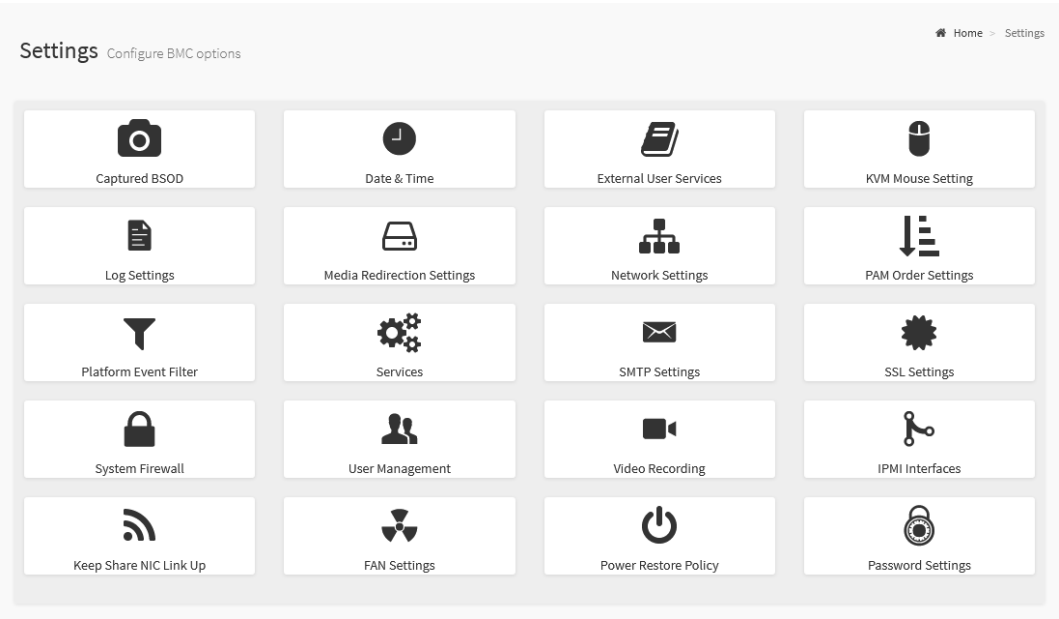


The details about each feature are listed in the following subsections.

2.8.1 Captured BSOD

Captured BSOD page provides the feature which automatically captures the Blue Screen of Death (BSOD) when the OS kernel crash.

To view the Captured BSOD page, click the **Settings** -> **Captured BSOD** tab from the menu bar.

Figure 29. Snapshot of BSOD Page

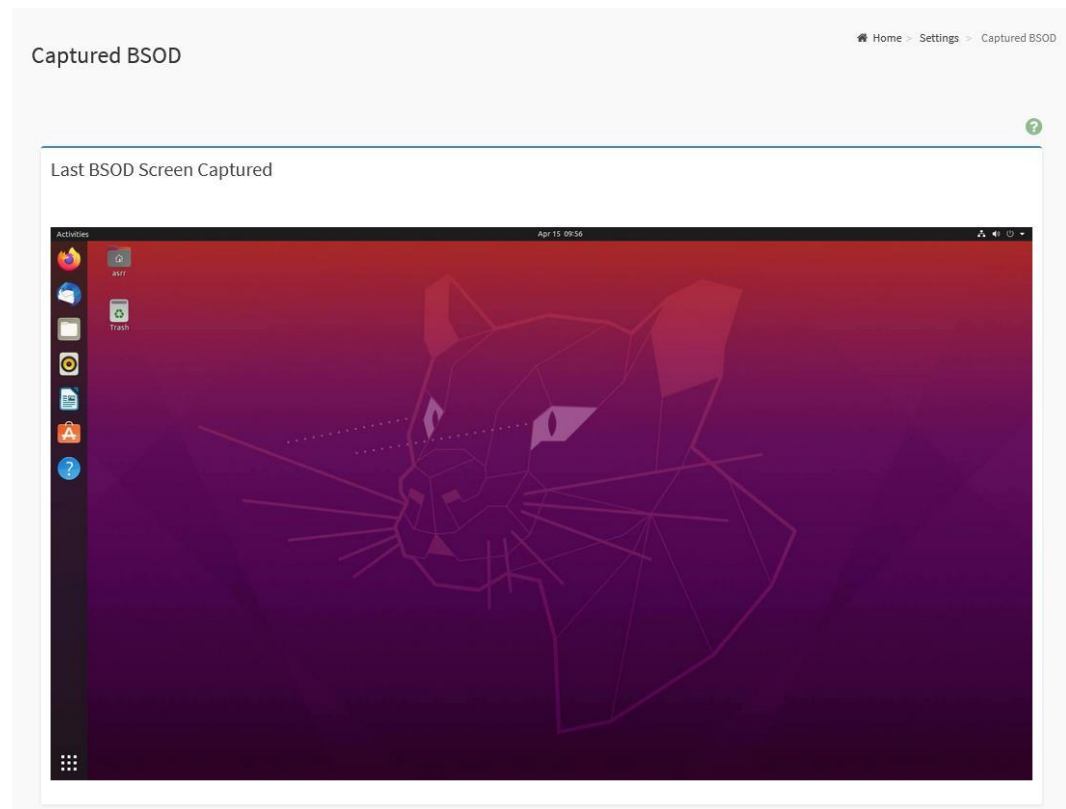

2.8.2 Date & Time

Date & Time page provides the various configuration for users to configure the date and time on the BMC.

To view the Date & Time page, click the **Settings** -> **Date & Time** tab from the menu bar.

Figure 30. Snapshot of Date & Time Page

Date & Time

Home > Settings > Date & Time

Note:
If the time zone is selected from the group of Manual offset (GMT/ETC time zones), the interactive map selection feature will be disabled.
The new Time Zone settings will be reflected on the page only after being saved.

Configure Date & Time

Select Time Zone

Apr 19, 2022 7:20:13 AM (Etc/GMT) - ManualOffset/Etc/GMT

☐ Automatic NTP Date & Time

Save

The fields on the Date & Time page include

- **Configure Date & Time:** Displays time zone list containing the UTC offset along with the locations and Navigational line to select the location which can be used to display the exact local time.
- **Select Time Zone:** This field is used to set the date and time on the BMC.

- **Automatic Date & Time:** To automatically synchronize Date and Time with the NTP Server.
- **Primary NTP Server:** To configure a primary NTP server to use when automatically setting the date and time.
- **Secondary NTP Server:** To configure a Secondary NTP server to use when automatically setting the date and time.
- **Clock:** Click the **Clock** icon (°) to manually modify the Date and Time.
- **Save:** To save the configured settings.

Note: If the time zone is selected as Manual Offset, the map selection will be disabled. The Time Zone settings will be reflected only after saving the settings.


2.8.3 External User Services

External User Services page provides three functional feature tabs for users to configure the external user services, including

- **LDAP/E-Directory Settings**
- **Active Directory Settings**
- **RADIUS Settings**

To view the External User Services page, click the **Settings** -> **External User Services** tab from the menu bar.

Figure 31. Snapshot of External User Services Page

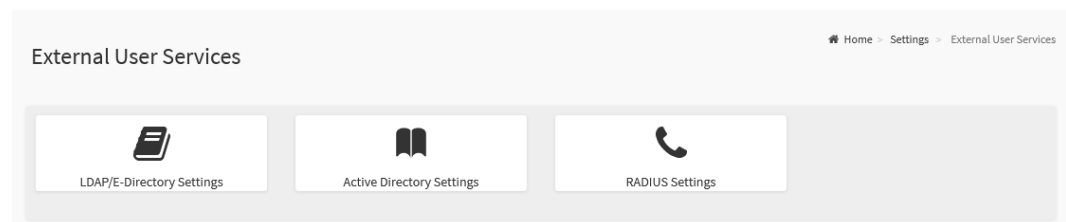

The details about each feature are listed in the following subsections.

2.8.3.1 LDAP/E-Directory Settings


The Lightweight Directory Access Protocol (LDAP)/E-Directory is an application protocol for querying and modifying data of directory services implemented in Internet Protocol (IP) networks.

LDAP/E-Directory Settings page provides two functional feature tabs for users to configure the LDAP settings, including

- **General LDAP/E-directory Settings**
- **Role Groups**

To view the LDAP/E-Directory Settings page, click the **Settings** -> **External User Services** -> **LDAP/E-Directory Settings** tab from the menu bar.

Figure 32. Snapshot of LDAP/E-Directory Settings Page

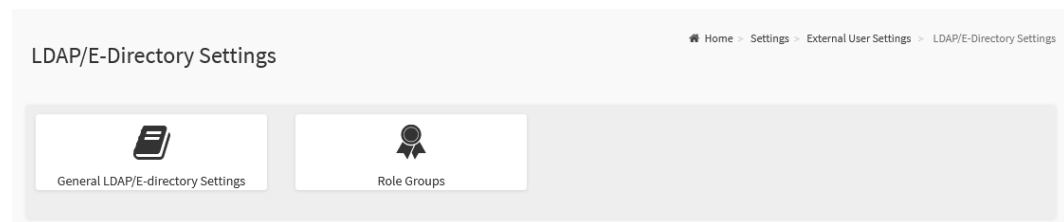

The details about each feature are listed in the following.

2.8.3.1.1 General LDAP/E-Directory Settings

This page provides various options for users to configure the LDAP/E-Directory Settings.

To view the General LDAP/E-Directory Settings page, click the **Settings** -> **External User Services** -> **LDAP/E-Directory Settings** -> **General LDAP/E-Directory Settings** tab from the menu bar.

Figure 33. Snapshot of General LDAP/E-Directory Settings Page

General LDAP/E-directory Settings

Home > Settings > External User Settings > LDAP/E-Directory Settings > General LDAP/E-directory Settings

☐ Enable LDAP/E-Directory Authentication

Encryption Type

☒ No Encryption ☐ SSL ☐ StartTLS

Common Name Type

☒ IP Address ☐ Common Name

Server Address

Port

389

Bind DN

E.g., cn=admin,ou=login,dc=domain,dc=com

Password

Whitespace not allowed

Search Base

E.g., ou=login,dc=domain,dc=com

Attribute of User Login

cn

Save

The fields on the General LDAP/E-Directory Settings page include

- **Enable LDAP/E-Directory Authentication:** Click this option to enable LDAP/E-Directory Settings.
- **Encryption Type:** Select the encryption type for LDAP/E-Directory.
 - **No Encryption**
 - **SSL**
 - **StartTLS**
- **Common Name Type:** Select the Common Name Type.
 - **IP Address**

■ FQDN

- **Server Address:** Enter the LDAP/E-Directory server address, IPv4 and IPv6 address format are supported.
Note: Enter a FQDN address if using StartTLS with FQDN.
- **Port:** Specify the LDAP/E-Directory Port.
- **Bind DN:** The Bind DN is used in bind operations, which authenticates the client to the server.
- **Password:** The Bind password is also used in the bind authentication operations between client and server.
- **Search Base:** The Search Base allows the LDAP/E-Directory server to find which part of the external directory tree is to be searched
- **Attribute of User Login:** The Attribute of User Login field indicates to the LDAP/E-Directory server which attribute should be used to identify the user.
Note: It only supports cn or uid.
- **CA certificate file:** Select CA Certificate File from the Browse field to identify the certificate of the trusted CA certs.
- **Certificate File:** Select the Certificate File to find the client certificate filename.
- **Private Key:** Select Private Key to find the client private key filename.
- **Save:** To save the configured settings.


Note: CA certificate file, Certificate File and Private Key are required, when SSL or StartTLS is enabled.

2.8.3.1.2 Role Groups

This page provides the feature for users to add a new group to the device.

To view the Role Groups page, click the **Settings** -> **External User Services** -> **LDAP/E-Directory Settings** -> **Role Groups** tab from the menu bar.

Figure 34. Snapshot of Role Groups Slots

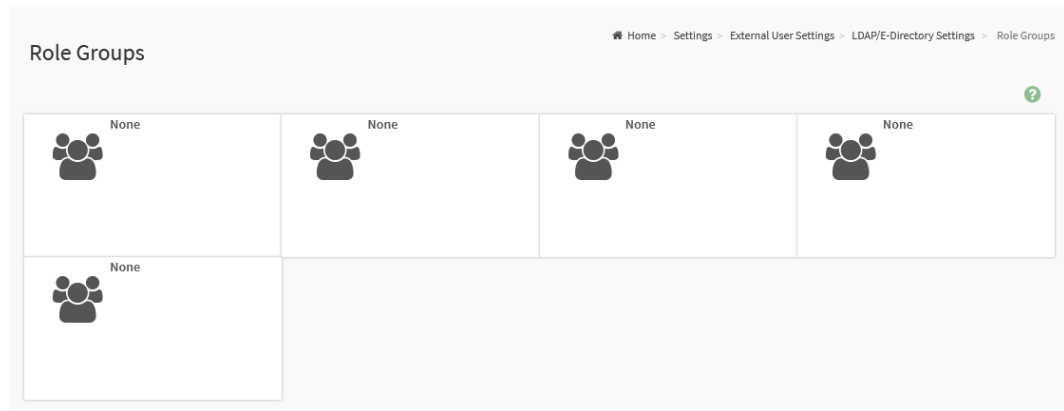

Click on the **Slot** icon () then navigate to the Add Role Groups page.

Figure 35. Snapshot of Add Role Groups Page

The fields on the Add Role Groups page include

- **Group Name:** Enter the Role Group Name. This name identifies the role group in LDAP/E-Directory.
- **Group Domain:** Enter the Role Group Domain. This is the domain where the role group is located.

- **Group Privilege:** Enter the Role Group Privilege. This is the level of privilege to be assigned for this role group
- **KVM Access:** This field used to assign the KVM privilege for this role group.
- **VMedia Access:** This field used to assign the VMedia privilege for this role group.
- **Save:** To save the configured settings.

2.8.3.2 Active Directory Settings


Active Directory (AD) is a directory structure used on Microsoft Windows based computers and servers to store information and data about networks and domains.

Active Directory Settings page provides two functional feature tabs for users to configure the Active Directory settings, including

- **General Active Directory Settings**
- **Role Groups**

To view the Active Directory Settings page, click the **Settings** -> **External User Services** -> **Active Directory Settings** tab from the menu bar.

Figure 36. Snapshot of Active Directory Settings Page

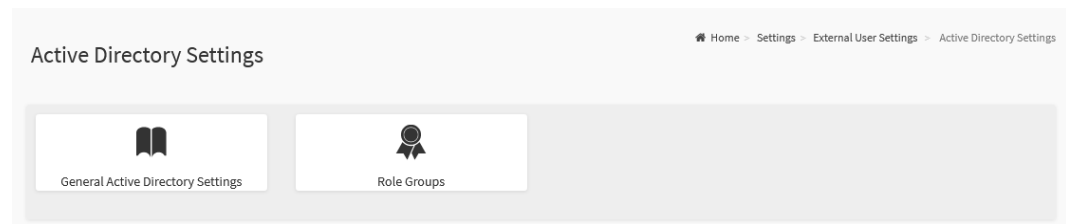

The details about each feature are listed in the following.

2.8.3.2.1 General Active Directory Settings

This page provides various options for users to configure the Active Directory Settings.

To view the Active Directory Settings page, click the **Settings** -> **External User Services** -> **Active Directory Settings** -> **General Active Directory Settings** tab from the menu bar.

Figure 37. Snapshot of General Active Directory Settings Page

General Active Directory Settings

Home > Settings > External User Settings > Active directory Settings > General Active Directory Settings

☐ Enable Active Directory Authentication

☐ SSL

Secret Username

Secret Password

User Domain Name

Domain Controller Server Address 1

Domain Controller Server Address 2

Domain Controller Server Address 3

Save

The fields on the General Active Directory Settings page include

- **Enable Active Directory Authentication:** Click this option to enable Active Directory Settings.
- **SSL:** Click this option to enable SSL support.
- **Secret Username:** Specify the Username of an administrator of the Active Directory Server.
- **Secret Password:** Specify the Password of the administrator.
- **User Domain Name:** Specify the Domain Name for the user e.g. MyDomain.com
- **Domain Controller Server Address 1:** Enter the IP address of Active Directory server. IPv4 and IPv6 address format are supported.


- **Domain Controller Server Address 2:** Enter the IP address of Active Directory server. IPv4 and IPv6 address format are supported.
- **Domain Controller Server Address 3:** Enter the IP address of Active Directory server. IPv4 and IPv6 address format are supported.
- **Save:** To save the configured settings.

2.8.3.2.2 Role Groups

This page provides the feature for users to add a new group to the device.

To view the Role Groups page, click the **Settings** -> **External User Services** -> **Active Directory Settings** -> **Role Groups** tab from the menu bar.

Figure 38. Snapshot of Role Groups Slots

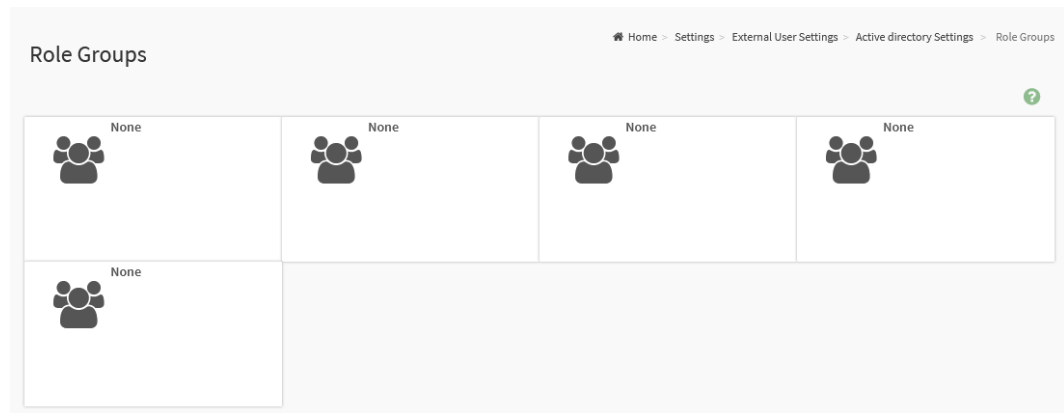

Click on the **Slot** icon () then navigate to the Add Role Groups page.

Figure 39. Snapshot of Add Role Groups Page

The image shows the 'Add Role Groups' page. It has the same breadcrumb trail as Figure 38, but with an additional 'Role Groups' segment. A green question mark icon is in the top right. The form includes: a 'Group Name' text field; a 'Group Domain' text field with a placeholder 'eg., MyDomain.com'; a 'Group Privilege' dropdown menu; two checkboxes labeled 'KVM Access' and 'VMedia Access'; and a blue 'Save' button at the bottom right.

The fields on the Add Role Groups page include

- **Group Name:** Enter the Role Group Name. This name identifies the role group in Active Directory.
- **Group Domain:** Enter the Role Group Domain. This is the domain where the role group is located.

- **Group Privilege:** Enter the Role Group Privilege. This is the level of privilege to be assigned for this role group
- **KVM Access:** This field used to assign the KVM privilege for this role group.
- **VMedia Access:** This field used to assign the VMedia privilege for this role group.
- **Save:** To save the configured settings.

2.8.3.3 RADIUS Settings


Remote Authentication Dial-In User Service (RADIUS) is a networking protocol that provides centralized authentication, authorization, and accounting (AAA) management for users who connect and use a network service.

RADIUS Settings page provides two functional feature tabs for users to configure the RADIUS settings, including

- **General RADIUS Settings**
- **Advanced RADIUS Settings**

To view the RADIUS Settings page, click the **Settings** -> **External User Services** -> **RADIUS Settings** tab from the menu bar.

Figure 40. Snapshot of RADIUS Settings Page

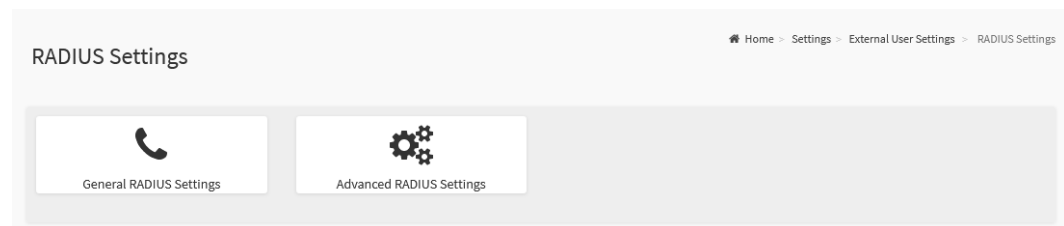

The details about each feature are listed in the following.

2.8.3.3.1 General RADIUS Settings

This page provides various options for users to configure the RADIUS Settings.

To view the General RADIUS Settings page, click the **Settings** -> **External User Services** -> **RADIUS Settings** -> **General RADIUS Settings** tab from the menu bar.

Figure 41. Snapshot of General RADIUS Settings Page

General RADIUS Settings

Home > Settings > External User Settings > RADIUS Settings > General RADIUS Settings

☐ Enable RADIUS Authentication

Server Address

Port

1812

Secret

☐ Enable KVM Access

☐ Enable VMedia Access

Save

The fields on the General RADIUS Settings page include

- **Enable RADIUS Authentication:** Check this option to enable RADIUS Authentication.
- **Server Address:** Specify RADIUS Server Address.
- **Port:** Specify the RADIUS Port number.
- **Secret:** Specify RADIUS Server Secret (Password).
- **Enable KVM Access:** This field used to assign the KVM privilege for authenticated users.
- **Enable VMedia Access:** This field used to assign the VMedia privilege for authenticated users.
- **Save:** To save the configured settings.

2.8.3.3.2 Advanced RADIUS Settings

This page provides various options for users to configure the RADIUS authorization.

To view the Advanced RADIUS Settings page, click the **Settings** -> **External User Services** -> **RADIUS Settings** -> **Advanced RADIUS Settings** tab from the menu bar.

Figure 42. Snapshot of Advanced RADIUS Settings Page

Advanced RADIUS Settings

Home > Settings > External User Settings > RADIUS Settings > Advanced RADIUS Settings

RADIUS Authorization ?

Administrator
H=4

Operator
H=3

User
H=2

OEM Proprietary
H=1

No Access
H=0

Save

The fields on the Advanced RADIUS Settings page include


- **Administrator:** Enter the Vendor-Specific value for Administrator.
- **Operator:** Enter the Vendor-Specific value for Operator.
- **User:** Enter the Vendor-Specific value for User.
- **OEM Proprietary:** Enter the Vendor-Specific value for OEM Proprietary.
- **No Access:** Enter the Vendor-Specific value for No Access.
- **Save:** To save the configured settings.

2.8.4 KVM Mouse Setting

In the BMC WebUI service, Redirection Console handles mouse emulation from local window to remote screen in either of three methods: Relative Mouse mode, Absolute Mouse mode, and Other Mouse mode.

To view the KVM Mouse Settings page, click the **Settings** -> **KVM Mouse Setting** tab from the menu bar.

Figure 43. Snapshot of KVM Mouse Setting Page

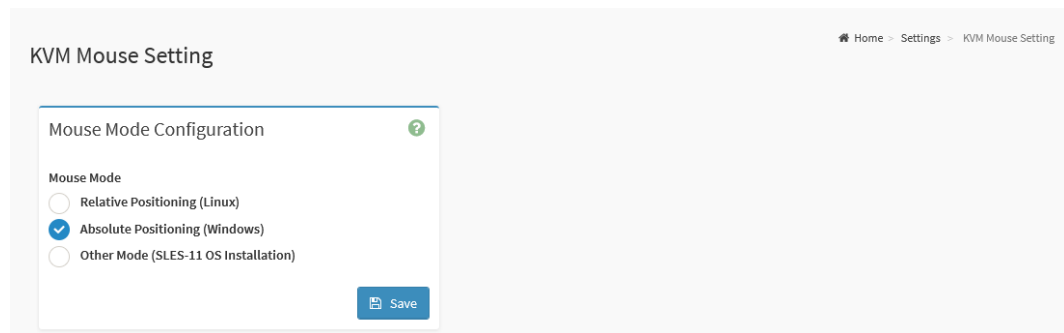

The fields on the KVM Mouse Setting page include

- **Relative Positioning (Linux):** The relative mode sends the calculated relative mouse position displacement to the server.
- **Absolute Positioning (Windows):** The absolute position of the local mouse is sent to the server. Recommended for Windows or later Linux releases.
- **Other Mode (SLES-11 OS Installation):** This option sends the calculated displacement from the local mouse in the center position to the server.
- **Save:** To save the configured settings.


2.8.5 Log Settings

Log Settings page provides two functional feature tabs for users to configure the log policy and advance settings, including

- **SEL Log Settings Policy**
- **Advanced Log Settings**

To view the Log Settings page, click the **Settings** -> **Log Settings** tab from the menu bar.

Figure 44. Snapshot of Log Settings Page

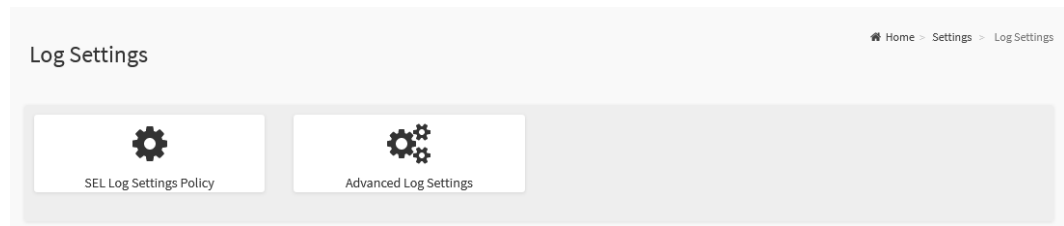


The details about each feature are listed in the following.

2.8.5.1 SEL Log Settings Policy

This page provides various options for users to configure the log policy for the event log.

To view the SEL Log Settings Policy page, click the **Settings** -> **Log Settings** -> **SEL Log Settings Policy** tab from the menu bar.

Figure 45. Snapshot of SEL Log Settings Policy Page

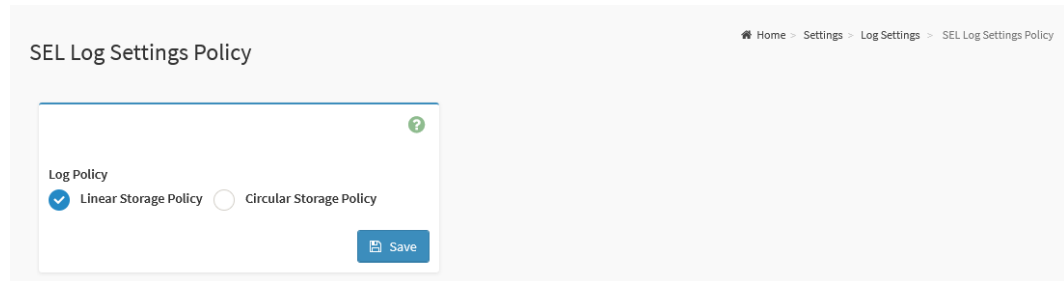

The fields on the SEL Log Settings Policy page include

- **Log Policy**
 - **Linear Storage Policy:** Click this option to enable Linear Storage Policy.
 - **Circular Storage Policy:** Click this option to enable Circular Storage Policy.
- **Save:** To save the configured settings.

2.8.5.2 Advanced Log Settings

This page provides various options for users to configure the advanced log settings for the event log.

To view the Advanced Log Settings Policy page, click the **Settings** -> **Log Settings** -> **Advanced Log Settings** tab from the menu bar.

Figure 46. Snapshot of Advanced Log Settings Page

Advanced Log Settings

Home > Settings > Log Settings > Advanced Log Settings

☒ System Log

☒ Local Log

☐ Remote Log

Port Type

☐ UDP ☐ TCP

File Size

50000

Rotate Count

0

Remote Log Server

Server IP or Hostname

Remote Server Port

0

☒ Enable Audit Log

Save

The fields on the Advanced Log Settings page include

- **System Log:** Click this option to enable System Log to view all system events for this device.
- **Local Log:** Click this option to save the log locally (BMC).
- **Remote Log:** Click this option to save the logs in a remote machine.
- **Port Type:** Port Type is supported with enable Remote Log, select either **UDP** or **TCP** for Remote Log feature used.
 - **UDP**
 - **TCP**
- **File Size:** Specify the size of the file in bytes if the selected log type is local.
- **Rotate Count:** To back up the log information in back up files. When log

information exceeds the file size, the old log information is automatically moved to back up files based on the rotate count value. If rotate count is zero, then old log information gets cleared permanently.

Note: File Size and **Rotate Count** options will be available only when Local Log is enabled.

- **Remote Log Server:** Specify the Remote server address to log the system events.
- **Remote Server Port:** Specify the Remote server port address to log the system events.
- **Enable Audit Log:** Click this option to enable Audit Log to view all audit events for this device.
- **Save:** To save the configured settings.


2.8.6 Media Redirection

Media Redirection page provides various functional feature tabs for users to configure the media into BMC for redirection, including

- **General Settings**
- **VMedia Instance Settings**
- **Remote Session**
- **Active Redirections**

To view the Media Redirection page, click the **Settings** -> **Media Redirection** tab from the menu bar.

Figure 47. Snapshot of Media Redirection Page

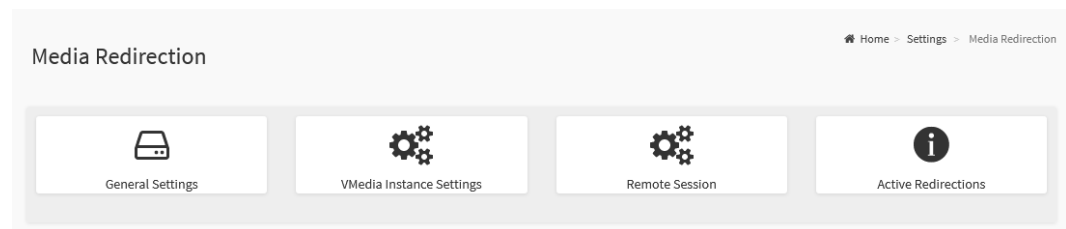

The details about each feature are listed in the following.

2.8.6.1 General Settings

This page provides various options for users to configure the general media settings.

To view the General Settings page, click the **Settings** -> **Media Redirection** -> **General Settings** tab from the menu bar.

Figure 48. Snapshot of General Settings Page

General Settings

Home > Settings > Media Redirection > General Settings

☒ Remote Media Support

☒ Mount CD/DVD

Share Type for CD/DVD

☐ nfs ☐ cifs ☐ http

Server Address for CD/DVD Images

Server IP or Host name

Path in server

Domain Name

Username

Password

☐ Same settings for Harddisk Images

☒ Mount Harddisk

Share Type for Harddisk

☐ nfs ☐ cifs

Server Address for Harddisk Images

Server IP or Host name

Path in server

eg. /opt/bmc/nfs

Domain Name

Username

Password

Retry Interval

15

Retry Count

3

Save

The fields on the General Settings page include


- **Remote Media Support:** Click this option to enable Remote Media Support.
- **Mount CD/DVD:** Click this option to enable Mount CD/DVD feature.
- **Mount Harddisk:** Click this option to enable Mount Harddisk feature.
- **Share Type for CD/DVD:** Select Share Type for CD/DVD.
 - **nfs**
 - **cifs**
 - **http**
- **Share Type for Harddisk:** Select Share Type for Harddisk.
 - **Nfs**
 - **cifs**
- **Server Address for CD/DVD Images:** Address of the server where the remote media images are stored.
- **Server Address for Harddisk Images:** Address of the server where the remote media images are stored.
- **Path in server:** Source path to the remote media images.
- **Domain Name:** Enter the Domain Name if CIFS share type is selected.
- **Username:** Enter the Username if CIFS share type is selected.
- **Password:** Enter the Password if CIFS share type is selected.
- **Same settings for Harddisk Images:** Click this option to be applied the server information entered for CD/DVD media type to the Hard disk remote media type as well.
- **Retry Interval:** Enter the retry interval to reconnect RMedia.
- **Retry Count:** Enter the retry count to reconnect RMedia.
- **Save:** To save the configured settings.

2.8.6.2 VMedia Instance Settings

This page provides various options for users to configure the Virtual Media device settings.

To view the VMedia Instance Settings page, click the **Settings** -> **Media Redirection** -> **VMedia Instance Settings** tab from the menu bar.

Figure 49. Snapshot of VMedia Instance Settings Page

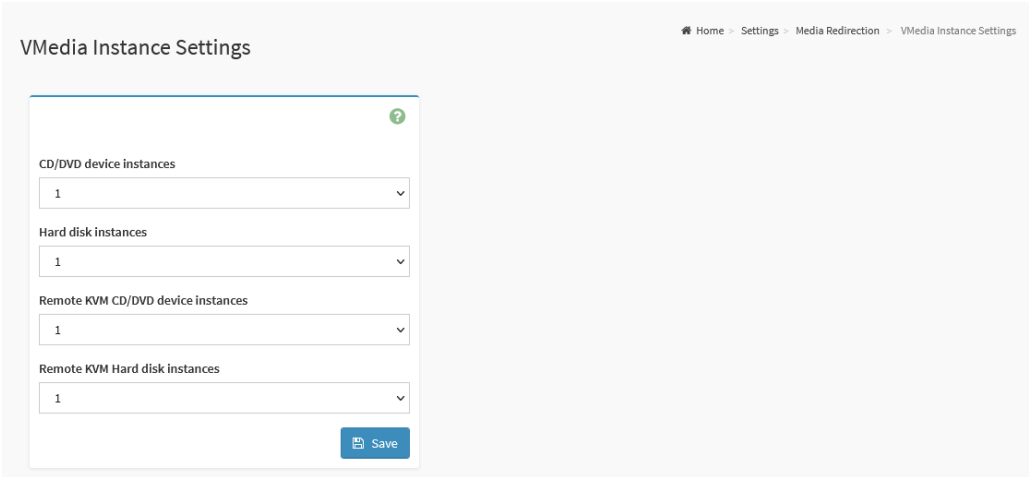

VMedia Instance Settings

Home > Settings > Media Redirection > VMedia Instance Settings

CD/DVD device instances

1

Hard disk instances

1

Remote KVM CD/DVD device instances

1

Remote KVM Hard disk instances

1

Save

The fields on the VMedia Instance Settings page include

- **CD/DVD device instances:** Select the number of CD/DVD devices that are to be supported for Virtual Media redirection.
- **Hard disk instances:** Select the number of Hard disk devices to be supported for Virtual Media redirection.
- **Remote KVM CD/DVD device instances:** Select the number of Remote KVM CD/DVD devices that are to be supported for Virtual Media redirection
- **Remote KVM Hard disk instances:** Select the number of Remote KVM Hard disk devices to be supported for Virtual Media redirection.
- **Save:** To save the configured settings.

2.8.6.3 Remote Session

This page provides various options for users to configure the Remote Session configuration settings.

To view the Remote Session Settings page, click the **Settings** -> **Media Redirection** -> **Remote Session** tab from the menu bar.

Figure 50. Snapshot of Remote Session Page

Remote Session

Home > Settings > Media Redirection > Remote Session

KVM Client Type

☒ JViewer/H5Viewer ☐ VNC

☒ KVM Single Port Application

Keyboard Language

Auto Detect (AD)

Virtual Media Attach Mode

Auto Attach

Retry Count

3

Retry Time Interval(Seconds)

10

☒ Server Monitor OFF Feature Status

☐ Automatically OFF Server Monitor, When KVM Launches

Save

The fields on the Remote Session page include

- **KVM Client Type:** Select either JViewer/H5Viewer or VNC for KVM Client.
 - **JViewer/H5Viewer**
 - **VNC**
- **KVM Single Port Application:** Click this option to enable Single Port Application support in BMC.
- **Keyboard Language:** Select the Keyboard Language.
- **Virtual Media Attach Mode:** Select the Virtual Media Attach Mode.
- **Retry Count:** Number of times to be retried when a KVM failure occurs. Retry count ranges from 1 to 20.
- **Retry Time Interval (Seconds):** Number of seconds to wait for subsequent retries. Time interval ranges from 5 to 30 seconds.


- **Server Monitor OFF Feature Status:** Click this option to enable the Server Monitor OFF feature. Users can Lock or Unlock the local host monitor from the remote KVM window if this feature is enabled.
- **Automatically OFF Server Monitor, When KVM Launches:** Click this option to enable this feature.
- **VNC Connection Types:** Select either VNC over SSH or VNC on Stunnel for VNC Connection.
 - **VNC over SSH**
 - **VNC over Stunnel**
- **Save:** To save the configured settings.

2.8.6.4 Active Redirections

This page provides various options for users to configure the Remote Session configuration settings.

To view the Active Redirections page, click the **Settings** -> **Media Redirection** -> **Active Redirections** tab from the menu bar.

Figure 51. Snapshot of Active Redirections Page

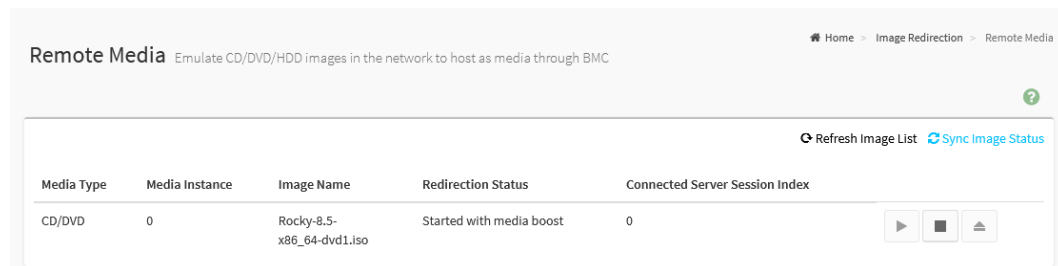

The fields on the Active Redirections page include

- **Media Type:** The type Media devices supported for Active Redirections.
- **Media Instance:** The number of Media devices supported for Active Redirections.
- **Image Name:** The name of Media devices supported image for Active Redirections.
- **Redirection Status:** The status Media for Active Redirections.
- **Connected Server Session Index:** Indicates the number of connected server session index.
- **Play:** Click **Play** (▶) button to redirect the selected image.
- **Stop:** Click **Stop** (■) button to stop the remote image redirection.
- **Clear:** Click **Clear** (🗑️) button to clear the selected image from the BMC.
- **Refresh Image List:** Click **Refresh Image List** (🔄) to get the latest list of Images from the Remote storage server.
- **Sync Image Status:** Click **Sync Image Status** (🔄) to Turn on/off the redirection status of Images from the BMC.


2.8.7 Network Settings

Network Settings page provides various options for users to configure the network settings for the available LAN channels, including

- **Network IP Settings**
- **Network Bond Configuration**
- **DNS Configuration**

To view the Network Settings page, click the **Settings** -> **Network Settings** tab from the menu bar.

Figure 52. Snapshot of Network Settings Page

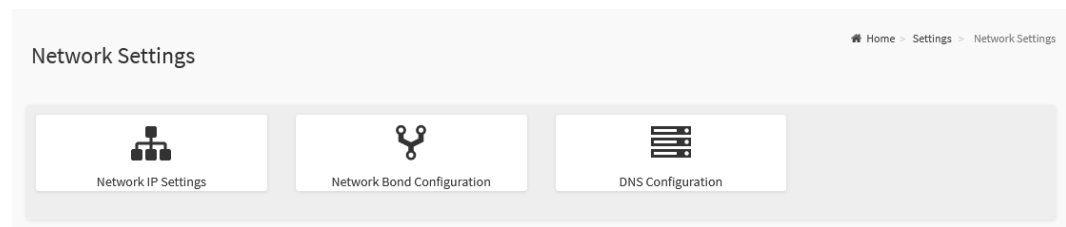

The details about each feature are listed in the following.

2.8.7.1 Network IP Settings

This page provides various options for users to configure the Network IP Settings.

To view the Network IP Settings page, click the **Settings** -> **Network Settings** -> **Network IP Settings** tab from the menu bar.

Figure 53. Snapshot of Network IP Settings Page

The screenshot displays the 'Network IP Settings' page. At the top right, a breadcrumb trail reads: Home > Settings > Network > Network IP Settings. The main content area is a form with the following sections:

- Enable LAN:** A checked checkbox.
- LAN Interface:** A dropdown menu showing 'eth0'.
- MAC Address:** A text field containing 'D0:50:99:F1:A4:8F'.
- Enable IPv4:** A checked checkbox.
- Enable IPv4 DHCP:** A checked checkbox.
- IPv4 Address:** A text field containing '192.168.37.17'.
- IPv4 Subnet:** A text field containing '255.255.254.0'.
- IPv4 Gateway:** A text field containing '192.168.36.1'.
- Enable IPv6:** A checked checkbox.
- Enable IPv6 DHCP:** A checked checkbox.
- IPv6 Index:** A dropdown menu showing '0'.
- IPv6 Address:** A text field containing '::'.
- Subnet Prefix Length:** A text field containing '0'.
- IPv6 Gateway:** A text field containing '::'.
- Enable VLAN:** An unchecked checkbox.
- VLAN ID:** A text field containing '0'.
- VLAN Priority:** A text field containing '0'.

A blue 'Save' button is located at the bottom right of the form.

The fields on the Network IP Settings page include


- **Enable LAN:** Click this option to enable LAN support for the interface.
- **LAN Interface:** Lists the supported LAN interface, select the LAN interface to be configured.
- **MAC Address:** Indicates the selected LAN interface MAC address.
- **Enable IPv4:** Click this option to enable IPv4 support for the selected interface.
- **Enable IPv4 DHCP:** Click this option to dynamically configure IPv4 address using Dynamic Host Configuration Protocol (DHCP).
- **IPv4 Address:** If DHCP is disabled, specify a static IPv4 for the interface.
- **IPv4 Subnet:** If DHCP is disabled, specify a static Subnet Mask.
- **IPv4 Gateway:** If DHCP is disabled, specify a static Default Gateway.
- **Enable IPv6:** Click this option to enable IPv6 support for the selected interface.
- **Enable IPv6 DHCP:** Click this option to dynamically configure an IPv6 address using Dynamic Host Configuration v6 Protocol (DHCPv6).
- **IPv6 Index:** Select the IPv6 Index.
- **IPv6 Address:** Specify a static IPv6 address for the selected interface.
- **Subnet Prefix Length:** Specify the subnet prefix length for the IPv6 settings.
- **IPv6 Gateway:** Specify an IPv6 gateway for the selected interface.
- **Enable VLAN:** Click this option to enable VLAN support for the selected interface.
- **VLAN ID:** Specify an ID for this VLAN configuration.
- **VLAN Priority:** Specify the priority for VLAN configuration.
- **Save:** To save the configured settings.

2.8.7.2 Network Bond Configuration

This page provides various options for users to configure the Network Bond Configuration settings.

To view the Network IP Settings page, click the **Settings** -> **Network Settings** -> **Network Bond Configuration** tab from the menu bar.

Figure 54. Snapshot of Network Bond Configuration Page

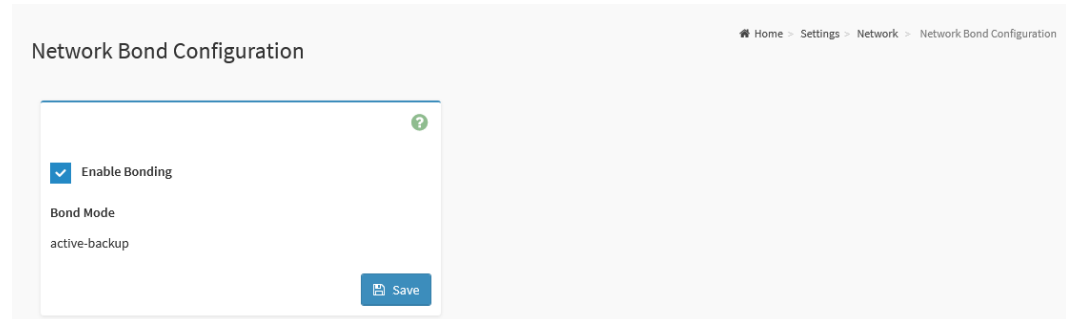

The fields on the Network Bond Configuration page include

- **Enable Bonding:** Click this option to enable bonding for the network interfaces.
- **Bond Mode:** This field displays the Network bonding mode in effect.
- **Save:** To save the configured settings.

2.8.7.3 DNS Configuration

The Domain Name System (DNS) is a distributed hierarchical naming system for computers, services, or any resource connected to the Internet or a private network.

This page provides various options for users to configure the DNS Configuration settings.

To view the Network IP Settings page, click the **Settings** -> **Network Settings** -> **DNS Configuration** tab from the menu bar.

Figure 55. Snapshot of DNS Configuration Page

DNS Configuration

Home Settings Network Settings DNS Configuration

☒ DNS Enabled
☐ mDNS Enabled

Host Name Setting
☒ Automatic ☐ Manual
Host Name
AMID0509FLA48F

BMC Registration Settings

BMC Interface:
eth0
☒ Register BMC
Registration method:
☒ Nsupdate ☐ DHCP Client FQDN ☐ Hostname
BMC Interface:
eth1
☐ Register BMC
Registration method:
☐ Nsupdate ☐ DHCP Client FQDN ☐ Hostname
☐ Both

Eth0 TSIG Configuration
☐ TSIG Authentication Enabled
Current TSIG Private File Info
Not Available
New TSIG Private File
[File Selection Button]

Eth1 TSIG Configuration
☐ TSIG Authentication Enabled
Current TSIG Private File Info
Not Available
New TSIG Private File
[File Selection Button]

Domain Setting
☒ Automatic ☐ Manual
Domain Interface
eth0_v4

Domain Name Server Setting
☒ Automatic ☐ Manual
DNS Interface
eth0

IP Priority
☒ IPv4 ☐ IPv6

Save

The fields on the DNS Configuration page include

- **DNS Enabled:** Click this option to enable all DNS services.
- **mDNS Enabled:** Click this option to enable Multicast DNS services.
- **Host Name Setting:** Select either Automatic or Manual settings.
 - **Automatic**
 - **Manual**
- **Host Name:** Indicates Host Name of device. If Host Name Settings is Manual, specify the host name of device.

BMC Registration Settings:

- **BMC Interface:** Options to register the BMC through the Interface (Eth0 and Eth1).

Eth0 and Eth1:

- **Register BMC:** To register BMC through registration method.
- **Registration method:** Options to register the BMC through the below registration methods.
 - **Nsupdate:** Register with the DNS server using the nsupdate application.
 - **DHCP Client FQDN:** Register with the DNS server using DHCP option 81.
 - **Hostname:** Register with the DNS server using DHCP option 12.

Eth0 and Eth1 TSIG Configuration:

- **Both:** Click this option to modify TSIG authentication for both interfaces.
- **TSIG Authentication Enabled:** Click this option to enable TSIG authentication while registering DNS via nsupdate. Separate TSIG files can be uploaded for each LAN interface.
- **Current TSIG Private File Info:** The information of Current TSIG private file along with its up-loaded date/time will be displayed.
- **New TSIG Private File:** Browse and navigate to the TSIG private file.
- **Domain Setting:** Select whether the domain interface will be configured manually or automatically.
 - **Automatic:** If **Automatic** is selected, the Domain Name cannot be configured as it will be done automatically. The field will be disabled.
 - **Manual:** If **Manual** is selected, specify the domain name of the

device.

- **Domain Interface:** Indicates the domain name of the device.
- **DNS Interface:** Specify the interface to be used.
- **IP Priority:**
 - **IPv4:** If IPv4 is selected, it will have 2 IPv4 DNS servers and 1 IPv6 DNS server.
 - **IPv6:** If IPv6 is selected, it will have 2 IPv6 DNS servers and 1 IPv4 DNS server.
- **DNS Server 1, 2, and 3:** Specify the DNS server address to be configured for the BMC.
Note: IPv4 and IPv6 address format are supported.
- **Save:** To save the configured settings.


2.8.8 PAM Order Settings

Pluggable authentication module (PAM) is a mechanism to integrate multiple low-level authentication schemes into a high-level application programming interface (API).

PAM Order Settings page provides the options for users to configure the PAM ordering for user authentication in to the BMC.

To view the PAM Order Settings page, click the **Settings** -> **PAM Order Settings** tab from the menu bar.

Figure 56. Snapshot of PAM Order Settings Page

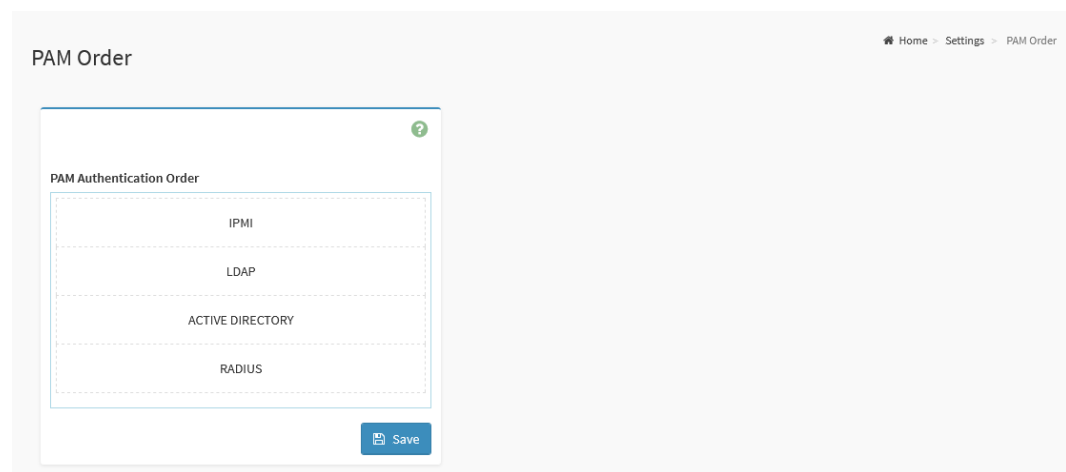

The fields on the PAM Order Settings page include

- **PAM Module:** lists the available PAM modules supported in the BMC. Select the required PAM module and click and drag the required PAM module. It can be moved UP or DOWN to change its arrangement order.
- **Save:** To save the configured settings.

2.8.9 Platform Event Filters


Platform Event Filter (PEF) provides a mechanism for configuring the BMC to take selected actions on event messages that it receives or has internally generated. These actions include operations such as system power-off, system reset, as well as triggering the generation of an alert.

Platform Event Filters page provides various functional feature tabs for users to configure the PEF feature, including

- **Event Filters**
- **Alert Policies**
- **LAN Destinations**

To view the Platform Event Filters page, click the **Settings** -> **Platform Event Filters** tab from the menu bar.

Figure 57. Snapshot of Platform Event Filters Page

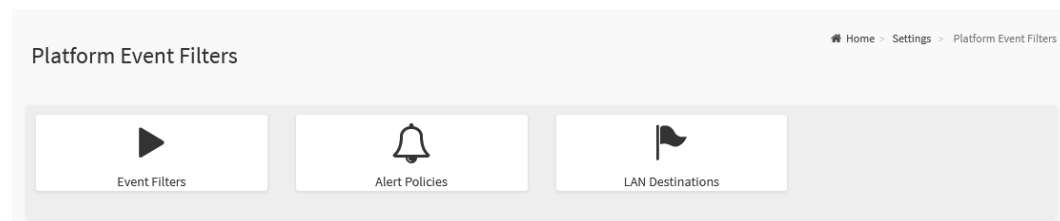


The details about each feature are listed in the following.

2.8.9.1 Event Filters

A PEF implementation is recommended to provide at least 40 entries in the event filter table. A subset of these entries should be pre-configured for common system failure events, such as over-temperature, power system failure, fan failure events,

To view the Event Filters page, click the **Settings** -> **Platform Event Filters** -> **Event Filters** tab from the menu bar.

Figure 58. Snapshot of Platform Event Filters Slot List Page

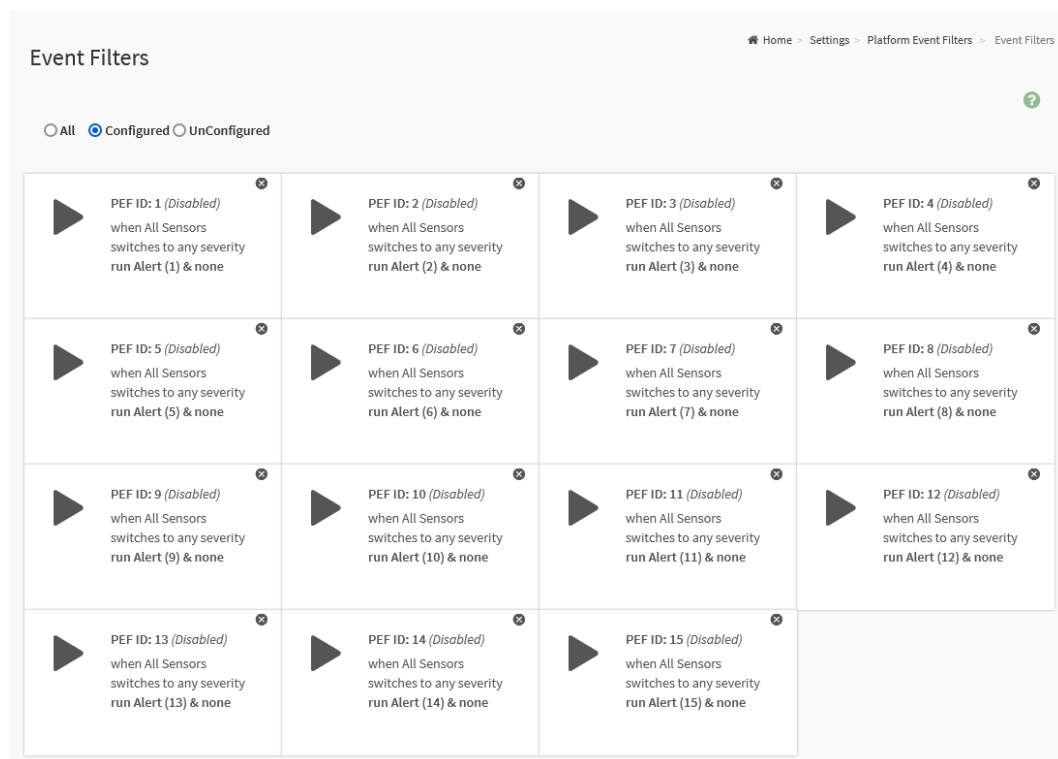

The fields on the Event Filters page include

- **All:** Click this option to lists all slots.
- **Configured:** Click this option to lists all configured slots.
- **Unconfigured:** Click this option to lists all unconfigured slots.

Click on the **Event Filters Slot** icon (▶) then navigate to the Event Filter Configuration page.

Click on the **Delete** icon (✕) on the top right corner of Event Filters Slot to directly to delete a slot from the list.

Figure 59. Snapshot of Event Filters Configuration Page

Event Filter Configuration

Home > Settings > Platform Event Filters > Event Filters > Event Filter Configuration

?

☐ Enable this filter

Event severity to trigger

Any severity

☒ Event Filter Action Alert

Power Action

None

Alert Policy Group Number

1

☒ Raw Data

Generator ID 1

255

Generator ID 2

255

Generator Type

☐ Slave ☐ Software

Slave Address/Software ID

Channel Number

0

IPMB Device LUN

0

Sensor type

All Sensors

Sensor name

All Sensors

Event Options

All Events

Event trigger

255

Event Data 1 AND Mask

0

Event Data 1 Compare 1

0

Event Data 1 Compare 2

0

Event Data 2 AND Mask

0

Event Data 2 Compare 1

0

Event Data 2 Compare 2

0

Event Data 3 AND Mask

0

Event Data 3 Compare 1

0

Event Data 3 Compare 2

0

Delete

Save

The fields on the Event Filters Configuration page include

- **Enable this filter:** Click this option to enable the PEF settings.
- **Event severity to trigger:** Select any one of the Event Severity from the drop-down list.
- **Event Filter Action Alert:** Click this option to enable PEF Alert action.
- **Power Action:** Select any one of the **Power Action** either Power down, Power reset or Power cycle from the drop-down list.
- **Alert Policy Group Number:** Select any one of the configured Alert Policy Group Number from the drop-down list.
Note: Alert Policy has to be configured under **Settings -> Platform Event Filters -> Alert Policies**.
- **Raw Data:** Click this option to enter the Generator ID with raw data.
- **Generator ID 1:** Specify the raw generator ID1 data value.
- **Generator ID 2:** Specify the raw generator ID2 data value.
- **Generator Type:**
 - **Slave:** Select **Slave** if event was generated from IPMB.
 - **Software:** Select **Software** if event was generated from system software.
- **Slave Address/Software ID:** Specify corresponding I2C Slave Address or System Software ID.
- **Channel Number:** Select the particular channel number through which the event message is received over. Choose '0' if the event message is received via the system interface, primary IPMB, or internally generated by the BMC.
- **IPMB Device LUN:** Select the corresponding IPMB Device LUN if event is generated by IPMB.
- **Sensor Type:** Select the type of sensor that will trigger the event filter action.
- **Sensor Name:** Select the particular sensor from the sensor list.
- **Event Options:** Select event option to be either All events or Sensor specific events.
- **Event Trigger:** This field is used to give Event/Reading type value. Value ranges from 0 to 255.
- **Event Data 1 AND Mask:** This field is used to indicate wildcarded or compared bits. Value ranges from 0 to 255.


- **Event Data 1 Compare 1:** This field is used to indicate whether each bit position's comparison is an exact comparison or not.
- **Event Data 1 Compare 2:** This field is used to indicate whether each bit position's comparison is an exact comparison or not. Value ranges from 0 to 255.
- **Event Data 2 AND Mask** and **Event Data 3 AND Mask:** These fields are similar to Event Data 1 AND Mask.
- **Event Data 2 Compare 1** and **Event Data 3 Compare 1:** These fields are similar to Event Data 1 Compare 1.
- **Event Data 2 Compare 2** and **Event Data 3 Compare 2:** These fields are similar to Event Data 1 Compare 2.
- **Delete:** To delete the existing filter.
- **Save:** To save the configured settings.

2.8.9.2 Alert Policies

This page provides the feature for users to configure the Alert Policy for PEF configuration.

To view the Alter Policies page, click the **Settings** -> **Platform Event Filters** -> **Alter Policies** tab from the menu bar.

Figure 60. Snapshot of Alert Policies Page

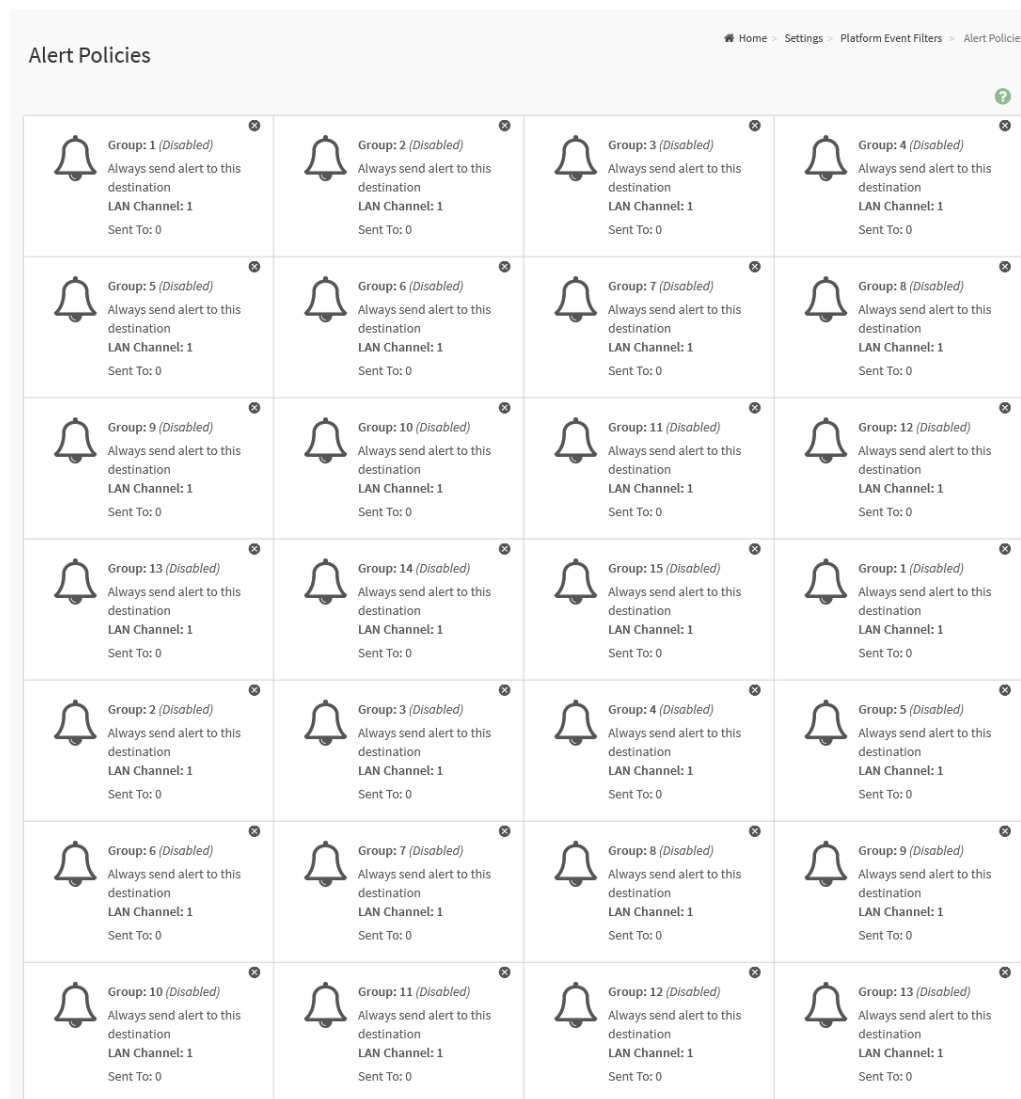

Click on the **Alert Policy Slot** icon (🔔) then navigate to the Alert Policies Configuration page.

Click on the **Delete** icon (✖) on the top right corner of Alert Policy Slot to directly to delete a slot from the list.

Figure 61. Snapshot of Alert Policies Configuration Page

Alert Policies

Home > Settings > Platform Event Filters > Alert Policies > Alert Policies

Alert Policies

Policy Group Number

1

☐ Enable this alert

Policy Action

Always send alert to this destination

LAN Channel

1

Destination Selector

☐ Event Specific Alert String

Alert String Key

Delete Save

The fields on the Alert Policies Configuration page include


- **Policy Group Number:** Indicates the policy group number of the configuration.
- **Enable this alert:** Click this option to enable this alert policy.
- **Policy Action:** Select any one of the Policy Action set from the list.
- **LAN Channel:** Select a particular channel from the available channel list.
- **Destination Selector:** Select a particular destination from the configured destination list.
Note: LAN Destination has to be configured under **Settings -> Platform Event Filters -> LAN Destinations**.
- **Event Specific Alert String:** Specify an event-specific Alert String.
- **Alert String Key:** Specify which string is to be sent for this Alert Policy entry.
- **Delete:** To delete the configured Alter Policy.
- **Save:** To save the configured settings.

2.8.9.3 LAN Destinations

This page provides the feature for users to configure the LAN Destinations for PEF configuration.

To view the LAN Destinations page, click the **Settings** -> **Platform Event Filters** -> **LAN Destinations** tab from the menu bar.

Figure 62. Snapshot of LAN Destinations Page

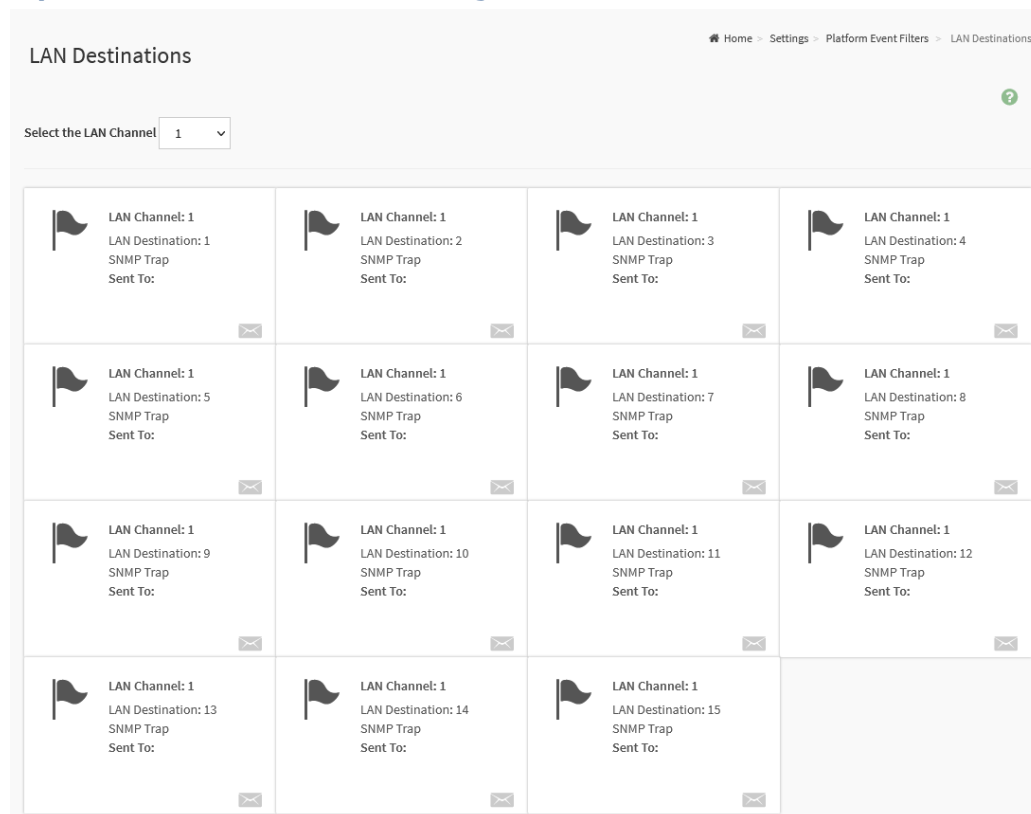

The fields on the LAN Destinations page include

- **Select the LAN Channel:** To select the LAN Channel number.

Click on the **LAN Destination Slot** icon (🚩) then navigate to the LAN Destination Configuration page.

Click on the **Mail** icon (✉️) on the bottom right corner of LAN Destination Slot to send a test alert mail.

Figure 63. Snapshot of LAN Destinations Configuration Page

LAN Destination Configuration

Home > Settings > Platform Event Filters > LAN Destinations > LAN Destination Configuration

LAN Channel
1

LAN Destination
1

Destination Type
☒ SNMP Trap ☐ E-Mail

SNMP Destination Address

BMC Username

Email Subject

Email Message

Save

The fields on the LAN Destinations Configuration page include


- **LAN Channel:** Indicates the LAN Channel Number of the selected slot
 - **LAN Destination:** Indicates the Destination number of the selected slot
 - **Destination Type:** Destination type can be either an SNMP Trap or an E-mail alert.
 - **SNMP Trap:** If **SNMP Trap** is selected, then give the IP address of the system that will receive the alert.
 - **E-Mail:** If **E-Mail** is selected, then choose the user to whom the email alert has to be sent.
 - **SNMP Destination Address:** Specify the IP address of the system that will receive the alert. IPv4 and IPv6 IP address format are supported.
 - **BMC Username:** Select the user to whom the email alert has to be sent.
 - **Email Subject** and **Email Message:** An email will be sent to the configured email address of the user in case of any severity events with a subject specified in subject field and will contain the message field's content as the email body.
- NOTE:** These fields are not applicable for 'AMI-Format' email users.
- **Save:** To save the configured settings.

2.8.10 Services

This page provides the information about services running in the BMC. Only administrator can modify the service.

To view the Services page, click the **Settings** -> **Services** tab from the menu bar.

Figure 64. Snapshot of Services Page

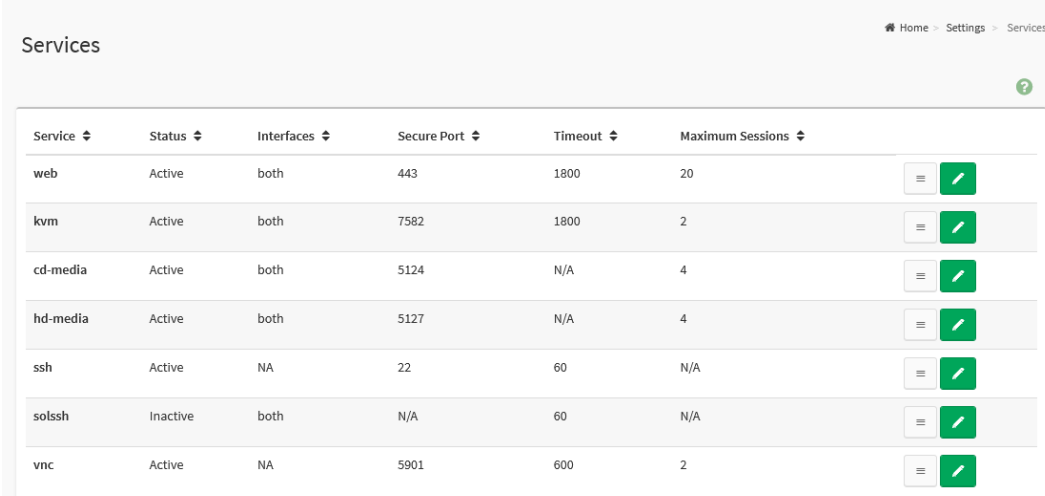

Service	Status	Interfaces	Secure Port	Timeout	Maximum Sessions		
web	Active	both	443	1800	20		
kvm	Active	both	7582	1800	2		
cd-media	Active	both	5124	N/A	4		
hd-media	Active	both	5127	N/A	4		
ssh	Active	NA	22	60	N/A		
solssh	Inactive	both	N/A	60	N/A		
vnc	Active	NA	5901	600	2		

The fields on the Services page include

- **Service:** Indicates the service name of selected slot.
- **Status:** Indicates the current status of the service, either active or inactive state.
- **Interfaces:** Indicates the interface in which service is running.
- **Secure Port:** Indicates the secure port number for the service.
- **Timeout:** Indicates the session timeout value of the service.
- **Maximum Session:** Indicates the maximum number of allowed sessions for the service.

Click on the **Edit** icon () then navigate to Service Configuration page to modify the services configuration.

Click on the **View** icon () then navigate to Service Sessions page to view or terminate the connected session for this service.

Figure 65. Snapshot of Services Configuration Page

The screenshot shows a web interface titled "Service Configuration". In the top right corner, there is a breadcrumb navigation path: Home > Settings > Services > Service Configuration. The main content area contains a configuration form with the following fields:


- Service Name:** A text input field containing the value "web".
- Active:** A checkbox that is checked, with the label "Active" next to it.
- Interface Name:** A dropdown menu showing "both" as the selected option.
- Secure port:** A text input field containing the value "443".
- Timeout:** A text input field containing the value "1800".
- Maximum Sessions:** A text input field containing the value "20".

At the bottom right of the form, there is a blue button with a save icon and the text "Save".

The fields on the Services Configuration page include

- **Service Name:** Indicates the name of selected service.
- **Active:** Indicates the current status of the service, either active or inactive. Click this option to activate the service.
- **Interface Name:** Indicates the interface on which the service is running
- **Secure port:** Used to configure secure port numbers for the services.
- **Timeout:** Specify the timeout value.
- **Maximum Sessions:** Indicates the maximum number of allowed sessions for the service.
- **Save:** To save the configured settings.

Figure 66. Snapshot of Services Sessions Page

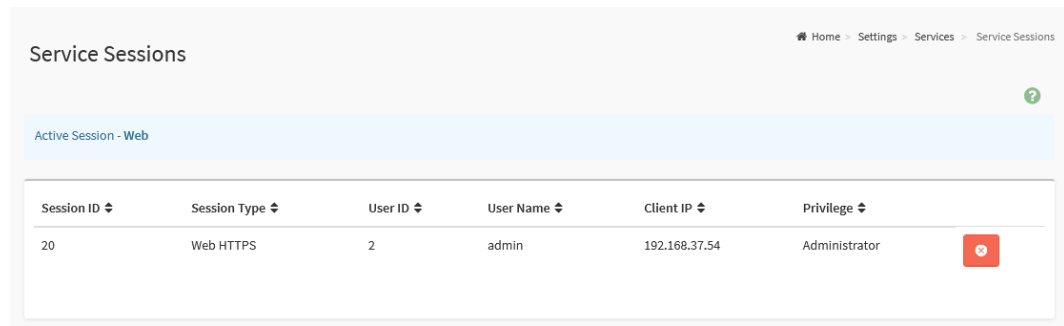

The screenshot shows the 'Service Sessions' page. At the top right is a breadcrumb trail: Home > Settings > Services > Service Sessions. Below the title 'Service Sessions' is a green help icon. A blue header bar indicates 'Active Session - Web'. The main content is a table with the following data:

Session ID	Session Type	User ID	User Name	Client IP	Privilege	
20	Web HTTPS	2	admin	192.168.37.54	Administrator	

The fields on the Services Sessions page include

- **Session ID:** Indicates the ID number of this session.
- **Session Type:** Indicates the type of the active sessions.
- **User ID:** Indicates the ID number of the user.
- **User Name:** Indicates the name of the user.
- **Client IP:** Indicates the IP addresses that are already configured for the active sessions.
- **Privilege:** Indicates the access privilege of the user.

Click on the **Terminate** icon () to terminate the particular session of the service.


2.8.11 SMTP Settings

Simple Mail Transfer Protocol (SMTP) is an internet standard communication protocol for electronic mail transmission.

This page provides various options for users to configure the SMTP settings of the device.

To view the SMTP Settings page, click the **Settings** -> **SMTP Settings** tab from the menu bar.

Figure 67. Snapshot of SMTP Settings Page

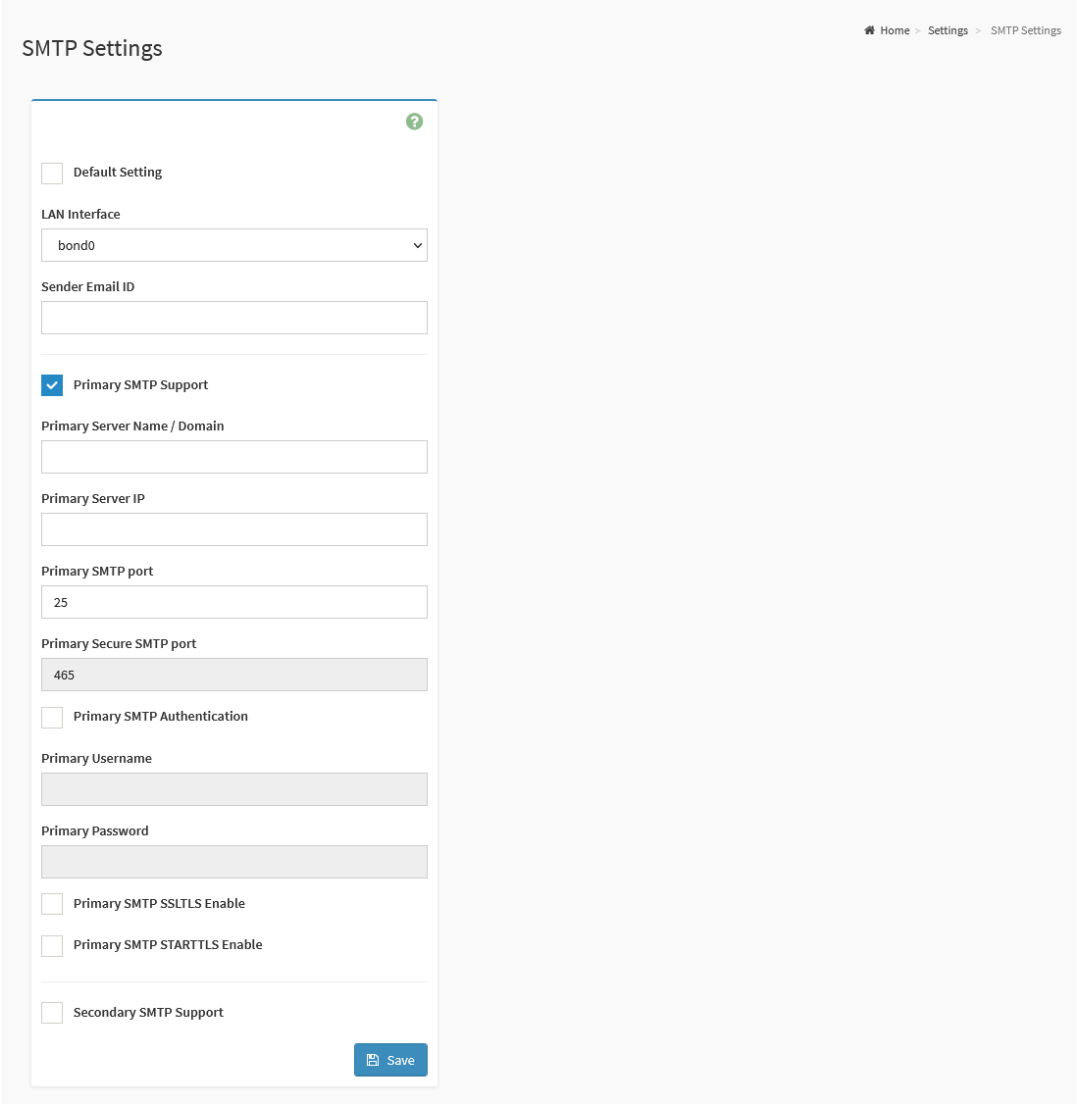

The screenshot shows the 'SMTP Settings' page. At the top right, there is a breadcrumb trail: Home > Settings > SMTP Settings. The page title is 'SMTP Settings'. Below the title, there is a green question mark icon. The settings are organized into sections:

- ☐ Default Setting
- LAN Interface: A dropdown menu showing 'bond0'.
- Sender Email ID: A text input field.
- ☒ Primary SMTP Support
- Primary Server Name / Domain: A text input field.
- Primary Server IP: A text input field.
- Primary SMTP port: A text input field with the value '25'.
- Primary Secure SMTP port: A text input field with the value '465'.
- ☐ Primary SMTP Authentication
- Primary Username: A text input field.
- Primary Password: A text input field.
- ☐ Primary SMTP SSLTLS Enable
- ☐ Primary SMTP STARTTLS Enable
- ☐ Secondary SMTP Support

At the bottom right, there is a blue 'Save' button with a floppy disk icon.

The fields on the SMTP Settings page include

- **Default Setting:** Click this option to enable all parameters use default values.
- **LAN Interface:** Indicates the list of LAN channels available.
- **Sender Email ID:** To specify a valid 'Sender Email ID' on the SMTP Server.

Primary and Secondary SMTP Support:

- **SMTP Support:** Click this option to enable SMTP support for the BMC.
- **Server Name / Domain:** To specify the 'Machine Name' of the SMTP Server.
- **Server IP:** To specify the 'IP address' of the SMTP Server.
- **SMTP port:** To specify the SMTP Port.
- **Secure SMTP port:** To specify the SMTP Secure Port.
- **SMTP Authentication:** Click this option 'Enable' to enable SMTP Authentication.
- **Username:** To specify the username required to access SMTP Accounts.
- **Password:** To specify the password for the SMTP User Account.
- **SMTP SSLTLS Enable:** Click this option to enable the SMTP SSLTLS protocol.
- **SMTP STARTTLS Enable:** Click this option to enable the SMTP STARTTLS protocol.
 - **Upload SMTP CA Certificate File:** Use Browse button to navigate to upload CACERT. CACERT key file should be of pem type.
 - **Upload SMTP Certificate File:** Use Browse button to navigate to upload CERT. CERT key file should be of pem type.
 - **Upload SMTP Private Key:** Use Browse button to navigate to upload SMTP KEY. SMTP key file should be of pem type.

2.8.12 SSL Settings


The Secure Socket Layer (SSL) protocol is a networking protocol designed for securing connections between web clients and web servers over an insecure network. The protocol uses a third party, a Certificate Authority (CA), to identify one end or both end of the transactions.

SSL Settings page provides various functional feature tabs for users to monitor or configure the SSL settings value, including

- **View SSL Certificate**
- **Generate SSL Certificate**
- **Upload SSL Certificate**

To view the SSL Settings page, click the **Settings** -> **SSL Settings** tab from the menu bar.

Figure 68. Snapshot of SSL Settings Page

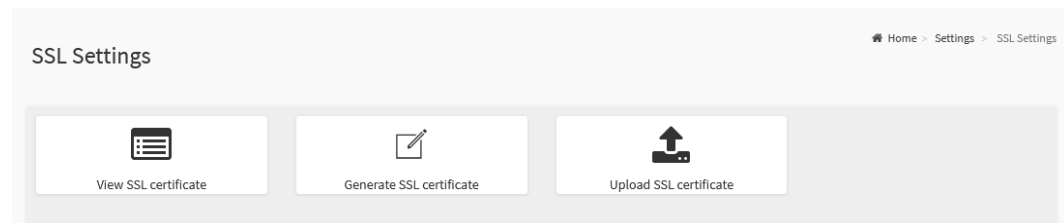

The details about each feature are listed in the following.

2.8.12.1 View SSL Certificate

This page provides the information of current certificate information.

To view the View SSL Certificate page, click the **Settings** -> **SSL Settings** -> **View SSL Certificate** tab from the menu bar.

Figure 69. Snapshot of View SSL Certificate Page

The screenshot displays the 'View SSL Certificate' page. At the top right, a breadcrumb trail reads: Home > Settings > SSL Settings > View SSL Certificate. The main content area is titled 'View SSL Certificate' and contains a section labeled 'Current Certificate Information' with a green question mark icon. This section is divided into several fields:

- Certificate Version:** 3
- Serial Number:** 5AEC34933B828C26B1A675362E5119C91A2B840
- Signature Algorithm:** sha256WithRSAEncryption
- Public Key:** (2048 bit)

Below these fields is a section for issuer information:

- Issuer Common Name (CN):** megarac.com
- Issuer Organization (O):** American Megatrends International LLC (AMI)
- Issuer Organization Unit (OU):** Service Processors
- Issuer City or Locality (L):** Norcross
- Issuer State or Province (ST):** Georgia
- Issuer Country (C):** US
- Issuer Email Address:** support@ami.com

Next is the validity section:

- Valid From:** Mar 25 09:55:58 2022 GMT
- Valid Till:** Mar 22 09:55:58 2032 GMT

Finally, there is a section for the subject information:

- Issued to Common Name (CN):** megarac.com
- Issued to Organization (O):** American Megatrends International LLC (AMI)
- Issued to Organization Unit (OU):** Service Processors
- Issued to City or Locality (L):** Norcross
- Issued to State or Province (ST):** Georgia
- Issued to Country (C):** US
- Issued to Email Address:** support@ami.com

The fields on the View SSL Certificate page include

Basic Information:

- **Certificate Version**
- **Serial Number**
- **Signature Algorithm**
- **Public Key**

Issued From:

- **Issuer Common Name (CN)**
- **Issuer Organization (O)**
- **Issuer Organization Unit (OU)**
- **Issuer City or Locality (L)**
- **Issuer State or Province (ST)**
- **Issuer Country (C)**
- **Issuer Email Address**

Validity Information:

- **Valid From**
- **Valid Till**

Issued To:

- **Issued to Common Name (CN)**
- **Issued to Organization (O)**
- **Issued to Organization Unit (OU)**
- **Issued to City or Locality (L)**
- **Issued to State or Province (ST)**
- **Issued to Country (C)**
- **Issued to Email Address**

2.8.12.2 Generate SSL Certificate

This page provides the various options for users to generate SSL certificate through the BMC Web service.

To view the Generate SSL Certificate page, click the **Settings** -> **SSL Settings** -> **Generate SSL Certificate** tab from the menu bar.

Figure 70. Snapshot of Generate SSL Certificate Page

The screenshot shows the 'Generate SSL Certificate' page. At the top right, there is a breadcrumb trail: Home > Settings > SSL Settings > Generate SSL Certificate. The main form is titled 'Generate SSL Certificate' and contains the following fields:

- Common Name (CN): Text input field.
- Organization (O): Text input field.
- Organization Unit (OU): Text input field.
- City or Locality (L): Text input field.
- State or Province (ST): Text input field.
- Country (C): Text input field.
- Email Address: Text input field.
- Valid for: Text input field with 'in days' placeholder.
- Key Length: Dropdown menu showing '2048 bits'.

A blue 'Save' button with a floppy disk icon is located at the bottom right of the form.

The fields on the Generate SSL Certificate page include

- **Common Name (CN):** To specify the common name for which the certificate is to be generated.
- **Organization (O):** To specify the name of the organization for which certificate is to be generated.
- **Organization Unit (OU):** To specify the Section or Unit of the organization for which certificate is to be generated.
- **City or Locality (L):** To specify the City or Locality.
- **State or Province (ST):** To specify the State or Province.

- **Country (C):** To specify the Country code.
- **Email Address:** To specify the Email Address of the organization.
- **Valid for:** Requested validity days for the certificate.
- **Key Length:** Select the key length bit value of the certificate.
- **Save:** To save the configured settings.

2.8.12.3 Upload SSL Certificate

This page provides the various options for users to upload the new SSL Certificate file into the BMC to replace the old one.

To view the Upload SSL Certificate page, click the **Settings** -> **SSL Settings** -> **Upload SSL Certificate** tab from the menu bar.

Figure 71. Snapshot of Upload SSL Certificate Page

Upload SSL Certificate

Home > Settings > SSL Settings > Upload SSL Certificate

Current Certificate
Fri Mar 25 09:55:58 2022

New Certificate

Current Private Key
Fri Mar 25 09:55:58 2022

New Private Key

The fields on the Upload SSL Certificate page include

- **Current Certificate:** The information of the Current Certificate and date/time of its upload will be displayed (read-only).
- **New Certificate:** Browse and navigate to the new certificate file. Certificate file should be of pem type.
- **Current Private Key:** Information for the current private key and date/time when it was uploaded will be displayed (read-only).
- **New Private Key:** Browse and navigate to the private key file. Private Key file should be of pem type.
- **Save:** To save the configured settings.


2.8.13 System Firewall

System Firewall page provides various functional feature tabs for users to configure the firewall settings, including

- **General Firewall Settings**
- **IP Firewall Rules**
- **Port Firewall Rules**

To view the System Firewall page, click the **Settings** -> **System Firewall** tab from the menu bar.

Figure 72. Snapshot of System Firewall Page

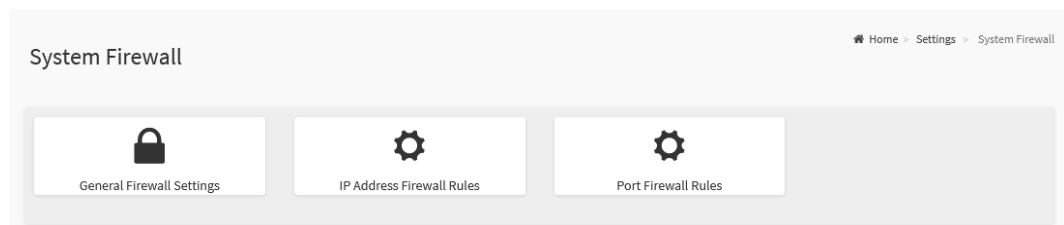

The details about each feature are listed in the following.


2.8.13.1 General Firewall Settings

This page provides various functional feature tabs for users to configure the General Firewall Settings and monitor the configured settings, including

- **Existing Firewall Settings**
- **Add Firewall Settings**

To view the General Firewall Settings page, click the **Settings** -> **System Firewall** -> **General Firewall Settings** tab from the menu bar.

Figure 73. Snapshot of General Firewall Settings Page

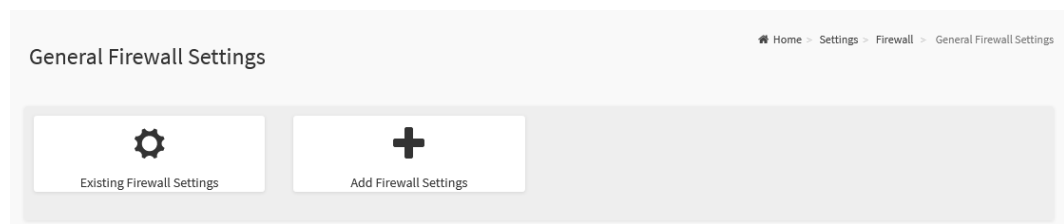


The details about each feature are listed in the following.

2.8.13.1.1 Existing Firewall Settings

This page lists all configured General Firewall Settings instance. A blank page will be opened if users did not add any General Firewall Settings instance from **Add Firewall Settings**.


To view the Existing Firewall Settings page, click the **Settings -> System Firewall -> General Firewall Settings -> Existing Firewall Settings** tab from the menu bar.

Figure 74. Snapshot of Existing Firewall Settings Page of General Firewall Settings

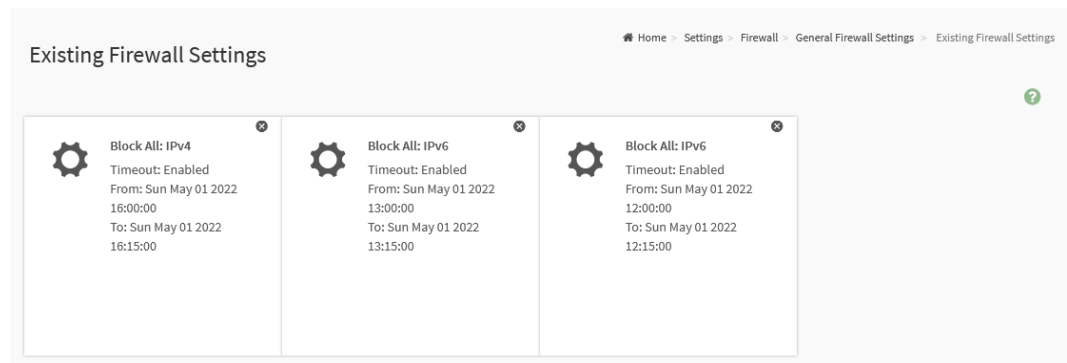

Click on the **Slot** icon (⚙️) then navigate to instance page.
Click on the **Delete** icon (✖️) then delete this slot.

Figure 75. Snapshot of Existing Firewall Settings Instance Page of General Firewall Settings

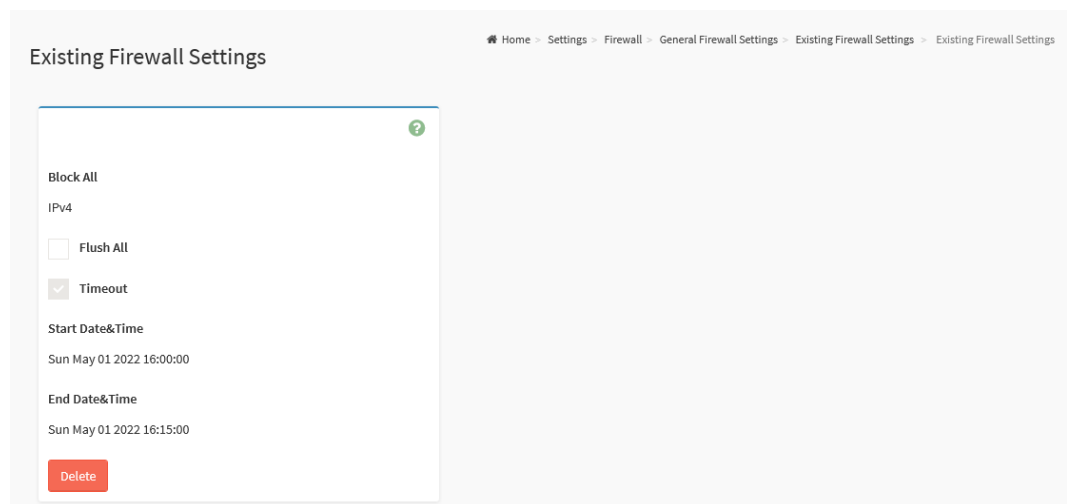

The fields on the Existing Firmware Settings instance page include

- **Block All:** This option will block all incoming IPs and Ports.
- **Flush All:** This option is used to flush all existing system firewall rules.
- **Timeout:** This field indicates the firewall rules whether with timeout feature.
- **Start Date&Time:** The firewall rule will become effective from this date.
- **End Date&Time:** The firewall rule will expire on this date.
- **Delete:** Click this button to delete this instance.

2.8.13.1.2 Add Firewall Settings

This page provides various options for users to add General Firewall Settings instance.

To view the Add Firewall Settings page, click the **Settings** -> **System Firewall** -> **General Firewall Settings** -> **Add Firewall Settings** tab from the menu bar.

Figure 76. Snapshot of Add Firewall Settings page of General Firewall Settings

Add Firewall Settings

Home > Settings > Firewall > General Firewall Settings > Add Firewall Settings

Block All

IPv4

☐ Flush All

☐ Timeout

Start Date

YYYY/MM/DD

Start Time

End Date

YYYY/MM/DD

End Time

Save

The fields on the Add Firmware Settings page include

- **Block All:** Select the protocol and block all the incoming IP's and Port's.
- **Flush All:** To flush all the system firewall settings.
- **Timeout:** Click this option to enable or disable firewall rules with timeout.
- **Start Date:** To specify a **Start Date** to start respective firewall rule effect from the date.
- **Start Time:** To specify a **Start Time** to start respective firewall rule effect from the Time.
- **End Date:** To specify an **End Date** to end respective firewall rule effect from the date.
- **End Time:** To specify a End Time to End respective firewall rule effect

from the Time.

- **Save:** To save the configured settings.

2.8.13.2 IP Firewall Rules

This page provides various functional feature tabs for users to configure the IP Firewall Rules and monitor the configured settings, including

- **Existing IP Rules**
- **Add New IP Rule**

To view the IP Firewall Rules page, click the **Settings** -> **System Firewall** -> **IP Address Firewall Rules** tab from the menu bar.

Figure 77. Snapshot of IP Firewall Rules Page




The details about each feature are listed in the following.

2.8.13.2.1 Existing IP Rules

This page lists all configured IP Firewall Rules instances. A blank page will be opened if users did not add any IP Firewall Rules instance from **Add New IP Rule**.


To view the Existing IP Rules page, click the **Settings -> System Firewall -> IP Address Firewall Rules -> Existing IP Rules** tab from the menu bar.

Figure 78. Snapshot of Existing IP Rules Page

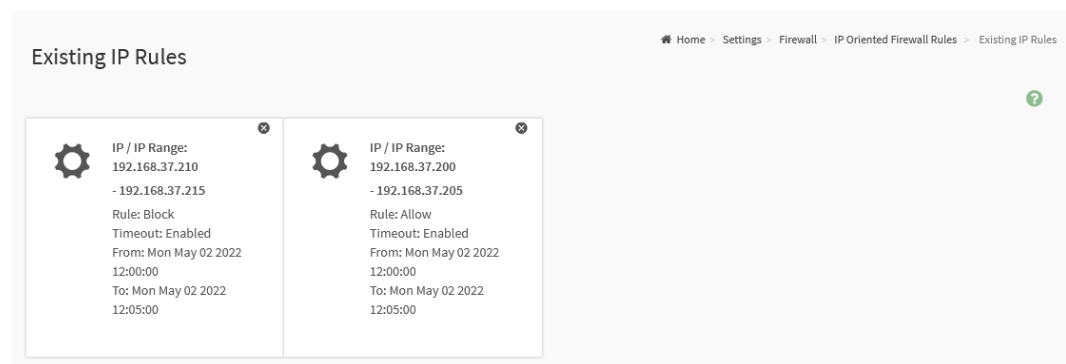

Click on the **Slot** icon (⚙️) then navigate to instance page.
Click on the **Delete** icon (✖️) then delete this slot.

Figure 79. Snapshot of Existing IP Rules Instance Page of IP Firewall Rules

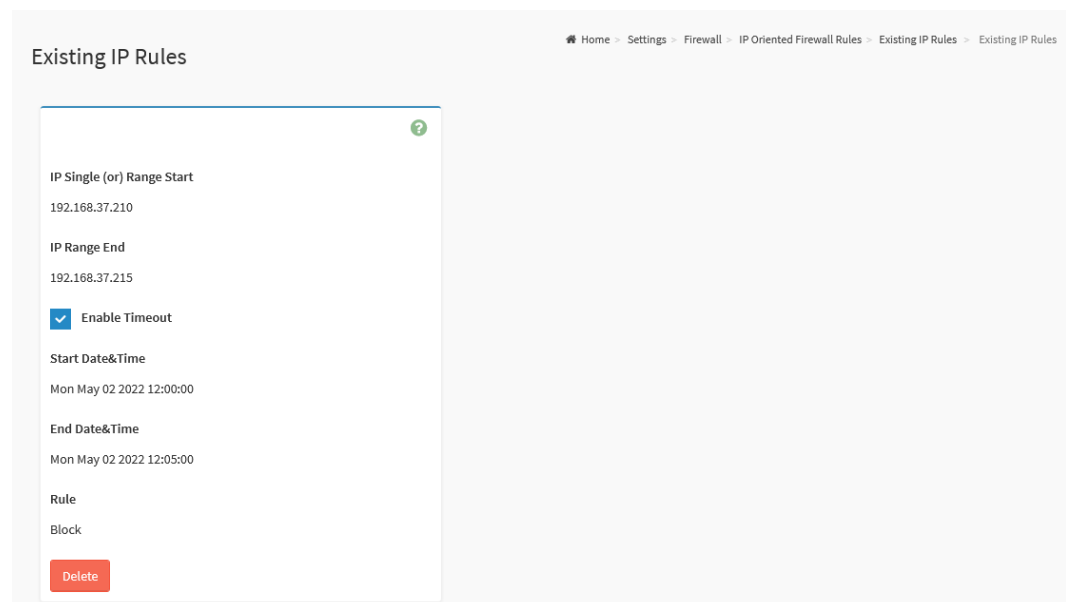

The fields on the Existing IP Rules instance page include

- **IP Single (or) Range Start:** This field indicates IP Address or the start of a Range of IP Addresses
- **IP Range End:** This field indicates the end of a Range of IP Addresses
- **Enable Timeout:** This field indicates the firewall rules whether with timeout feature.
- **Start Date&Time:** The respective firewall rule effect will start from this date and time.
- **End Date&Time:** The respective firewall rule effect will end from this date and time.
- **Rule:** This field indicates the current setting of the listed IP or Range of IP rules (Allow or Block).
- **Delete:** Click this button to delete this instance.

2.8.13.2.2 Add New IP Rule

This page provides various options for users to add IP Firewall Rule instance.

To view the Add New IP Rule page, click the **Settings** -> **System Firewall** -> **IP Address Firewall Rules** -> **Add New IP Rule** tab from the menu bar.

Figure 80. Snapshot of Add IP Rules Instance Page of IP Firewall Rules

Add IP Rule

Home > Settings > Firewall > IP Oriented Firewall Rules > Add IP Rule

IP Single (or) Range Start

IP Range End

optional

☐ Enable Timeout

Start Date

YYYY/MM/DD

Start Time

End Date

YYYY/MM/DD

End Time

Rule

Allow

Save

The fields on the Add IP Rule instance page include

- **IP Single (or) Range Start:** To specify an IP Address or the start of a Range of IP Addresses. IP Address must follow the IPv4 Address format:
- **IP Range End:** To specify an end of an IP address range.
- **Enable Timeout:** To enabled or disable Timeout.
- **Start Date:** The respective firewall rule effect will start from this date.
- **Start Time:** The respective firewall rule effect will start from this time.
- **End Date:** The respective firewall rule effect will end from this date.
- **End Time:** The respective firewall rule effect will end from this time.
- **Rule:** To indicate the current setting of the listed IP Address or Range of IP Addressed rules (Allow or Block) status.
- **Save:** To save the configured settings.


2.8.13.3 Port Firewall Rules

This page provides various functional feature tabs for users to configure the Port Firewall Rules and monitor the configured settings, including

- **Existing Port Rules**
- **Add New Port Rule**

To view the IP Firewall Rules page, click the **Settings** -> **System Firewall** -> **Port Firewall Rules** tab from the menu bar.

Figure 81. Snapshot of Port Firewall Rules Page

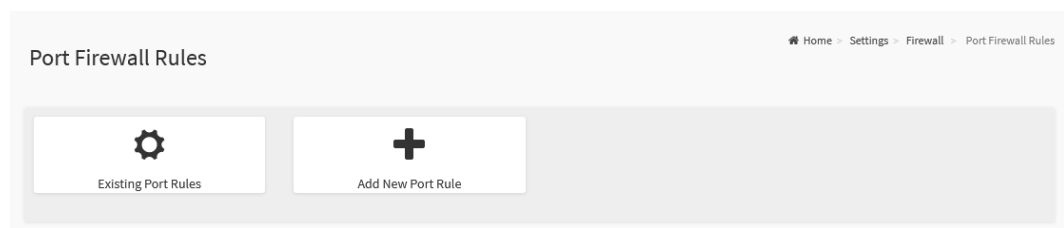


The details about each feature are listed in the following.

2.8.13.3.1 Existing Port Rules

This page lists all configured Port Firewall Rules instances. A blank page will be opened if users did not add any Port Firewall Rules instance from **Add New Port Rule**.


To view the Existing Port Rules page, click the **Settings -> System Firewall -> Port Firewall Rules -> Existing Port Rules** tab from the menu bar.

Figure 82. Snapshot of Existing Port Rules Page

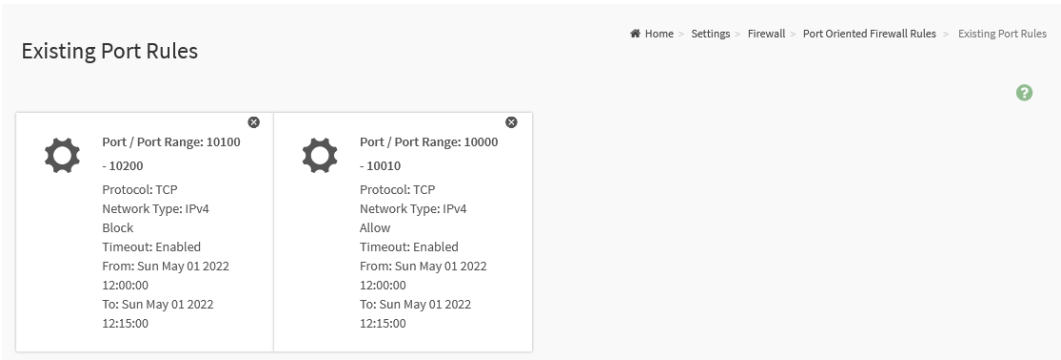

Click on the **Slot** icon (⚙️) then navigate to instance page.
Click on the **Delete** icon (✖️) then delete this slot.

Figure 83. Snapshot of Existing Port Rules Instance Page of Port Firewall Rules

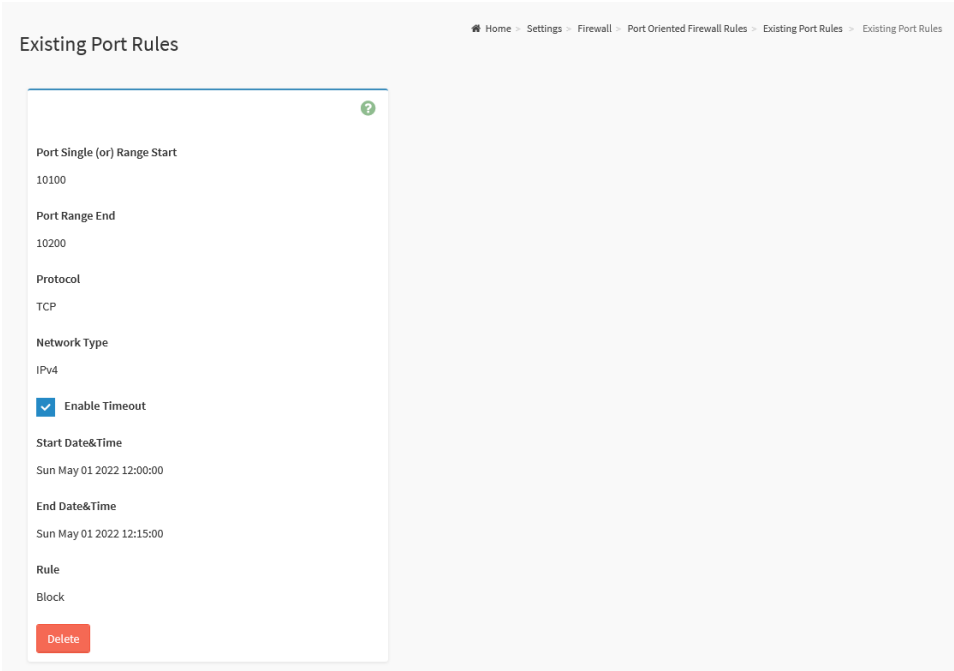

The fields on the Existing Port Rules instance page include

- **Port Single (or) Range Start:** This field indicates the port number or the start of range or port numbers.
- **Port Range End:** This field indicates the end of range or port numbers.
- **Protocol:** This field indicates the protocols for the configured port or range or ports.
- **Network Type:** this field indicates the affected network type for the configured port or range of port numbers.
- **Enable Timeout:** This field indicates the firewall rules whether with timeout feature.
- **Start Date&Time:** The respective firewall rule effect will start from this date and time.
- **End Date&Time:** The respective firewall rule effect will end from this date and time.
- **Rule:** To indicates **Allow** or **Block** status.
- **Delete:** Click this button to delete this instance.

2.8.13.3.2 Add New Port Rule

This page provides various options for users to add Port Firewall Rule instance.

To view the Add New Port Rule page, click the **Settings** -> **System Firewall** -> **Port Firewall Rules** -> **Add New Port Rule** tab from the menu bar.

Figure 84. Snapshot of Add Port Rules Instance Page of Port Firewall Rules

Add Port Rule

Home > Settings > Firewall > Port Oriented Firewall Rules > Add Port Rule

Port Single (or) Range Start

Port Range End

optional

Protocol

TCP

Network Type

IPv4

☐ Enable Timeout

Start Date

YYYY/MM/DD

Start Time

End Date

YYYY/MM/DD

End Time

Rule

Allow

Save

The fields on the Add Port Rule instance page include

- **Port Single (or) Range Start:** To specify the port number or start of a range of port numbers.
- **Port Range End:** To specify the end of a range of port numbers.
- **Protocol:** To select the protocol for the configured port or port ranges.
- **Network Type:** To select the affected network type for the configured port or port ranges.
- **Enable Timeout:** Click this option to enabled or disabled timeout.


- **Start Date:** The respective firewall rule effect will start from this date.
- **Start Time:** The respective firewall rule effect will start from this time.
- **End Date:** The respective firewall rule effect will end from this date.
- **End Time:** The respective firewall rule effect will end from this time.
- **Rule:** To indicate **Allow** or **Block** status.
- **Save:** To save the configured settings.

2.8.14 User Management

User Management page provides various options for users to view the current list of user slots for the BMC, and allow users to add a new user and modify or delete existing user.

To view the User Management page, click the **Settings -> User Management** tab from the menu bar.

Figure 85. Snapshot of User Management Page

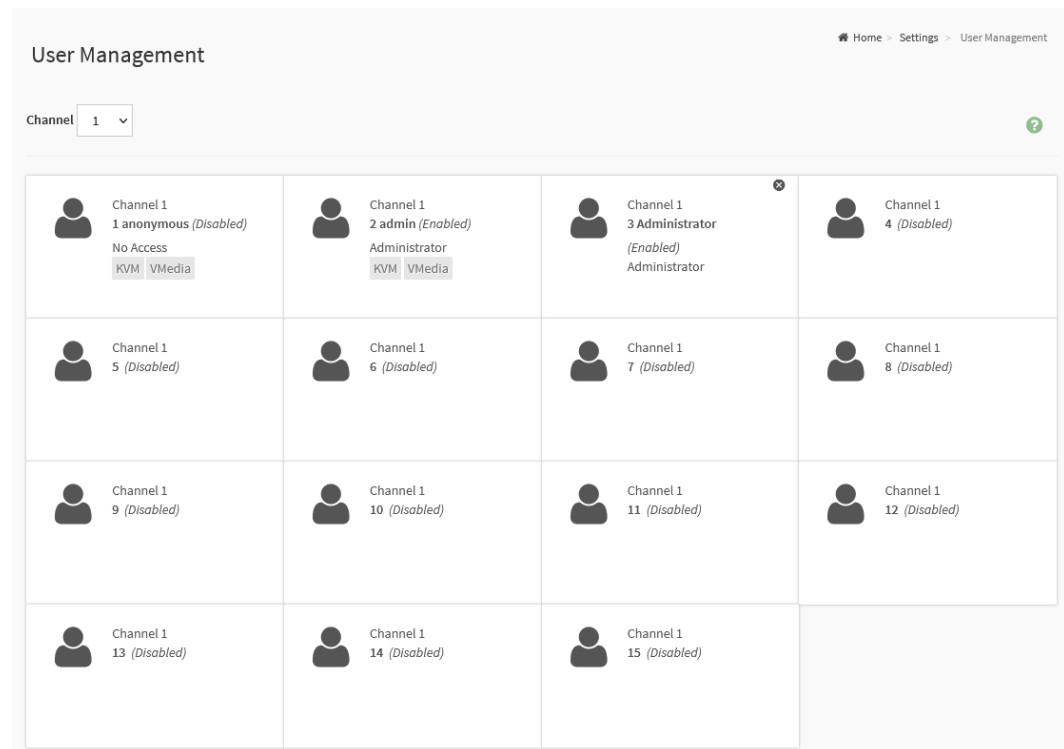

Channel 1 for users connect to BMC through dedicated IPMI LAN port.

Channel 8 for users connect to BMC through Share NIC LAN port.

Click on the **User** icon (👤) then navigate to User Management Configuration page.

Click on the **Delete** icon (✖) then delete this slot.

Figure 86. Snapshot of User Management Configuration Page

Home > Settings > User Management > User Management Configuration

User Management Configuration

?

Username

Password Size

16 bytes

Password

Confirm Password

☐ Password age (days)

End date

Current valid date

☐ Enable User Access

Enable Channel Access

☐ Channel 1

☐ Channel 8

Privilege(Channel 1)

User

Privilege(Channel 8)

User

☐ KVM Access

☐ VMedia Access

☐ SNMP Access

SNMP Access level

SNMP Authentication Protocol

SNMP Privacy Protocol

Email Format

Email ID

Existing SSH Key

Not Available

Upload SSH Key

Save

The fields on the User Management Configuration page include

- **Username:** To specify a name for the user.

- **Password Size:** To select the preferred size for the password.
- **Password:** Password field is mandatory and should meet the password policy requirements.
- **Confirm Password:** Entering the password again to confirm the password.
- **Password age (days):** Enable and set the maximum password age.
- **End date:** To select the date for the expired date of password age.
- **Current valid date:** To indicate valid date of current.
- **Enable User Access:** Click this option to enable this user account to access the BMC service.
- **Enable Channel Access:** To select the channel/channels to enable the network access for the user.
 - **Channel 1:** Allow user to access the BMC service through dedicated IPMI LAN port.
 - **Channel 8:** Allow user to access the BMC service through Share NIC LAN port.
- **Privilege (Channel 1) and Privilege (Channel 8):** Select the privilege level for each channel to be assigned to this user for access to the BMC through the network interface. There are 5 levels of Network Privileges (Administrator, Operator, User, OEM and None).
- **KVM Access:** Click this option to assign the KVM privilege for the user.
- **VMedia Access:** Click this option to assign the VMedia privilege for the user.
- **SNMP Access:** Click this option to assign the SNMP privilege for the user.
- **SNMP Access level:** To select the SNMP access level for the user.
- **SNMP Authentication Protocol:** To select the Authentication Protocol for the user.
- **SNMP Privacy Protocol:** To select the Encryption algorithm to be used for the SNMP settings.
- **Email Format:** To specify the format for the email
- **Email ID:** To specify the email ID for the user.
- **Existing SSH Key:** If available, the uploaded SSH key information will be displayed.
- **Upload SSH Key:** Use Browse button to navigate to the new public SSH key file.

- **Delete:** Click Delete button to delete this user account.
- **Save:** To save the configured settings.


2.8.15 Video Recording

Video Recording page provides the functional feature tab for users to configure the video recording settings, including

- **Auto Video Settings**

To view the Video Recording page, click the **Settings** -> **Video Recording** tab from the menu bar.

Figure 87. Snapshot of Video Recording Page

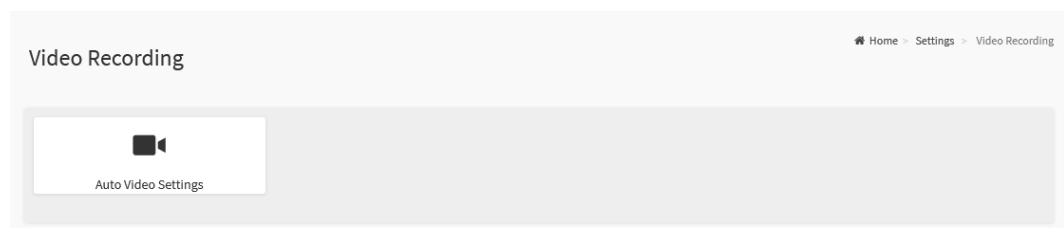

The details about each feature are listed in the following.


2.8.15.1 Auto Video Settings

This page provides various functional feature tabs for users to configure the events that will trigger auto video recording function of the KVM server, including

- **Video Trigger Settings**
- **Video Remote Storage**
- **Pre-Event Video Recordings**

To view the Auto Video Recording page, click the **Settings** -> **Video Recording** -> **Auto Video Settings** tab from the menu bar.

Figure 88. Snapshot of Auto Video Recording Page

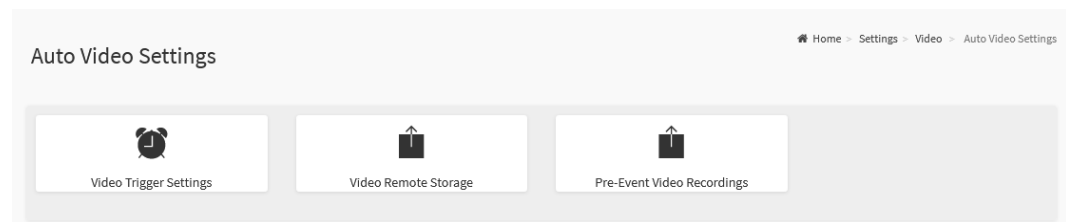

The details about each feature are listed in the following.

2.8.15.1.1 Video Trigger Settings

This page provides various options for users to configure the video trigger settings.

To view the Video Trigger Settings page, click the **Settings** -> **Video Recording** -> **Auto Video Settings** -> **Video Trigger Settings** tab from the menu bar.

Figure 89. Snapshot of Video Trigger Settings Page

Video Trigger Settings

Home > Settings > Video > Auto settings > Video Trigger Settings

- ☐ Critical Events (Temperature/Voltage)
- ☐ Non Critical Events (Temperature/Voltage)
- ☐ Non Recoverable Events (Temperature/Voltage)
- ☐ Fan state changed Events
- ☐ Watchdog Timer Events
- ☐ Chassis Power On Events
- ☐ Chassis Power Off Events
- ☐ Chassis Reset Events
- ☐ LPC Reset Events
- ☐ Date and Time Event
- ☐ [Pre-Event Video Recording](#)

Save

The fields on the Video Trigger Settings page include

- **Critical Events (Temperature/Voltage)**
- **Non-Critical Events (Temperature/Voltage)**
- **Non-Recoverable Events (Temperature/Voltage)**
- **Fan state changed Events**
- **Watchdog Timer Events**
- **Chassis Power-On Events**
- **Chassis Power-Off Events**
- **Chassis Reset Events**
- **LPC Reset Events**
- **Date and Time Event**
- **Pre-Event Video Recording**


- **Crash Reset**
 - **Pre-crash**
 - **Pre-reset**
- **Save:** To save the configured settings.

2.8.15.1.2 Video Remote Storage

This page provides various options for users to configure the video remote storage settings, which for save the capture video file to the remote server.

To view the Video Remote Storage page, click the **Settings** -> **Video Recording** -> **Auto Video Settings** -> **Video Remote Storage** tab from the menu bar.

Figure 90. Snapshot of Video Remote Storage Page

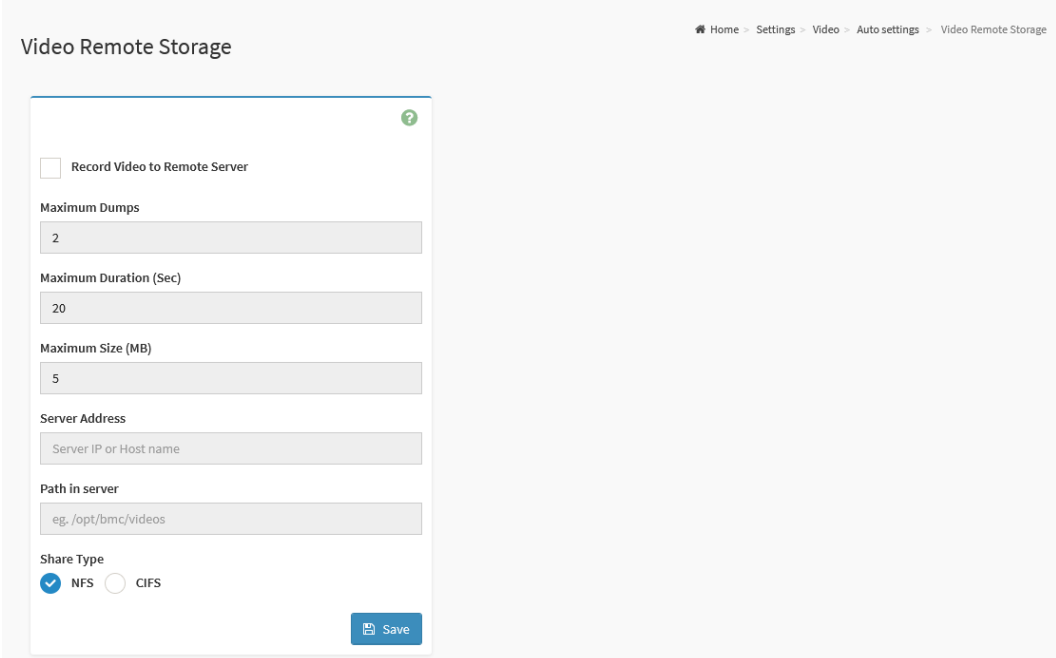

The fields on the Video Remote Storage page include

- **Record Video to Remote Server:** Click this option to enable Remote Video support.
- **Maximum Dumps:** To specify the number of Maximum Dumps, range from 1 to 100.
- **Maximum Duration (Sec):** To specify the number of Maximum Duration, range from 1 to 3600 seconds.
- **Maximum Size (MB):** To specify the number of Maximum size, range from 1 to 500 MB.
- **Server Address:** Address of the server where remote videos are to be stored. IP Address and FQDN format are supported.
- **Path in server:** To specify the path in the remote server.

- **Share Type:** To select Share Type of the remote video server
 - NFS
 - CIFS
- **Save:** To save the configured settings.

2.8.15.1.3 Pre-Event Video Recordings

This page provides various options for users to configure Pre-Event video recording

To view the Video Remote Storage page, click the **Settings** -> **Video Recording** -> **Auto Video Settings** -> **Pre-Event Video Recordings** tab from the menu bar.

Figure 91. Snapshot of Pre-Event Video Recordings Page

Pre-Event Video Recordings

Home > Settings > Video > Auto settings > Pre-Event Video Recordings

This page is used to configure the Pre-Event video recording options. Pre-Event video recording is disabled by default. To enable the Pre-Event video recording, go to the [Triggers Configuration](#) page.

Video Quality
Very Low

Compression Mode
High

Frames Per Second
1

Video Duration
10

Save

The fields on the Pre-Event Video Recordings page include


- **Video Quality:** To select the desired video quality from the options in the drop-down list.
- **Compression Mode:** To select the Compression Mode from the options listed in the drop-down list.
- **Frames Per Second:** To select the FPS to specify the desired number of frames per second.
- **Video Duration:** To select the desired video duration in seconds.
- **Save:** To save the configured settings.

2.8.16 IPMI Interfaces

IPMI Interfaces page provides various options for users to configure the IPMI communication interface settings.

To view the IPMI Interfaces page, click the **Settings** -> **IPMI Interfaces** tab from the menu bar.

Figure 92. Snapshot of IPMI Interfaces Page

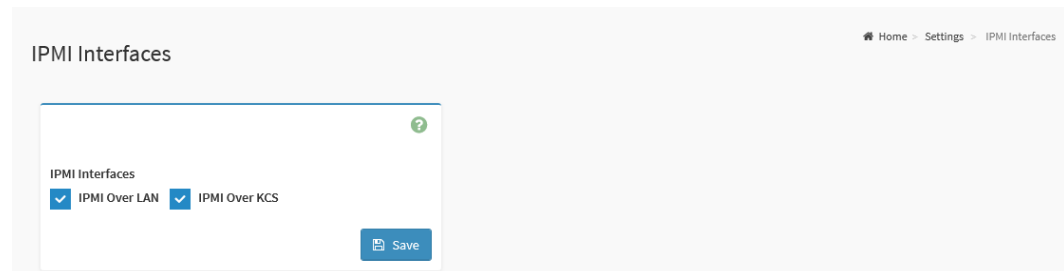

The fields on the IPMI Interfaces page include


- **IPMI Interfaces:** To select the interface which allow users to perform the IPMI communication.
 - **IPMI Over LAN:** Click this option to allows the IPMI communication over LAN.
 - **IPMI Over KCS:** Click this option to allows the IPMI communication over KCS.
- **Save:** To save the configured settings.

2.8.17 Keep Share NIC Link Up

This page provides the option for users to configure the share NIC PHY link up settings.

To view the Keep Share NIC Link Up page, click the **Settings** -> **Keep Share NIC Link Up** tab from the menu bar.

Figure 93. Snapshot of Keep Share NIC Link Up Page

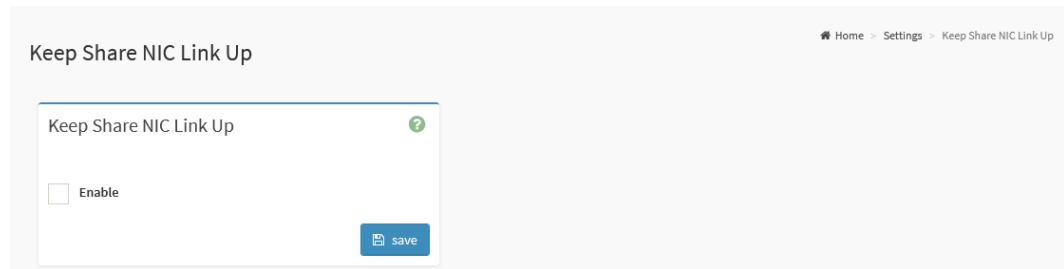

The fields on the Keep Share NIC Link Up page include

- **Enabled:** Click this option to enable Keep Share NIC Link Up supported. If enabled feature, the Share NIC PHY will keep link up, and it could avoid the share NIC link disconnection while system reset.
- **Save:** To save the configured settings.


2.8.18 FAN Settings

FAN Settings page provides various functional feature tabs for users to configure the system FAN settings which control by the BMC, including

- **Open Loop Control Table**
- **Close Loop Control Table**
- **Temperature Sensor and Corresponding Fan Table**
- **FAN Mode**

To view the FAN Settings page, click the **Settings** -> **FAN Settings** tab from the menu bar.

Figure 94. Snapshot of FAN Settings Page

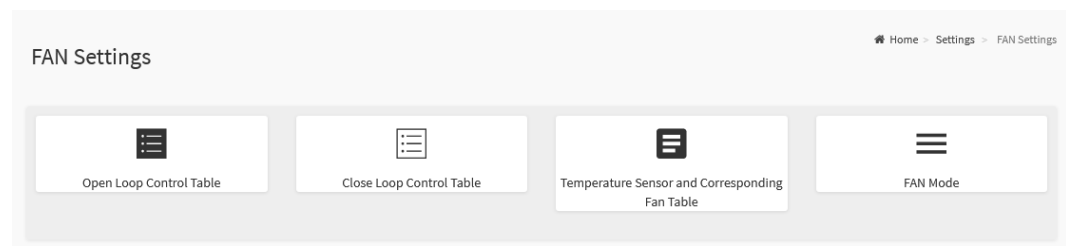

The details about each feature are listed in the following.

2.8.18.1 Open Loop Control Table

This page provides various options for users to configure the Open Loop Control Table settings, users can add the new FAN table from **Temperature Sensor and Corresponding Fan Table**

To view the Open Loop Control Table FAN page, click the **Settings** -> **FAN Settings** -> **Open Loop Control Table FAN** tab from the menu bar.

Figure 95. Snapshot of Open Loop Control Table Page

Open Loop Control Table

Home > Settings > FAN Setting > Open Loop Control Table

Control Table

Table 1

Entry	Temp (°C)	Duty (%)	Entry	Temp (°C)	Duty (%)
1			13		
2			14		
3			15		
4			16		
5			17		
6			18		
7			19		
8			20		
9			21		
10			22		
11			23		
12			24		

Clear Save

The fields on the Open Loop Control Table page include

- **Control Table:** To select the table which to be used.
- **Entry:** Indicates the condition number.
- **Temp (°C):** To specify the temperature for this entry.
- **Duty (%):** To specify the FAN duty for this entry.
- **Default:** Click **Default** button to loading the default setting value of selected table.

- **Customized:** Click the **Customized** button to modify the settings value for selected table.
- **Clear:** To clear current settings value on the web.
- **Save:** To save the configured settings.

2.8.18.2 Close Loop Control Table

This page provides various options for users to configure the Close Loop Control Table settings, users can add the new FAN table from **Temperature Sensor and Corresponding Fan Table**

To view the Open Loop Control Table FAN page, click the **Settings** -> **FAN Settings** -> **Close Loop Control Table FAN** tab from the menu bar.

Figure 96. Snapshot of Close Loop Control Table Page

The fields on the Close Loop Control Table page include

- **Table:** To select the table which to be used.
- **Ramp Temperature (°C):** To specify the value for Ramp Temperature.
- **Ramp Rate (%):** To specify the value for Ramp Rate.
- **Ramp Delay (sec.):** To specify the value for Ramp Delay.
- **Slew Temperature (°C):** To specify the value for Slew Temperature.
- **Slew Rate (%):** To specify the value for Slew Rate.
- **Slew Delay (sec.):** To specify the value for Slew Delay.
- **Default:** Click **Default** button to loading the default setting value of selected table.
- **Customized:** Click the **Customized** button to modify the settings value

for selected table.

- **Clear:** To clear current settings value on the web.
- **Save:** To save the configured settings.

2.8.18.3 Temperature Sensor and Corresponding Fan Table

This page provides various options for users to configure the temperature sensor and FAN table settings for **Open Loop Control Table** and **Close Loop Control Table** use.

To view the Temperature Sensor and Corresponding Fan Table page, click the **Settings -> FAN Settings -> Temperature Sensor and Corresponding Fan Table** tab from the menu bar.

Figure 97. Snapshot of Temperature Sensor and Corresponding Fan Table Page

Temperature Sensor and Corresponding Fan Table

Home > Settings > FAN Setting > Temperature Sensor and Corresponding Fan Table

Select all Default Customized

TEMP_CPU	TEMP_MB	TEMP_MB_CARDSIDE	TEMP_ONBOARD_LAN
TEMP_M.2_1	TEMP_M.2_2	TEMP_GB_GPU0	TEMP_GB_GPU1
TEMP_GB_GPU2	TEMP_GB_GPU3	TEMP_HBM_GPU0	TEMP_HBM_GPU1
TEMP_HBM_GPU2	TEMP_HBM_GPU3	TEMP_PSU1	TEMP_PSU2
TEMP_TR1	TEMP_TR2	TEMP_U.2_1	TEMP_U.2_2
TEMP_DDR4_A1	TEMP_DDR4_B1	TEMP_DDR4_C1	TEMP_DDR4_D1
TEMP_DDR4_E1	TEMP_DDR4_F1	TEMP_DDR4_G1	TEMP_DDR4_H1

Select Open Loop Control Table

Disable

Select Close Loop Control Table

Disable

Select Fan

FAN1	☐
FAN2	☐
FAN3	☐
FAN4	☐
FAN5	☐
FAN6	☐
FAN7	☐

Save

The fields on the Temperature Sensor and Corresponding Fan Table page include

- **Select Open Loop Control Table:** To select the Open Loop Control

Table which to be used.


- **Select Close Loop Control Table:** To select the Close Loop Control Table which to be used.
- **Select Fan:** To select the FAN which affect in the selected table.
- **Select All:** Click this button to select all sensors in the sensor list.
- **Default:** Click **Default** button to loading the default setting value (the default selected FAN) of selected temperature sensor.
- **Customized:** Click the **Customized** button to modify the settings value for the selected FAN.
- **Save:** To save the configured settings.

2.8.18.4 FAN Mode

This page provides various options for users to configure the fan control mode settings, including control mode and fan duty for manual mode.

To view the FAN Mode page, click the **Settings** -> **FAN Settings** -> **FAN Mode** tab from the menu bar.

Figure 98. Snapshot of FAN Mode Page

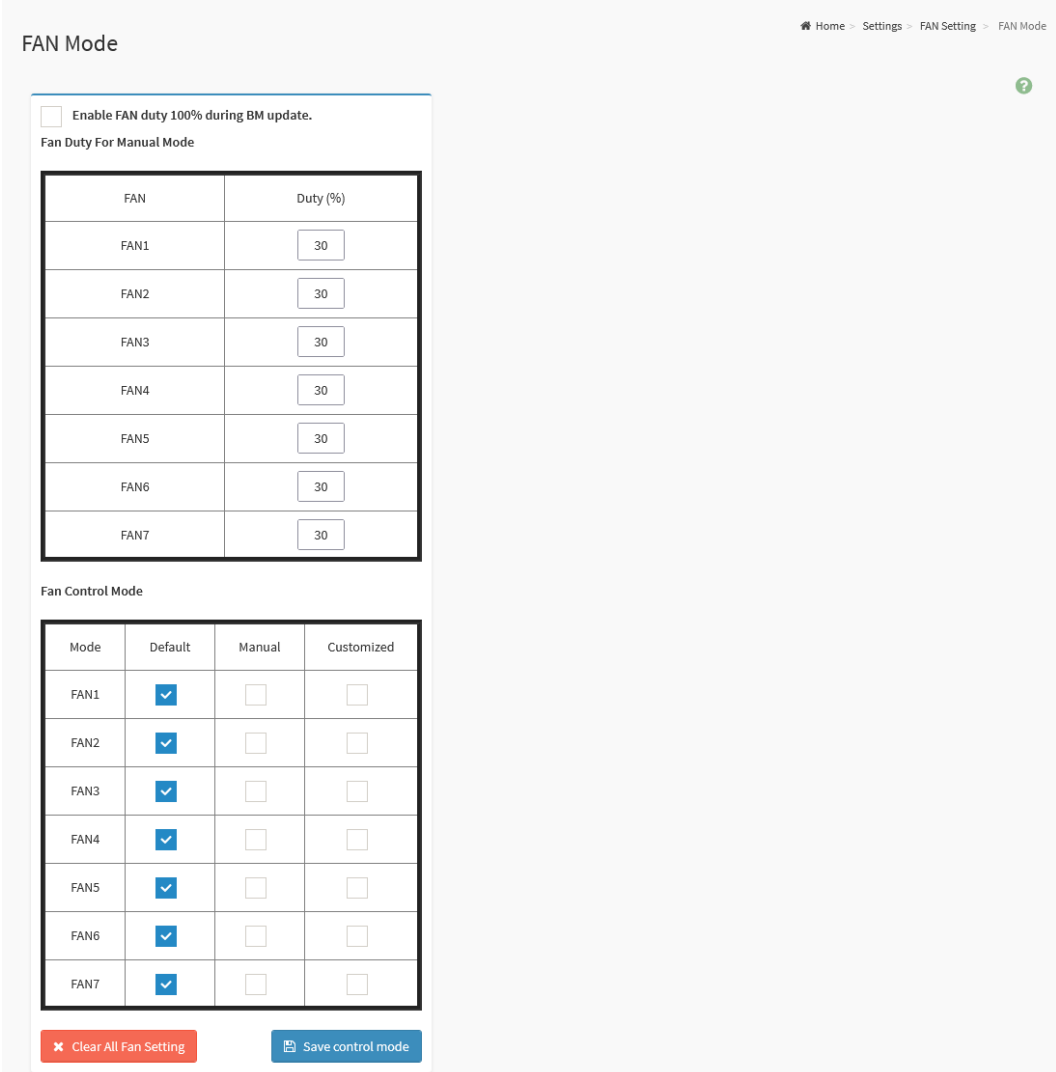

FAN Mode

Home > Settings > FAN Setting > FAN Mode

☐ Enable FAN duty 100% during BM update.

Fan Duty For Manual Mode

FAN	Duty (%)
FAN1	30
FAN2	30
FAN3	30
FAN4	30
FAN5	30
FAN6	30
FAN7	30

Fan Control Mode

Mode	Default	Manual	Customized
FAN1	☒	☐	☐
FAN2	☒	☐	☐
FAN3	☒	☐	☐
FAN4	☒	☐	☐
FAN5	☒	☐	☐
FAN6	☒	☐	☐
FAN7	☒	☐	☐

The fields on the FAN Mode page include

- **Enable FAN duty 100% during BM update:** Click this option to enable this feature.
- **Fan Duty For Manual Mode:** To specify the fan duty value for the

specific FAN while runs in manual mode.


- **Fan Control Mode:** To select the fan control mode.
- **Clear All Fan Setting:** Click **Clear All Fan Setting** button to clear current setting value.
- **Save Control Mode:** Click **Save Control Mode** button to save the configured settings.

2.8.19 Power Restore Policy

Power Restore Policy page provides various options for users to configure the power restore policy settings.

To view the Power Restore Policy page, click the **Settings** -> **Power Restore Policy** tab from the menu bar.

Figure 99. Snapshot of Power Restore Policy Page

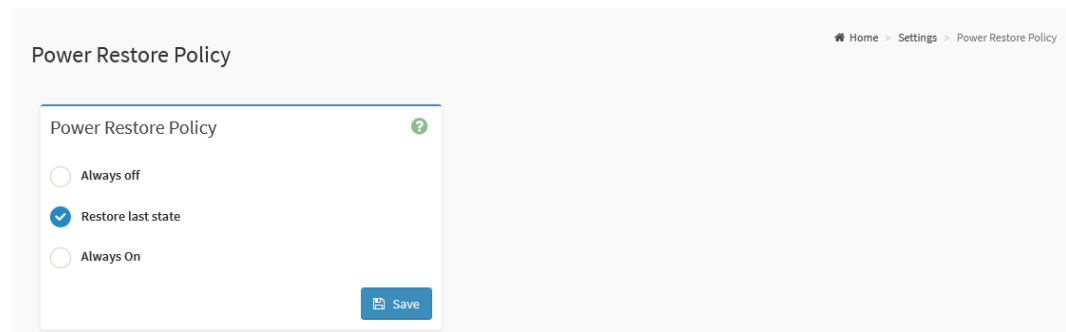

The fields on the Power Restore Policy page include

- **Always off:** After the power is restored, the system will remain off.
- **Restore last state:** Restore the system to the same state as before the power failure
- **Always On:** After the power is restored, the system will automatically power-on.
- **Save:** To save the configured settings.

2.8.20 Password Settings

Password Settings page provides various settings for users to configure the password policy.

To view the Password Settings page, click the **Settings** -> **Password Settings** tab from the menu bar.

Figure 100. Snapshot of Password Settings Page

Password Settings

Home > Settings > Password Settings

Maximum retry count

0

Attempted count reset interval (minutes)

0

Account lockout interval (minutes)

10

Minimum length

8

Complexity

Lower Case

Upper Case

Number

Special Character

Save

The fields on the Password Settings page include

- **Maximum retry count:** Click this option to enable this feature. To specify the value for Maximum Retry Count, and user will be locked out if number of failed login attempt reach this setting.
- **Attempted count reset interval (minutes):** Click this option to enable this feature. To specify the value for the interval value to reset attempted failure count.
- **Account lockout interval (minutes):** Click this option to enable this feature. To specify the value for unlock user after the interval if the user has been locked out.
- **Minimum length:** Set the minimum password length.

- **Complexity:** Click the options for enhance the password strength.
 - **Lower Case:** Password must have lower case character.
 - **Upper Case:** Password must have upper case character.
 - **Number:** Password must have number.
 - **Special Character:** Password must have special character.
- **Save:** To save the configured settings.

2.9 Remote Control

BMC service provides two useful remote control services named **H5Viewer** and **JViewer**, which allows users to remote control the host through the KVM service runs on either HTML5 web interface or Java Runtime Environment (JRE) interface.

Remote Control page provides two functional feature tabs for users to launch the remote KVM service.

To view the Remote Control page, click the **Remote Control** tab from the menu bar.

Figure 101. Snapshot of Remote Control Page



The fields on the Remote Control page include

- **Launch H5Viewer:** Click **Launch H5Viewer** button to open the H5Viewer web KVM page.
- **Launch JViewer:** Click **Launch JViewer** button to download the JRE KVM executable file.


The details about each feature are listed in the following.

2.9.1 H5Viewer

H5Viewer provides a remote KVM service for users to remote control the host through the HTML5 environment.

To view the H5Viewer page, click the **Settings -> Remote Control -> Launch H5Viewer** button from the menu bar.

Figure 102. Snapshot of H5Viewer KVM Page

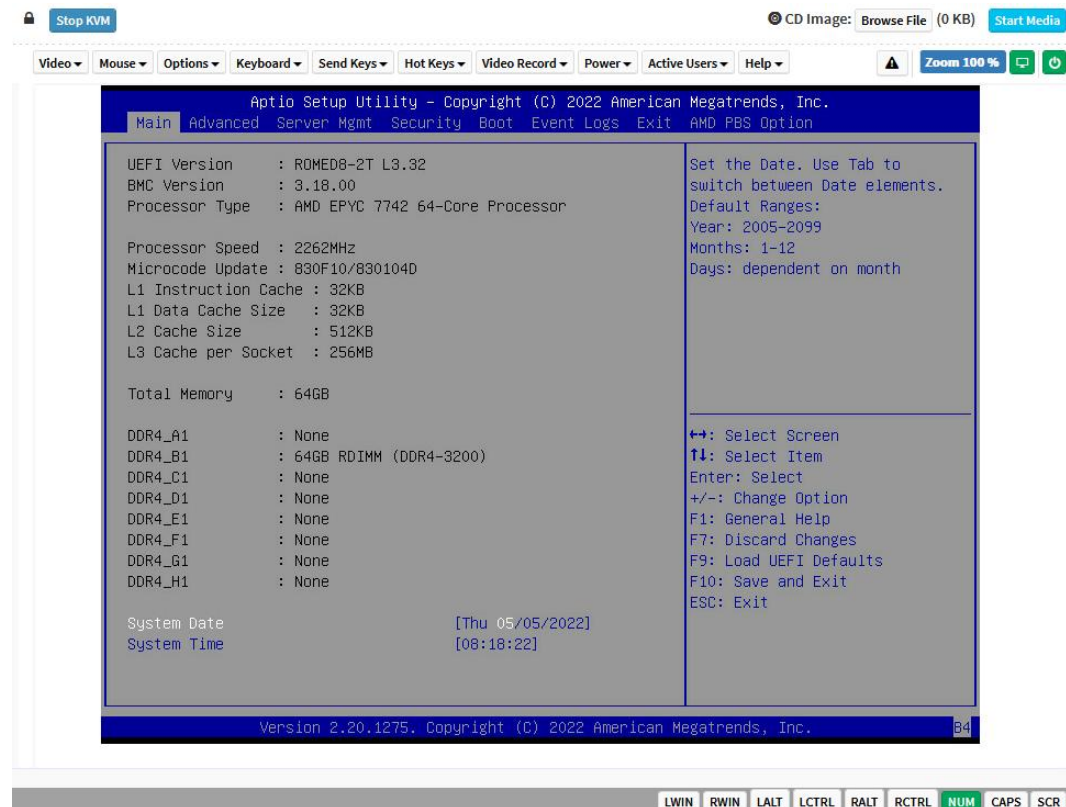

The fields on the H5Viewer KVM page include

Video Menu

- **Pause Video:** Click this button to pausing the Console Redirection.
- **Resume Video:** Click this button to resume the Console Redirection when the session is paused.
- **Refresh Video:** Click this button to update the display shown in the Console Redirection window.
- **Host Display**
 - **Display On:** Click this button to enable this feature. The host

display will be turn on if this feature is enabled.

- **Display Off:** Click this button to enable this feature. The host display will be blank if this feature is enabled, but users can view the host screen in the Console Redirection window.
- **Capture Screen:** Click this button to take a screenshot of the host screen and save it in the client system.

Mouse Menu

- **Show Client Cursor:** Click this button to show or hide the local mouse cursor on the remote client system.
- **Mouse Mode:** This option handles mouse emulation from local window to remote screen using below methods. Only **Administrator** has the privilege to configure this option.
 - **Absolute Mouse Mode:** The absolute position of the local mouse is sent to the server if this option is selected.
 - **Relative Mouse Mode:** The Relative mode sends the calculated relative mouse position displacement to the server if this option is selected.
 - **Other Mouse Mode:** This mouse mode sets the client cursor in the middle of the client system and will send the deviation to the host. This mouse mode is specific for SUSE Linux installation.

Option Menu

- **Zone**
 - **Normal:** Click this button to set the screen size to default size.
 - **Zoom In:** Click this button to increasing the screen size. This zoom varies from 100% to 150% with an interval of 10%.
 - **Zoom Out:** Click this button to decreasing the screen size. This zoom varies from 100% to 50% with an interval of 10%.
- **Block Privilege Request:** To enable or disable the access privilege for the user.
 - **Partial Permission**
 - **No Permission**
- **Band Width:** Select the band width for the Console Redirection window
 - **Auto Detect**
 - **256Kbps**
 - **512Kbps**

- **1Mbps**
- **10Mbps**
- **100Mbps**
- **Compression Mode:** This option helps to compress the video data transfer to the specific mode.
 - **YUV 420**
 - **YUV 444**
 - **YUV 444 + 2 color VQ**
 - **YUV 444 + 4 color VQ**
- **DTC Quantization Table:** This option helps to select the video quality.
 - **0 Best Quality**
 - **1**
 - **2**
 - **3**
 - **4**
 - **5**
 - **6**

Keyboard Menu

- **Keyboard Layout:** This feature is fully compatible when host and client has the same keyboard language layout. If the client and host language layouts differ, some special characters will not be compatible.
 - **English U.S**
 - **German**
 - **Japanese**
- **Virtual Keyboard:** Click this button to open a virtual keyboard on the Console Redirection window.

Send Keys Menu

- **Hold Down**
 - **Right Ctrl Key:** Click this button to act as hold down the right-side <CTRL> key when in Console Redirection.
 - **Right Alt Key:** Click this button to act as hold down the right-side <ALT> key when in Console Redirection.
 - **Right Windows Key:** Click this button to act as hold down the right-side <WIN> key when in Console Redirection.
 - **Left Ctrl Key:** Click this button to act as hold down the left-side

- **<CTRL> key** when in Console Redirection.
 - **Left Alt Key:** Click this button to act as hold down the left-side <ALT> key when in Console Redirection.
 - **Left Windows Key:** Click this button to act as hold down the left-side <WIN> key when in Console Redirection.
- **Press and Release**
 - **Ctrl+Alt+Del:** Click this button to act as single hit the <CTRL>, <ALT> and keys down simultaneously on the host that user is redirecting.
 - **Left Windows Key:** Click this button to act as single hit the left-side <WIN> key when in Console Redirection.
 - **Right Windows Key:** Click this button to act as single hit the right-side <WIN> key when in Console Redirection.
 - **Context Menu Key:** Click this button to act as single hit the context menu key when in Console Redirection.
 - **Print Screen Key:** Click this button to act as single hit the print screen key when in Console Redirection.

Hot Keys Menu

- **Add Hot Keys:** Click this button to open the **User Define Macros** window to add the hot key macro. The configured key events are saved in the BMC.

Video Record Menu

- **Record Video:** Click this button to start recording the screen.
- **Stop Recording:** Click this button to stop the recording.
- **Record Settings:** Click this button to open the Record Settings window to configure the settings.
 - **Video Length:** To specify the value for video length, range of 1 to 1800 seconds.
 - **Video Compression:** To specify the value for video compression, range of 0.1 (low image quality) to 0.9 (high image quality).
 - **Normalized video resolution to 1024 X 768:** Enable this feature that host video will be scaled to 1024 x 768 in the recorded video file.
 - **OK:** Click this button to save the configured settings.
 - **Cancel:** Click this button to leave this window without save the

settings.

Power Menu

- **Reset Server:** To reboot the system without powering off (warm boot).
- **Immediate Shutdown:** To perform Power OFF Immediately.
- **Orderly Shutdown:** To Power OFF the sever in proper order.
- **Power On Server:** To Power ON the server.
- **Power Cycle Server:** To first power off, and then reboot the system (cold boot).

Active Users Menu

- Click this option to display the active users and their system IP address.

Help Menu

- Click this option to get more information About H5Viewer. The KVM Remote Console utility version and plugin version will be displayed.

Quick Buttons

- : This quick button will show/hide notifications dropdown menu, which will contain the list of notifications displayed by H5Viewer.
- : This quick button indicates the current zoom value in percentage.
- : This quick button indicates the current host monitor status. If the icon is in green color then host monitor is unlocked. If the icon is in red color then host monitor is locked. Clicking the button to change the monitor status.
- : This quick button indicates the current server power status. If the icon is in green color, the server power status is powered on. If the icon is in red color, the server power status is powered off. Click this button to toggle immediate power off/power on the host.
- : Click this button to close current KVM session and Console Redirection window.

-  **CD Image:** **Browse File** (0 KB) : Click the Browse File button to select the image file, then remote mounting the image file to the host.
- ☐ **Media Boost**: Click the Media Boost button to boost up the image mount process.
-  : Click the Start Media button to start remote mount the image file.
-  : Click the Stop Media button to stop remote mount the image file.

Status Bar Buttons


-  : Num/Caps/Scroll lock buttons are LED status buttons that denotes the current status of Num/Caps/Scroll lock in the host.

2.9.2 JViewer

This is an OS independent plug-in which can be used in Windows as well as Linux with the help of JRE. JRE should be installed in the client's system.

To download the J5ViewerI executable file, click the **Remote Control -> Launch JViewer** button from the menu bar.

Figure 103. Snapshot of JViewer KVM Application

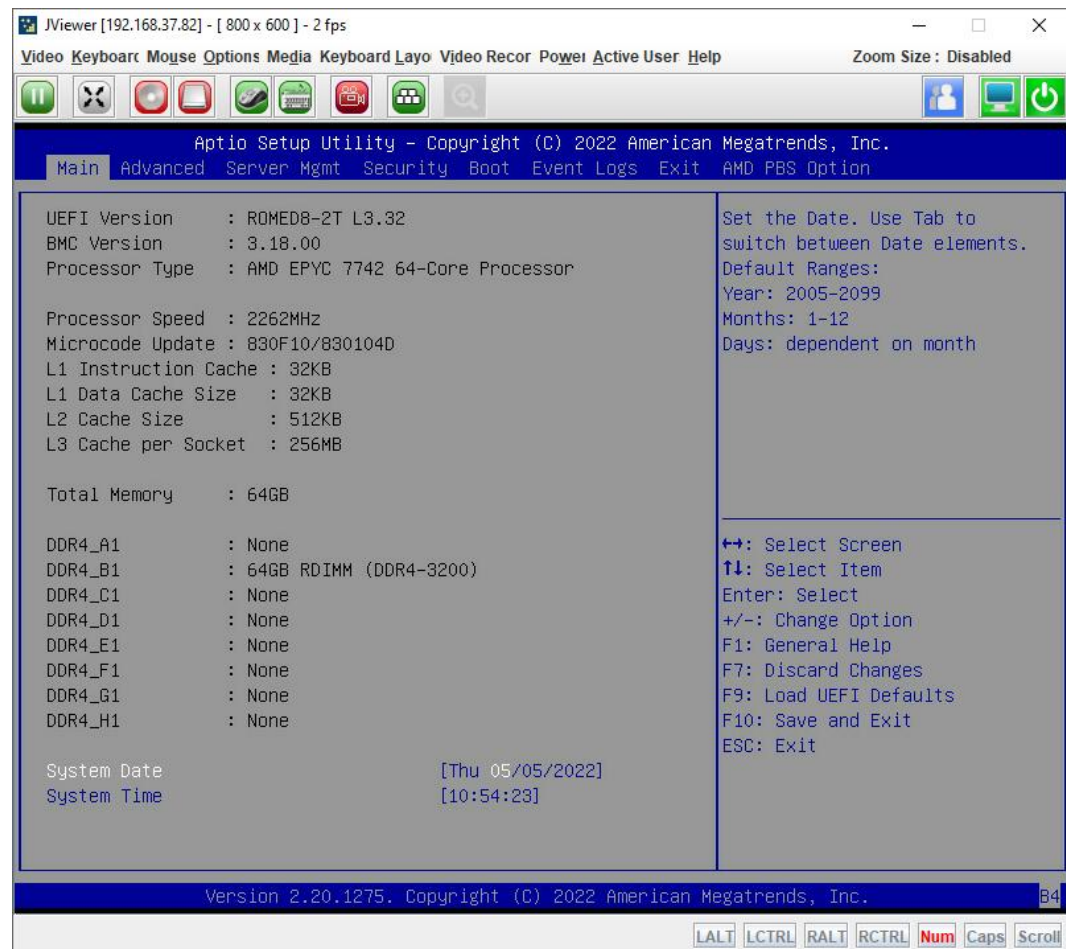

The fields on the JViewer KVM application include

Video Menu

- **Pause Redirection:** Click this button to pausing the Console Redirection.
- **Resume Redirection:** Click this button to resume the Console Redirection when the session is paused.
- **Refresh Video:** Click this button to update the display shown in the

Console Redirection window.

- **Turn ON Host Display:** Click this button to enable this feature. The host display will be turn on if this feature is enabled.
- **Turn OFF Host Display:** Click this button to enable this feature. The host display will be blank if this feature is enabled, but users can view the host screen in the Console Redirection window.
- **Capture Screen:** Click this button to take a screenshot of the host screen and save it in the client system.
- **Full Screen:** Click this button to view the Console Redirection in full screen mode (Maximize).
- **Compression Mode:** This option helps to compress the video data transfer to the specific mode.
 - **YUV 420**
 - **YUV 444**
 - **YUV 444 + 2 color VQ**
 - **YUV 444 + 4 color VQ**
- **DTC Quantization Table:** This option helps to select the video quality.
 - **0 Best Quality**
 - **1**
 - **2**
 - **3**
 - **4**
 - **5**
 - **6**
 - **7 Worst Quality**
- **Exit:** Click this button to exit the Console Redirection screen.

Keyboard Menu

- **Hold Right Ctrl Key:** Click this button to act as hold down the right-side <CTRL> key when in Console Redirection.
- **Hold Right Alt Key:** Click this button to act as hold down the right-side <ALT> key when in Console Redirection.
- **Hold Left Ctrl Key:** Click this button to act as hold down the left-side <CTRL> key when in Console Redirection.
- **Hold Left Alt Key:** Click this button to act as hold down the left-side <ALT> key when in Console Redirection.

- **Left Windows Key:** Click this button to act as the left-side <WIN> key when in Console Redirection. User can also decide how the key should be pressed: **Hold Down** or **Press and Release**.
 - **Hold Down**
 - **Press and Release**
- **Right Windows Key:** Click this button to act as the right-side <WIN> key when in Console Redirection. User can also decide how the key should be pressed: **Hold Down** or **Press and Release**.
 - **Hold Down**
 - **Press and Release**
- **Ctrl+Alt+Del:** Click this button to act as single hit the <CTRL>, <ALT> and keys down simultaneously on the host that user is redirecting.
- **Context Menu Key:** Click this button to act as single hit the context menu key when in Console Redirection.
- **Hot Key**
 - **Add Hot Keys:** Click this button to open the **User Define Macros** window to add the hot key macro. The configured key events are saved in the BMC.
- **Full Keyboard Support:** Enable this option to provide full keyboard support. This option is used to trigger the Ctrl and Alt key directly to host from the physical keyboard.

Mouse Menu

- **Show Cursor:** Click this button to show or hide the local mouse cursor on the remote client system.
- **Mouse Calibration:** This option can be used only if the mouse mode is relative.
- **Mouse Mode:** This option handles mouse emulation from local window to remote screen using below methods. Only **Administrator** has the privilege to configure this option.
 - **Absolute Mouse Mode:** The absolute position of the local mouse is sent to the server if this option is selected.
 - **Relative Mouse Mode:** The Relative mode sends the calculated relative mouse position displacement to the server if this option is selected.

- **Other Mouse Mode:** This mouse mode sets the client cursor in the middle of the client system and will send the deviation to the host. This mouse mode is specific for SUSE Linux installation.


Option Menu

- **Band Width:** Select the band width for the Console Redirection window
 - **Auto Detect**
 - **256Kbps**
 - **512Kbps**
 - **1Mbps**
 - **10Mbps**
 - **100Mbps**
- **Zone**
 - **Zoom In:** Click this button to increasing the screen size. This zoom varies from 100% to 150% with an interval of 10%.
 - **Zoom Out:** Click this button to decreasing the screen size. This zoom varies from 100% to 50% with an interval of 10%.
 - **Actual Size:** Click this button to set the screen size to default size.
 - **Fit to Client Resolution:** If the host screen resolution is greater than the client screen resolution, choose this option to fit the host screen to client screen.
 - **Fit to Host Resolution:** If the host screen resolution is lesser than the client screen resolution, choose this option to resize the JViewer frame to the host resolution.
- **Send IPMI Command:** Click this button to opens the IPMI Command Dialog window, users can enter the raw IPMI command in Hexadecimal field as hexadecimal value and click **Send**. The response will be displayed on the IPMI Command Dialog window.
- **GUI Language:** To select the desired GUI language.
 - **cn - [CN]**
 - **English – [EN]**
 - **français – [FR]**
- **Block Privilege Request:** To enable or disable the access privilege for the user.
 - **Allow Only Video**
 - **Deny Access**

Media Menu

- **Virtual Media Wizard...:** Click this button to open the Virtual Media window.

Figure 104. Snapshot of Virtual Media Application

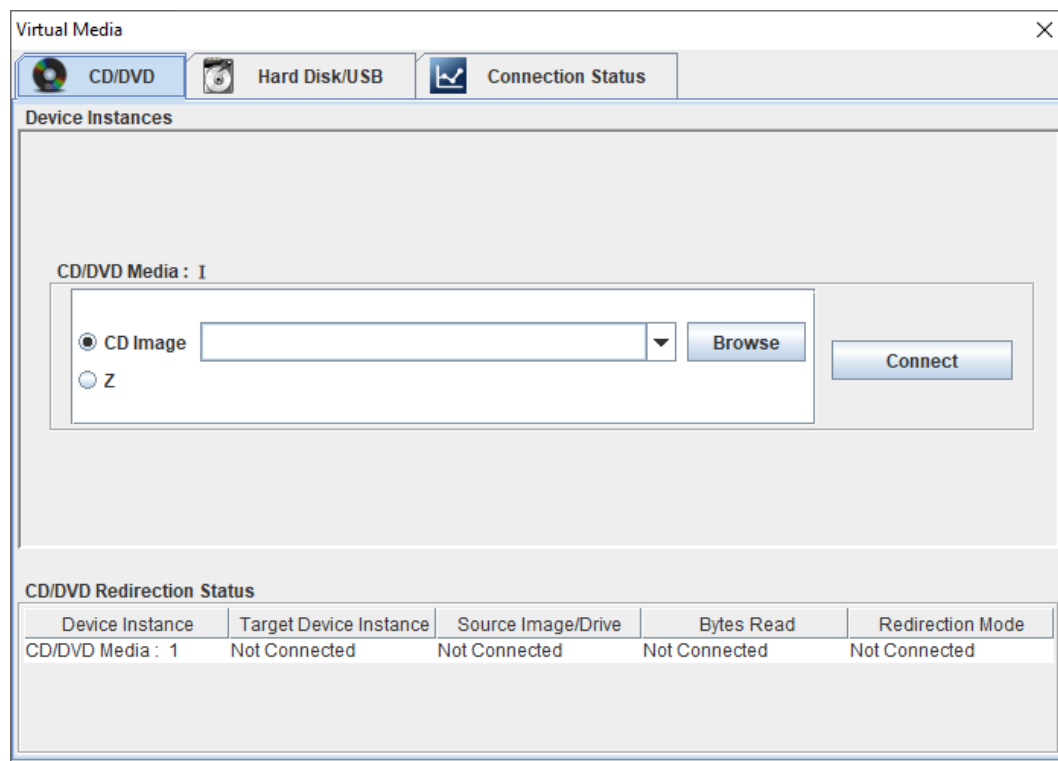

The virtual media application will allow users to redirect different media to the host system. The application supports CD/DVD, Hard Disk/USB devices as well as image files.

Keyboard Layout Menu

- **Auto Detect:** This option is used to detect keyboard layout automatically.
- **Physical Keyboard**
 - **Host Platform:** This feature contains two options Windows and Linux.
 - **List of Host Physical Keyboard languages supported:**
 - ◆ English –US
 - ◆ English – UK
 - ◆ French
 - ◆ French (Belgium)


- ◆ German (Germany)
 - ◆ German (Switzerland)
 - ◆ Japanese
 - ◆ Spanish
 - ◆ Italian
 - ◆ Danish
 - ◆ Finnish
 - ◆ Norwegian (Norway)
 - ◆ Portuguese (Portugal)
 - ◆ Swedish
 - ◆ Dutch (Netherland)
 - ◆ Dutch (Belgium)
 - ◆ Turkish – F
 - ◆ Turkish – Q
- **SoftKeyboard:** This option allows user to select the keyboard layout. It will show the dialog as similar to Windows On-screen keyboard. If the client and host languages are different, user can select the soft keyboard that corresponds to the host keyboard layout from the list shown in JViewer, and use it to avoid typo errors.
 - **List of Soft Physical Keyboard languages supported:**
 - ◆ English –US
 - ◆ English – UK
 - ◆ Spanish
 - ◆ French
 - ◆ German (Germany)
 - ◆ Italian
 - ◆ Danish
 - ◆ Finnish
 - ◆ German (Switzerland)
 - ◆ Norwegian (Norway)
 - ◆ Portuguese (Portugal)
 - ◆ Swedish
 - ◆ Hebrew
 - ◆ French (Belgium)
 - ◆ Dutch (Netherland)
 - ◆ Dutch (Belgium)

- ◆ Russian (Russia)
- ◆ Japanese (QWERTY)
- ◆ Japanese (Hiragana)
- ◆ Japanese (Katakana)
- ◆ Turkish – F
- ◆ Turkish – Q

Video Record Menu

- **Start Record:** Click this button to start recording the screen.
- **Stop Record:** Click this button to stop the recording.
- **Record Settings:** Click this button to open the Record Settings window to configure the settings.

Figure 105. Snapshot of Video Record Window

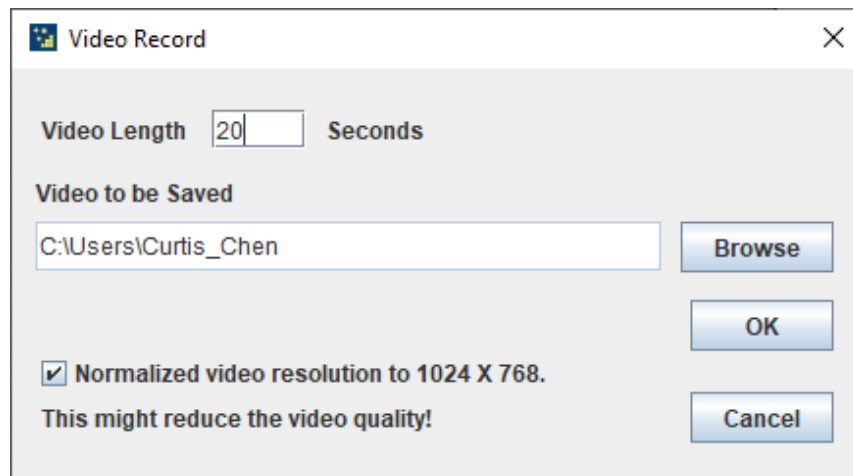

- **Video Length:** To specify the value for video length.
- **Video to be Saved:** To specify the location where to save the video file.
- **Normalized video resolution to 1024 X 768:** Enable this feature that host video will be scaled to 1024 x 768 in the recorded video file.
- **OK:** Click this button to save the configured settings.
- **Cancel:** Click this button to leave this window without save the settings.

Power Menu

- **Reset Server:** To reboot the system without powering off (warm boot).
- **Immediate Shutdown:** To perform Power OFF Immediately.

- **Orderly Shutdown:** To Power OFF the sever in proper order.
- **Power On Server:** To Power ON the server.
- **Power Cycle Server:** To first power off, and then reboot the system (cold boot).

Active Users Menu

- Click this option to display the active users and their system IP address.

Help Menu

- Click this option to get more information About JViewer. The KVM Remote Console utility version and plugin version will be displayed.

Quick Buttons

- : This quick button is used to play the Console Redirection after being pause.
- : This quick button is used to pausing the Console Redirection.
- : This quick button is used to view the Console Redirection in full screen mode.
- : This quick button is used to open the CD/DVD window of Virtual Media application.
- : This quick button is used to open the Hard Disk/USB window of Virtual Media application.
- : This quick button is used to show or hide the mouse cursor on the remote client system.
- : This quick button is used to open a soft keyboard on the Console Redirection window.
- : This quick button is used to start video record.
- : This quick button is used to displays the available hotkeys.

- : This quick button indicates the active users.
-  : This quick button indicates the current host monitor status. If the icon is in green color then host monitor is unlocked. If the icon is in red color then host monitor is locked. Clicking the button to change the monitor status.
-  : This quick button indicates the current server power status. If the icon is in green color, the server power status is powered on. If the icon is in red color, the server power status is powered off. Click this button to toggle immediate power off/power on the host.

Status Bar Buttons


-       : Num/Caps/Scroll lock buttons are LED status buttons that denotes the current status of Num/Caps/Scroll lock in the host.

2.10 Image Redirection

Image Redirection page provides the functional feature tab for user to configure the image into BMC for redirection.

To view the Image Redirection page, click the **Image Redirection** tab from the menu bar.

Figure 106. Snapshot of Image Redirection Page

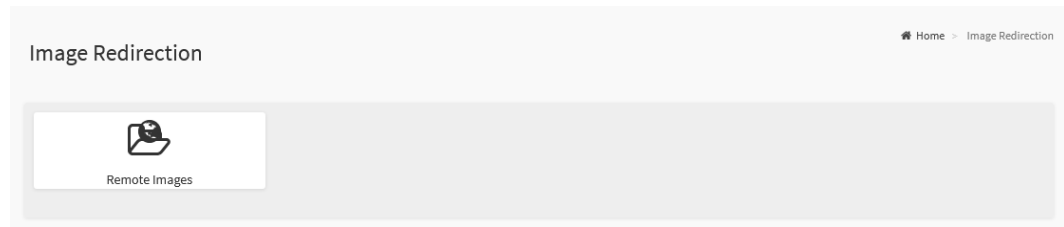

The details about each feature are listed in the following.

2.10.1 Remote Images

Remote Images page provides various options for users to view the configured images on BMC.

To view the Remote Images page, click the **Image Redirection** -> **Remote Images** tab from the menu bar.

Figure 107. Snapshot of Remote Images Page

Media Type	Media Instance	Image Name	Redirection Status	Connected Server Session Index	
CD/DVD	0	AlmaLinux-8.5-x86_64-dvd.iso	Started with media boost	0	
CD/DVD	1	en-us_windows_10_business_editions_version_21h1_updated_october_2021_x64_dvd_e5d42d80.iso	Started	1	
CD/DVD	2		~	N/A	
CD/DVD	3		~	N/A	

The fields on the Remote Images page include

- **Media Type:** The type Media devices supported for Active Redirections.
- **Media Instance:** The number of Media devices supported for Active Redirections.
- **Image Name:** The name of Media devices supported image for Active Redirections.
- **Redirection Status:** The status Media for Active Redirections.
- **Connected Server Session Index:** Indicates the number of connected server session index.
- **Play:** Click **Play** () button to redirect the selected image.
- **Stop:** Click **Stop** () button to stop the remote image redirection.
- **Clear:** Click **Clear** () button to clear the selected image from the BMC.
- **Refresh Image List:** Click **Refresh Image List** () to get the latest list of Images from the Remote storage server.


- **Sync Image Status:** Click **Sync Image Status** () to Turn on/off the redirection status of Images from the BMC.

2.11 Power Control

Power Control page provides various options for users to view and configure the power state of host.

To view the Power Control page, click the **Power Control** tab from the menu bar.

Figure 108. Snapshot of Power Control Page

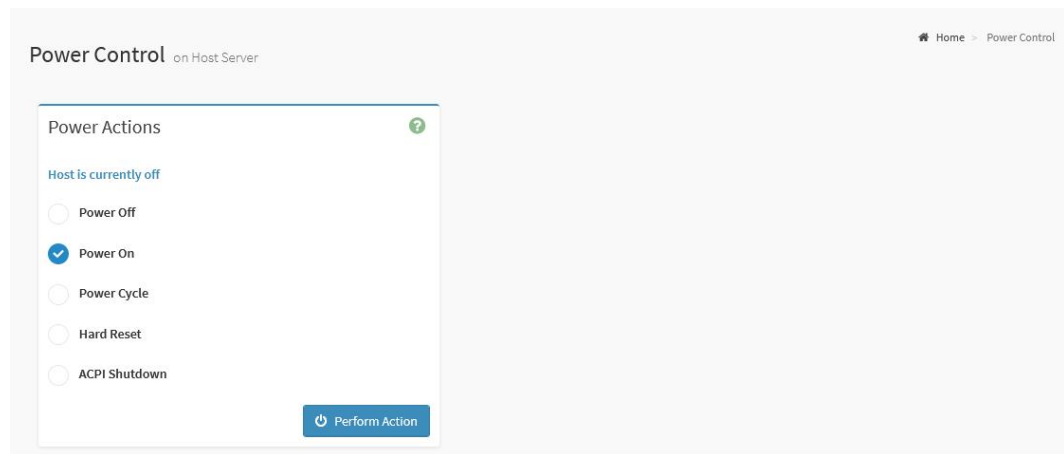

The fields on the Power Control page include

- **Power Off:** To immediately power off the host.
- **Power On:** To power on the host.
- **Power Cycle:** To select this option, the host will first power off, and then reboot the host (cold boot).
- **Hard Reset:** To reboot the host without powering off (warm boot).
- **ACPI Shutdown:** To initiate operating system shutdown prior to the shutdown.
- **Perform Action:** To executing the selected power policy.


2.12 Miscellaneous

Miscellaneous page provides various functional feature tabs for users to configure and monitor the server, including

- **UID Control**
- **Post Snoop**

To view the Miscellaneous page, click the **Miscellaneous** tab from the menu bar.

Figure 109. Snapshot of Miscellaneous Page

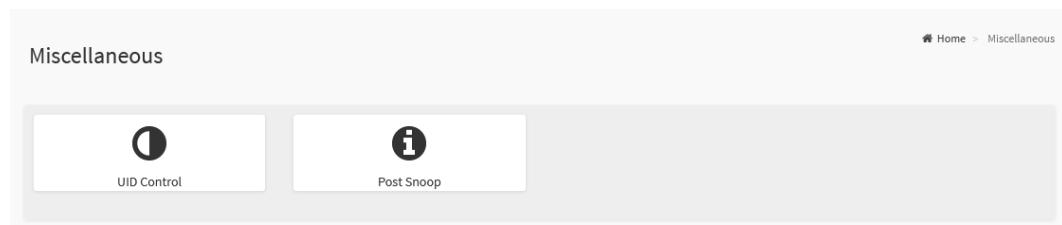


The details about each feature are listed in the following.

2.12.1 UID Control

UID Control page provides various options for users to configure UID LED, which is used to identify the host location.

To view the UID Control page, click the **Miscellaneous** -> **UID Control** tab from the menu bar.

Figure 110. Snapshot of UID Control Page

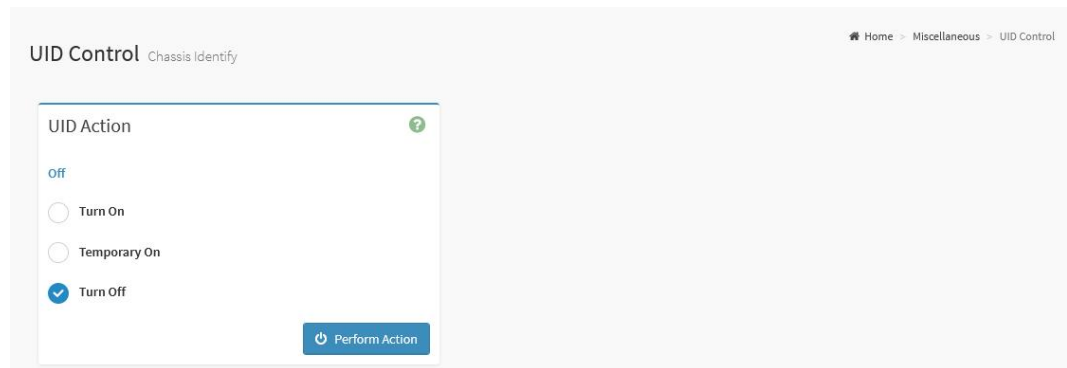

The fields on the UID Control page include


- **UID Action**
 - **Status:** Indicates current UID status.
- **Turn On:** To turn on UID LED.
- **Temporary On:** To temporary turn on UID LED (15 sec blink).
- **Turn Off:** To turn off UID LED.
- **Perform Action:** Click **Perform Action** button to executing selected UID action.

2.12.2 Post Snoop

Post Snoop page provides the feature for users to view the latest BIOS POST code which snooped by BMC.

To view the Post Snoop page, click the **Miscellaneous** -> **Post Snoop** tab from the menu bar.

Figure 111. Snapshot of Post Snoop Page

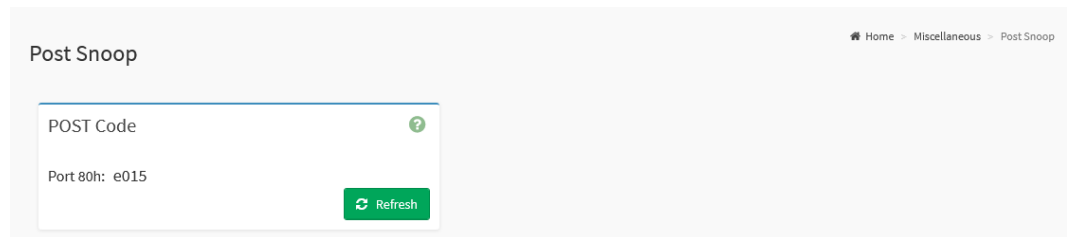

The fields on the Post Snoop page include

- **Port 80h:** Indicates the latest BIOS POST code.
- **Refresh:** Click Refresh button to updates the latest BIOS POST code.


2.13 Maintenance

Maintenance page provides various functional feature for users to do maintenance task on the device, including

- **Backup Configuration**
- **Firmware Image Location**
- **Firmware Update**
- **BIOS Update**
- **PSU Update**
- **FPGA Update**
- **Re-timer Update**
- **Backplane Update**
- **CPLD Update**
- **Preserve Configuration**
- **Restore Configuration**
- **Restore Factory Defaults**
- **Reset**

To view the Maintenance page, click the **Maintenance** tab from the menu bar.

Figure 112. Snapshot of Maintenance Page

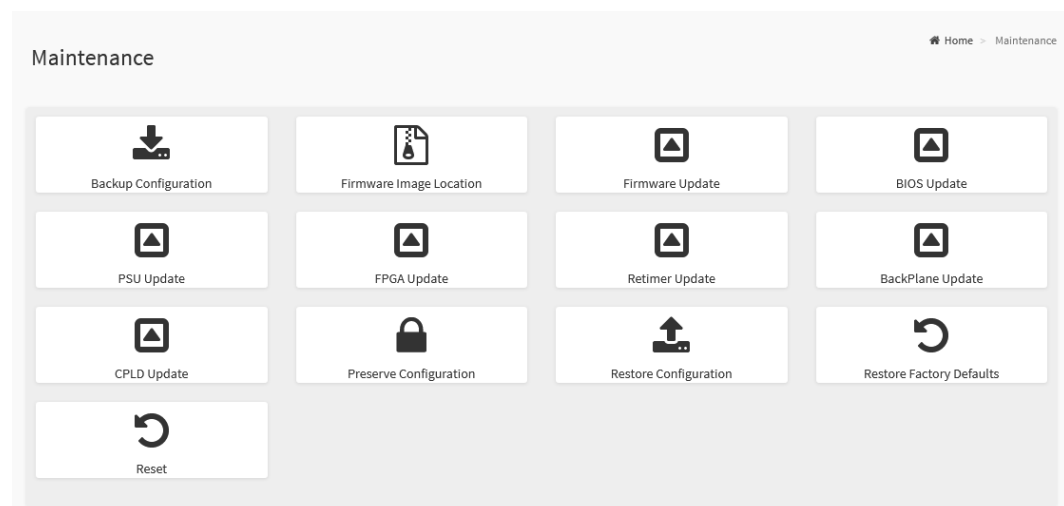


The details about each feature are listed in the following.

2.13.1 Backup Configuration

Backup Configuration page provides various options for users to select the specific configuration items to be backup in case of **Backup Configuration**.

To view the Backup Configuration page, click the **Maintenance** -> **Backup Configuration** tab from the menu bar.

Figure 113. Snapshot of Backup Configuration Page

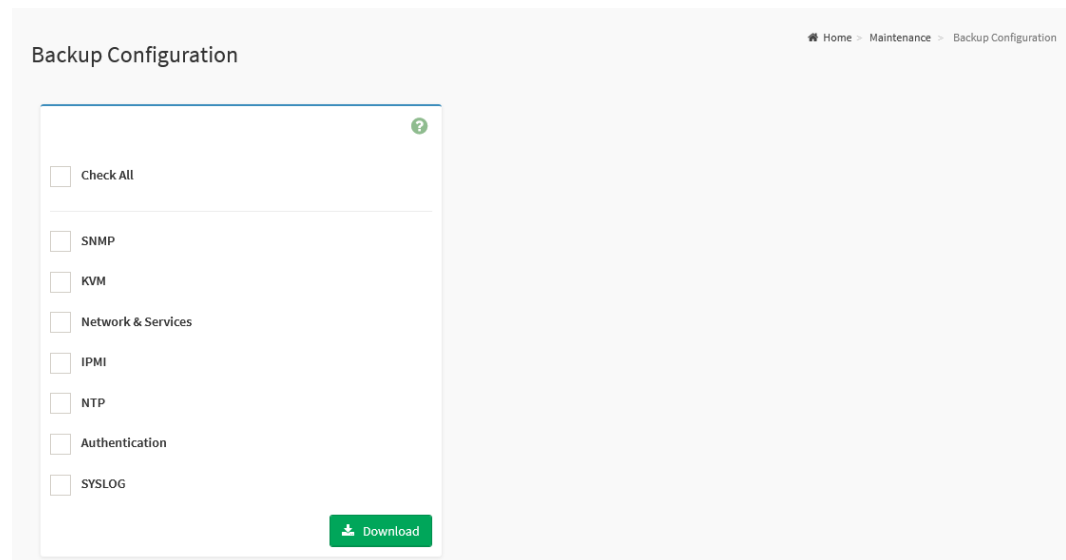

The fields on the Backup Configuration page include


- **Check All:** Click this option to select all configuration items listed on the page.
- **SNMP:** Click this option to be backup SNMP settings.
- **KVM:** Click this option to be backup KVM settings.
- **Network & Services:** Click this option to be backup Network & Services settings.
- **IPMI:** Click this option to be backup IPMI settings.
- **NTP:** Click this option to be backup NTP settings.
- **Authentication:** Click this option to be backup Authentication settings.
- **SYSLOG:** Click this option to be backup SYSLOG file.
- **Download:** Click **Download** button to download the selected item backup file.

2.13.2 Firmware Image Location

Firmware Image Location page provides various options for users to configure the image transfer protocol for transfer the firmware image onto BMC.

To view the Firmware Image Location page, click the **Maintenance** -> **Firmware Image Location** tab from the menu bar.

Figure 114. Snapshot of Firmware Image Location Page

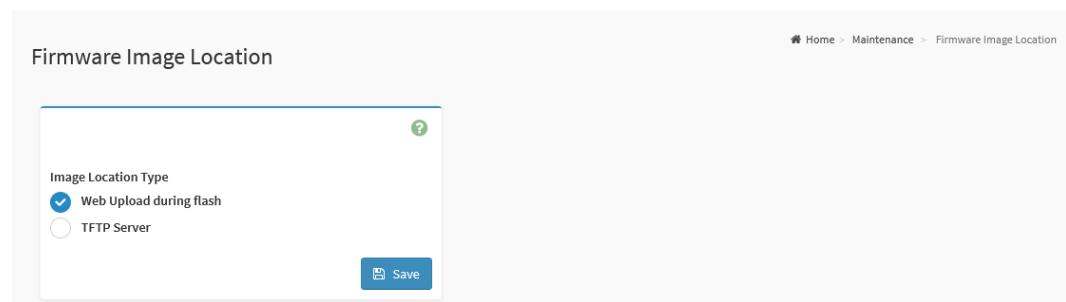

The fields on the Firmware Image Location page include


- **Image Location Type:** To select the type of transfer the firmware image into the BMC either **Web Upload during flash** or **TFTP Server**.
 - **Web Upload during flash:** Transfer firmware image through web service.
 - **TFTP Server:** Transfer firmware image through TFTP protocol.
 - ◆ **TFTP Server Address:** To specify the address of TFTP server where the firmware image stored.
 - ◆ **TFTP Image Name:** To specify the firmware image file name.
 - ◆ **TFTP Retry Count:** To specify the number of times to be retried in case a transfer failure occurs.
- **Save:** To save the configured settings.

2.13.3 Firmware Update

Firmware Update page provides the option for users to update the BMC firmware through BMC web service.

To view the Firmware Update page, click the **Maintenance** -> **Firmware Update** tab from the menu bar.

Figure 115. Snapshot of Firmware Update Page

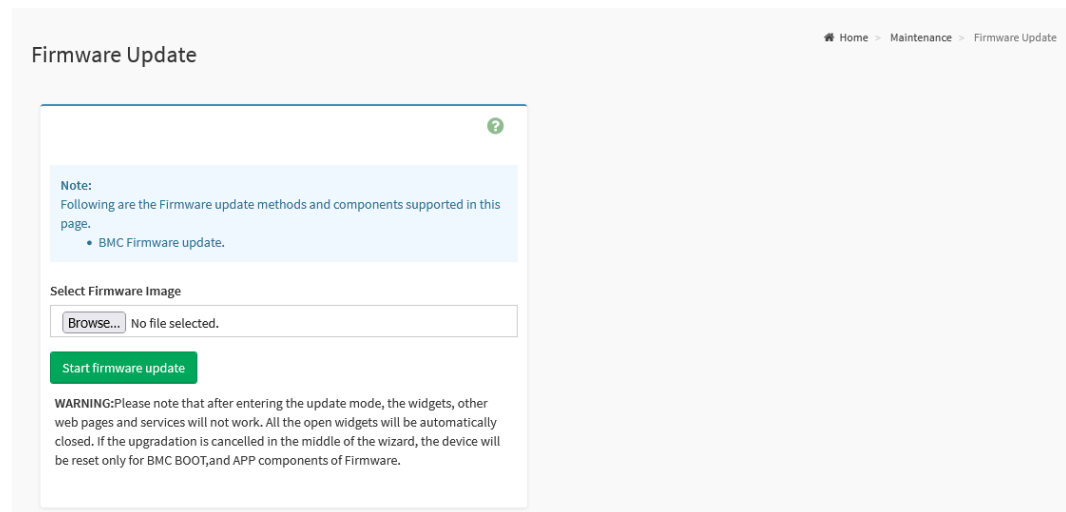

The fields on the Firmware Update page include

- **Select Firmware Image:** Click the Browse button to open file upload window, then select the to be updated BMC firmware image file.
- **Start Firmware Update:** Click the Start Firmware Update button to start the firmware update process.

2.13.4 BIOS Update

BIOS Update page provide the option for users to update host BIOS through BMC web service.

To view the BIOS Update page, click the **Maintenance** -> **BIOS Update** tab from the menu bar.

Figure 116. Snapshot of BIOS Update Page

BIOS Update

Home > Maintenance > BIOS Update

Upgrade BIOS of the host.
Please select BIOS image and press 'Start BIOS update' to start the BIOS update procedure.

Configuration

☐ Preserve BIOS configuration

Option

☐ Flash BIOS after manually shutdown server

☐ Immediately flash BIOS without power action

☒ Immediately shutdown server to flash BIOS

Select BIOS Image

No file selected.

The fields on the BIOS Update page include

- **Configuration**
 - **Preserve BIOS configuration:** Click this option to preserve current BIOS configuration settings.
- **Option**
 - **Flash BIOS after manually shutdown server:** Select this option to waiting for manually shutdown server to flash BIOS firmware image.
 - **Immediately flash BIOS without power action:** Select this option to flash BIOS firmware image immediately.


- **Immediately shutdown server to flash BIOS:** Select this option to shutdown server immediately to flash BIOS firmware image.
- **Select BIOS Image:** Click the **Browse** button to open file upload window, then select the to be updated BIOS firmware image file.
- **Start BIOS Update:** Click **Start BIOS Update** button to start the BIOS update process.

2.13.5 PSU Update

PSU Update page provides the option for users to update the PSU firmware through BMC web service.

To view the PSU Update page, click the **Maintenance** -> **PSU Update** tab from the menu bar.

Figure 117. Snapshot of PSU Update Page

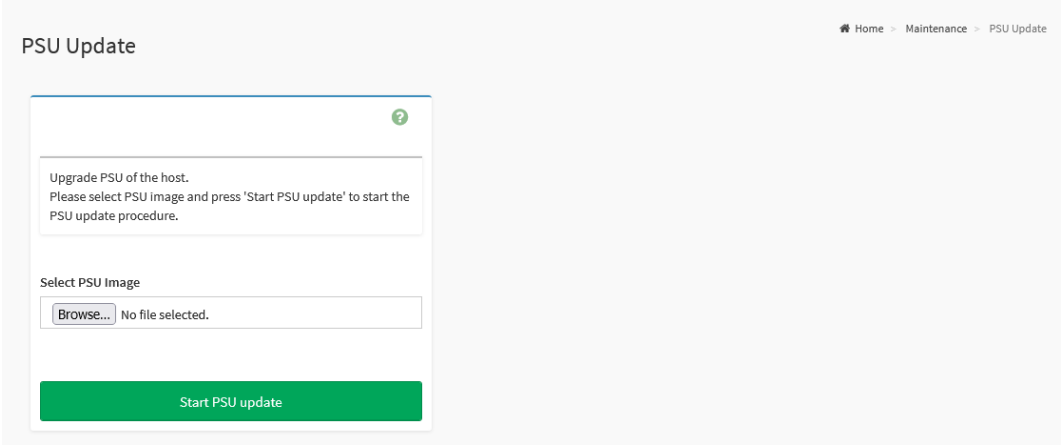

The screenshot shows the 'PSU Update' page. At the top right, there is a breadcrumb trail: Home > Maintenance > PSU Update. The main heading is 'PSU Update'. Below this, there is a green question mark icon. A text box contains the instructions: 'Upgrade PSU of the host. Please select PSU image and press 'Start PSU update' to start the PSU update procedure.' Below the text box, there is a section titled 'Select PSU Image'. It contains a 'Browse...' button and the text 'No file selected.' At the bottom of the form, there is a large green button labeled 'Start PSU update'.

The fields on the PSU Update page include


- **Select PSU Image:** Click the **Browse** button to open file upload window, then select the to be updated PSU firmware image file.
- **Start PSU Update:** Click the **Start PSU Update** button to start the PSU firmware update process.

2.13.6 FPGA Update

FPGA Update page provides the option for users to update the FPGA firmware through BMC web service.

To view the FPGA Update page, click the **Maintenance** -> **FPGA Update** tab from the menu bar.

Figure 118. Snapshot of FPGA Update Page

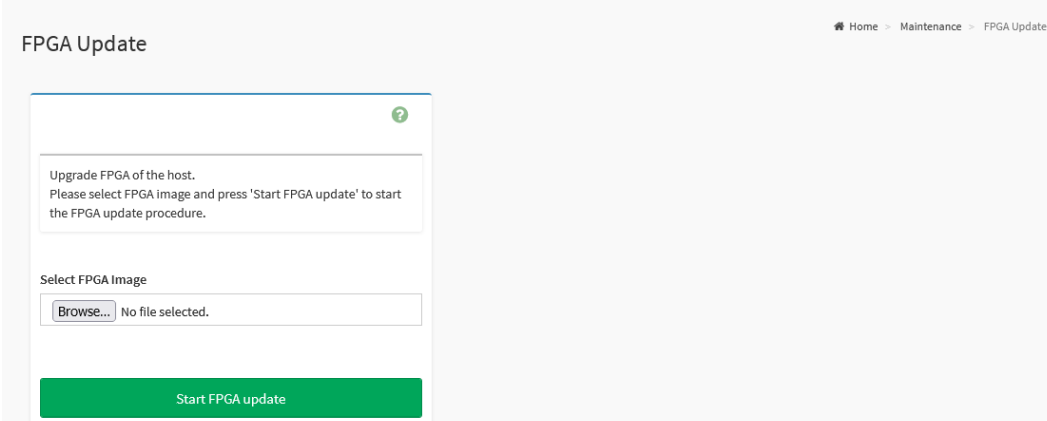

The screenshot shows the 'FPGA Update' page. At the top right is a breadcrumb trail: Home > Maintenance > FPGA Update. The main content area has a title 'FPGA Update' and a green help icon. Below this is a box with instructions: 'Upgrade FPGA of the host. Please select FPGA image and press 'Start FPGA update' to start the FPGA update procedure.' Underneath is a section 'Select FPGA Image' with a 'Browse...' button and the text 'No file selected.' At the bottom is a large green button labeled 'Start FPGA update'.

The fields on the FPGA Update page include


- **Select FPGA Image:** Click the **Browse** button to open file upload window, then select the to be updated FPGA firmware image file.
- **Start FPGA Update:** Click the **Start FPGA Update** button to start the FPGA firmware update process.

2.13.7 Retimer Update

Retimer Update page provides the option for users to update the Retimer firmware through BMC web service.

To view the Retimer Update page, click the **Maintenance** -> **Retimer Update** tab from the menu bar.

Figure 119. Snapshot of Retimer Update Page

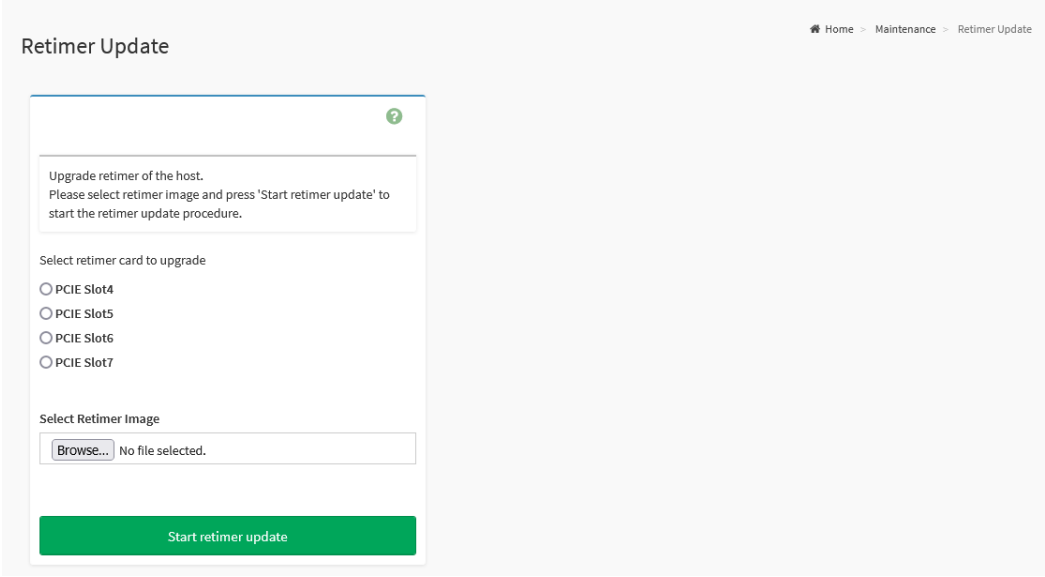

The screenshot shows the 'Retimer Update' page. At the top right, there is a breadcrumb navigation: Home > Maintenance > Retimer Update. The main content area has a title 'Retimer Update' and a green question mark icon. Below this, a text box instructs the user: 'Upgrade retimer of the host. Please select retimer image and press 'Start retimer update' to start the retimer update procedure.' Underneath, there is a section 'Select retimer card to upgrade' with four radio button options: 'PCIE Slot4', 'PCIE Slot5', 'PCIE Slot6', and 'PCIE Slot7'. Below that is a section 'Select Retimer Image' with a 'Browse...' button and the text 'No file selected.'. At the bottom of the form is a large green button labeled 'Start retimer update'.

The fields on the Retimer Update page include

- **Select retimer card to upgrade:** To select the to be updated re-timer device to flashing the firmware image.
- **Select Retimer Image:** Click the **Browse** button to open file upload window, then select the to be updated re-timer firmware image file.
- **Start Retimer Update:** Click the **Start Retimer Update** button to start the retimer firmware update process.

2.13.8 Backplane Update

Backplane Update page provides the option for users to update the Backplane firmware through BMC web service.

To view the Backplane Update page, click the **Maintenance** -> **Backplane Update** tab from the menu bar.

Figure 120. Snapshot of Backplane Update Page

BackPlane Update

Home > Maintenance > BackPlane Update

Upgrade backplane of the host.
Please select backplane image and press 'Start backplane update' to start the backplane update procedure.

Select firmware type to upgrade Select interface to upgrade

☐ Expander
☐ MCU

Select BackPlane Image

No file selected.

The fields on the Backplane Update page include


- **Select firmware type to upgrade:** To select the device that located on the backplane from the list, which to be updated firmware image.
- **Select Backplane Image:** Click the **Browse** button to open file upload window, then select the to be updated backplane firmware image file.
- **Start Backplane Update:** Click the **Start Backplane Update** button to start the Backplane firmware update process.

2.13.9 CPLD Update

CPLD Update page provides the option for users to update the CPLD firmware through BMC web service.

To view the CPLD Update page, click the **Maintenance** -> **CPLD Update** tab from the menu bar.

Figure 121. Snapshot of CPLD Update Page

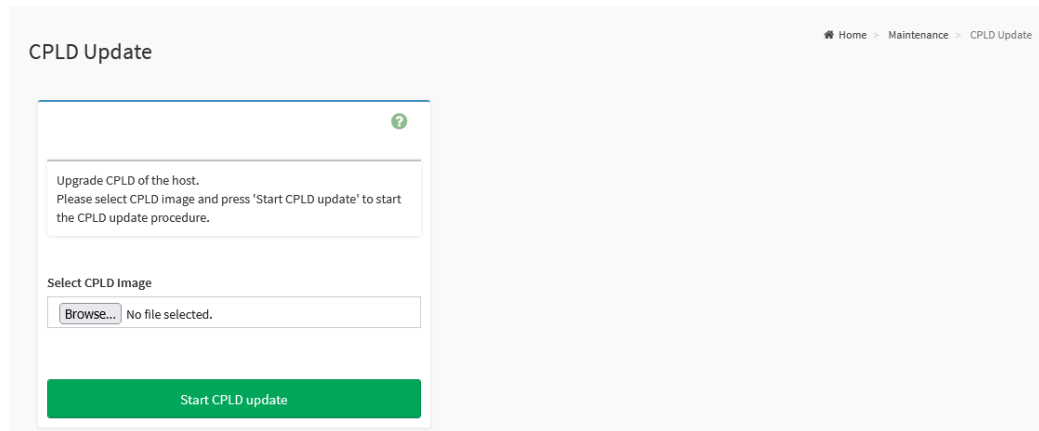

The screenshot shows a web page titled "CPLD Update". In the top right corner, there is a breadcrumb navigation path: "Home > Maintenance > CPLD Update". The main content area contains a white box with a green question mark icon in the top right corner. Inside this box, the text reads: "Upgrade CPLD of the host. Please select CPLD image and press 'Start CPLD update' to start the CPLD update procedure." Below this text, there is a section labeled "Select CPLD Image" which contains a "Browse..." button and the text "No file selected.". At the bottom of the white box is a large green button labeled "Start CPLD update".

The fields on the CPLD Update page include

- **Select CPLD Image:** Click the **Browse** button to open file upload window, then select the to be updated CPLD firmware image file.
- **Start CPLD Update:** Click the **Start CPLD Update** button to start the CPLD firmware update process.

2.13.10 Preserve Configuration

Preserve Configuration page provides various options for users to configure the to be preserved configuration settings while flashing BMC firmware image.

To view the Preserve Configuration page, click the **Maintenance** -> **Preserve Configuration** tab from the menu bar.

Figure 122. Snapshot of Preserve Configuration Page

Preserve Configuration

Home > Maintenance > Preserve Configuration

?

Click here to go to [Firmware Update](#) or [Restore Factory Defaults](#)

☐ Check All

☐ SDR

☐ SEL

☐ IPMI

☐ Network

☐ NTP

☐ SNMP

☐ SSH

☐ KVM

☐ Authentication

☐ Syslog

☐ Web

☐ Redfish

Save

The fields on the Preserve Configuration page include

- **Check All:** Click this option to select all configuration items listed on the page.
- **SDR:** Click this option to be preserve the SDR settings.
- **SEL:** Click this option to be preserve the SEL settings.
- **IPMI:** Click this option to be preserve the IPMI settings.
- **Network:** Click this option to be preserve the Network settings.
- **NTP:** Click this option to be preserve the NTP settings.
- **SNMP:** Click this option to be preserve the SNMP settings.


- **SSH:** Click this option to be preserve the SSH settings.
- **KVM:** Click this option to be preserve the KVM settings.
- **Authentication:** Click this option to be preserve the Authentication settings.
- **Syslog:** Click this option to be preserve the Syslog settings.
- **Web:** Click this option to be preserve the Web settings.
- **Redfish:** Click this option to be preserve the Redfish settings.
- **Save:** To save the configured settings.

2.13.11 Restore Configuration

Restore Configuration page provides the option for users to restoring configuration settings through BMC web service with the backup file. Users can generate the configuration backup file from the **Backup Configuration** page.

To view the Restore Configuration page, click the **Maintenance** -> **Restore Configuration** tab from the menu bar.

Figure 123. Snapshot of Restore Configuration Page

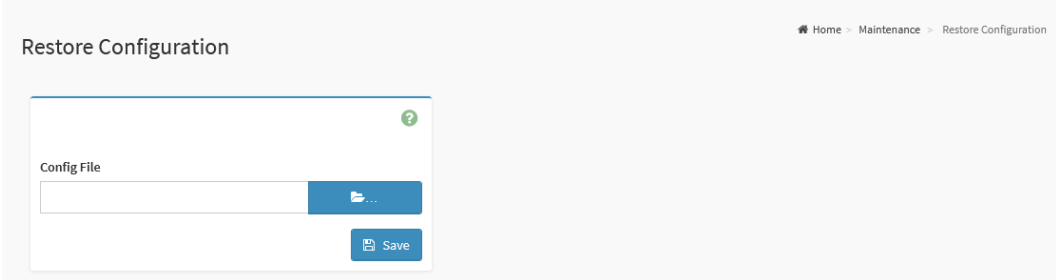

The fields on the Restore Configuration page include


- **Config File:** Click the **Browse** icon () to open file upload window, then select the to be updated backup config file.
- **Save:** Click the **Save** button to start the restore configuration process.

2.13.12 Restore Factory Defaults

Restore Factory Defaults page provides various options for users to configure the preserve configurations, which will be preserved during the process of restore BMC firmware settings to the factory defaults.

To view the Restore Factory Defaults page, click the **Maintenance** -> **Restore Factory Defaults** tab from the menu bar.

Figure 124. Snapshot of Restore Factory Defaults Page

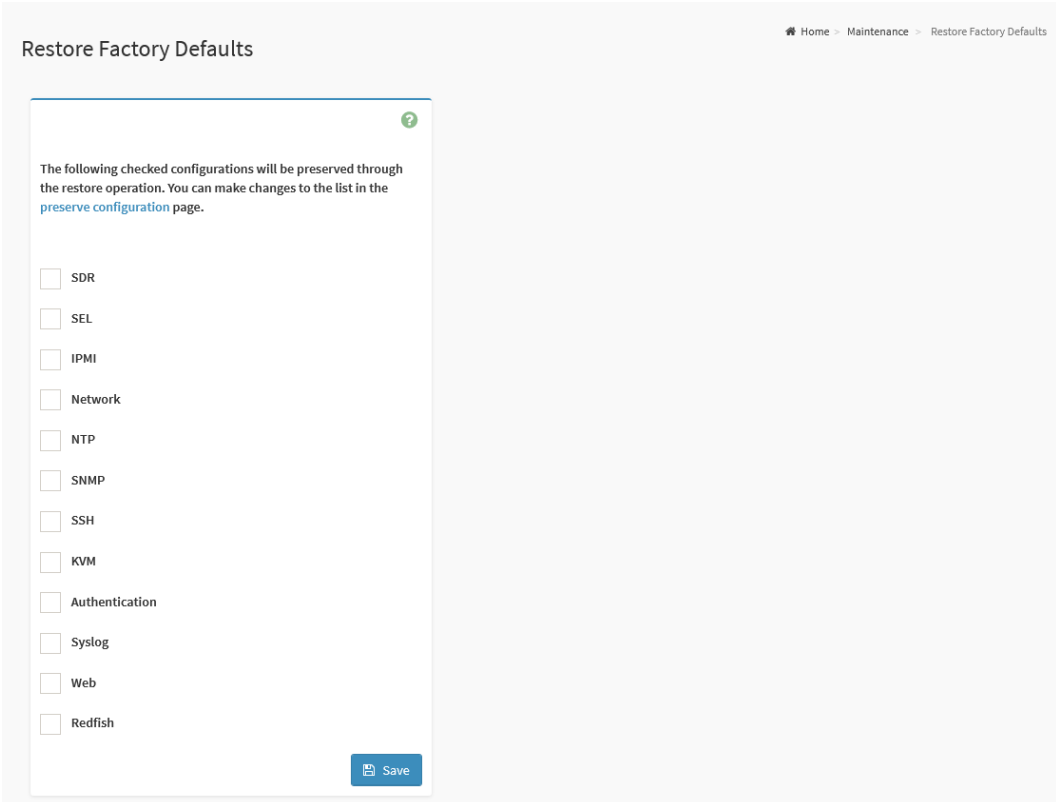

The screenshot shows the 'Restore Factory Defaults' page. At the top right, there is a breadcrumb trail: Home > Maintenance > Restore Factory Defaults. The main heading is 'Restore Factory Defaults'. Below this, a message states: 'The following checked configurations will be preserved through the restore operation. You can make changes to the list in the [preserve configuration](#) page.' Below the message is a list of configurations, each with an unchecked checkbox: SDR, SEL, IPMI, Network, NTP, SNMP, SSH, KVM, Authentication, Syslog, Web, and Redfish. At the bottom right of the list is a blue 'Save' button with a document icon.

The fields on the Restore Factory Defaults page include

- **SDR:** Click this option to preserve the SDR settings during restore factory defaults process.
- **SEL:** Click this option to preserve the SEL settings during restore factory defaults process.
- **IPMI:** Click this option to preserve the IPMI settings during restore factory defaults process.
- **Network:** Click this option to preserve the Network settings during

restore factory defaults process.


- **NTP:** Click this option to preserve the NTP settings during restore factory defaults process.
- **SNMP:** Click this option to preserve the SNMP settings during restore factory defaults process.
- **SSH:** Click this option to preserve the SSH settings during restore factory defaults process.
- **KVM:** Click this option to preserve the KVM settings during restore factory defaults process.
- **Authentication:** Click this option to preserve the Authentication settings during restore factory defaults process.
- **Syslog:** Click this option to preserve the Syslog settings during restore factory defaults process.
- **Web:** Click this option to preserve the Web settings during restore factory defaults process.
- **Redfish:** Click this option to preserve the Redfish settings during restore factory defaults process.
- **Save:** To perform the restore factory defaults process with configured settings.

2.13.13 Reset

Reset page provide the option for users to perform a BMC cold reset to reset the device.

To view the Reset page, click the **Maintenance** -> **Reset** tab from the menu bar.

Figure 125. Snapshot of Reset Page

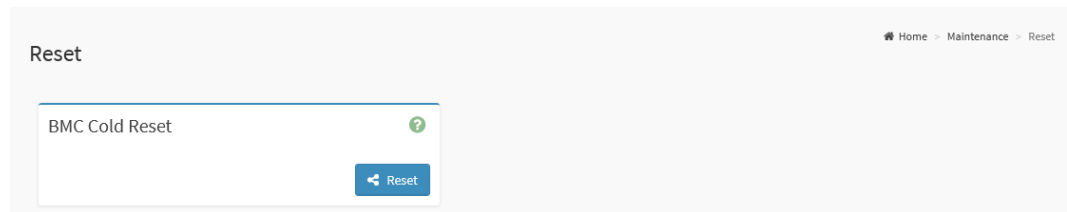

The fields on the Reset page include


- **Reset:** Click the **Reset** button to perform a BMC cold reset to reset the device.

2.14 Sign Out

To log out the BMC web service properly, click the **Sign out** button or tab is recommended.

To perform a sing out, click the **Sign out** tab from the menu bar or click the **Sign out** button from the current user window on the top right corner of the BMC WebUI screen.

Figure 126. Snapshot of Sign Out Button on the Current User Window

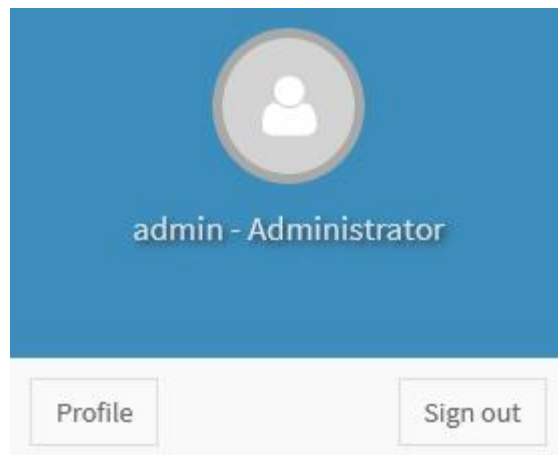

3.0 OEM IPMI Commands

This chapter provides the information of the OEM IPMI commands supported on BMC AST2500 controller of ASRock Rack mainboard

3.1 Supported OEM IPMI Commands

The Network Function (NetFN) of ASRock Rack OEM IPMI Commands is shown in the following:

- **NetFn: 0x3A**

The supported OEM IPMI Commands are listed in the following:

- **0x52 – Master Write Read**
- **0x67 – Get Boot Complete**
- **0x82 – Set Sensor Monitor**
- **0x83 – Get Sensor Monitor**

The details about each OEM IPMI command are listed in the following.

3.1.1 0x52 - Master Write Read

	Byte	Data Field
Request Data	1	I2C Bus
	2	Salve Address
	3	Read Count
	4:N	Data Write (Up to 50 Bytes)
Response Data	1	Completion Code
	2:N	Data Read

3.1.2 0x67 - Get Boot Complete

	Byte	Data Field
Request Data	-	-
Response Data	1	Completion Code
	2	BMC Boot State 00h = BMC is booting 01h = BMC boot completed

3.1.3 0x82 - Set Sensor Monitor

	Byte	Data Field
Request Data	1	Sensor Monitor Config 00h = Disable 01h = Enable
Response Data	1	Completion Code

3.1.4 0x83 - Get Sensor Monitor

	Byte	Data Field
Request Data	-	-
Response Data	1	Completion Code
	2	Sensor Monitor Config 00h = Disable 01h = Enable

4.0 LED Indicator

This chapter provides the description of LED indicator on the mainboard which controlled by BMC.

4.1 BMC Heartbeat LED

The BMC Heartbeat LED Indicator is used to indicate the BMC firmware running status. The status behaviors are list below:

Table 1. BMC Heartbeat LED Status

Color	Status	Description
Green	Solid Off	● System AC power off. ● BMC firmware not running.
	Solid On	● System AC power on. ● BMC firmware is initializing. ● BMC firmware is updating firmware image.
	Slow Blinking (~1Hz)	● BMC firmware is ready.
	Fast Blinking (~4Hz)	● BMC firmware is running in manufacturing (MFG) mode.

4.2 UID LED

The UID (Unit Identification) LED Indicator is used to locate the particular server system when it is deployed in the rack. It can help users to quickly identify a server system for maintenance.

Table 2. UID LED Status

Color	Status	Description
Blue	Solid Off	● Press the UID Button while UID LED is turn on. ● IPMI Chassis Identify command "Turn Off Identify".
	Solid On	● Press the UID Button while UID LED is turn off.

Color	Status	Description
		● IPMI Chassis Identify command "Force Identify On".
	Blinking (~0.5Hz, keep about 8 seconds)	● Trigger the action "Temporary On" from BMC Web UI for identify use. ● IPMI Chassis Identify command "Identify"

4.3 System Fault LED

System Fault LED Indicator is used to indicate the system status while system in the failure status.

Table 3. System Fault LED Status

Color	Status	Description
Amber	Solid Off	The following sensors are in de-asserted status: ● CPU PROCHOT ● CPU THERMTRIP ● CPU CATERR ● DRAM Error ● FAN
	Solid On	The following sensors are in asserted status: ● CPU PROCHOT ● CPU THERMTRIP ● CPU CATERR ● DRAM Error ● FAN

4.4 FAN Fault LED

FAN Fault LED Indicator is used to indicate the system FAN status.

Table 4. FAN Fault LED Status

Color	Status	Description
Amber	Solid Off	The system FAN is running in normal.
	Blinking (~1Hz)	The system FAN in failure status. E.g. system FAN is not running, system FAN speed is running lower/higher than the sensor monitoring value or system FAN is removed while host is power on.