



OPEN Industry Standard, Flexible Architecture

GREEN Less Heat, Less Power Consumption

STABLE Robust Design, Quality Parts

Stable and
Reliable Solution

Server/Workstation
Motherboard

EP2C612D24-4L
EP2C612D24

User Manual

English



Version 1.1

Published October 2016

Copyright©2016 ASRock Rack Inc. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Rack Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock Rack. ASRock Rack assumes no responsibility for any errors or omissions that may appear in this documentation.

With respect to the contents of this documentation, ASRock Rack does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock Rack, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock Rack has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

ASRock Rack's Website: www.ASRockRack.com

Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, you're welcome to visit ASRock Rack's website at www.ASRockRack.com; or you may contact your dealer for further information.

ASRock Rack Incorporation

6F., No.37, Sec. 2, Jhongyang S. Rd., Beitou District,

Taipei City 112, Taiwan (R.O.C.)

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Unique Features	6
1.4 Motherboard Layout	7
1.5 Onboard LED Indicators	13
1.6 I/O Panel	15
1.7 Block Diagram	17
Chapter 2 Installation	19
2.1 Screw Holes	19
2.2 Pre-installation Precautions	19
2.3 Installing the CPU	20
2.4 Installing the CPU Fan and Heatsink	23
2.5 Installation of Memory Modules (DIMM)	24
2.6 Expansion Slots (PCI Express Slots)	28
2.7 Jumper Setup	29
2.8 Onboard Headers and Connectors	31
2.9 Dr. Debug	37
2.10 Driver Installation Guide	38
2.11 Dual/Quad LAN and Teaming Operation Guide	39
2.12 M.2_SSD (NGFF) Module Installation Guide	40

Chapter 3	UEFI Setup Utility	43
3.1	Introduction	43
3.1.1	UEFI Menu Bar	43
3.1.2	Navigation Keys	44
3.2	Main Screen	45
3.3	Advanced Screen	46
3.3.1	ACPI Configuration	47
3.3.2	Configure Super IO Settings	48
3.3.3	Serial Port Console Redirection	49
3.3.4	CSM Configuration	52
3.3.5	Trusted Computing	54
3.3.6	USB Configuration	56
3.3.7	System Configuration	57
3.3.8	Hard Disk S.M.A.R.T Settings	59
3.3.9	3rd Storage Configuration	60
3.3.10	H/W Monitor	61
3.3.11	WHEA Configuration	63
3.3.12	Instant Flash	65
3.4	IntelRCSetup	66
3.4.1	Processor Configuration	67
3.4.2	CPU Power Management Configuration	69
3.4.3	QPI Configuration	71
3.4.4	Memory Configuration	72

3.4.5	I/O Configuration	74
3.4.6	PCH Configuration	75
3.4.7	Server ME Configuration	78
3.5	Server Mgmt	79
3.5.1	System Event Log	80
3.5.2	BMC Network Configuration	81
3.6	Security	83
3.7	Boot Screen	84
3.8	Event Logs	86
3.9	Exit Screen	88
Chapter 4 Software Support		89
4.1	Install Operating System	89
4.2	Support CD Information	89
4.2.1	Running The Support CD	89
4.2.2	Drivers Menu	89
4.2.3	Utilities Menu	89
4.2.4	Contact Information	89
Chapter 5 Troubleshooting		90
5.1	Troubleshooting Procedures	90
5.2	Technical Support Procedures	92
5.3	Returning Merchandise for Service	92
Chapter 6 Net Framework Installation Guide		93
6.1	Installing .Net Framework 3.5.1 (For Server 2008 R2)	93

Chapter 1 Introduction

Thank you for purchasing ASRock Rack **EP2C612D24 / EP2C612D24-4L** motherboard, a reliable motherboard produced under ASRock Rack's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock Rack's commitment to quality and endurance.

In this manual, chapter 1 and 2 contains introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contains the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock Rack website without further notice. You may find the latest memory and CPU support lists on ASRock Rack website as well. ASRock Rack's Website: www.ASRockRack.com

*If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.
<http://www.asrockrack.com/support/>*

1.1 Package Contents

- ASRock Rack EP2C612D24 / EP2C612D24-4L Motherboard
(SSI EEB Form Factor: 12.0-in x 13.0-in, 30.5 cm x 33.0 cm)
- Support CD
- User Manual
- 4 x SATA3 Cables (50cm)
- 2 x SATA3 Cables (60cm)
- 1 x I/O Shield



If any items are missing or appear damaged, contact your authorized dealer.

1.2 Specifications

EP2C612D24 / EP2C612D24-4L	
MB Physical Status	
Form Factor	SSI EEB
Dimension	12" x 13" (30.5 cm x 33.0 cm)
Processor System	
CPU	Intel® Xeon® processor E5-2600 v3/v4* series <i>*BIOS version 2.0 or above is required.</i>
Socket	Dual Socket LGA 2011 R3
Chipset	Intel® C612
System Memory	
Capacity	24 DIMM slots
Type	- Quad Channel memory technology - Supports DDR4 2400*/2133/1866/1600 RDIMM and LRDIMM <i>*Only E5-2600 V4 CPUs support DDR4 2400.</i>
Voltage	1.2V
DIMM Sizes	RDIMM: 32GB, 16GB, 8GB, 4GB LRDIMM: 64GB, 32GB
Expansion Slot	
PCIe 3.0 x 8	3 slots
M.2	1 slot (PCIe Gen3 x4 & SATA3) <i>*SSATA_3 connector is shared with the M2_1.</i>
Storage	
SATA Controller	Intel® C612 : 10 x SATA3 6.0 Gb/s (6 x SATA3 + 4 x SSATA3), support RAID 0, 1, 5, 10
Ethernet	
Interface	1000 /100 /10 Mbps by Intel i350
LAN	EP2C612D24: 2 x RJ45 GLAN by Intel® i350AM2 1 x RJ45 Dedicated IPMI LAN port - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Dual LAN with Teaming function - Supports PXE - LAN1 supports NCSI

	EP2C612D24-4L: 4 x RJ45 GLAN by Intel® i350AM4 1 x RJ45 Dedicated IPMI LAN port - Supports Wake-On-LAN - Supports Energy Efficient Ethernet 802.3az - Supports Quad LAN with Teaming function - Supports PXE - LAN1 supports NCSI
Management	
BMC Controller	ASPEED AST2400
IPMI Dedicated GLAN	- 1 x Realtek RTL8211E for dedicated management GLAN
Features	- Watch Dog - NMI
Graphics	
Controller	ASPEED AST2400
VRAM	DDR3 16MB
Rear Panel I/O	
VGA Port	1 x D-Sub
USB 3.0 Port	2
USB 2.0 Port	2
LAN Port	EP2C612D24: 2 + 1 (IPMI) LAN port (RJ45) LAN Ports with LED (ACT/LINK LED and SPEED LED) EP2C612D24-4L: 4 + 1 (IPMI) LAN port (RJ45) LAN Ports with LED (ACT/LINK LED and SPEED LED)
Serial Port	1 (COM1)
UID Button/ LED	1
Internal Connector	
Auxiliary Panel Header	1 (includes chassis intrusion, location button & LED, front LAN LED, and system event LED)
TPM Header	1
IPMB Header	1
Fan Header	2 x CPU Fans, 6 x system Fans (4-pin)
ATX Power	1 (24-pin) + 2 (8-pin)
USB 3.0 Header	1 (supports 2 USB 3.0 ports)
USB 2.0 Header	1 (supports 2 USB 2.0 ports)
Type A USB 3.0 Port	1

System BIOS	
BIOS Type	128 Mb AMI UEFI Legal BIOS
BIOS Features	<ul style="list-style-type: none"> - Plug and Play (PnP) - ACPI 2.0 Compliance Wake Up Events - SMBIOS 2.8.0 Support - ASRock Rack Instant Flash
Hardware Monitor	
Temperature	<ul style="list-style-type: none"> - CPU Temperature Sensing - System Temperature Sensing - MB Temperature Sensing - Card-side Temperature Sensing - LAN Temperature Sensing - DIMM Slot Temperature Sensing - PCH Thermal Temperature Sensing
Fan	<ul style="list-style-type: none"> - CPU/Rear/Front Fan Tachometer - CPU Quiet Fan (Allow CPU Fan Speed Auto-Adjust by CPU Temperature) - CPU/Rear/Front Fan Multi-Speed Control
Voltage	Voltage Monitoring: +12V, +5V, +3.3V, CPU Vcore, DRAM, 1.05V_PCH, 1.5V_PCH+BAT, 3.3VSB, 5VSB
Support OS	
OS	<p>Microsoft® Windows®</p> <ul style="list-style-type: none"> - Server 2008 R2 SP1 (64 bit) - Server 2012 (64 bit) - Server 2012 R2 (64 bit) <p>Linux®</p> <ul style="list-style-type: none"> - RedHat Enterprise Linux Server 6.5 (32 / 64 bit) - CentOS 5.10 / 6.5 (32 / 64 bit) - SUSE Enterprise Linux Server 11 SP3 (32 / 64 bit) - FreeBSD 9.2 (32 / 64 bit) - Fedora core 19 (64 bit) - Ubuntu 12.04.2 (64 bit) / 12.10 (64 bit) <p>Virtual</p> <ul style="list-style-type: none"> - VMWare® ESXi 5.5 <p>* Please refer to our website for the latest OS support list.</p>
Environment	
Temperature	<p>Operation temperature: 10°C ~ 35°C / Non operation temperature: -40°C ~ 70°C</p>



This motherboard supports Wake from on Board LAN. To use this function, please make sure that the "Wake on Magic Packet from power off state" is enabled in Device Manager > Intel® Ethernet Connection > Power Management. And the "PCI Devices Power On" is enabled in UEFI SETUP UTILITY > Advanced > ACPI Configuration. After that, onboard LAN1&2 can wake up S5 under OS.




If you install Intel® LAN utility or Marvell SATA utility, this motherboard may fail Windows® Hardware Quality Lab (WHQL) certification tests. If you install the drivers only, it will pass the WHQL tests.

1.3 Unique Features

ASRock Rack Instant Flash is a BIOS flash utility embedded in Flash ROM. This convenient BIOS update tool allows you to update system BIOS without entering operating systems first like MS-DOS or Windows®. With this utility, you can press the <F6> key during the POST or the <F2> key to enter into the BIOS setup menu to access ASRock Rack Instant Flash. Just launch this tool and save the new BIOS file to your USB flash drive, floppy disk or hard drive, then you can update your BIOS only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system.

1.4 Motherboard Layout

EP2C612D24

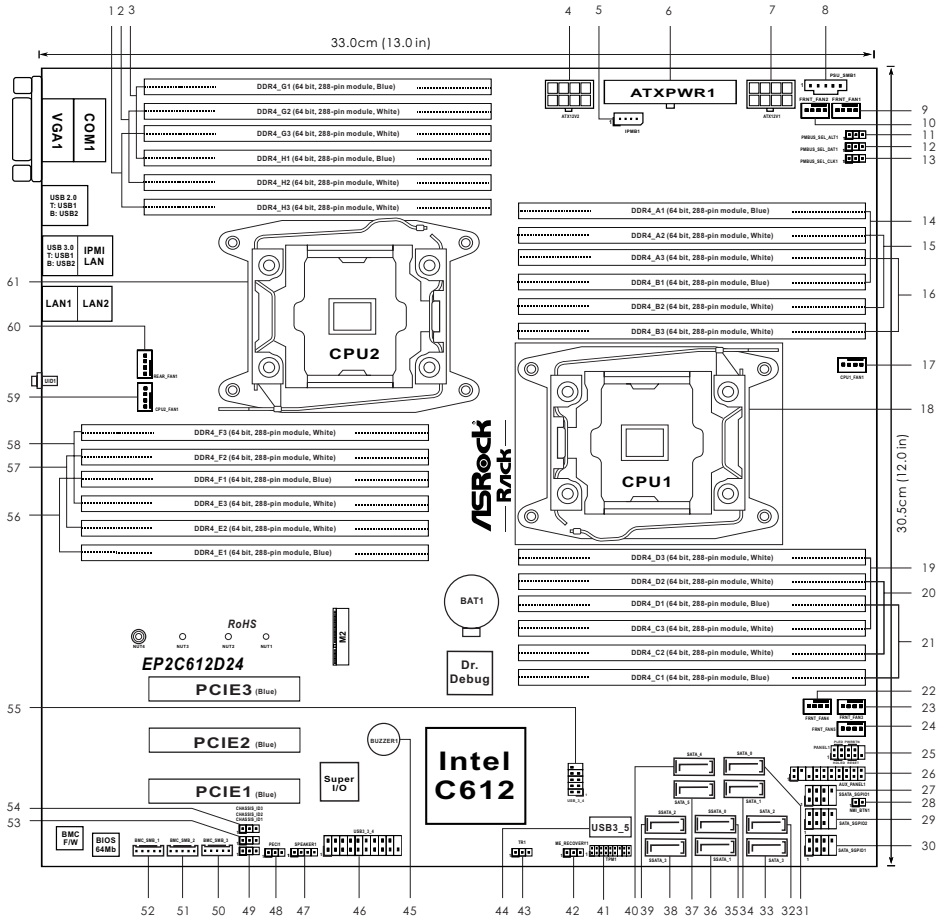

No.	Description
1	2 x 288-pin DDR4 DIMM Slots (DDR4_H3, DDR4_G3, White)*
2	2 x 288-pin DDR4 DIMM Slots (DDR4_H2, DDR4_G2, White)
3	2 x 288-pin DDR4 DIMM Slots (DDR4_H1, DDR4_G1, Blue)
4	ATX 12V Power Connector (ATX12V2)
5	Intelligent Platform Management Bus header (IPMB1)
6	ATX Power Connector (ATXPWR1)
7	ATX 12V Power Connector (ATX12V1)
8	PSU SMBus (PSU_SMB1)
9	Front Fan Connector (FRNT_FAN1)
10	Front Fan Connector (FRNT_FAN2)
11	PMBUS Mode Jumper (PMBUS_SEL_ALT1)
12	PMBUS Mode Jumper (PMBUS_SEL_DAT1)
13	PMBUS Mode Jumper (PMBUS_SEL_CLK1)
14	2 x 288-pin DDR4 DIMM Slots (DDR4_A1, DDR4_B1, Blue)
15	2 x 288-pin DDR4 DIMM Slots (DDR4_A2, DDR4_B2, White)
16	2 x 288-pin DDR4 DIMM Slots (DDR4_A3, DDR4_B3, White)
17	CPU 1 Fan Connector (CPU1_FAN1)
18	LGA 2011 R3 CPU Socket 1 (CPU1)
19	2 x 288-pin DDR4 DIMM Slots (DDR4_C3, DDR4_D3, White)
20	2 x 288-pin DDR4 DIMM Slots (DDR4_C2, DDR4_D2, White)
21	2 x 288-pin DDR4 DIMM Slots (DDR4_C1, DDR4_D1, Blue)
22	Front Fan Connector (FRNT_FAN4)
23	Front Fan Connector (FRNT_FAN3)
24	Front Fan Connector (FRNT_FAN5)
25	System Panel Header (PANEL1)
26	Auxiliary Panel Header (AUX_PANEL1)
27	SSATA SGPIO Connector (SSATA_SGPIO1)
28	Non Maskable Interrupt Button (NMI_BTN1)
29	SATA SGPIO Connector (SATA_SGPIO2)
30	SATA SGPIO Connector (SATA_SGPIO1)
31	SATA3 Connector (SATA_0)
32	SATA3 Connector (SATA_2)
33	SATA3 Connector (SATA_3)


No.	Description
34	SATA3 Connector (SATA_1)
35	SSATA3 Connector (SSATA_0)**
36	SSATA3 Connector (SSATA_1)
37	SATA3 Connector (SATA_5)
38	SSATA3 Connector (SSATA_3)***
39	SSATA3 Connector (SSATA_2)
40	SATA3 Connector (SATA_4)
41	TPM Header (TPM1)
42	ME Recovery Jumper (ME_RECOVERY1)
43	Thermal Sensor Header (TR1)
44	Vertical Type A USB 3.0 (USB3_5)
45	Buzzer (BUZZER1)
46	USB 3.0 Header (USB3_3_4)
47	Speaker Header (SPEAKER1)
48	CPU PECI Mode Jumper (PECI1)
49	Chassis ID3 Jumper (CHASSIS_ID3)
50	BMC SMBus Header (BMC_SMB_3)
51	BMC SMBus Header (BMC_SMB_2)
52	BMC SMBus Header (BMC_SMB_1)
53	Chassis ID2 Jumper (CHASSIS_ID2)
54	Chassis ID1 Jumper (CHASSIS_ID1)
55	USB 2.0 Header (USB_3_4)
56	2 x 288-pin DDR4 DIMM Slots (DDR4_E1, DDR4_F1, Blue)
57	2 x 288-pin DDR4 DIMM Slots (DDR4_E2, DDR4_F2, White)
58	2 x 288-pin DDR4 DIMM Slots (DDR4_E3, DDR4_F3, White)
59	CPU 2 Fan Connector (CPU2_FAN1)
60	Rear Fan Connector (REAR_FAN1)
61	LGA 2011 R3 CPU Socket 2 (CPU2)

* For DIMM installation and configuration instructions, please see p.24 (Installation of Memory Modules (DIMM)) for more details.

** The first "S" of the "SSATA" means "secondary". SATA is managed by the first controller. SSATA is managed by the secondary controller.

*** SSATA_3 connector is shared with the M2_1.

EP2C612D24-4L

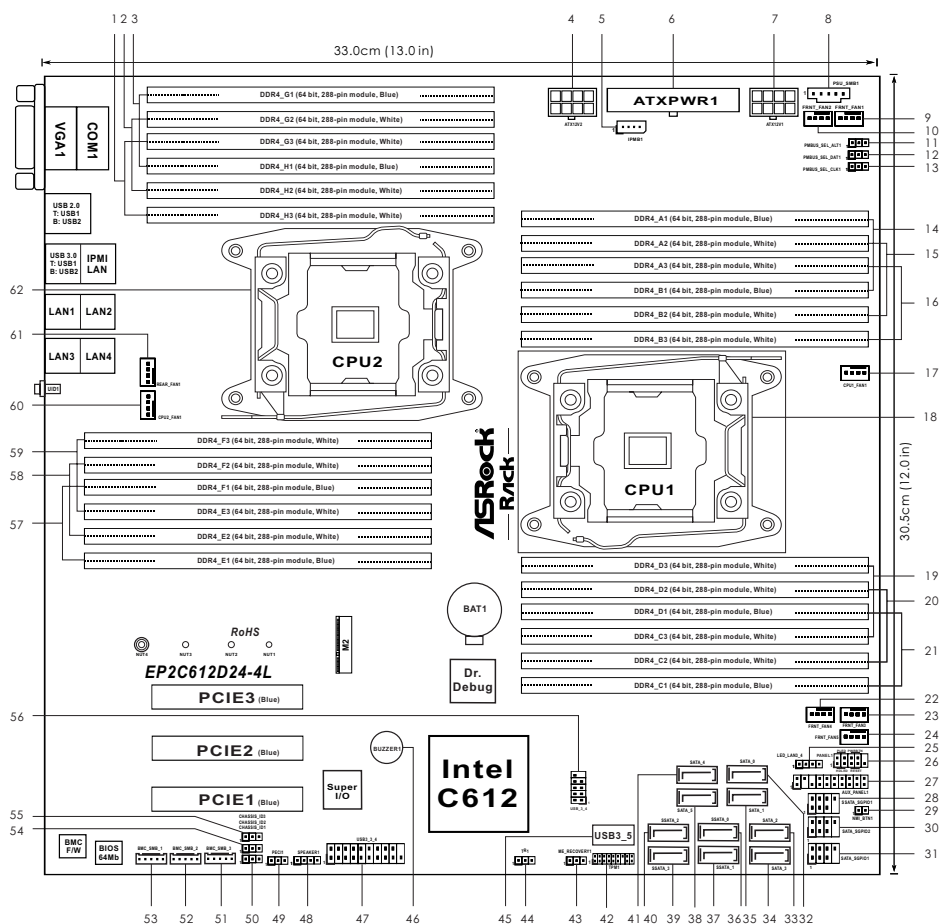

No.	Description
1	2 x 288-pin DDR4 DIMM Slots (DDR4_H3, DDR4_G3, White)*
2	2 x 288-pin DDR4 DIMM Slots (DDR4_H2, DDR4_G2, White)
3	2 x 288-pin DDR4 DIMM Slots (DDR4_H1, DDR4_G1, Blue)
4	ATX 12V Power Connector (ATX12V2)
5	Intelligent Platform Management Bus header (IPMB1)
6	ATX Power Connector (ATXPWR1)
7	ATX 12V Power Connector (ATX12V1)
8	PSU SMBus (PSU_SMB1)
9	Front Fan Connector (FRNT_FAN1)
10	Front Fan Connector (FRNT_FAN2)
11	PMBUS Mode Jumper (PMBUS_SEL_ALT1)
12	PMBUS Mode Jumper (PMBUS_SEL_DAT1)
13	PMBUS Mode Jumper (PMBUS_SEL_CLK1)
14	2 x 288-pin DDR4 DIMM Slots (DDR4_A1, DDR4_B1, Blue)
15	2 x 288-pin DDR4 DIMM Slots (DDR4_A2, DDR4_B2, White)
16	2 x 288-pin DDR4 DIMM Slots (DDR4_A3, DDR4_B3, White)
17	CPU 1 Fan Connector (CPU1_FAN1)
18	LGA 2011 R3 CPU Socket 1 (CPU1)
19	2 x 288-pin DDR4 DIMM Slots (DDR4_C3, DDR4_D3, White)
20	2 x 288-pin DDR4 DIMM Slots (DDR4_C2, DDR4_D2, White)
21	2 x 288-pin DDR4 DIMM Slots (DDR4_C1, DDR4_D1, Blue)
22	Front Fan Connector (FRNT_FAN4)
23	Front Fan Connector (FRNT_FAN3)
24	Front Fan Connector (FRNT_FAN5)
25	Lan LED Connector (LED_LAN34)
26	System Panel Header (PANEL1)
27	Auxiliary Panel Header (AUX_PANEL1)
28	SSATA SGPIO Connector (SSATA_SGPIO1)
29	Non Maskable Interrupt Button (NMI_BTN1)
30	SATA SGPIO Connector (SATA_SGPIO2)
31	SATA SGPIO Connector (SATA_SGPIO1)
32	SATA3 Connector (SATA_0)
33	SATA3 Connector (SATA_2)


No.	Description
34	SATA3 Connector (SATA_3)
35	SATA3 Connector (SATA_1)
36	SSATA3 Connector (SSATA_0)**
37	SSATA3 Connector (SSATA_1)
38	SATA3 Connector (SATA_5)
39	SSATA3 Connector (SSATA_3)***
40	SSATA3 Connector (SSATA_2)
41	SATA3 Connector (SATA_4)
42	TPM Header (TPM1)
43	ME Recovery Jumper (ME_RECOVERY1)
44	Thermal Sensor Header (TR1)
45	Vertical Type A USB 3.0 (USB3_5)
46	Buzzer (BUZZER1)
47	USB 3.0 Header (USB3_3_4)
48	Speaker Header (SPEAKER1)
49	CPU PECI Mode Jumper (PECI1)
50	Chassis ID3 Jumper (CHASSIS_ID3)
51	BMC SMBus Header (BMC_SMB_3)
52	BMC SMBus Header (BMC_SMB_2)
53	BMC SMBus Header (BMC_SMB_1)
54	Chassis ID2 Jumper (CHASSIS_ID2)
55	Chassis ID1 Jumper (CHASSIS_ID1)
56	USB 2.0 Header (USB_3_4)
57	2 x 288-pin DDR4 DIMM Slots (DDR4_E1, DDR4_F1, Blue)
58	2 x 288-pin DDR4 DIMM Slots (DDR4_E2, DDR4_F2, White)
59	2 x 288-pin DDR4 DIMM Slots (DDR4_E3, DDR4_F3, White)
60	CPU 2 Fan Connector (CPU2_FAN1)
61	Rear Fan Connector (REAR_FAN1)
62	LGA 2011 R3 CPU Socket 2 (CPU2)

* For DIMM installation and configuration instructions, please see p.24 (Installation of Memory Modules (DIMM)) for more details.

** The first "S" of the "SSATA" means "secondary". SATA is managed by the first controller. SSATA is managed by the secondary controller.


*** SSATA_3 connector is shared with the M2_1.

1.5 Onboard LED Indicators

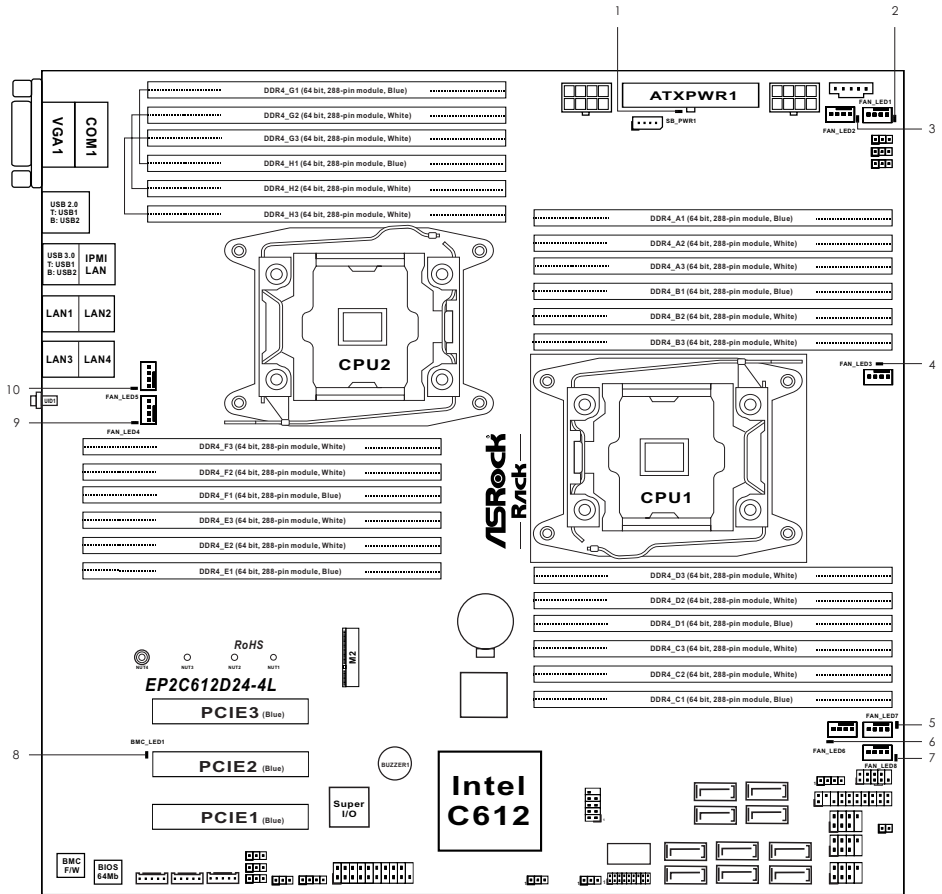

No.	Status	Description
1	Green	STB PWR ready
2	Amber	Front_FAN1 failed
3	Amber	Front_FAN2 failed
4	Amber	CPU1_FAN1 failed
5	Amber	Front_FAN3 failed
6	Amber	Front_FAN4 failed
7	Amber	Front_FAN5 failed
8	Green	BMC heartbeat LED
9	Amber	CPU2_FAN1 failed
10	Amber	Rear_FAN1 failed


1.6 I/O Panel

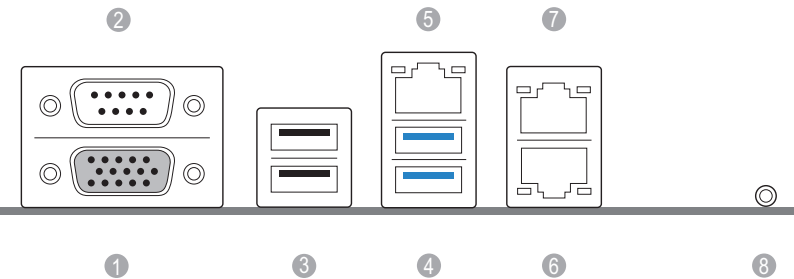

EP2C612D24

No.	Description	No.	Description
1	Serial Port (COM1)	5	LAN RJ-45 Port (IPMI_LAN)*
2	VGA Port (VGA1)	6	LAN RJ-45 Port (LAN1)**
3	USB 2.0 Ports (USB_1_2)	7	LAN RJ-45 Port (LAN2)**
4	USB 3.0 Ports (USB3_1_2)	8	UID Switch (UID)

Note: LAN1 supports NCSI.

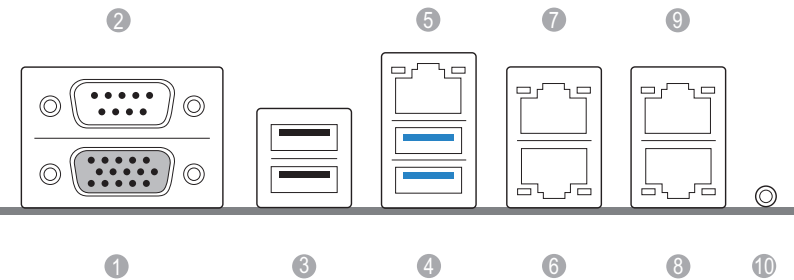


EP2C612D24-4L

No.	Description	No.	Description
1	Serial Port (COM1)	6	LAN RJ-45 Port (LAN1)**
2	VGA Port (VGA1)	7	LAN RJ-45 Port (LAN2)**
3	USB 2.0 Ports (USB_1_2)	8	LAN RJ-45 Port (LAN3)**
4	USB 3.0 Ports (USB3_1_2)	9	LAN RJ-45 Port (LAN4)**
5	LAN RJ-45 Port (IPMI_LAN)*	10	UID Switch (UID)

Note: LAN1 supports NCSI.

LAN Port LED Indications


*There are two LED next to the LAN port. Please refer to the table below for the LAN port LED indications.

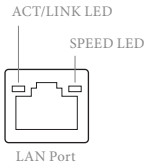

Dedicated IPMI LAN Port LED Indications

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10M bps connection or no link
Blinking Yellow	Data Activity	Yellow	100M bps connection
On	Link	Green	1Gbps connection

**There are two LEDs on each LAN port. Please refer to the table below for the LAN port LED indications.

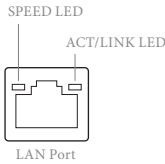


LAN Port (LAN1, LAN2, or LAN1, LAN2, LAN3, LAN4) LED Indications

Speed LED		Activity / Link LED	
Status	Description	Status	Description
Off	10Mbps connection or no link	Off	No Link
Yellow	100Mbps connection	Blinking Green	Data Activity
Green	1Gbps connection	On	Link

1.7 Block Diagram


EP2C612D24

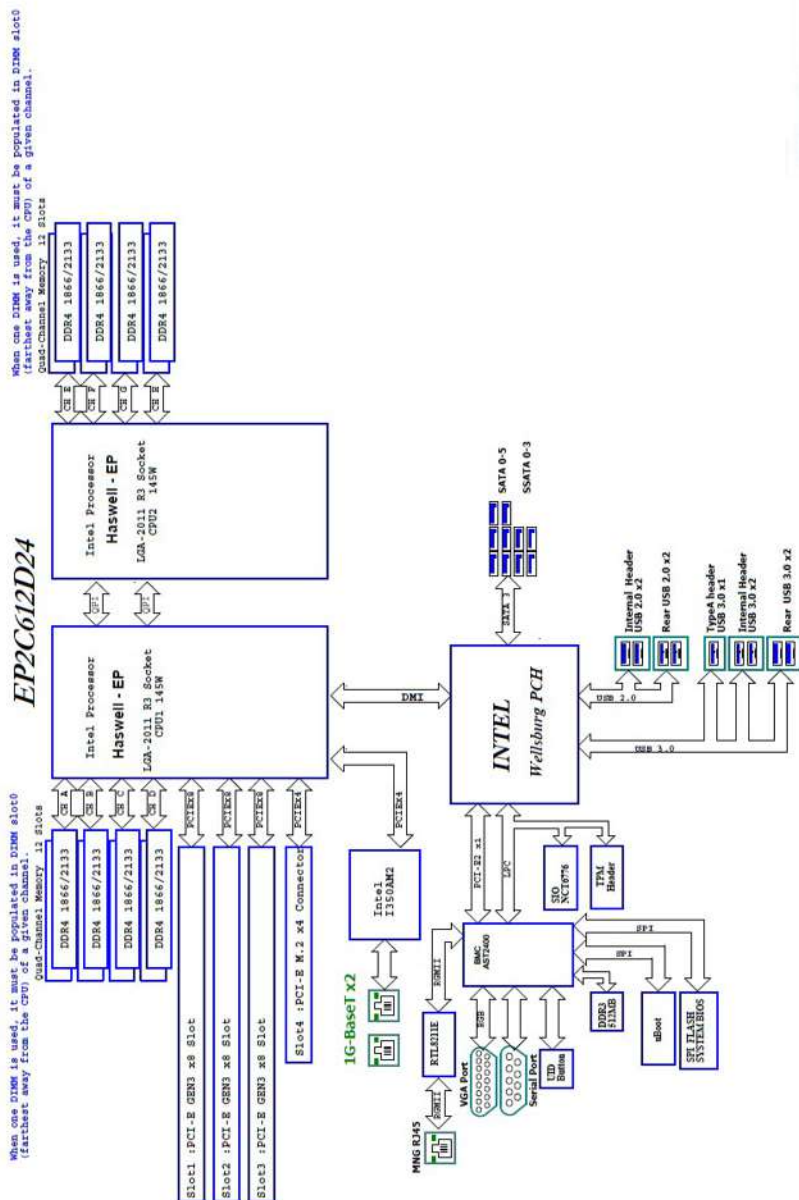

When one DIMM is used, it must be populated in DIMM slot0 (farthest away from the CPU) of a given channel.
Quad-Channel Memory 12 slots

EP2C612D24-4L

When one DIMM is used, it must be populated in DIMM slot0 (farthest away from the CPU) of a given channel.
Quad-Channel Memory 12 slots

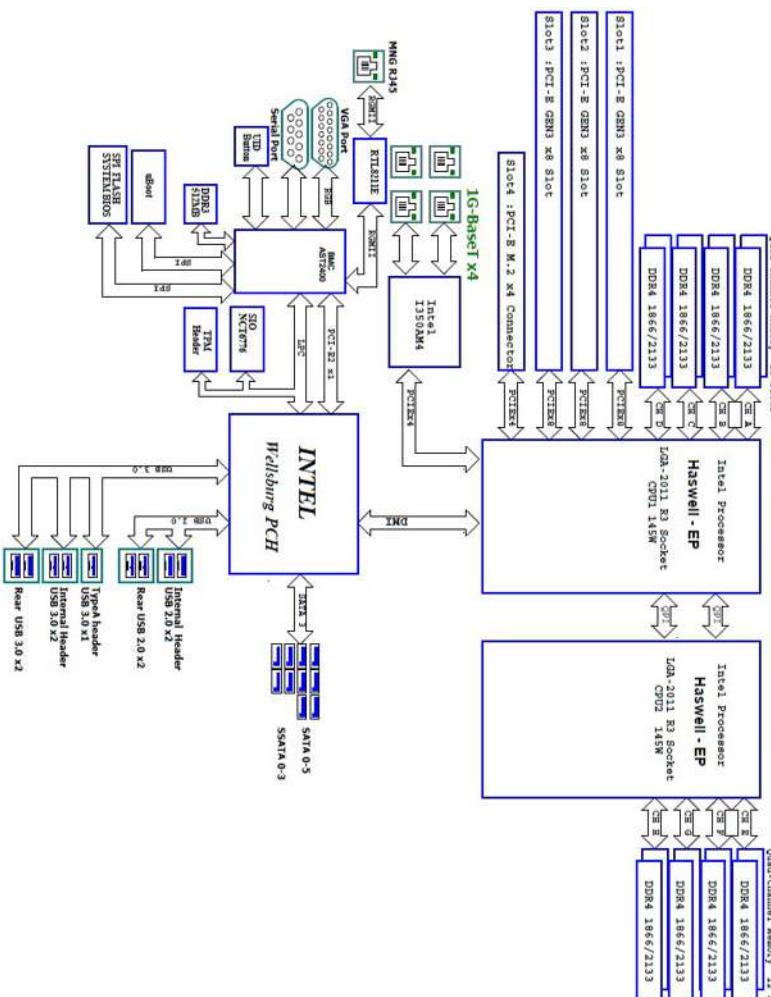

EP2C612D24-4L

Chapter 2 Installation

This is a SSI EEB form factor (12" x 13", 30.5 cm x 33.0 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

EP2C612 Series are dual socket motherboards that support Intel® Xeon® E5-2600 v3 Series Processors. Please install a primary processor (Boot Strap Processor) into “CPU1” socket and then install a non-Primary Processor (Application Processors) into “CPU2” socket. *For a single CPU, please install it into “CPU1” socket (framed by a square).



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the motherboard's components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installing the CPU




1. Before you insert the 2011-3-Pin CPU into the socket, please check if the PnP cap is on the socket, if the CPU surface is unclean, or if there are any bent pins in the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.
2. Unplug all power cables before installing the CPU.

CAUTION:


Please note that C612 platform is only compatible with the LGA 2011-3 socket, which is incompatible with the LGA 2011 socket

Socket Type: Narrow ILM Socket


1

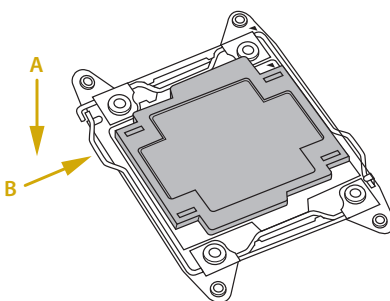


2

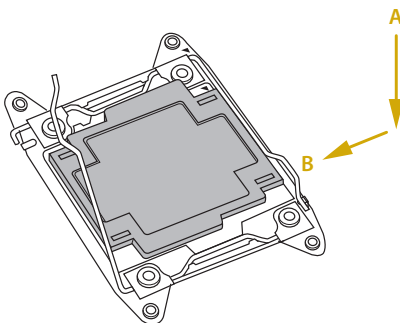


3

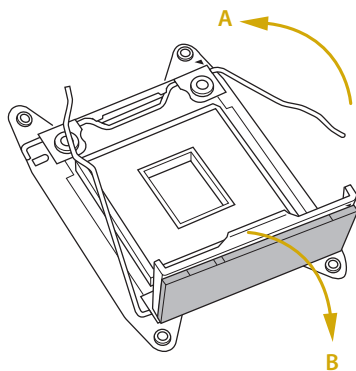


4

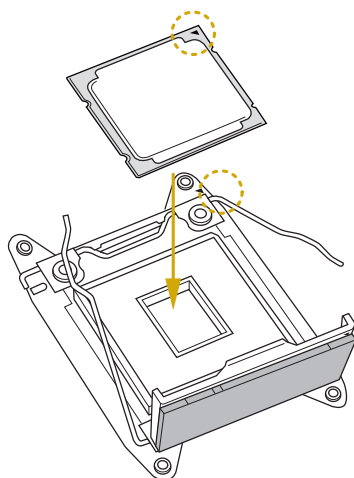


5

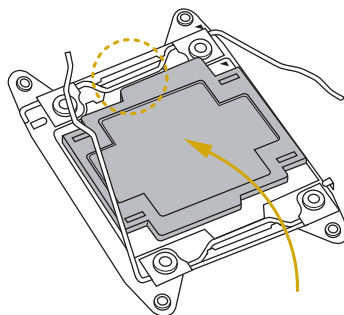


6

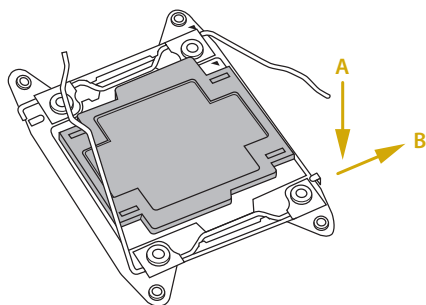

7

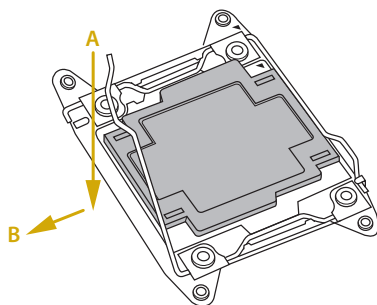

8


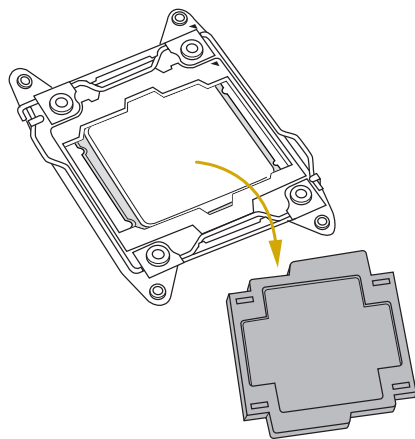


The cover must be placed if returning the motherboard for after service.

2.4 Installing the CPU Fan and Heatsink




Before you installed the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation.

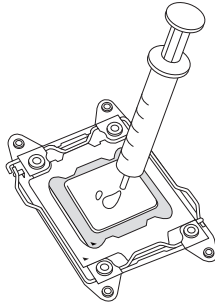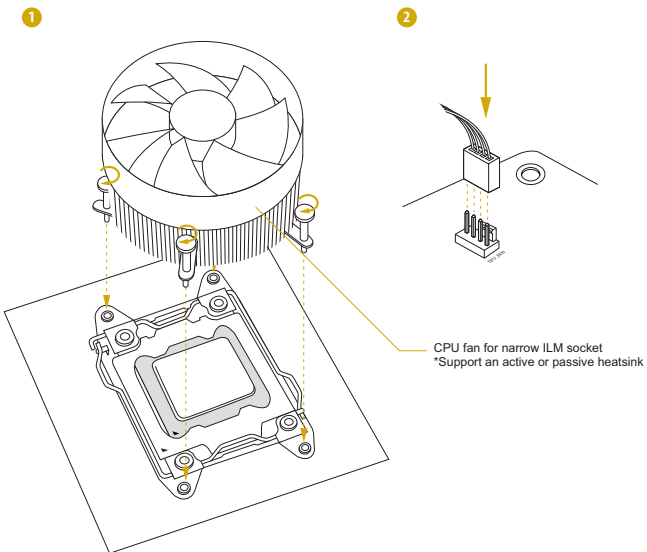

2.5 Installation of Memory Modules (DIMM)


This motherboard provides twenty-four 288-pin DDR4 (Double Data Rate 4) DIMM slots in two groups, and supports Quad Channel Memory Technology.

Capacity	CPU1	CPU2
768GB	DDR4_A1, B1, C1, D1 (Blue)	DDR4_E1, F1, G1, H1 (Blue)
	DDR4_A2, B2, C2, D2 (White)	DDR4_E2, F2, G2, H2 (White)
	DDR4_A3, B3, C3, D3 (White)	DDR4_E3, F3, G3, H3 (White)

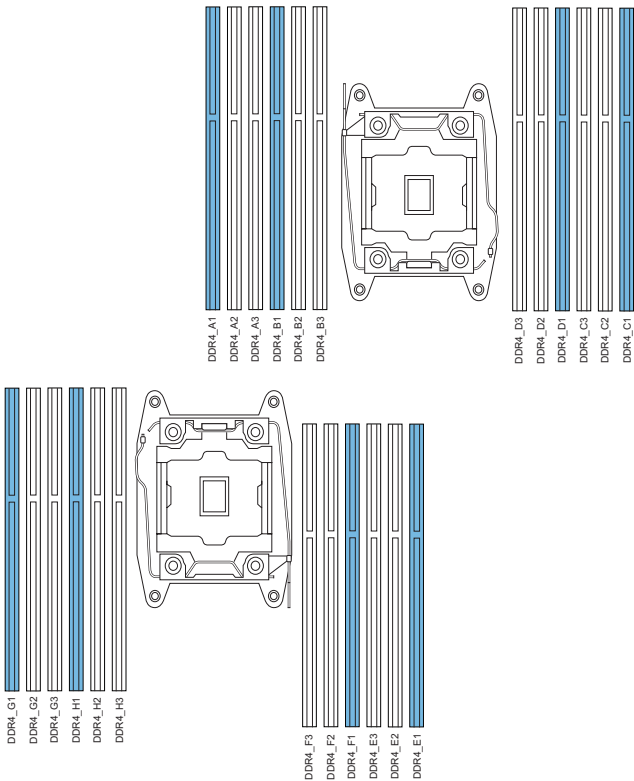


1. It is not allowed to install a DDR, DDR2 or DDR3 memory module into a DDR4 slot; otherwise, this motherboard and DIMM may be damaged.
2. For quad channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR4 DIMM pairs.
3. It is unable to activate Quad Channel Memory Technology with only one or three memory module installed.
4. Some DDR4 1GB double-sided DIMMs with 16 chips may not work on this motherboard. It is not recommended to install them on this motherboard.


1

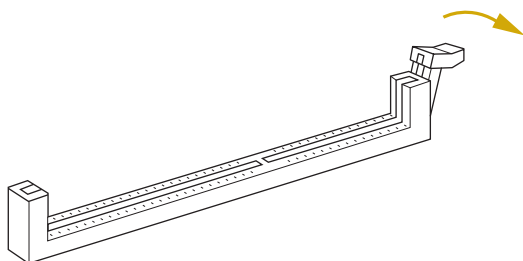

2

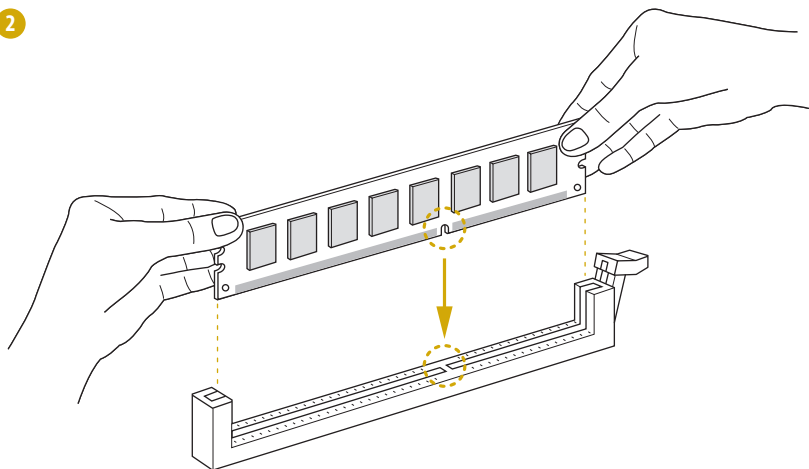

3

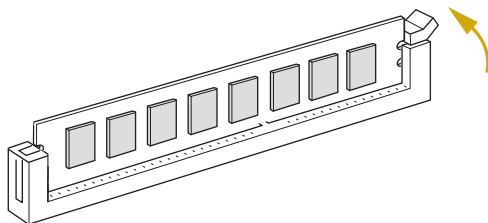

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

Recommended Memory Configurations

A single memory module should be installed in the BLUE socket.

If you install only one CPU (CPU1) on the motherboard, make sure to install DIMMs into DDR4_A, DDR4_B, DDR4_C, or DDR4_D slot(s).

1 CPU Configurations

		DIMM(S)				
		1	2	4	8	12
CPU1	A1	#	#	#	#	#
	A2				#	#
	A3					#
	B1		#	#	#	#
	B2				#	#
	B3					#
	C1			#	#	#
	C2				#	#
	C3					#
	D1			#	#	#
	D2				#	#
	D3					#

The symbol # indicates the slot is populated.

2 CPU Configurations

		DIMM(S)								
		1	2	4	8	12	16	16	20	24
CPU1	A1	#	#	#	#	#	#	#	#	#
	A2					#	#	#	#	#
	A3							#	#	#
	B1		#	#	#	#	#	#	#	#
	B2					#	#	#	#	#
	B3							#	#	#
	C1			#	#	#	#	#	#	#
	C2					#	#	#	#	#
	C3							#	#	#
	D1			#	#	#	#	#	#	#
	D2					#	#	#	#	#
	D3							#	#	#
CPU2	E1				#	#	#	#	#	#
	E2						#		#	#
	E3									#
	F1				#	#	#	#	#	#
	F2						#		#	#
	F3									#
	G1				#	#	#	#	#	#
	G2						#		#	#
	G3									#
	H1				#	#	#	#	#	#
	H2						#		#	#
	H3									#

The symbol # indicates the slot is populated.

2.6 Expansion Slots (PCI Express Slots)

There are 3 PCI Express slots on this motherboard.

PCIe slot:

PCIe1, PCIe2 and PCIe3 (PCIe 3.0 x8 slot, from CPU 1) is used for PCI Express x8 lane width cards.


Slot	Generation	Mechanical	Electrical	Source
PCIe 3	3.0	x8	x8	CPU 1
PCIe 2	3.0	x8	x8	CPU 1
PCIe 1	3.0	x8	x8	CPU 1

Installing an expansion card

- Step 1. Before installing an expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

2.7 Jumper Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.

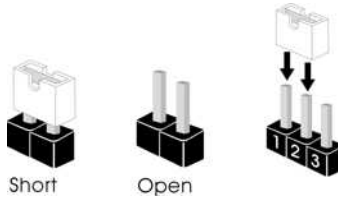

ME Recovery Jumper
(3-pin ME_RECOVERY1)
(see p.7 or 10)



Normal Mode (Default)



ME Recovery Mode

CPU PECI Mode Jumper
(3-pin PECI1)
(see p.7 or 10)



CPU PECI connect to PCH



CPU PECI connect to BMC
(Default)

PMBUS Mode Jumper
(3-pin PMBUS_SEL_ALT1)
(see p.7 or 10)
(3-pin PMBUS_SEL_DAT1)
(see p.7 or 10)
(3-pin PMBUS_SEL_CLK1)
(see p.7 or 10)



PMBus connected to BMC
(Default)



PMBus connected to PCH


Chassis ID1 Jumper (3-pin CHASSIS_ID1) (see p.7 or 10)	1_2 	1_2 
Chassis ID2 Jumper (3-pin CHASSIS_ID2) (see p.7 or 10)	1_2 	1_2 
Chassis ID3 Jumper (3-pin CHASSIS_ID3) (see p.7 or 10)	1_2 	2_3 
	Board Level SKU (Default)	For 3U8G system, passive GPGPU
Chassis ID1 Jumper (3-pin CHASSIS_ID1) (see p.7 or 10)	1_2 	1_2 
Chassis ID2 Jumper (3-pin CHASSIS_ID2) (see p.7 or 10)	2_3 	2_3 
Chassis ID3 Jumper (3-pin CHASSIS_ID3) (see p.7 or 10)	2_3 	1_2 
	For 3U8G system, active GPGPU	Reserved for system level use
Chassis ID1 Jumper (3-pin CHASSIS_ID1) (see p.7 or 10)	2_3 	2_3 
Chassis ID2 Jumper (3-pin CHASSIS_ID2) (see p.7 or 10)	1_2 	1_2 
Chassis ID3 Jumper (3-pin CHASSIS_ID3) (see p.7 or 10)	1_2 	2_3 
	Reserved for system level use	Reserved for system level use

2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage to the motherboard.

System Panel Header
(9-pin PANEL1)
(see p.7 or 10)

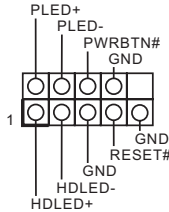

Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments. Particularly note the positive and negative pins before connecting the cables.



PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):


Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED is off when the system is in S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assignments are matched correctly.

Auxiliary Panel Header
(18-pin AUX PANEL_1)
(see p.7 or 10)

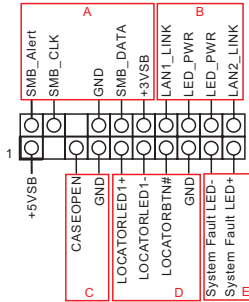

This header supports multiple functions on the front panel, including the front panel SMB, internet status indicator and chassis intrusion pin.



- A. Front panel SMBus connecting pin (6-1 pin FPSMB)**
This header allows you to connect SMBus (System Management Bus) equipment. It can be used for communication between peripheral equipment in the system, which has slower transmission rates, and power management equipment.
- B. Internet status indicator (2-pin LAN1_LED, LAN2_LED)**
These two 2-pin headers allow you to use the Gigabit internet indicator cable to connect to the LAN status indicator. When this indicator flickers, it means that the internet is properly connected.
- C. Chassis intrusion pin (2-pin CHASSIS)**
This header is provided for host computer chassis with chassis intrusion detection designs. In addition, it must also work with external detection equipment, such as a chassis intrusion detection sensor or a microswitch. When this function is activated, if any chassis component movement occurs, the sensor will immediately detect it and send a signal to this header, and the system will then record this chassis intrusion event. The default setting is set to the CASEOPEN and GND pin; this function is off.
- D. Locator LED (4-pin LOCATOR)**
This header is for the locator switch and LED on the front panel.
- E. System Fault LED (2-pin LOCATOR)**
This header is for the Fault LED on the system.

Serial ATA3 Connectors

(SATA_0)
(see p.7 or 10)
(SATA_1)
(see p.7 or 10)
(SATA_2)
(see p.7 or 10)
(SATA_3)
(see p.7 or 10)
(SATA_4)
(see p.7 or 10)
(SATA_5)
(see p.7 or 10)



These ten SATA3 connectors support SATA data cables for internal storage devices with up to 6.0 Gb/s data transfer rate.

**If the M.2 Socket (M2_1) has been occupied, the internal SATA_3 will not function.*

(SSATA_0)
(see p.7 or 10)
(SSATA_1)
(see p.7 or 10)
(SSATA_2)
(see p.7 or 10)
(SSATA_3)
(see p.7 or 10)




USB 3.0 Connector

(USB3_5)
(see p.7 or 10)




USB 3.0 Header

(19-pin USB3_3_4)
(see p.7 or 10)

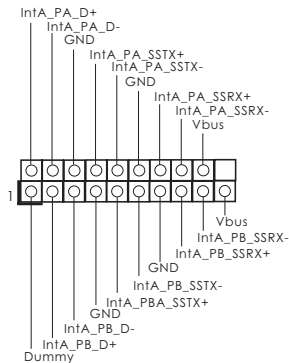

Besides two default USB 3.0 ports on the I/O panel, there is one USB 3.0 header on this motherboard. This USB 3.0 header can support two USB 3.0 ports.

USB 2.0 Header
(9-pin USB_3_4)
(see p.7 or 10)

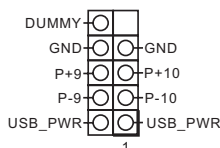


Besides two USB 2.0 ports on the I/O panel, there is one header on this motherboard. Each USB 2.0 header can support two ports.

Chassis Speaker Header
(4-pin SPEAKER1)
(see p.7 or 10)



Please connect the chassis speaker to this header.


CPU Fan Connectors
(4-pin CPU1_FAN1)
(see p.7 or 10)
(4-pin CPU2_FAN1)
(see p.7 or 10)

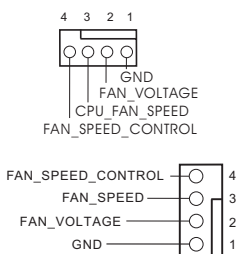

This motherboard provides two 4-Pin CPU fan (Quiet Fan) connectors. If you plan to connect a 3-Pin CPU fan, please connect it to Pin 1-3.


**For more details, please refer to the Cooler QVL list on the ASRock Rack website.*

Front and Rear Fan Connectors
(4-pin FRNT_FAN1)
(see p.7 or 10)
(4-pin FRNT_FAN2)
(see p.7 or 10)
(4-pin FRNT_FAN3)
(see p.7 or 10)
(4-pin FRNT_FAN4)
(see p.7 or 10)
(4-pin FRNT_FAN5)
(see p.7 or 10)

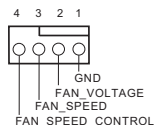


Please connect fan cables to the fan connectors and match the black wire to the ground pin. All fans support Fan Control.

(4-pin REAR_FAN1)
(see p.7 or 10)



ATX Power Connector
(24-pin ATXPWR1)

(see p.7 or 10)

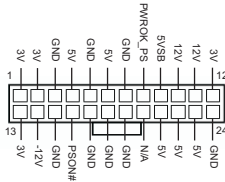

This motherboard provides a 24-pin ATX power connector. To use a 20-pin ATX power supply, please plug it along Pin 1 and Pin 13.


ATX 12V Power Connectors

(8-pin ATX12V1)

(see p.7 or 10)

(8-pin ATX12V2)


(see p.7 or 10)

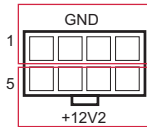

This motherboard provides two 8-pin ATX 12V power connectors.

TPM Header
(17-pin TPM1)

(see p.7 or 10)

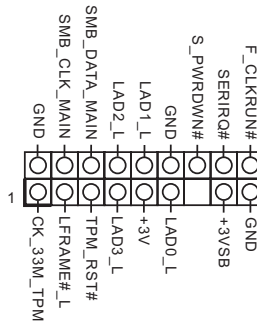

This connector supports Trusted Platform Module (TPM) system, which can securely store keys, digital certificates, passwords, and data. A TPM system also helps enhance network security, protects digital identities, and ensures platform integrity.

Serial General Purpose Input/Output Headers (7-pin SATA_SGPI01)


(see p.7 or 10)

(7-pin SATA_SGPIIO2)

(see p.7 or 10)

(7-pin SSATA_SGPIIO1)


(see p.7 or 10)

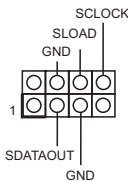

The headers support Serial Link interface for onboard SATA connections.

PSU SMBus
(PSU_SMB1)

(see p.7 or 10)




PSU SMBus monitors the status of the power supply, fan and system temperature.

Non Maskable Interrupt
Button Header
(NMI_BTN1)
(see p.7 or 10)




Please connect a NMI device to this header.

Intelligent Platform
Management Bus header
(4-pin IPMB1)
(see p.7 or 10)

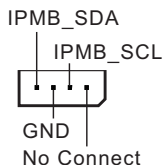


This 4-pin connector is used to provide a cabled base-board or front panel connection for value added features and 3rd-party add-in cards, such as Emergency Management cards, that provide management features using the IPMB.

Baseboard Management
Controller SMBus Header
(5-pin BMC_SMB_1)
(see p.7 or 10)
5-pin BMC_SMB_2
(see p.7 or 10)
5-pin BMC_SMB_3
(see p.7 or 10)

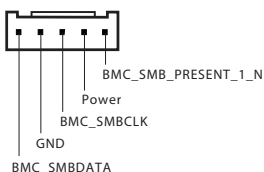

These headers are used for the SM BUS devices.

Thermal Sensor Header
(3-pin TR1)
(see p.7 or 10)



Please connect the thermal sensor cable to either pin 1-2 or pin 2-3 and the other end to the device which you wish to monitor its temperature.

2.9 Dr. Debug

Dr. Debug is used to provide code information, which makes troubleshooting even easier. Please see the diagrams below for reading the Dr. Debug codes.

Code	Description
00	Please check if the CPU is installed correctly and then clear CMOS.
0d	Problem related to memory, VGA card or other devices. Please clear CMOS, re-install the memory and VGA card, and remove other USB, PCI devices.
01 - 54 (except 0d), 5A - 60	Problem related to memory. Please re-install the CPU and memory then clear CMOS. If the problem still exists, please install only one memory module or try using other memory modules.
55	The Memory could not be detected. Please re-install the memory and CPU. If the problem still exists, please install only one memory module or try using other memory modules.
61 - 91	Chipset initialization error. Please press reset or clear CMOS.
92 - 99	Problem related to PCI-E devices. Please re-install PCI-E devices or try installing them in other slots. If the problem still exists, please remove all PCI-E devices or try using another VGA card.
A0 - A7	Problem related to IDE or SATA devices. Please re-install IDE and SATA devices. If the problem still exists, please clear CMOS and try removing all SATA devices.
b0	Problem related to memory. Please re-install the CPU and memory. If the problem still exists, please install only one memory module or try using other memory modules.
b4	Problem related to USB devices. Please try removing all USB devices.
b7	Problem related to memory. Please re-install the CPU and memory then clear CMOS. If the problem still exists, please install only one memory module or try using other memory modules.
d6	The VGA could not be recognized. Please clear CMOS and try re-installing the VGA card. If the problem still exists, please try installing the VGA card in other slots or use other VGA cards.
d7	The Keyboard and mouse could not be recognized. Please try re-installing the keyboard and mouse.
d8	Invalid Password.
FF	Please check if the CPU is installed correctly and then clear CMOS.

2.10 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from top to bottom to install those required drivers. Therefore, the drivers you install can work properly.

2.11 Dual/Quad LAN and Teaming Operation Guide

Dual/Quad LAN with Teaming enabled on this motherboard allows two/four single connections to act as one/two single connection(s) for twice/quadruple the transmission bandwidth, making data transmission more effective and improving the quality of transmission of distant images. Fault tolerance on the dual/quad LAN network prevents network downtime by transferring the workload from a failed port to a working port.



The speed of transmission is subject to the actual network environment or status even with Teaming enabled.

Before setting up Teaming, please make sure whether your Switch (or Router) supports Teaming (IEEE 802.3ad Link Aggregation). You can specify a preferred adapter in Intel PROSet. Under normal conditions, the Primary adapter handles all non-TCP/IP traffic. The Secondary adapter will receive fallback traffic if the primary fails. If the Preferred Primary adapter fails, but is later restored to an active status, control is automatically switched back to the Preferred Primary adapter.

Step 1

From **Device Manager**, open the properties of a team.

Step 2

Click the **Settings** tab.

Step 3

Click the **Modify Team** button.

Step 4

Select the adapter you want to be the primary adapter and click the **Set Primary** button.

If you do not specify a preferred primary adapter, the software will choose an adapter of the highest capability (model and speed) to act as the default primary. If a failover occurs, another adapter becomes the primary. The adapter will, however, rejoin the team as a non-primary.


2.12 M.2_SSD (NGFF) Module Installation Guide

The M.2, also known as the Next Generation Form Factor (NGFF), is a small size and versatile card edge connector that aims to replace mPCIe and mSATA. The M.2_SSD (NGFF) Socket 3 can accommodate either a M.2 SATA3 6.0 Gb/s module or a M.2 PCI Express module up to Gen 3 x4 (32Gb/s). Please be noted that the M.2_SSD (NGFF) Socket 3 is shared with the SATA Express connector; you can only choose either the M.2_SSD (NGFF) Socket 3 or the SATA Express connector to use.

**The M.2_SSD (NGFF) Socket 3 supports SSD drives. Please note that the WiFi or other non-SSD M.2 modules are not supported.*


***SSATA_3 connector is shared with the M2_1.*

Installing the M.2_SSD (NGFF) Module



Step 1

Prepare a M.2_SSD (NGFF) module and the screw.

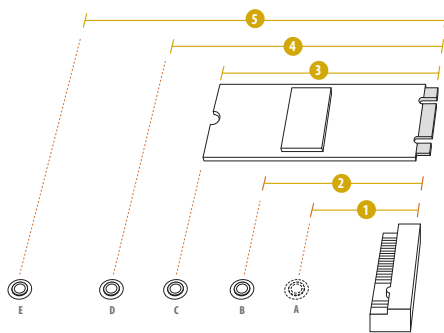

Step 2

Depending on the PCB type and length of your M.2_SSD (NGFF) module, find the corresponding nut location to be used.

No.	1	2	3	4	5
Nut Location	A	B	C	D	E
PCB Length	3cm	4.2cm	6cm	8cm	11cm

Module Type	Type2230	Type 2242	Type2260	Type 2280	Type 22110*
-------------	----------	-----------	----------	-----------	-------------


**Type 22110 is not Supported for EP2C612D24 / EP2C612D24-4L motherboard.*

Step 3



Move the standoff based on the module type and length. The standoff is placed at the nut location D by default. Skip Step 3 and 4 and go straight to Step 5 if you are going to use the default nut. Otherwise, release the standoff by hand.

Step 4

Peel off the yellow protective film on the nut to be used. Hand tighten the standoff into the desired nut location on the motherboard.

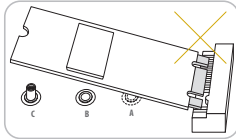**Step 5**

Align and gently insert the M.2 (NGFF) SSD module into the M.2 slot. Please be aware that the M.2 (NGFF) SSD module only fits in one orientation.

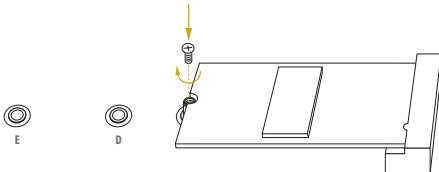**Step 6**

Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw as this might damage the module.

M.2_SSD (NGFF) Module Support List

PCIe Interface	SATA Interface
Plextor PX-G512M6e	ADATA AXNS381E-128GM-B
Plextor PX-G256M6e	ADATA AXNS381E-256GM-B
SanDisk SD6PP4M-128G	Crucial CT120M500SSD4/120G
SanDisk SD6PP4M-256G	Crucial CT240M500SSD4/240G
Samsung XP941-512G (MZHPU512HCGL)	Intel SSDSCKGW080A401/80G
	Kingston RBU-SM2280S3/120G

For the latest updates of M.2_SSD (NFGG) module support list, please visit our website for details: <http://www.asrockrack.com>

Chapter 3 UEFI Setup Utility

3.1 Introduction

This section explains how to use the UEFI SETUP UTILITY to configure your system. The UEFI chip on the motherboard stores the UEFI SETUP UTILITY. You may run the UEFI SETUP UTILITY when you start up the computer. Please press <F2> or during the Power-On-Self-Test (POST) to enter the UEFI SETUP UTILITY; otherwise, POST will continue with its test routines.

If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctrl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Item	Description
Main	To set up the system time/date information
Advanced	To set up the advanced UEFI features
IntelRCSetup	For Intel CPU and chipset settings
Server Mgmt	To manage the server
Security	To set up the security features
Boot	To set up the default system device to locate and load the Operating System
Event Logs	For event log configuration
Exit	To exit the current screen or the UEFI SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.

3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Tab>	Switch to next function
<Enter>	To bring up the selected screen
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the UEFI SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the UEFI SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen


3.2 Main Screen

Once you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview. The Main screen provides system overview information and allows you to set the system time and date.



3.3 Advanced Screen

In this section, you may set the configurations for the following items: ACPI Configuration, Configure Super IO Settings, Serial Port Console Redirection, CSM Parameters, USB Configuration, USB Configuration, System Configuration, Hard Disk S.M.A.R.T Settings, 3rd Storage Configuration, H/W Monitor, WHEA Configuration and Instant Flash.

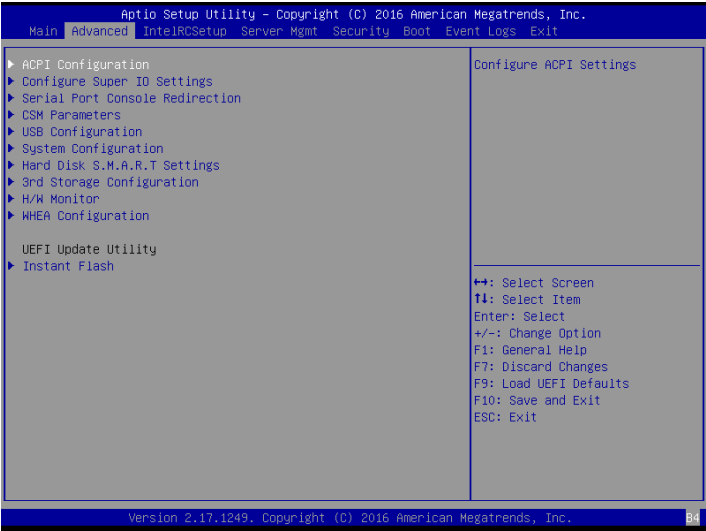

Setting wrong values in this section may cause the system to malfunction.

3.3.1 ACPI Configuration



PCIE Devices Power On

Use this item to enable or disable PCIE devices to turn on the system from the power-soft-off mode.

Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

3.3.2 Configure Super IO Settings



Serial Port 1 Configuration

Use this item to configure the onboard serial port 1.

Select and enter the "Serial Port 1 Configuration" and you will see the followings:

Serial Port

Use this item to enable or disable the onboard serial port.

Serial Port Address

Use this item to select an optimal setting for Super IO device.

SOL Configuration

Use this item to set parameters of SOL.

Select and enter the ""SOL Configuration" and you will see the followings:


SOL Port

Use this item to enable or disable the SOL port.

SOL Port Address

Use this item to select an optimal setting for Super IO device.

3.3.3 Serial Port Console Redirection

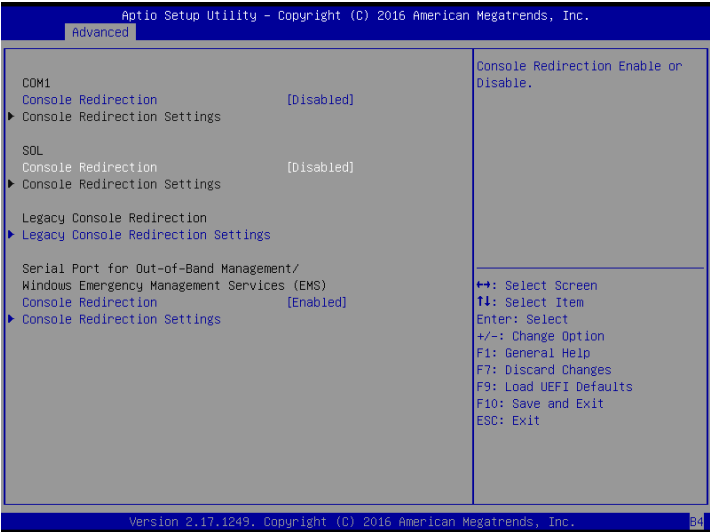

COM1 / SOL

Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Data Bits

Use this item to set the data transmission size. The options include [7] and [8] (Bits).

Parity

Use this item to select the parity bit. The options include [None], [Even], [Odd], [Mark] and [Space].

Stop Bits

The item indicates the end of a serial data packet. The standard setting is [1] Stop Bit. Select [2] Stop Bits for slower devices.

Flow Control

Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None] and [Hardware RTS/CTS].

VT-UTF8 Combo Key Support

Use this item to enable or disable the VT-UTF8 Combo Key Support for ANSI/VT100 terminals.

Recorder Mode

Use this item to enable or disable Recorder Mode to capture terminal data and send it as text messages.

Resolution 100x31

Use this item to enable or disable extended terminal resolution support.

Legacy OS Redirection Resolution

Use this item to select the number of rows and columns used in legacy OS redirection.

Putty Keypad

Use this item to select Function Key and Keypad on Putty.

Redirection After BIOS POST

If the [LoadBooster] is selected, legacy console redirection is disabled before booting to legacy OS. If [Always Enabled] is selected, legacy console redirection is enabled for legacy OS. The default value is [Always Enabled].

Legacy Console Redirection Settings

Legacy Serial Redirection Port

Select a COM port to display redirection of Legacy OS and Legacy OPROM Messages.

Serial Port for Out-of-Band Management/Windows Emergency Management Services (EMS)

Console Redirection

Use this option to enable or disable Console Redirection. If this item is set to Enabled, you can select a COM Port to be used for Console Redirection.

Console Redirection Settings

Use this option to configure Console Redirection Settings, and specify how your computer and the host computer to which you are connected exchange information.

Terminal Type

Use this item to select the preferred terminal emulation type for out-of-band management. It is recommended to select [VT-UTF8].

Option	Description
VT100	ASCII character set
VT100+	Extended VT100 that supports color and function keys
VT-UTF8	UTF8 encoding is used to map Unicode chars onto 1 or more bytes
ANSI	Extended ASCII character set

Bits Per Second

Use this item to select the serial port transmission speed. The speed used in the host computer and the client computer must be the same. Long or noisy lines may require lower transmission speed. The options include [9600], [19200], [57600] and [115200].

Flow Control


Use this item to set the flow control to prevent data loss from buffer overflow. When sending data, if the receiving buffers are full, a "stop" signal can be sent to stop the data flow. Once the buffers are empty, a "start" signal can be sent to restart the flow. Hardware flow uses two wires to send start/stop signals. The options include [None], [Hardware RTS/CTS], and [Software Xon/Xoff].

Data Bits

Parity

Stop Bits

3.3.4 CSM Configuration

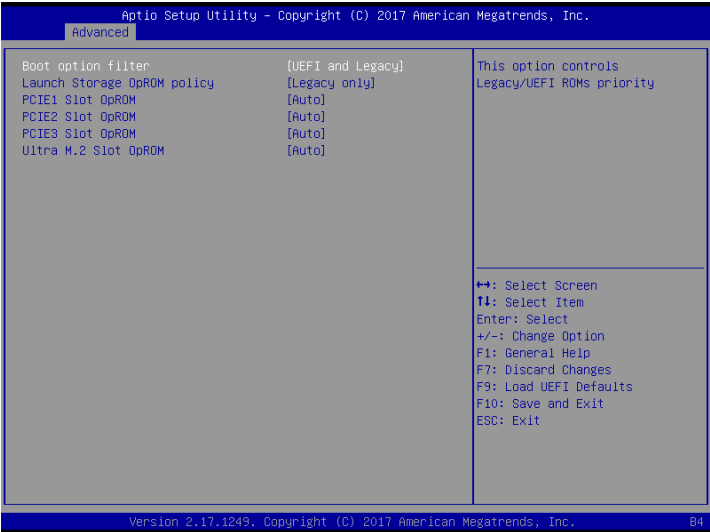

Boot Option Filter

This option controls Legacy/UEFI ROMs priority.

Launch Storage OpROM Policy

Select UEFI only to run those that support UEFI option ROM only. Select Legacy only to run those that support legacy option ROM only. Select Do not launch to not execute both legacy and UEFI option ROM.

PCIe1 Slot OpROM

Use this item to select PCIe1 Storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

PCIe2 Slot OpROM

Use this item to select PCIe2 Storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)


PCIE3 Slot OpROM

Use this item to select PCIE3 Storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

Ultra M.2 Slot OpROM

Use this item to select slot Storage and Network Option ROM policy. In Auto option, the default is Disabled with NVMe device, but it is Legacy with other devices. (This item can't select Video Option ROM policy.)

3.3.5 Trusted Computing

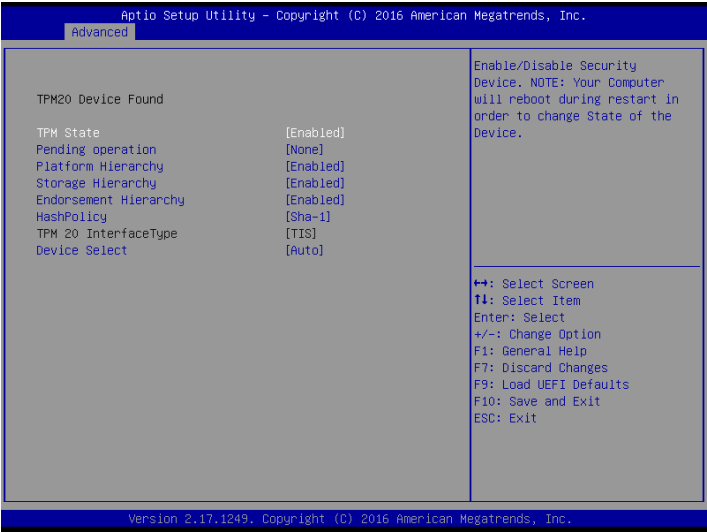

NOTE: Options vary depending on the version of your connected TPM module. Here is an example of TPM2.0.

TPM State

Use this item to enable or disable Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Pending Operation

Schedule an Operation for the Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Platform Hierarchy

Use this item to enable or disable Platform Hierarchy.

Storage Hierarchy

Use this item to enable or disable Storage Hierarchy.

Endorsement Hierarchy

Use this item to enable or disable Endorsement Hierarchy.

Hash Policy

Select the Hash policy to use. SHA-2 is most secure but might not be supported by all Operating Systems.

Device Select

TPM 1.2 will restrict support to TPM 1.2 devices; TPM 2.0 will restrict support to TPM 2.0 devices; Auto will support both with the default set to TPM 2.0 devices. If TPM 2.0 devices are not found, TPM 1.2 devices will be enumerated.

3.3.6 USB Configuration




Intel USB3.0 Mode

Use this item to select the mode of operation of Intel USB 3.0 controller. Configuration options: [Enabled], [Disabled], [Auto] and [Smart Auto]. If [Auto] is selected, all USB ports work as USB3.0 after boot to OS. If [Smart Auto] is selected, all USB ports work as USB3.0 after boot to OS and work as USB2.0 in deep sleep stages.

Legacy USB 3.0 Support

Use this option to enable or disable legacy support for USB devices. The default value is [Enabled].

3.3.7 System Configuration

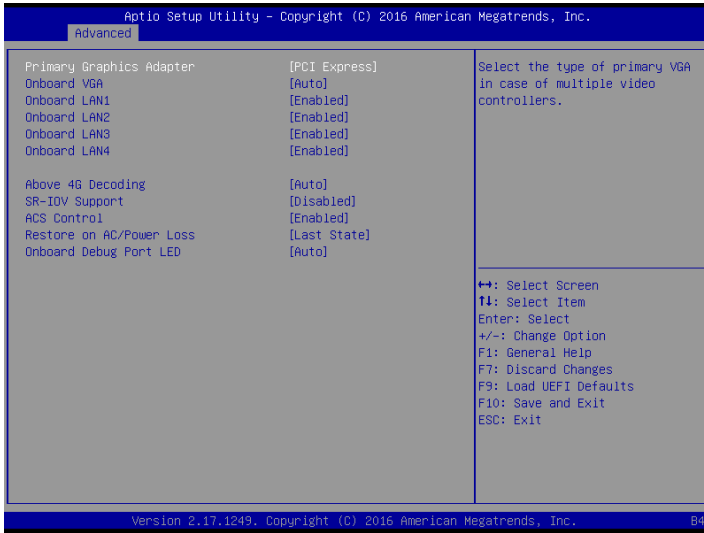

Primary Graphics Adapter

Use this item to select the type and primary VGA in case of multiple video controllers.

Onboard VGA

Use this to enable or disable the Onboard VGA function. The default value is [Auto].

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 features.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 features.

Onboard LAN3 *(EP2C612D24-4L only)*

This allows you to enable or disable the Onboard LAN3 features.

Onboard LAN4 *(EP2C612D24-4L only)*

This allows you to enable or disable the Onboard LAN4 features.

Above 4G Decoding

Enable or disable 64bit capable Devices to be decoded in Above 4G Address Space (only if the system supports 64 bit PCI decoding).

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.

ACS Control

Enable: Programs ACS only to Chipset PCIe Root Ports Bridges

Disable: Programs ACS to all PCIe bridges

Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers. If [Last State] is selected, it will recover to the state before AC/power loss.

Onboard Debug Port LED

Enable or disable the onboard Dr. Debug LED.

3.3.8 Hard Disk S.M.A.R.T Settings



Hard Disk S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled] and [Enabled].


3.3.9 3rd Storage Configuration



In this section, you may set the configurations or see the information of the connected 3rd storage device.

3.3.10 H/W Monitor

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

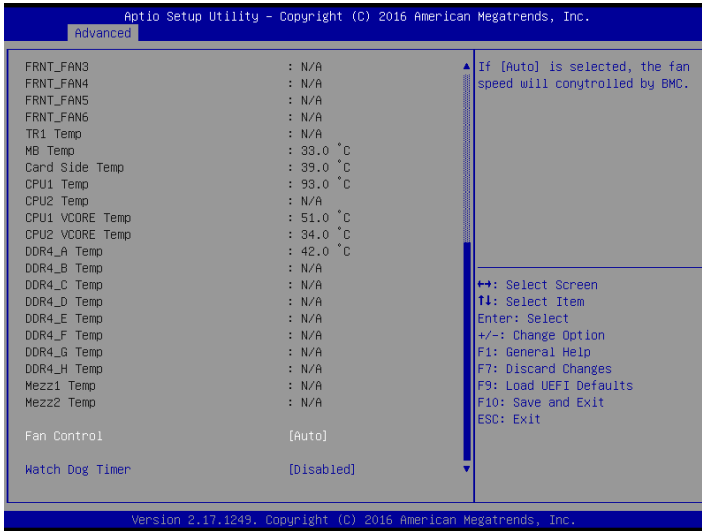

Fan Control

If [Auto] is selected, the fan speed will controlled by BMC.

If [Manual] is selected, configure the items below.

CPU1_FAN1

This allows you to set the CPU1 fan1's speed. The default value is [Smart Fan].

CPU2_FAN1

This allows you to set the CPU2 fan1's speed. The default value is [Smart Fan].

REAR_FAN1

This allows you to set the rear fan 1's speed. The default value is [Smart Fan].

FRNT_FAN1

This allows you to set the front fan 1's speed. The default value is [Smart Fan].

FRNT_FAN2

This allows you to set the front fan 2's speed. The default value is [Smart Fan].

FRNT_FAN3

This allows you to set the front fan 3's speed. The default value is [Smart Fan].

FRNT_FAN4

This allows you to set the front fan 4's speed. The default value is [Smart Fan].

FRNT_FAN5

This allows you to set the front fan 5's speed. The default value is [Smart Fan].

Smart Fan Control

This allows you to set the Smart fan's level speed.

Smart Fan Duty Control

Smart Fan Duty x (x means 1 to 11 stage)

This allows you to set duty cycle for each stage.

Smart Fan Temp Control

Smart Fan Temp x (x means 1 to 11 stage)

This allows you to set temperature for each stage.

Watch Dog Timer

This allows you to enable or disable the Watch Dog Timer. The default value is [Disabled].

3.3.11 WHEA Configuration



WHEA Support

Use this item to enable or disable Windows Hardware Error Architecture.

System Error

Use this item to enable or disable System Error feature. When it is set to [Enabled], you can configure Memory Error and PCIe Error log features.

Memory Error

Memory enabling and logging setup option.

Correctable Error Threshold

Correctable Error Threshold (1 - 32767) used for sparing, tagging, and leaky bucket.

PCIe Error

PCIe enabling and logging setup option.

Corrected Error Enable

Use this item to enable or disable PCIe Correctable errors.

Uncorrected Error Enable

Use this item to enable or disable PCIe Uncorrectable errors.

Fatal Error Enable


Use this item to enable or disable PCIe Fatal errors.

3.3.12 Instant Flash


Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like MS-DOS or Windows[®]. Just save the new UEFI file to your USB flash drive, floppy disk or hard drive and launch this tool, then you can update your UEFI only in a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after the UEFI update process is completed.

3.4 IntelRCSetup

In this section, you may set the configurations for the following items: Processor Configuration, CPU Power Management Configuration, QPI Configuration, Memory Configuration, IIO Configuration, PCH Configuration and Server ME Configuration.

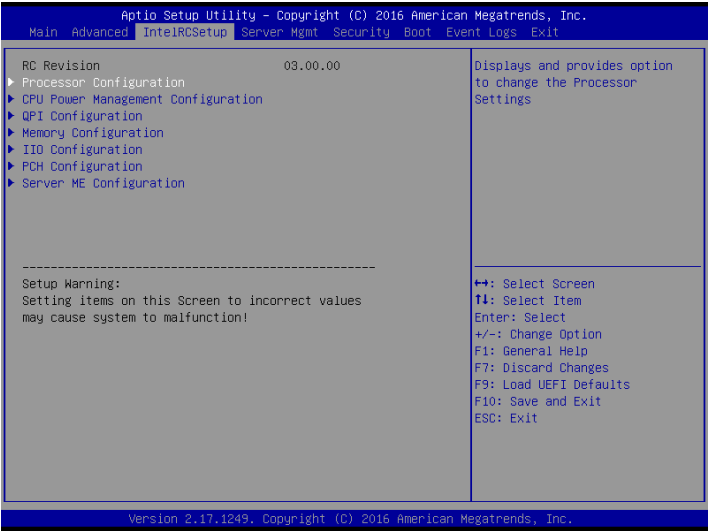

3.4.1 Processor Configuration

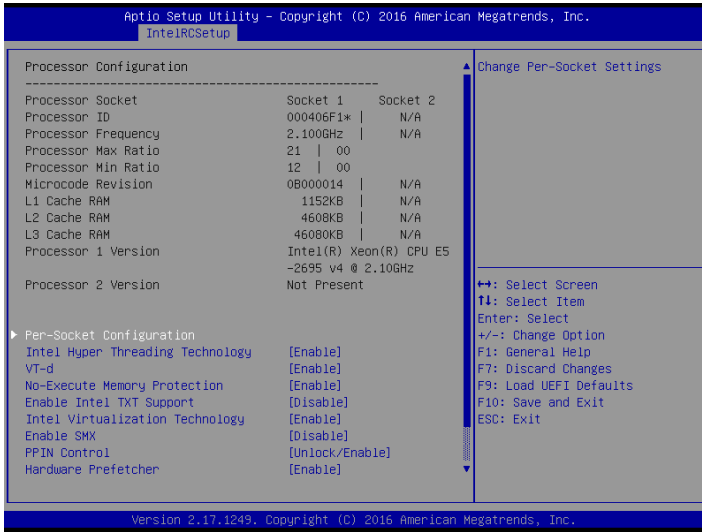

Per-Socket Configuration

Change Per-Socket Settings.

CPU Socket 1 Configuration

Active Processor Cores

Enter the number of cores to be enabled. 0 means all cores.

CPU Socket 2 Configuration

Active Processor Cores

Enter the number of cores to be enabled. 0 means all cores.

Intel Hyper Threading Technology

Intel Hyper Threading Technology allows multiple threads to run on each core, so that the overall performance on threaded software is improved.

VT-d

Intel® Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

No-Execute Memory Protection

Processors with No-Execution Memory Protection Technology may prevent certain classes of malicious buffer overflow attacks.

Enable Intel TXT Support

Enable Intel Trusted Execution Technology configuration. Please disable "EX DFX Features" when TXT is enabled.

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Enable SMX

Use this item to enable Safer Mode Extensions.

PPIN Control

Use this item to unlock and Enable/Disable PPIN Control.

Hardware Prefetcher

Automatically prefetch data and code for the processor. Enable for better performance.

Adjacent Cache Prefetch

Automatically prefetch the subsequent cache line while retrieving the currently requested cache line. Enable for better performance.


DCU Streamer Prefetcher

DCU streamer prefetcher is an L1 data cache prefetcher (MSR 1A4h [2]).

DCU IP Prefetcher

DCU IP prefetcher is an L1 data cache prefetcher (MSR 1A4h [3]).

3.4.2 CPU Power Management Configuration

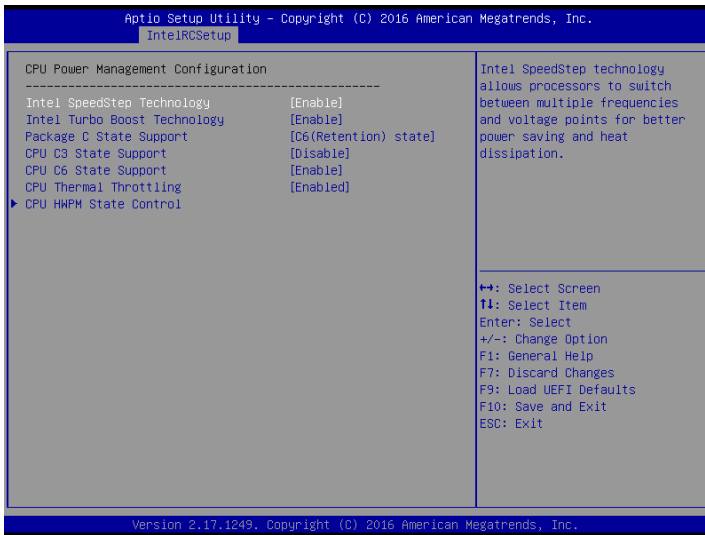

Intel SpeedStep Technology

Intel SpeedStep technology is Intel's new power saving technology. Processors can switch between multiple frequencies and voltage points to enable power saving. The default value is [Enabled]. Configuration options: [Enabled] and [Disabled]. If you install Windows® Vista™ / 7 / 8 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel(R) SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Use this item to enable or disable Intel Turbo Boost Technology. Turbo Boost allows processor cores to run faster than marked frequency in specific conditions. The default value is [Enabled].

Package C State Support

Enable CPU, PCIe, Memory, Graphics C State Support for power saving.

CPU C3 State Support

Enable C3 sleep state for lower power consumption.

CPU C6 State Support

Enable C6 deep sleep state for lower power consumption.

CPU Thermal Throttling

Enable CPU internal thermal control mechanisms to keep the CPU from overheating.

CPU HWPM State Control

CPU HWPM State Control controls configuration sub menu, includes Native and 00B nd etc.


Enable CPU HWPM

Enable CPU HWPM for CPU for better Energy performance.

Enable CPU Autonomous Cstate

Enable CPU Autonomous Cstate which is CPU converts HALT instruction to MWAIT.

3.4.3 QPI Configuration

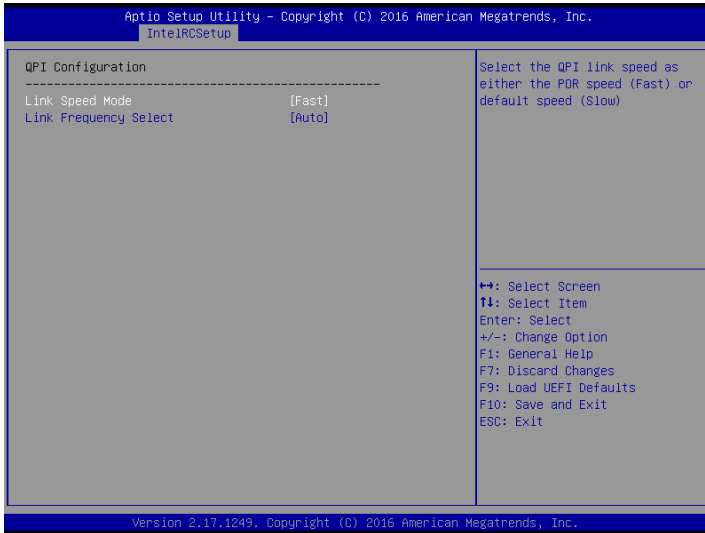


Link Speed Mode

Select the QPI link speed as either the POR speed (Fast) or default speed (Slow).

Link Frequency Select

Allows for selecting the QPI Link Frequency.

3.4.4 Memory Configuration

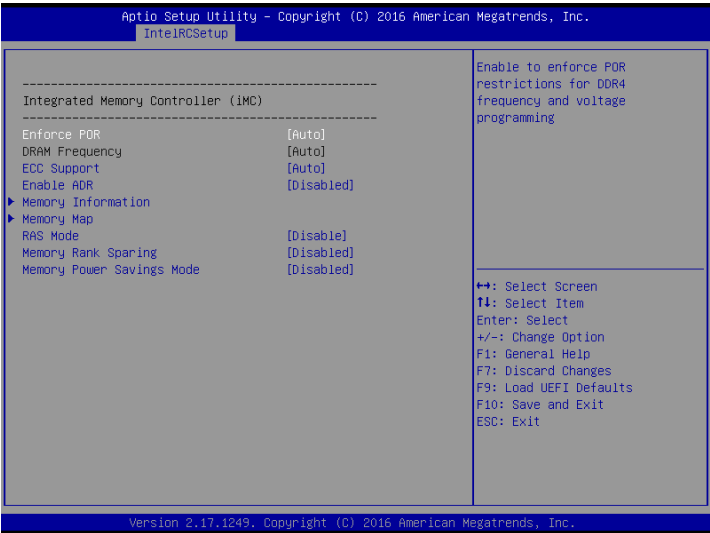

Enforce POR

Enable to enforce POR restrictions for DDR4 frequency and voltage programming.

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assign the appropriate frequency automatically.

ECC Support

Use this item to enable or disable DDR ECC Support.

Enable ADR

Use this item to enable the ADR.

Memory Information

Displays memory topology with DIMM population information.

Memory Map

Set memory mapping settings.

Channel Interleaving

Select to configure Channel Interleaving settings.

Rank Interleaving

Select to configure Rank Interleaving settings.

RAS Mode

Enable or disable RAS modes. Enabling Sparing and Mirroring is not supported. If enabled, Sparing will be selected.


Memory Rank Sparing

Enable or disable Memory Rank Sparing.

Memory Power Savings Mode

Use this item to configure CKE and related Memory Power Savings Features.

3.4.5 IIO Configuration

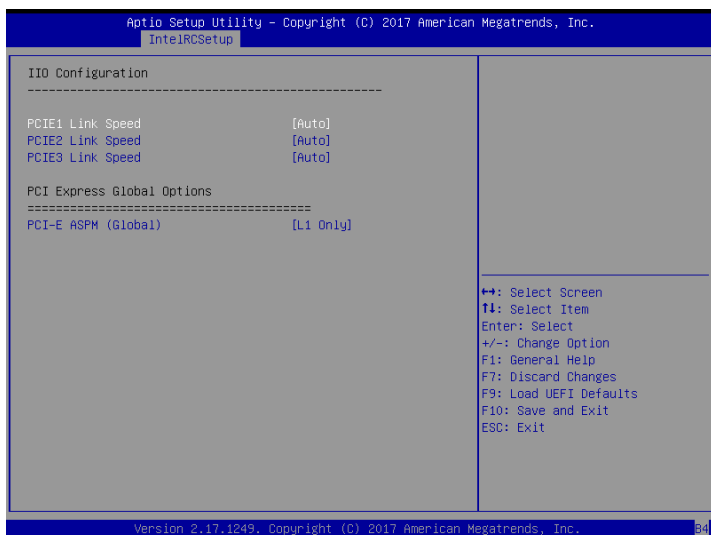

PCI-E 1 Link Speed

This allows you to select PCI-E 1 Link Speed. The default value is [Auto].

PCI-E 2 Link Speed

This allows you to select PCI-E 2 Link Speed. The default value is [Auto].


PCI-E 3 Link Speed

This allows you to select PCI-E 3 Link Speed. The default value is [Auto].

PCI-E ASPM Support

This option enables or disables the ASPM support for all downstream devices.

3.4.6 PCH Configuration

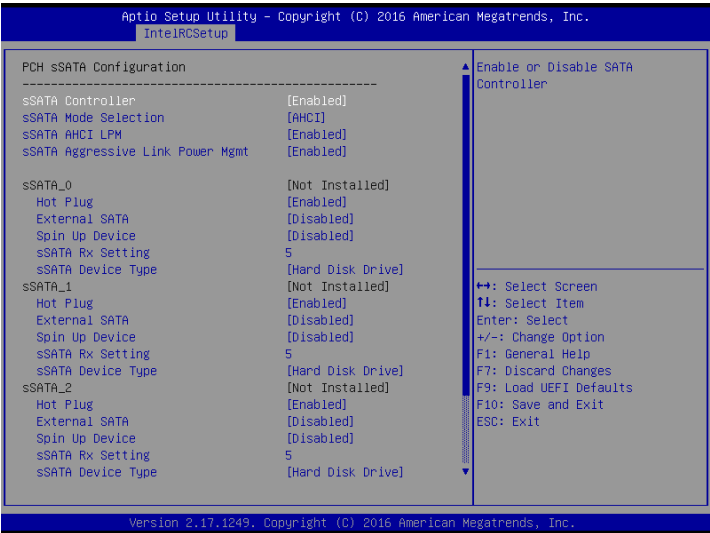

PCH sSATA Configuration

sSATA devices and settings

sSATA Controller

Use this item to enable or disable SATA Controller.

sSATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

sSATA AHCI LPM

Use this item to enable or disable Link Power Management.

sSATA Aggressive Link Power Mgmt

Use this item to enable or disable SALP.

sSATA Port 0 / 1 / 2 / 3

Hot Plug

Designates this port as Hot Pluggable.

External SATA

External SATA configuration.

Spin Up Device

If enabled for any of ports, Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.

sSATA Rx Setting

Adjust sSATA DTLE DATA Values (0-15).

sSATA Device Type

Identify the SATA port connected to Solid State Drive or Hard Disk Drive.

PCH SATA Configuration

SATA devices and settings

SATA Controller

Use this item to enable or disable SATA Controller.

SATA Mode Selection

Identify the SATA port is connected to Solid State Drive or Hard Disk Drive. Press <Ctrl+I> to enter RAID ROM during UEFI POST process.

SATA AHCI LPM

Use this item to enable or disable Link Power Management.

Support Aggressive Link Power Mgmt

Use this item to enable or disable SALP.

SATA Port 0 / 1 / 2 / 3 / 4 / 5

Hot Plug

Designates this port as Hot Pluggable.

External SATA

External SATA configuration.

Spin Up Device

If enabled for any of ports, Staggered Spin Up will be performed and only the drives which have this option enabled will spin up at boot. Otherwise all drives spin up at boot.


SATA Rx Setting

Adjust SATA DTLE DATA Values (0-15).

SATA Device Type

Identify the SATA port connected to Solid State Drive or Hard Disk Drive.

3.4.7 Server ME Configuration

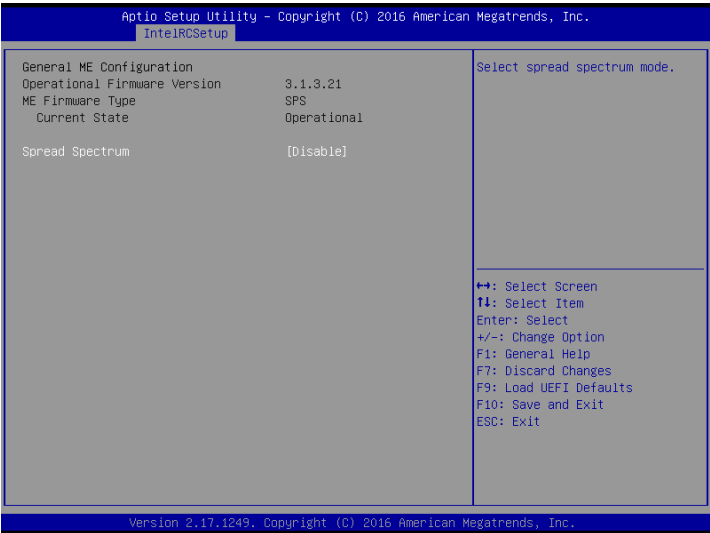

Spread Spectrum

Use this item to select spread specturm mode.

3.5 Server Mgmt



Wait For BMC

Wait For BMC response for specified time out. In PILOTII, BMC starts at the same time when BIOS starts during AC power ON. It takes around 30 seconds to initialize Host to BMC interfaces.

3.5.1 System Event Log



SEL Components

Change this to enable or disable all features of System Event Logging during boot.

Erase SEL

Use this to choose options for erasing SEL.

When SEL is Full

Use this to choose options for reactions to a full SEL.

Log EFI Status Codes

Use this item to disable the logging of EFI Status Codes or log only error code or only progress or both.

3.5.2 BMC Network Configuration



Lan Channel (Failover)

Manual setting IPMI LAN

If [No] is selected, the IP address is assigned by DHCP. If you prefer using a static IP address, toggle to [Yes], and the changes take effect after the system reboots. The default value is [No].

Configuration Address Source

Select to configure BMC network parameters statically or dynamically (by BIOS or BMC). Configuration options: [Static] and [DHCP].

Static: Manually enter the IP Address, Subnet Mask and Gateway Address in the BIOS for BMC LAN channel configuration.

DHCP: IP address, Subnet Mask and Gateway Address are automatically assigned by the network's DHCP server.



When [DHCP] or [Static] is selected, do NOT modify the BMC network settings on the IPMI web page.



The default login information for the IPMI web interface is:

Username: admin

Password: admin

For more instructions on how to set up remote control environment and use the IPMI management platform, please refer to the IPMI Configuration User Guide or go to the Support website at: <http://www.asrockrack.com/support/ipmi.asp>

BMC Mac Backup Tool

Use this to restore BMC Mac from the backup.

3.6 Security

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.



Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password

Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

3.7 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.



Boot Option #1

Use this item to set the system boot order.

Boot From Onboard LAN

Use this item to enable or disable the Boot From Onboard LAN feature.

Setup Prompt Timeout

This shows the number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.

Bootup Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

Boot Beep

Select whether the Boot Beep should be turned on or off when the system boots up. Please note that a buzzer is needed.


Full Screen Logo

Use this item to enable or disable OEM Logo. The default value is [Enabled].

AddOn ROM Display

Use this option to adjust AddOn ROM Display. If you enable the option “Full Screen Logo” but you want to see the AddOn ROM information when the system boots, please select [Enabled]. Configuration options: [Enabled] and [Disabled]. The default value is [Enabled].

3.8 Event Logs

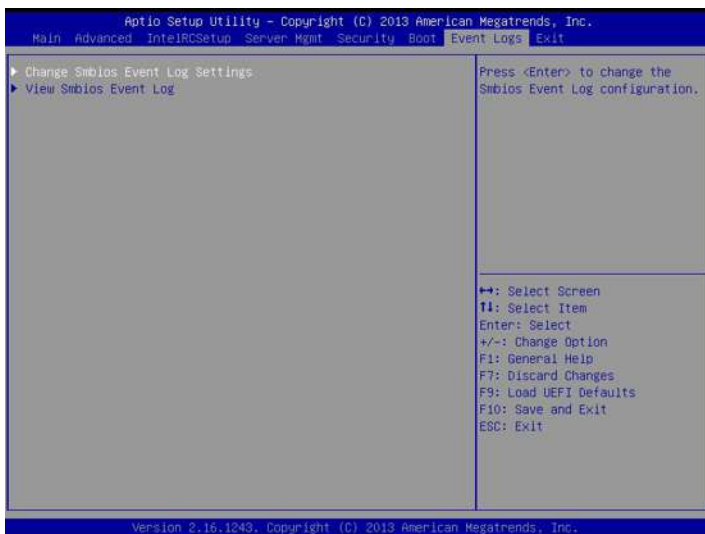

Change Smbios Event Log Settings

This allows you to configure the Smbios Event Log Settings.

When entering the item, you will see the followings:

Smbios Event Log

Use this item to enable or disable all features of the SMBIOS Event Logging during system boot.

Erase Event Log

The options include [No], [Yes, Next reset] and [Yes, Every reset]. If Yes is selected, all logged events will be erased.

When Log is Full

Use this item to choose options for reactions to a full Smbios Event Log. The options include [Do Nothing] and [Erase Immediately].

MECI (Multiple Event Count Increment)

Use this item to enter the increment value for the multiple event counter. The valid range is from 1 to 255.

METW (Multiple Event Time Window)

Use this item to specify the number of minutes which must pass between duplicate log entries which utilize a multiple-event counter. The value ranges from 0 to 99 minutes.


View Smbios Event Log

Press <Enter> to view the Smbios Event Log records.



All values changed here do not take effect until computer is restarted.

3.9 Exit Screen

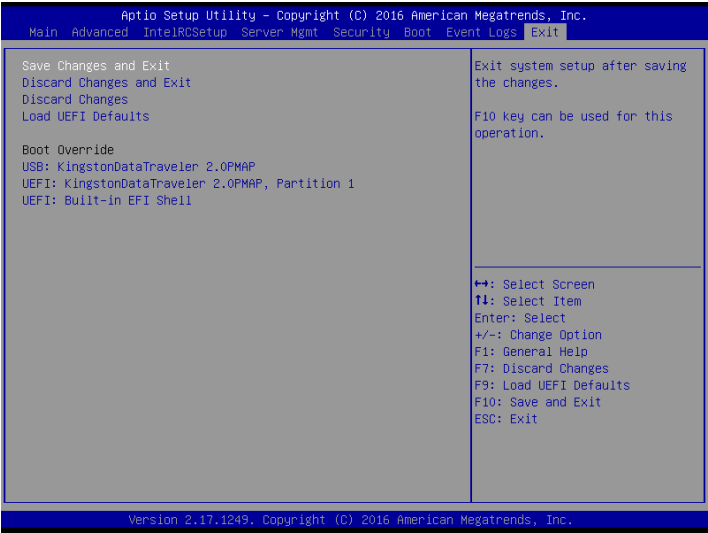

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop-out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop-out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop-out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Load UEFI default values for all the setup questions. F9 key can be used for this operation.

Boot Override

These items displays the available devices. Select an item to start booting from the selected device.

Chapter 4 Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® Server 2008 R2 SP1 / 2012 / 2012 R2 / Linux compliant. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

**Please download the Intel® SATA Floppy Image driver from the ASRock Rack's website (www.asrockrack.com) to your USB drive or simply install the SATA driver from the Support CD while installing OS in SATA RAID mode.*

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard's features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu does not appear automatically, locate and double click on the file "ASRSetup.exe" from the root folder in the Support CD to display the menu.

4.2.2 Drivers Menu

The Drivers Menu shows the available device's drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the application softwares that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 Contact Information

If you need to contact ASRock Rack or want to know more about ASRock Rack, welcome to visit ASRock Rack's website at <http://www.ASRockRack.com>; or you may contact your dealer for further information.

Chapter 5 Troubleshooting

5.1 Troubleshooting Procedures

Follow the procedures below to troubleshoot your system.



Always unplug the power cord before adding, removing or changing any hardware components. Failure to do so may cause physical injuries to you and damages to motherboard components.

1. Disconnect the power cable and check whether the PWR LED is off.
2. Unplug all cables, connectors and remove all add-on cards from the motherboard.
Make sure that the jumpers are set to default settings.
3. Confirm that there are no short circuits between the motherboard and the chassis.
4. Install a CPU and fan on the motherboard, then connect the chassis speaker and power LED.

If there is no power...

1. Confirm that there are no short circuits between the motherboard and the chassis.
2. Make sure that the jumpers are set to default settings.
3. Check the settings of the 115V/230V switch on the power supply.
4. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.

If there is no video...

1. Try replugging the monitor cables and power cord.
2. Check for memory errors.

If there are memory errors...

1. Verify that the DIMM modules are properly seated in the slots.
2. Use recommended DDR4 2133 R-DIMMs.
3. If you have installed more than one DIMM modules, they should be identical with the same brand, speed, size and chip-type.
4. Try inserting different DIMM modules into different slots to identify faulty ones.
5. Check the settings of the 115V/230V switch on the power supply.

Unable to save system setup configurations...

1. Verify if the battery on the motherboard provides ~3VDC. Install a new battery if it does not.
2. Confirm whether your power supply provides adequate and stable power.

Other problems...

1. Try searching keywords related to your problem on ASRock Rack's FAQ page:
<http://www.asrockrack.com/support>

5.2 Technical Support Procedures

If you have tried the troubleshooting procedures mentioned above and the problems are still unsolved, please contact ASRock Rack's technical support with the following information:

1. Your contact information
2. Model name, BIOS version and problem type.
3. System configuration.
4. Problem description.

You may contact ASRock Rack's technical support at:
<http://www.asrockrack.com/support/tsd.asp>

5.3 Returning Merchandise for Service

For warranty service, the receipt or a copy of your invoice marked with the date of purchase is required. By calling your vendor or going to our RMA website (<http://event.asrockrack.com/tsd.asp>) you may obtain a Returned Merchandise Authorization (RMA) number.

The RMA number should be displayed on the outside of the shipping carton which is mailed prepaid or hand-carried when you return the motherboard to the manufacturer. Shipping and handling charges will be applied for all orders that must be mailed when service is complete.

This warranty does not cover damages incurred in shipping or from failure due to alteration, misuse, abuse or improper maintenance of products.

Contact your distributor first for any product related problems during the warranty period.

Chapter 6 Net Framework Installation Guide


To let Intel® RSTe works properly, it is required to install Net Framework. Please follow the steps below to enable “.Net Framework” feature on Microsoft® Windows® Server 2008 R2.

6.1 Installing .Net Framework 3.5.1 (For Server 2008 R2)


1. Double-click the Server Manager icon in the Windows system tray.




2. Click Add Features in the right hand pane.

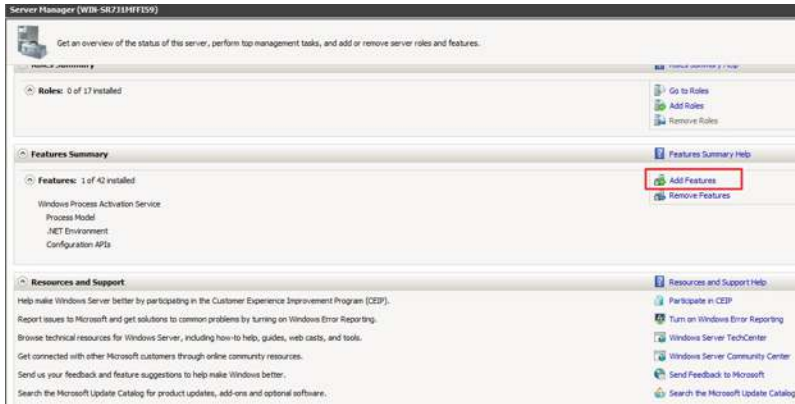


3. Check the box next to .Net Framework 3.5.1 and then click **Next**.

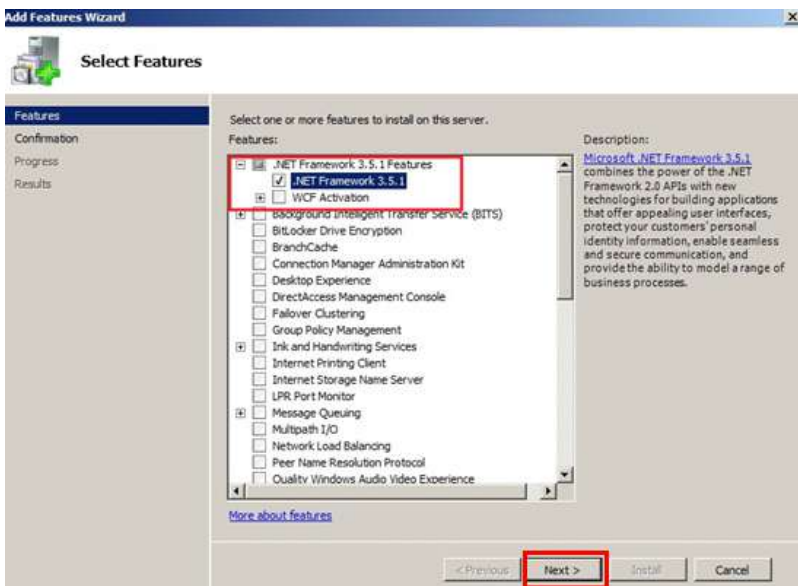

4. Click **Next** to continue.

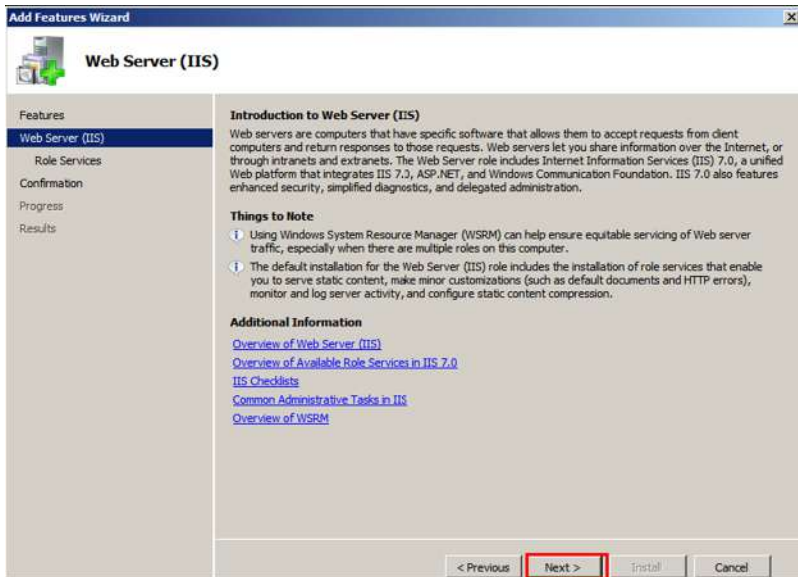

5. Click **Install** to start installing .Net Framework 3.5.1.

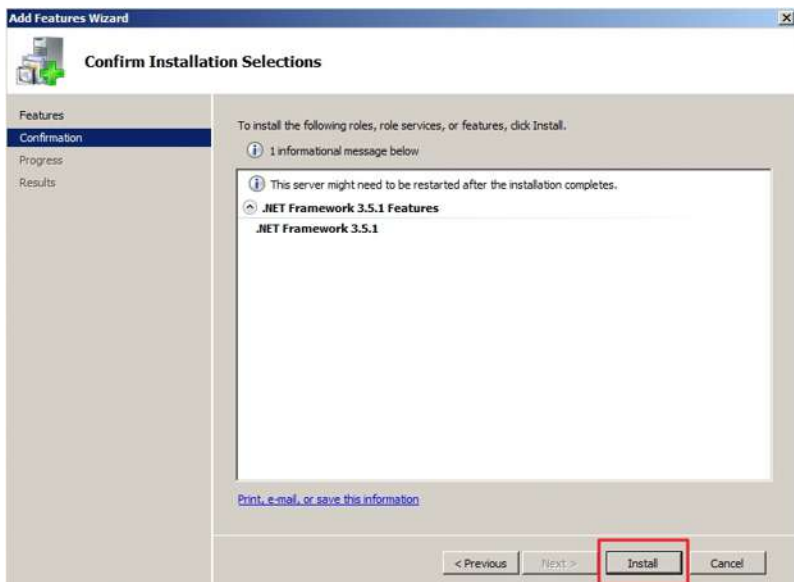

6. After the installation completes, click **Close**.

