



K7VT4A+

# User Manual

Version 1.0

Published May 2004

Copyright©2004 ASRock INC. All rights reserved.

---

## Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

## Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

**ASRock Website: <http://www.asrock.com>**

---

# Contents

<b>1. Introduction</b>	<b>4</b>
1.1 Package Contents	4
1.2 Specifications	5
1.3 Motherboard Layout	7
1.4 ASRock I/O™	8
<b>2. Installation</b>	<b>9</b>
Pre-installation Precautions	9
2.1 CPU Installation	10
2.2 Installation of CPU Fan and Heatsink	10
2.3 Installation of Memory Modules (DIMM)	11
2.4 Expansion Slots (PCI and AGP Slots)	12
2.5 Jumpers Setup	13
2.6 Onboard Headers and Connectors	15
<b>3. BIOS Setup</b>	<b>17</b>
3.1 BIOS Setup Utility	17
3.1.1 BIOS Menu Bar	17
3.1.2 Legend Bar	18
3.2 Main Menu	18
3.3 Advanced, Security, Power, Boot, and Exit Menus	20
<b>4. Software Support</b>	<b>21</b>
4.1 Install Operating System	21
4.2 Support CD Information	21
4.2.1 Running Support CD	21
4.2.2 Drivers Menu	21
4.2.3 Utilities Menu	21
4.2.4 ASRock "PC-DIY Live Demo" Program	21
4.2.5 Contact Information	21
<b>Appendix</b>	<b>22</b>
1. Advanced BIOS Setup Menu	22
2. Security Setup Menu	27
3. Power Setup Menu	28
4. Boot Setup Menu	29
5. Exit Menu	30

---

# 1. Introduction

Thank you for purchasing ASRock K7VT4A+ motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

Chapter 1 and 2 of this manual contain introduction of the motherboard and step-by-step installation guide. Chapter 3 and 4 contain basic BIOS setup and support CD information. More information of advanced BIOS setup can be found in Appendix on page 22 for advanced users' reference.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest memory and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com>

## 1.1 Package Contents

- 1 x ASRock K7VT4A+ Motherboard  
(ATX Form Factor: 12.0-in x 7.0-in, 30.5 cm x 17.8 cm)
- 1 x ASRock K7VT4A+ Quick Installation Guide
- 1 x ASRock K7VT4A+ Support CD
- 1 x Ultra ATA 66/100/133 IDE Ribbon Cable (80-conductor)
- 1 x 3.5-in Floppy Drive Ribbon Cable
- 1 x ASRock I/O™ Shield

---

## 1.2 Specifications


<b>Platform:</b>	ATX Form Factor: 12.0-in x 7.0-in, 30.5 cm x 17.8 cm
<b>CPU:</b>	Supports Socket A (462 pins) for AMD Athlon™ / Athlon™ XP / Duron™ processor
<b>Chipsets:</b>	North Bridge: VIA KT400A, FSB@333 MHz South Bridge: VIA VT8235CD, supports USB 2.0, ATA 133
<b>Memory:</b>	2 DDR DIMM Slots: DDR1 and DDR2 PC3200 (DDR400) for 1 DDR DIMM slot, Max. 1GB PC2100 (DDR266) / PC2700 (DDR333) for 2 DDR DIMM slots, Max. 2GB
<b>IDE:</b>	IDE1: ATA 133 / Ultra DMA Mode 6 IDE2: ATA 133 / Ultra DMA Mode 6 Supports up to 4 IDE devices
<b>Floppy Port:</b>	Supports up to 2 floppy disk drives
<b>Audio:</b>	5.1 channels AC'97 Audio
<b>LAN:</b>	Speed: 802.3u (10/100 Ethernet), supports Wake-On-LAN
<b>Hardware Monitor:</b>	CPU temperature sensing Motherboard temperature sensing CPU overheat shutdown to protect CPU life (ASRock U-COP)(see <b>CAUTION 1</b> ) CPU fan tachometer Chassis fan tachometer Voltage monitoring: +12V, +5V, +3.3V, Vcore
<b>PCI slots:</b>	5 slots with PCI Specification 2.2
<b>AGP slot:</b>	1 AGP slot, supports 1.5V, 8X/4X AGP card (see <b>CAUTION 2</b> )
<b>USB 2.0:</b>	6 USB 2.0 ports: includes 4 default USB 2.0 ports on the rear panel, plus one header to support 2 additional USB 2.0 ports (see <b>CAUTION 3</b> )
<b>ASRock I/O™:</b>	1 PS/2 keyboard port, 1 PS/2 mouse port, 1 serial port: COM1, 1 parallel port: ECP/EPP support, 1 RJ-45 port, 4 default USB 2.0 ports, Audio Jack: Line Out / Line In / Microphone + Game port
<b>BIOS:</b>	AMI legal BIOS, Supports "Plug and Play", ACPI 1.1 compliance wake up events, SMBIOS 2.3.1 support, CPU frequency stepless control (only for advanced users' reference, see <b>CAUTION 4</b> )
<b>OS:</b>	Microsoft® Windows® 98 SE / ME / 2000 / XP compliant

---

## **CAUTION!**

1. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
2. Do NOT use a 3.3V AGP card on the AGP slot of this motherboard! It may cause permanent damage!
3. Power Management for USB 2.0 works fine under Microsoft® Windows® XP SP1/2000 SP4. It may not work properly under Microsoft® Windows® 98/ME. Please refer to Microsoft® official document at <http://www.microsoft.com/whdc/hwdev/bus/USB/USB2support.msp>
4. Although this motherboard offers stepless control, it is not recommended to perform over clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU. The CPU host frequency of this motherboard is determined by the jumper-setting. You must set the FSB jumper according to your AMD CPU before you use the "Manual" option as the FSB setting in BIOS setup to perform over clocking. Please check page 22 for details.


# 1.3 Motherboard Layout

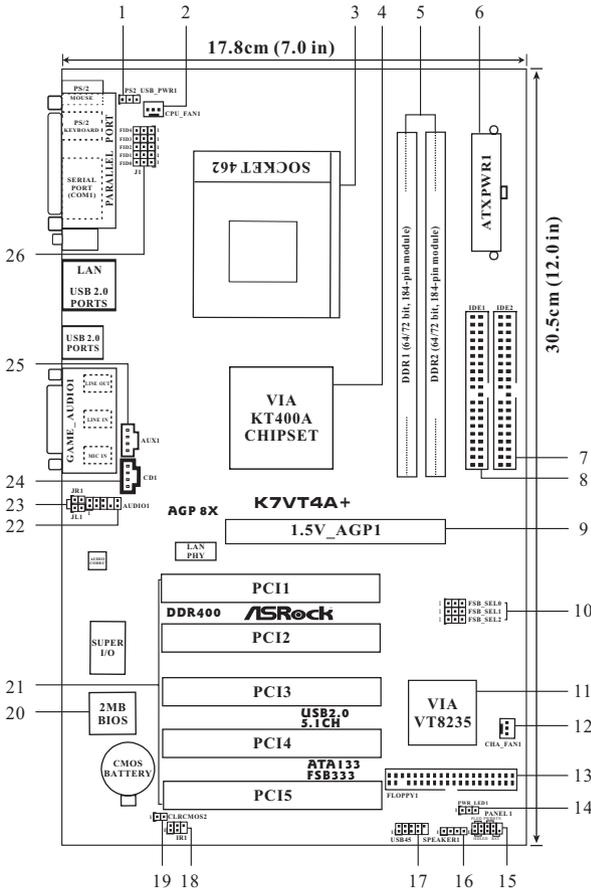

- |    |   |    |  |
|----|---|----|--|
| 1  | PS2_USB_PWR1 Jumper                               | 14 | Power LED Connector (PWR_LED1)           |
| 2  | CPU Fan Connector (CPU_FAN1)                      | 15 | System Panel Connector (PANEL1)          |
| 3  | CPU Socket  | 16 | Chassis Speaker Connector (SPEAKER1)     |
| 4  | North Bridge Controller                           | 17 | USB 2.0 Connector (USB45, Blue)          |
| 5  | 184-pin DDR DIMM Slots (DDR1-2)                   | 18 | Infrared Module Connector (IR1)          |
| 6  | ATX Power Connector (ATXPWR1)                     | 19 | Clear CMOS Jumper (CLRCMOS2)             |
| 7  | Secondary IDE Connector (IDE2, Black)             | 20 | Flash Memory                             |
| 8  | Primary IDE Connector (IDE1, Blue)                | 21 | PCI Slots (PCI1-5)                       |
| 9  | AGP Slot (1.5V_AGP1)                              | 22 | Front Panel Audio Connector (AUDIO1)     |
| 10 | FSB Select Jumpers (FSB_SEL0, FSB_SEL1, FSB_SEL2) | 23 | JR1 / J1 Jumpers                         |
| 11 | South Bridge Controller                           | 24 | Internal Audio Connector: CD1 (Black)    |
| 12 | Chassis Fan Connector (CHA_FAN1)                  | 25 | Internal Audio Connector: AUX1 (White)   |
| 13 | Floppy Connector (FLOPPY1)                        | 26 | J1 Jumper (FID0, FID1, FID2, FID3, FID4) |

---

## 1.4 ASRock I/O™

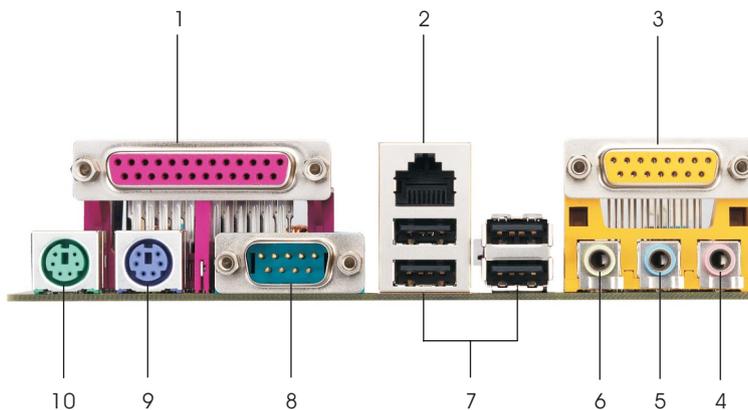

**1** Parallel Port

**2** RJ-45 Port

**3** Game Port

**4** Microphone (Pink)

**5** Line In (Light Blue)

**6** Line Out (Lime)

**7** USB 2.0 Ports

**8** Serial Port (COM1)

**9** PS/2 Keyboard Port (Purple)

**10** PS/2 Mouse Port (Green)

---

## 2. Installation

K7VT4A+ is an ATX form factor (12.0-in x 7.0-in, 30.5 cm x 17.8 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.

### Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the motherboard to the chassis, please do not over-tighten the screws! Doing so may damage the motherboard.

---

## 2.1 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that its marked corner matches the base of the socket lever.
- Step 3. Carefully insert the CPU into the socket until it fits in place.



The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

- Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.



Step 1



Step 2, 3



Step 4

## 2.2 Installation of CPU Fan and Heatsink

AMDAthlon™/Athlon™XP/Duron™ family CPUs with a speed of 600 MHz and higher require larger heatsink and cooling fan. Thermal grease between the CPU and the heatsink is also needed to improve heat transfer. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU\_FAN connector (CPU\_FAN1, see page 7, No. 2). For proper installation, please kindly refer to the instruction manuals of the CPU fan and heatsink vendors.

---



## 2.3 Installation of Memory Modules (DIMM)

K7VT4A+ motherboard provides two 184-pin DDR (Double Data Rate) DIMM slots.



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

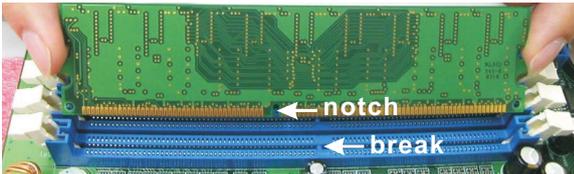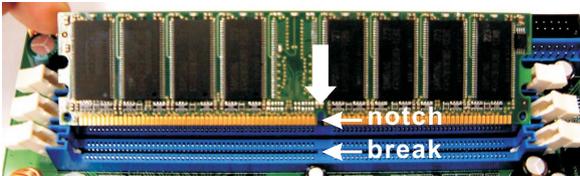

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

- Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

---

## 2.4 Expansion Slots (PCI and AGP Slots)

There are 5 PCI slots and 1 AGP slot on K7VT4A+ motherboard.

**PCI slots:** PCI slots are used to install expansion cards that have the 32-bit PCI interface.

**AGP slot:** The AGP slot is used to install a graphics card. The ASRock AGP slot has a special design of clasp that can securely fasten the inserted graphics card.




Please do NOT use a 3.3V AGP card on the AGP slot of this motherboard! It may cause permanent damage! For the voltage information of your graphics card, please check with the graphics card vendors.

### Installing an expansion card

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

## 2.5 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when jumper cap is placed on these 2 pins.

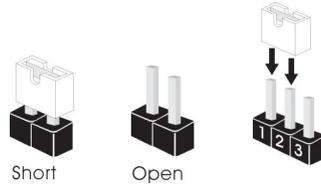

Jumper	Setting		
FSB Select Jumpers	1 2	OPEN	2 3
(FSB_SEL0,	FSB_SEL0	FSB_SEL0	FSB_SEL0
FSB_SEL1,	FSB_SEL1	FSB_SEL1	FSB_SEL1
FSB_SEL2)	FSB_SEL2	FSB_SEL2	FSB_SEL2
(see p.7 item 10)	FSB 200MHz	FSB 266MHz	FSB 333MHz

Note: The CPU FSB frequency of this motherboard is determined by jumper-setting. You must adjust “FSB Select Jumpers” according to the FSB of your AMD CPU. Please follow the figures above to set the CPU FSB frequency.

PS2_USB_PWR1	1 2	2 3	Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.
(see p.7 item 1)	+5V	+5VSB	

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

JR1 / JL1 Jumpers	JR1	JL1
(see p.7 item 23)		

Note: If JR1 and JL1 Jumpers are short, both the front panel and the rear panel audio connectors can work.


Clear CMOS Jumper	
(CLR CMOS2)	2-pin jumper
(see p.7 item 19)	

Note: CLR CMOS2 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short the Clear CMOS jumper for 5 seconds. After shorting the Clear CMOS jumper, please remove the jumper cap. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action.

J1 Jumper

(FID0, FID1, FID2, FID3, FID4)

(see p.7 item 26)




Note: The set of J1 jumper is only for advanced users to adjust the multiplier of CPU. Please follow the table below to adjust the multiplier of CPU. However, the system will work well without the adjustment of multiplier. You do not have to adjust the multiplier for normal usage.

Multiplier	FID0	FID1	FID2	FID3	FID4
5x	2-3	2-3	1-2	2-3	2-3
5.5x	1-2	2-3	1-2	2-3	2-3
6x	2-3	1-2	1-2	2-3	2-3
6.5x	1-2	1-2	1-2	2-3	2-3
7x	2-3	2-3	2-3	1-2	2-3
7.5x	1-2	2-3	2-3	1-2	2-3
8x	2-3	1-2	2-3	1-2	2-3
8.5x	1-2	1-2	2-3	1-2	2-3
9x	2-3	2-3	1-2	1-2	2-3
9.5x	1-2	2-3	1-2	1-2	2-3
10x	2-3	1-2	1-2	1-2	2-3
10.5x	1-2	1-2	1-2	1-2	2-3
11x	2-3	2-3	2-3	2-3	2-3
11.5x	1-2	2-3	2-3	2-3	2-3
12x	2-3	1-2	2-3	2-3	2-3
12.5x	1-2	1-2	2-3	2-3	2-3
13x	2-3	2-3	1-2	2-3	1-2
13.5x	1-2	2-3	1-2	2-3	1-2
14x	2-3	1-2	1-2	2-3	1-2
15x	2-3	2-3	2-3	1-2	1-2
16x	2-3	1-2	2-3	1-2	1-2
16.5x	1-2	1-2	2-3	1-2	1-2
17x	2-3	2-3	1-2	1-2	1-2
18x	1-2	2-3	1-2	1-2	1-2
19x	1-2	2-3	2-3	2-3	1-2
20x	1-2	1-2	2-3	2-3	1-2
21x	1-2	1-2	1-2	2-3	1-2
22x	1-2	2-3	2-3	1-2	1-2
23x	2-3	1-2	1-2	1-2	1-2
24x	1-2	1-2	1-2	1-2	1-2

For example, "Athlon XP 2000+" is an 1666MHz CPU: 12.5 (Multiplier) X 133MHz (External frequency) = 1666MHz

J1 jumper setting:



The jumper caps are not provided by ASRock. Please understand that ASRock does not guarantee and support the adjustment of multiplier. These jumpers setting may not apply to all multiplier-locked or even some unlocked AMD CPU. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.

## 2.6 Connectors




Connectors are NOT jumpers. DO NOT place jumper caps over these connectors. Placing jumper caps over the connectors will cause permanent damage of the motherboard!


Connector	Figure	Description
FDD Connector (33-pin FLOPPY1) (see p.7 item 13)		

Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

Primary IDE Connector (Blue) (39-pin IDE1, see p.7 item 8)	Secondary IDE Connector (Black) (39-pin IDE2, see p.7 item 7)
	
	
connect the blue end to the motherboard	connect the black end to the IDE devices
80-conductor, ATA 66/100/133 cable	

Note: If you use only one IDE device on this motherboard, please set the IDE device as "Master". Please refer to the instruction of your IDE device vendor for the details. Besides, to optimize compatibility and performance, please connect your hard disk drive to the primary IDE connector (IDE1, blue) and CD-ROM to the secondary IDE connector (IDE2, black).

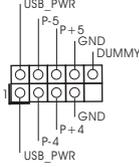USB 2.0 Connector (9-pin USB45) (see p.7 item 17)		ASRock I/O™ provides you 4 default USB 2.0 ports on the rear panel. If the rear USB ports are not sufficient, this USB 2.0 connector is available to support 2 additional USB 2.0 ports.
---	---	--

Infrared Module Connector (5-pin IR1) (see p.7 item 18)		This connector supports an optional wireless transmitting and receiving infrared module.
---	---	--


---

## Internal Audio Connectors

(4-pin CD1, 4-pin AUX1)

(CD1: see p.7 item 24)

(AUX1: see p.7 item 25)

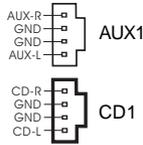


These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.

---

## Front Panel Audio Connector

(9-pin AUDIO1)

(see p.7 item 22)

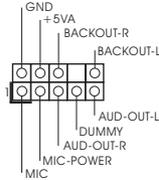


This is an interface for front panel audio cable that allows convenient connection and control of audio devices.

---

## System Panel Connector

(9-pin PANEL1)

(see p.7 item 15)

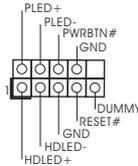


This connector accommodates several system front panel functions.

---

## Chassis Speaker Connector

(4-pin SPEAKER 1)

(see p.7 item 16)



Please connect the chassis speaker to this connector.

---

## Chassis Fan Connector

(3-pin CHA\_FAN1)

(see p.7 item 12)




Please connect a chassis fan cable to this connector and match the black wire to the ground pin.

---

## CPU Fan Connector

(3-pin CPU\_FAN1)

(see p.7 item 2)



Please connect a CPU fan cable to this connector and match the black wire to the ground pin.

---

## ATX Power Connector

(20-pin ATXPWR1)

(see p.7 item 6)



Please connect an ATX power supply to this connector.

---

## Power LED Connector

(3-pin PWR\_LED1)

(see p.7 item 14)



Please connect a 3-pin power LED cable to this connector.

---

## 3. BIOS Setup

### 3.1 BIOS Setup Utility

This section explains how to use the BIOS Setup Utility to configure your system. The Flash Memory on the motherboard stores the BIOS Setup Utility. You may run the BIOS Setup when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS Setup Utility, otherwise, POST will continue with its test routines.

If you wish to enter the BIOS Setup after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis.

You may also restart the system by turning the system off and then back on.

The BIOS Setup Utility is designed to be user-friendly. It is a menu-driven program, which allows you to scroll through its various sub-menus and select among the predetermined choices.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and may not exactly match what you see on your screen.

#### 3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

<b>MAIN</b>	Sets up the basic system configuration
<b>ADVANCED</b>	Sets up the advanced features
<b>SECURITY</b>	Sets up the security features
<b>POWER</b>	Configures Power Management features
<b>BOOT</b>	Configures the default system device that is used to locate and load the Operating System
<b>EXIT</b>	Exits the current menu or the BIOS Setup

To access the menu bar items, press the right or left arrow key on the keyboard until the desired item is highlighted.


#### 3.1.2 Legend Bar

At the bottom of the Setup Screen is a legend bar. The following table lists the keys in the legend bar with their corresponding functions.

Navigation Key(s)	Function Description
<F1>	Displays the General Help Screen
<ESC>	Jumps to the Exit menu or returns to the upper menu from the current menu
↑ / ↓	Moves cursor up or down between fields
← / →	Selects menu to the left or right
+ / -	Increases or decreases values
<Enter>	Brings up a selected menu for a highlighted field
<F9>	Loads all the setup items to default value
<F10>	Saves changes and exits Setup

### 3.2 Main Menu

When you enter the BIOS Setup Utility, the following screen appears.

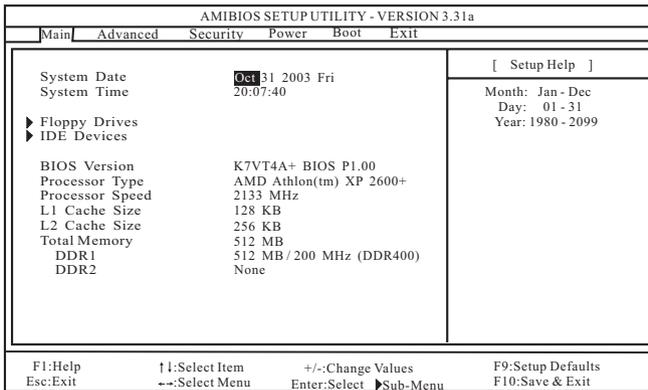

#### System Date [Month/Day/Year]

Set the system date that you specify. Valid values for month, day, and year are Month: (Jan to Dec), Day: (1 to 31), Year: (up to 2099). Use ↑ ↓ keys to move between the Month, Day, and Year fields.

#### System Time [Hour:Minute:Second]

Set the system to the time that you specify. Use ↑ ↓ keys to move between the Hour, Minute, and Second fields.

#### Floppy Drives

Use this to set the type of floppy drives installed.

#### IDE Devices

Use this to configure IDE devices.

## TYPE

To set the type of the IDE device, first, please select “IDE Devices” on Main menu and press <Enter> to get into the sub-menu. Then, select among “Primary IDE Master”, “Primary IDE Slave”, “Secondary IDE Master”, and “Secondary IDE Slave” to make configuration of its type. Below are the configuration options.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Main	
Primary IDE Master	
Type	Auto
Cylinders	
Heads	
Write Precompensation	
Sectors	
Maximum Capacity	
LBA Mode	Off
Block Mode	Off
Fast Programmed I/O Modes	Auto
32 Bit Transfer Mode	Off
Ultra DMA Mode	Auto
[ Setup Help ]	
Select how to set the parameters of drive.	
Or	
Select [AUTO] to set all HDD parameters automatically.	
F1:Help    ↑:Select Item    +/-:Change Values    F9:Setup Defaults	
Esc:Previous Menu    Enter:Select    ▶:Sub-Menu    F10:Save & Exit	

**[USER]:** It allows user to manually enter the number of cylinders, heads, and sectors per track for the drive.



Before attempting to configure a hard disk drive, make sure you have the correct configuration information supplied by the drive manufacturer. Incorrect settings may cause the system to fail to recognize the installed hard disk.

**[Auto]:** Select [Auto] to automatically detect hard disk drive. If auto-detection is successful, the BIOS Setup automatically fills in the correct values for the remaining fields on this sub-menu. If the auto-detection fails, it may be due to that the hard disk is too old or too new. If the hard disk was already formatted on an older system, the BIOS Setup may detect incorrect parameters. In these cases, select [User] to manually enter the IDE hard disk drive parameters.



After entering the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format the new IDE hard disk drives. This is necessary so that you can write the data into or read the data from the installed hard disk. Please make sure to set the partition of the Primary IDE hard disk drives to make them active.

---

**[CD/DVD]:** This is used for IDE CD/DVD drives.

**[ARMD]:** This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

### **Cylinders**

This is used to configure the number of cylinders. Refer to the drive documentation to determine the correct value.

### **Heads**

This is used to configure the number of read/write heads. Refer to the drive documentation to determine the correct values.

### **Write Pre-compensation**

Enter Write Pre-compensation sector. Refer to the drive documentation to determine the correct value.

### **Sectors**

This is used to configure the number of sectors per track. Refer to the drive documentation to determine the correct value.

### **Maximum Capacity**

This field shows the drive's maximum capacity as calculated by the BIOS based on the drive information you entered.

### **LBA Mode**

This allows user to select the LBA mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Off] to disable the LBA mode.

### **Block Mode**

Set the block mode to [On] will enhance hard disk performance by reading or writing more data during each transfer.

### **Fast Programmed I/O Modes**

This allows user to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

### **32 Bit Transfer Mode**

It allows user to enable 32-bit access to maximize the IDE hard disk data transfer rate.

### **Ultra DMA Mode**

Ultra DMA capability allows improved transfer speeds and data integrity for compatible IDE devices. Set to [Disabled] to suppress Ultra DMA capability.

## **3.3 Advanced, Security, Power, Boot, and Exit Menus**

Detailed descriptions of these menus are listed in the Appendix. See page 22.

---

## **4. Software Support**

### **4.1 Install Operating System**

This motherboard supports various Microsoft® Windows® operating systems: 98 SE / ME / 2000 / XP. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

### **4.2 Support CD Information**

The Support CD that came with the motherboard contains necessary drivers and useful utilities that will enhance the motherboard features.

#### **4.2.1 Running The Support CD**

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file ASSETUP.EXE from the BIN folder in the Support CD to display the menus.

#### **4.2.2 Drivers Menu**

The Drivers Menu shows the available devices drivers if the system detects installed devices. Install the necessary drivers to activate the devices.

#### **4.2.3 Utilities Menu**

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

#### **4.2.4 ASRock PC-DIY Live Demo Program**

ASRock presents you a multimedia PC-DIY live demo, which shows you how to install your own PC system step by step. You may find the file through the following path:

..\MPEGAV\AVSEQ01.DAT

To see this demo program, you may run Microsoft® Media Player® to play the file.

#### **4.2.5 Contact Information**


If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

---

# Appendix: Advanced BIOS Setup

This section will introduce you the following BIOS Setup menus: “Advanced,” “Security,” “Power,” “Boot,” and “Exit.”

## 1. Advanced BIOS Setup Menu

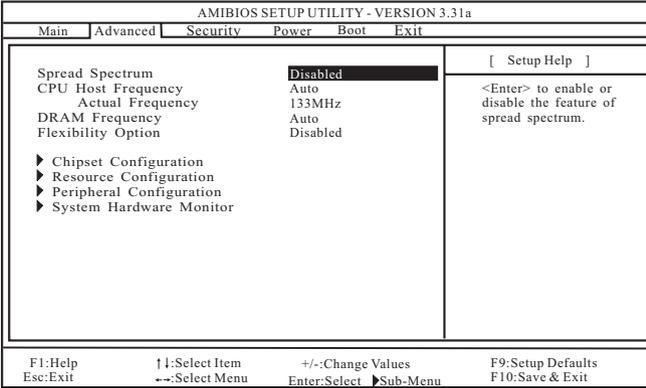

### Spread Spectrum

This field should always be [Disabled] for better system stability.

### CPU Host Frequency

#### [Auto]

It is recommended to select this option, which will let the CPU host frequency of this motherboard determined by the jumper-setting.

#### [Manual]

This allows user to set CPU host frequency manually. However, because the CPU host frequency of this motherboard is determined by the jumper-setting, you must set the FSB jumper adjustment according to your AMD CPU before you use this “Manual” option as the FSB setting in BIOS setup to perform over clocking. This is not recommended unless you thoroughly know the feature. Wrong setup may cause problems during operation.

### DRAM Frequency

If set to [Auto], the motherboard will detect the inserted memory module(s) and automatically assign appropriate frequency. You may select other value as operating frequency: [133MHz (DDR266)], [166MHz (DDR333)], [200MHz (DDR400)].

### Flexibility Option

The default value of this option is [Disabled]. It will allow better tolerance for memory compatibility when it is set to [Enabled].

---

## Chipset Configuration

AMIBIOS SETUP UTILITY - VERSION 3.31a		
Advanced		
Chipset Configuration		[ Setup Help ]
AGP Mode	Auto	<Enter> to select [4X], [2X], [1X] as the AGP mode.
AGP Aperture Size	64MB	
AGP Fast Write	Disabled	
PCI Delay Transaction	Disabled	
USB Controller	Enabled	
USB Device Legacy Support	Disabled	
DRAM CAS# Latency	Auto	
Over Vcore Voltage	Disabled	
V-Link Speed	Normal	
F1:Help      F11:Select Item      +/-:Change Values      F9:Setup Defaults		
Esc:Previous Menu      Enter:Select      ▶Sub-Menu      F10:Save & Exit		

### AGP Mode

This feature will be set to [Auto] as default.

### AGP Aperture Size

It refers to a section of the PCI memory address range used for graphics memory. It is recommended to leave this field at the default value unless the installed AGP card's specifications requires other sizes.

### AGP Fast Write

This allows you to enable or disable the feature of AGP fast write protocol support.

### PCI Delay Transaction

Enable PCI Delay Transaction feature will free the PCI Bus when the CPU is accessing 8-bit ISA cards. Disable this feature when using ISA cards that are not PCI 2.1 compliant.

### USB Controller

Use this to enable or disable the use of USB controller.

### USB Device Legacy Support

Use this to enable or disable the support to emulate legacy I/O devices such as mouse, keyboard,... etc.

### DRAM CAS# Latency

This is used to adjust the means of memory accessing. Configuration options: [Auto], [2T], [2.5T], [3T]. Please note that not all the DDR DIMMs can support CAS latency=3T.

---

## Over Vcore Voltage

This feature allows you to increase the CPU Vcore voltage with two levels. The default value is [Disabled].



It is not recommended to enable "Over Vcore Voltage" feature. Doing so may cause CPU damage.

## V-Link Speed

This feature allows you to speed up the V-Link speed. The default value is [Normal].

## Resource Configuration

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Advanced	
Resource Configuration	[ Setup Help ]
PCI Latency Timer (PCI Clocks) <b>32</b> Primary Graphics Adapter PCI	<Enter> to select PCI clocks. Leave on default setting for the best PCI performance.
F1:Help      ↑↓:Select Item      +/-:Change Values      F9:Setup Defaults Esc:Previous Menu      Enter:Select      ▶Sub-Menu      F10:Save & Exit	

### PCI Latency Timer (PCI Clocks)

The default is 32. It is recommended to keep the default value unless the installed PCI expansion cards' specifications require other settings.

### Primary Graphics Adapter

Select PCI or AGP as the primary graphics adapter.

## Peripheral Configuration

AMIBIOS SETUP UTILITY - VERSION 3.31a		
Advanced		[ Setup Help ]
Peripheral Configuration		
OnBoard FDC	Auto	<Enter> to enable or disable the floppy drive controller.
OnBoard Serial Port	Auto	
OnBoard Infrared Port	Disabled	
OnBoard Parallel Port	Auto	
Parallel Port Mode	ECP+EPP	
EPP Version	1.9	
Parallel Port IRQ	Auto	
Parallel Port DMA Channel	Auto	
OnBoard Midi Port	Disabled	
Midi IRQ Select	5	
OnBoard Game Port	200h	
OnBoard IDE	Both	
OnBoard LAN	Enabled	
OnBoard AC'97 Audio	Auto	
F1:Help      ↑:Select Item      +/-:Change Values      F9:Setup Defaults		F10:Save & Exit
Esc:Previous Menu      Enter>Select      ▶Sub-Menu		

### OnBoard FDC

Use this to enable or disable floppy drive controller.

### OnBoard Serial Port

Use this to set addresses for the onboard serial ports or disable serial ports.

Configuration options: [Auto], [Disabled], [3F8 / IRQ4 / COM1], [2F8 / IRQ3 / COM2], [3E8 / IRQ4 / COM3], [2E8 / IRQ3 / COM4].

### OnBoard Infrared Port

You may select [Auto] or [Disabled] for this onboard infrared port feature.

### OnBoard Parallel Port

Select Parallel Port address or disable Parallel Port. Configuration options: [Auto], [Disabled], [378], [278].

### Parallel Port Mode

Set the operation mode of the parallel port. The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version".

### OnBoard Midi Port

Select address for Midi Port or disable Midi Port. Configuration options: [Disabled], [330], [300], [290], [292].

### Midi IRQ Select

Use this to select Midi IRQ. Configuration options: [3], [4], [5], [7], [10], [11].

### OnBoard Game Port

Select address for Game Port or disable Game Port. Configuration options: [Disabled], [200h], [208h].

---

## OnBoard IDE

You may enable either the primary IDE channel or the secondary IDE channel. Or you may enable both the primary and the secondary IDE channels by selecting [Both]. Set to [Disabled] will disable the both. Configuration options: [Disabled], [Primary], [Secondary], [Both].

## OnBoard LAN

This allows you to enable or disable the onboard LAN feature.

## OnBoard AC'97 Audio

Select [Disabled], [Auto] or [Enabled] for the onboard AC'97 Audio feature.

## System Hardware Monitor

You may check the status of the hardware on your system. It allows you to monitor the parameters for CPU temperature, Motherboard temperature, CPU fan speed, and critical voltage.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Advanced	
System Hardware Monitor	[ Setup Help ]
CPU Temperature	35°C / 95°F
M / B Temperature	27°C / 82°F
CPU FAN Speed	3110 RPM
Chassis FAN Speed	0 RPM
Vcore	1.72 V
+ 3.30V	3.31 V
+ 5.00V	4.97 V
+ 12.00V	12.16 V

F1:Help	↑↓:Select Item	+/-:Change Values	F9:Setup Defaults
Esc:Previous Menu		Enter:Select ▶Sub-Menu	F10:Save & Exit

## 2. Security Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Main	Advanced	Security	Power Boot Exit
Supervisor Password	Clear		[ Setup Help ]
User Password	Clear		<Enter> to set the supervisor password.
Set Supervisor Password	[ Enter ]		
Set User Password	[ Enter ]		
Password Check	Setup		
F1:Help Esc:Exit	↑↓:Select Item ←→:Select Menu	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit

**Supervisor Password:** This field shows the status of the Supervisor Password.

**[Clear]:** No password has been set.

**[Set]:** Supervisor password has been set.

**User Password:** This field shows the status of the User Password.

**[Clear]:** No password has been set.

**[Set]:** User password has been set.

**Set Supervisor Password:** Press <Enter> to set the Supervisor Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you need to enter your current password first in order to create a new password.

**Set User Password:** Press <Enter> to set the User Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you need to enter your current password first in order to create a new password.

**Password Check:** Select the check point for "Password Check". Configuration options: [Setup], [Always]. If [Setup] option is selected, the "Password Check" is performed before BIOS setup. If [Always] option is selected, the "Password Check" is performed before both boot-up and BIOS setup.

### 3. Power Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a					
Main	Advanced	Security	Power	Boot	Exit
Suspend To RAM		Disabled		[ Setup Help ]	
Repost Video on STR Resume		Disabled		<Enter> to select auto-detect or disable the Suspend-to-RAM feature.	
Restore on AC/Power Loss		Power Off			
Ring-In Power On		Disabled			
PCI Devices Power On		Disabled			
PS/2 Keyboard Power On		Disabled			
RTC Alarm Power On		Disabled			
RTC Alarm Date		Every Day			
RTC Alarm Hour		12			
RTC Alarm Minute		30			
RTC Alarm Second		30			
F1:Help Esc:Exit		↑:Select Item ←:Select Menu		+/-:Change Values Enter:Select ▶Sub-Menu	
				F9:Setup Defaults F10:Save & Exit	

#### Suspend to RAM

This field allows you to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the system supports it.

#### Repost Video on STR Resume

This feature allows you to repost video on STR resume. It is recommended to enable this feature under Microsoft® Windows® 98 / ME.

#### Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

#### Ring-In Power On

Use this to enable or disable Ring-in signals to turn on the system from the power-soft-off mode.

#### PCI Devices Power On

Use this to enable or disable PCI devices to turn on the system from the power-soft-off mode.

#### PS/2 Keyboard Power On

Use this to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

#### RTC Alarm Power On

Use this to enable or disable RTC (Real Time Clock) to power on the system. If [Enable] is selected, you must fill the RTC Alarm Date / Hour / Minute / Second sub-fields with the actual wake up time you desire.

---

## 4. Boot Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a					
Main	Advanced	Security	Power	Boot	Exit
Quick Boot Mode				Enabled	[ Setup Help ]
Boot Up Num-Lock				On	<Enter> to enable or disable the quick boot mode.
Boot To OS/2				No	
Boot From Network				Disabled	
▶ Boot Device Priority					
F1:Help		↑↓:Select Item		+/-:Change Values	
Esc:Exit		←→:Select Menu		Enter:Select ▶Sub-Menu	
				F9:Setup Defaults	
				F10:Save & Exit	

### Quick Boot Mode

Enable this mode will speed up the boot-up routine by skipping memory retestings.

### Boot Up Num-Lock

If this is enabled, it will automatically activate the Numeric Lock function after boot-up.

### Boot To OS/2

This enables boot-up to OS/2 operating system.

### Boot From Network


Use this to enable or disable “boot from network” feature.

### Boot Device Priority

This allows you to set the boot device priority.

---

## 5. Exit Menu

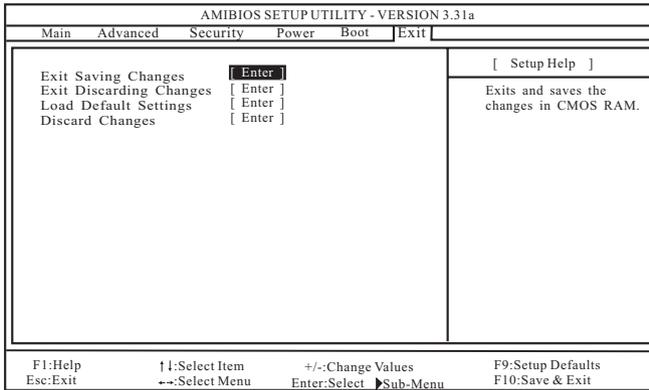

### Exit Saving Changes

After you enter the sub-menu, the message “Save current settings and exit” will appear. If you press <ENTER>, it will save the current settings and exit the BIOS SETUP Utility.

### Exit Discarding Changes

After you enter the submenu, the message “Quit without saving changes” will appear. If you press <ENTER>, you will exit the BIOS Setup Utility without making any changes to the settings.

### Load Default Settings

After you enter the submenu, the message “Load default settings” will appear. If you press <Enter>, it will load the default values for all the setup configuration.

### Discard Changes

After you enter the sub-menu, the message “Load setup original values” will appear. If you press <ENTER>, original values will be restored and all changes are discarded.