



P/N: 15G065368001AK V2.0

Quick Installation Guide

GENOA2D24G-2L+ / TURIN2D24G-2L+/500W



GENOA2D24G-2L+



TURIN2D24G-2L+/500W

The server board User's Manual is available for download from the ASRock Rack's official website at <http://www.asrockrack.com>.


Take note of the following precautions before installing server board components or change any server board settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the server board's components due to static electricity, NEVER place the server board directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before handling the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the server board to the chassis, please do not over-tighten the screws! Doing so may damage the server board.


1 Install the Server Board

- 1 Insert the server board into the chassis.

- 2 Affix the screws clockwise into the mounting holes in all of the corners of the server board.
Do not over-tighten the screws

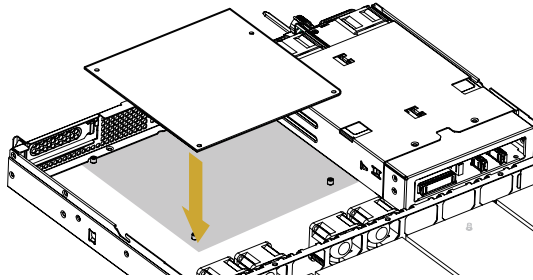


2 Motherboard Layout

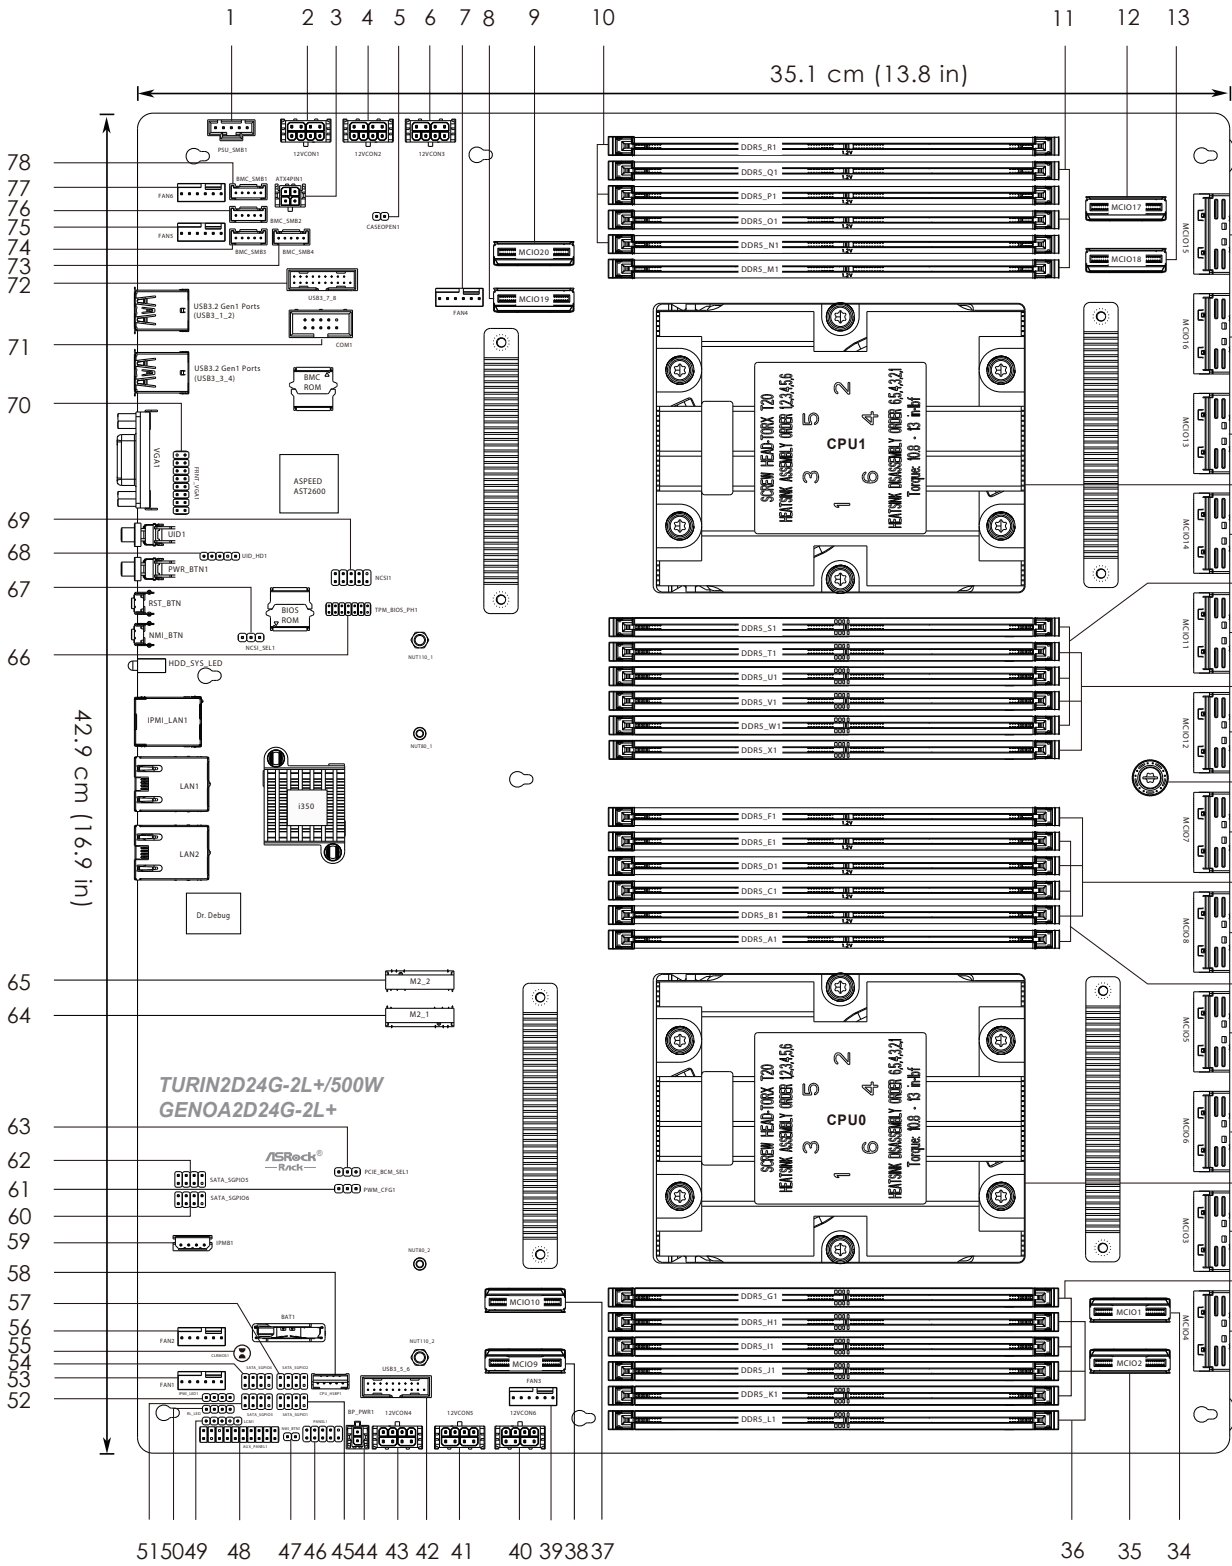

No.	Description
1	PSU SMBus Header (PSU_SMB1)
2	ATX 12V Power Connector (12VCON1)
3	Micro-Fit Power Connector (ATX4PIN1)
4	ATX 12V Power Connector (12VCON2)
5	Chassis Intrusion Header (CASEOPEN1)
6	ATX 12V Power Connector (12VCON3)
7	System Fan Connector (FAN4)
8	Mini Cool Edge IO Connector (MCIO19)
9	Mini Cool Edge IO Connector (MCIO20)
10	3 x 288-pin DDR5 DIMM Slots (DDR5_N1, DDR5_P1, DDR5_R1)
11	3 x 288-pin DDR5 DIMM Slots (DDR5_M1, DDR5_O1, DDR5_Q1)
12	Mini Cool Edge IO Connector (MCIO17)
13	Mini Cool Edge IO Connector (MCIO18)
14	Mini Cool Edge IO Connector (MCIO15)
15	Mini Cool Edge IO Connector (MCIO16)
16	Mini Cool Edge IO Connector (MCIO13)
17	AMD Socket SP5 (SM-LGA-6096) (CPU1)
18	Mini Cool Edge IO Connector (MCIO14)
19	3 x 288-pin DDR5 DIMM Slots (DDR5_S1, DDR5_U1, DDR5_W1)
20	Mini Cool Edge IO Connector (MCIO11)
21	3 x 288-pin DDR5 DIMM Slots (DDR5_T1, DDR5_V1, DDR5_X1)
22	Mini Cool Edge IO Connector (MCIO12)
23	Thumbscrew
24	Mini Cool Edge IO Connector (MCIO7)
25	3 x 288-pin DDR5 DIMM Slots (DDR5_B1, DDR5_D1, DDR5_F1)
26	Mini Cool Edge IO Connector (MCIO8)
27	3 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_C1, DDR5_E1)
28	Mini Cool Edge IO Connector (MCIO5)
29	Mini Cool Edge IO Connector (MCIO6)
30	AMD Socket SP5 (SM-LGA-6096) (CPU0)
31	Mini Cool Edge IO Connector (MCIO3)
32	3 x 288-pin DDR5 DIMM Slots (DDR5_G1, DDR5_I1, DDR5_K1)
33	Mini Cool Edge IO Connector (MCIO4)
34	Mini Cool Edge IO Connector (MCIO1)
35	Mini Cool Edge IO Connector (MCIO2)
36	3 x 288-pin DDR5 DIMM Slots (DDR5_H1, DDR5_J1, DDR5_L1)
37	Mini Cool Edge IO Connector (MCIO10)
38	Mini Cool Edge IO Connector (MCIO9)
39	System Fan Connector (FAN3)
40	ATX 12V Power Connector (12VCON6)
41	ATX 12V Power Connector (12VCON5)
42	USB 3.2 Gen1 Header (USB3_5_6)
43	ATX 12V Power Connector (12VCON4)
44	System Power Connector (BP_PWR1)
45	SATA SGPIO Connector (SATA_SGPIO1)
46	System Panel Header (PANEL1)
47	Non Maskable Interrupt Button (NMI_BTN1)
48	Auxiliary Panel Header (AUX_PANEL1)
49	Liquid Crystal Module Header (LCM1)
50	Rear Panel LAN LED (RL_LED)

3 Jumper Settings

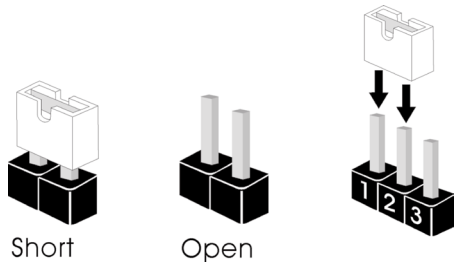

When the jumper cap is placed on the pins, the jumper is "Short". If no jumper cap is placed on the pins, the jumper is "Open".

The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when a jumper cap is placed on these 2 pins.


No.	Description
64	M.2 Socket (M2_1) (Type 2280/22110)
65	M.2 Socket (M2_2) (Type 2280/22110)
66	SPI TPM Header (TPM_BIOS_PH1)
67	NCSI Mode Jumper (NCSI_SEL1)
68	UID Button Header (UID_HD1)
69	NCSI Header (NCSI1)
70	Front VGA Header (FRNT_VGA1)
71	COM Port Header (COM1)
72	USB 3.2 Gen1 Header (USB3_7_8)
73	BMC SMBus Header (BMC_SMB4)
74	BMC SMBus Header (BMC_SMB3)
75	System Fan Connector (FAN5)
76	BMC SMBus Header (BMC_SMB2)
77	System Fan Connector (FAN6)
78	BMC SMBus Header (BMC_SMB1)

No.	Description
51	SATA SGPIO Connector (SATA_SGPIO3)
52	IPMI LAN LED Header (IPMI_LED1)
53	System Fan Connector (FAN1)
54	SATA SGPIO Connector (SATA_SGPIO4)
55	Clear CMOS Pad (CLRMO1)
56	System Fan Connector (FAN2)
57	SATA SGPIO Connector (SATA_SGPIO2)
58	Backplane PCI Express Hot-Plug Connector (CPU_HSBP1)
59	Intelligent Platform Management Bus Header (IPMB1)
60	SATA SGPIO Connector (SATA_SGPIO6)
61	PWM Configuration Header (PWM_CFG1)
62	SATA SGPIO Connector (SATA_SGPIO5)
63	PCIE Signal Source Selection Jumper (PCIE_BCM_SEL1)




4 Install the Processor and Heatsink


Locate the screw on the CPU socket and unscrew it. Open the first retention cover.

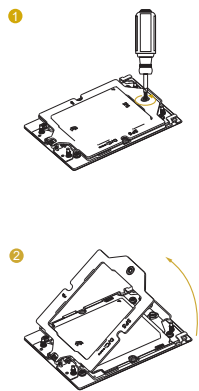


Open the second bracket. Take out the internal plastic cover.

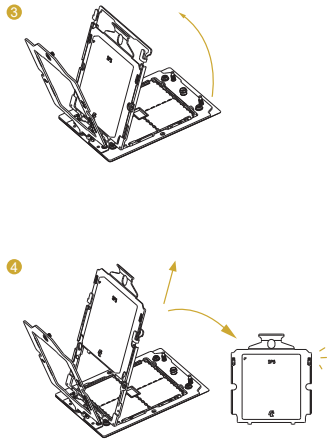


Install CPU along with the carrier frame, do not separate them. Please make sure the carrier frame with CPU is closely attached to the rail frame while inserting it.

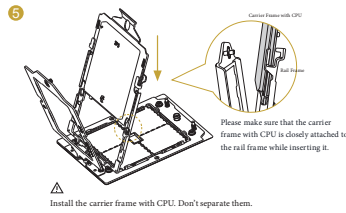

Close the bracket that holds the CPU. Close the retention cover and fasten the screw.

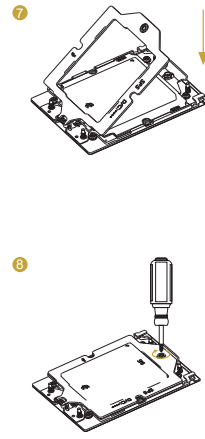


Install the heatsink to the CPU carrier. Secure the heatsink to the CPU carrier with a screwdriver.

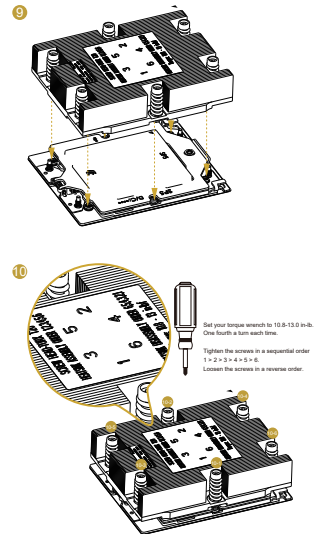

We recommend using the CPU Installation tool to avoid CPU pin-bent problem.


5 I/O Panel

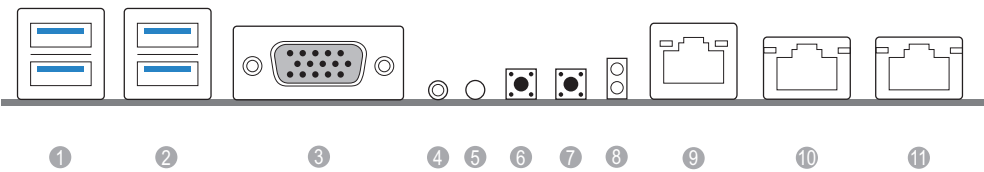

No.	Description	No.	Description
1	USB 3.2 Gen1 Ports (USB3_1_2)	7	NMI Button (NMI_BTN)
2	USB 3.2 Gen1 Ports (USB3_3_4)	8	HDD/System Fault LED (HDD_SYS_LED)
3	VGA Header (VGA1)	9	IPMI LAN Header (IPMI_LAN1)
4	UID Switch (UID1)	10	1G LAN RJ-45 Port (LAN1, shared NIC)
5	Power Switch/LED (PWR_BTN1)	11	1G LAN RJ-45 Port (LAN2)
6	Reset Button (RST_BTN)		


7 LAN Port LED Indications

IPMI LAN Port

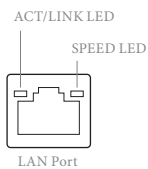

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Orange	100Mbps connection
On	Link	Green	1Gbps connection


1G LAN Port

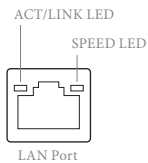


Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Orange	100Mbps connection
On	Link	Green	1Gbps connection

9 Install the Memory


- 1 Unlock a DIMM slot by pressing the module clips outward.

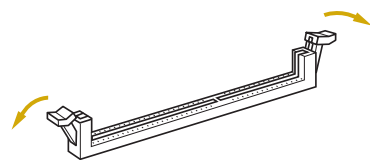


- 2 Insert the memory module.

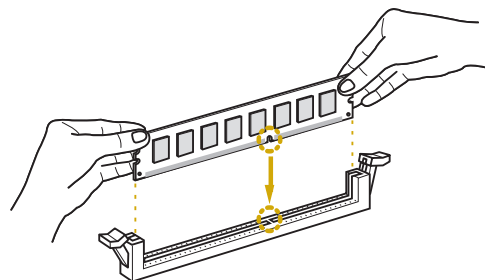


- 3 Lock the clips.

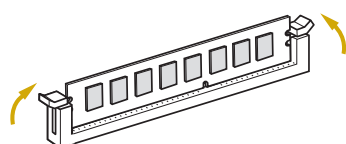

6 Install the Power Cables

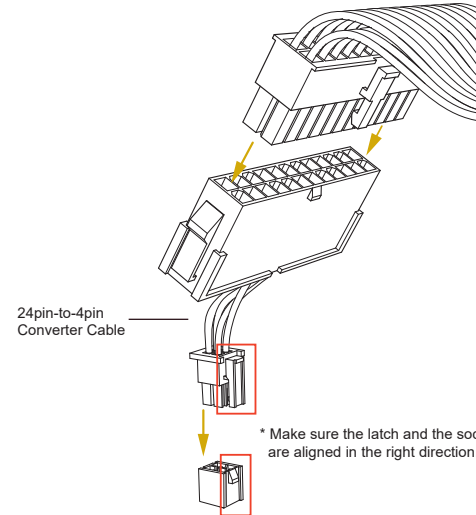


12VCON

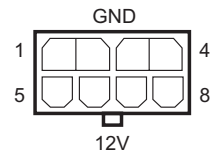

ATX4PIN1


Micro-Fit Power Connector

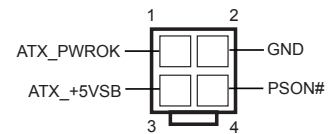

8 M.2 SSD Module Installation

- 1 Find the corresponding nut location to be used.

No.	1	2
Nut Location	A (NUT80_1/2)	B (NUT110_1/2)
PCB Length	8cm	11cm
Module Type	Type2280	Type 22110

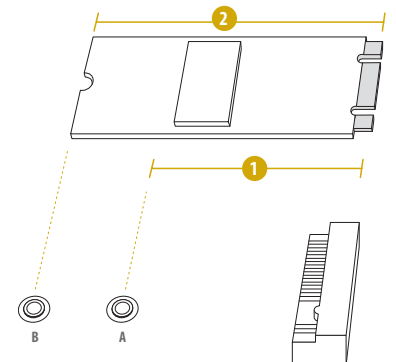


- 2 Move the standoff based on the module type and length.



- 3 Peel off the yellow protective film on the nut. Hand tighten the standoff into the desired location.



- 4 Gently insert the M.2 module into the slot.

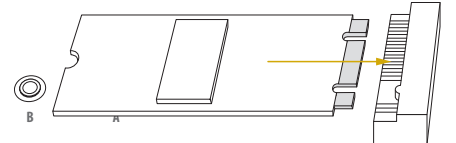

- 5 Tighten the screw with a screwdriver to secure the module into place. Please do not overtighten the screw.

