ASRock OSD Pilot

User Manual

Version 1.0

Published October 2026

Copyright©2026 ASRock INC. All rights reserved.

Contents

Chapter 1 Introduction 1

Chapter 2 Installing ASRock OSD Pilot 2

Chapter 3 Getting Started 5

3.1 Main Interface 6

3.2 Monitor Display Area 7

3.3 Quick Settings 8

3.4 Refresh Monitors 9

3.5 Preferences 10

Chapter 4 Display Presets 11

Chapter 5 OSD Settings 12

5.1 Gaming 13

5.2 Picture 14

5.3 PIP/PBP/KVM 15

5.4 OLED Care 16

5.5 System 17

Additional Notes 18

Chapter 1 Introduction

ASRock OSD Pilot is a user-friendly application that allows you to conveniently access and adjust your monitor's On-Screen Display (OSD) settings directly from Windows using a mouse, without the need to operate the physical buttons on the monitor.

With its intuitive graphical interface, OSD Pilot provides easy access to display modes, picture adjustments, gaming features, and other monitor settings. It also allows you to view connected monitors and their current display configurations, making monitor management easier and more convenient.


NOTE

Available features, settings, and options in ASRock OSD Pilot vary depending on the connected monitor model. The interface and settings shown in this guide are for reference only and may differ from those displayed on your system.


English

Chapter 2 Installing ASRock OSD Pilot


1. Download the ASRock OSD Pilot software from the ASRock website.
2. Save the downloaded file to a location on your computer.
3. Extract the downloaded ZIP file.
4. Open the extracted folder and double-click the setup file to launch the installation wizard.
5. On the License Agreement screen, read the license agreement, select **I accept the agreement**, and click **Next** to continue.

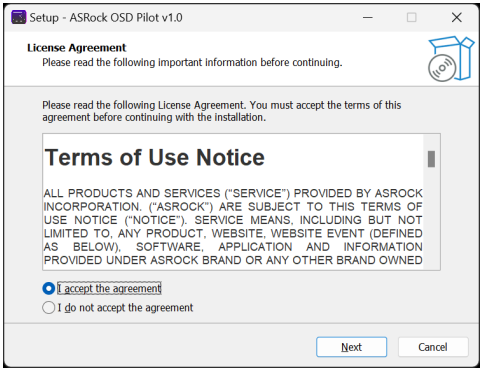


6. On the **Select Destination Location** screen, choose the folder where ASRock OSD Pilot will be installed. It is recommended to keep the default installation location. Click **Next** to continue.

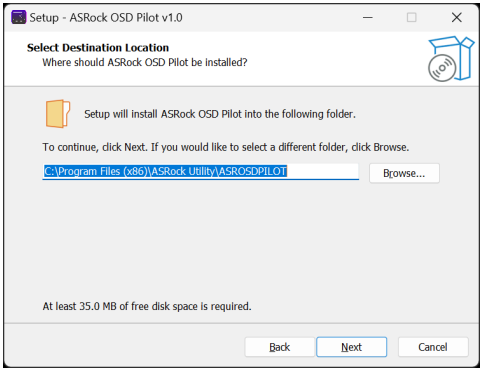


7. On the **Select Start Menu Folder** screen, specify the folder where the program's shortcuts will be created. It is recommended to keep the default folder name. Click **Next** to continue.

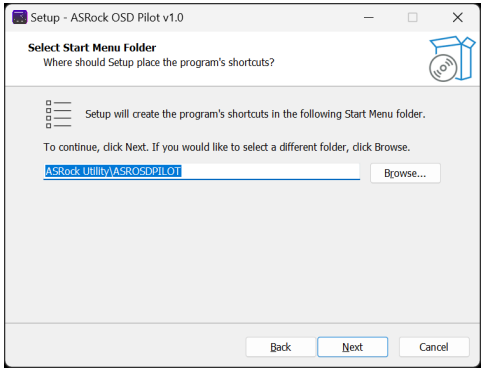

8. On the **Ready to Install** screen, review the installation settings and click **Install** to begin the installation.

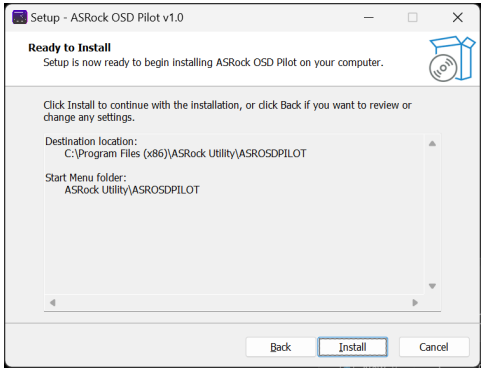


9. Once the installation is complete, click **Finish** to exit the setup wizard.

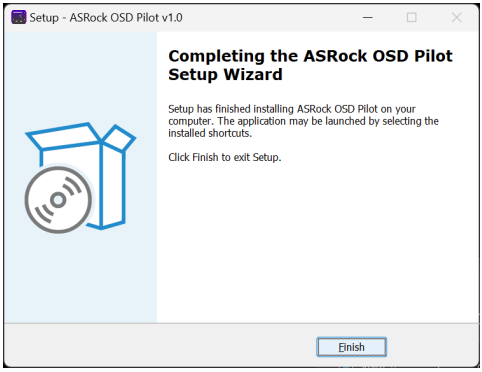


10. Launch **ASRock OSD Pilot** using either of the following methods:

Windows Start menu: Open the Start menu and select **ASROSDPILOT**.

Desktop shortcut: Double-click the **ASROSDPILOT** icon on your desktop.

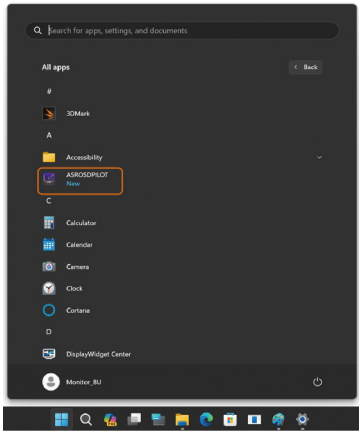



English

Chapter 3 Getting Started

After launching ASRock OSD Pilot, the main interface displays the detected monitors and provides convenient access to various monitor settings.

You can use your mouse to select and adjust supported OSD settings directly within the application. Changes made through OSD Pilot are applied to the corresponding monitor settings.



NOTE

ASRock OSD Pilot is designed for ASRock monitors. When the application is used with non-ASRock monitors, some features may not be available.

English

3.1 Main Interface

The main interface provides an overview of the connected monitors and convenient access to display presets, monitor settings, and application preferences.


The main interface consists of the following sections:



No.	Item	Description
1	Window Controls	Minimize, maximize, or close the application window.
2	Preferences	Customize the application's appearance, language, and other preferences.
3	Display Presets	Select from the available predefined display modes.
4	Monitor Display Area	Refresh the detected monitor information and display status.
5	Quick Settings Icon	Show or hide the Quick Settings panel.
6	Refresh Monitors	Refresh the detected monitor information and display status.
7	OSD Settings	Access the available monitor OSD settings and functions.
8	Quick Settings Panel	Displayed by default when the application starts, providing direct access to frequently used monitor settings.

3.2 Monitor Display Area

The center of the main interface displays the detected monitors and their current display configuration.

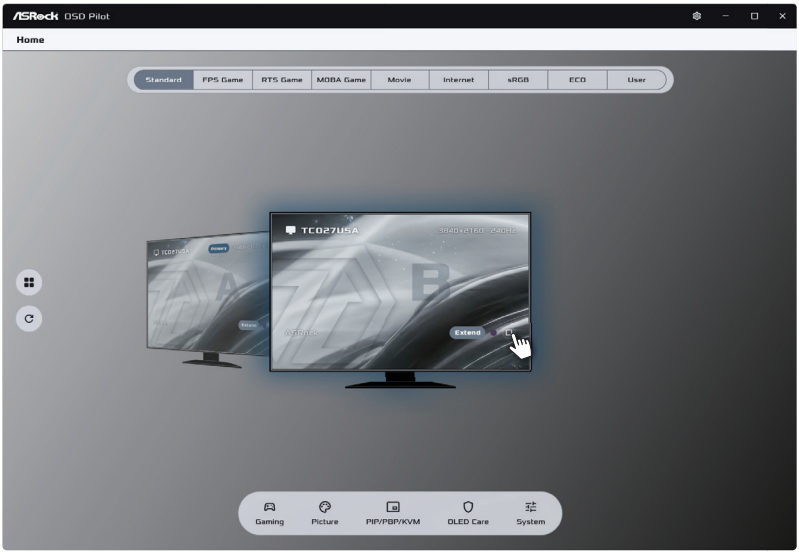

Each monitor is represented graphically, allowing you to identify the connected displays and view information such as the monitor model, resolution, refresh rate, and primary display status.

When multiple monitors are connected, the interface shows their current arrangement and display mode, such as an extended display configuration.

The Monitor Display Area also provides the following information and functions:

- DDC/CI Status: Indicates whether DDC/CI (Display Data Channel/Command Interface) communication is available for the connected monitor.
- Identify: Click the Identify icon on a monitor to display a red border on the corresponding physical screen, making it easier to identify the monitor.

3.3 Quick Settings

Click Quick Settings on the left side of the main interface to open the Quick Settings panel.



This panel provides convenient access to frequently used monitor settings, such as:

- **Brightness**: Adjusts the brightness of the monitor.
- **Contrast**: Adjusts the contrast between light and dark areas of the image.
- **Input Select**: Allows you to select from the available input sources supported by the connected monitor.

Changes made through Quick Settings are applied to the corresponding monitor OSD settings.


You can also customize how the Quick Settings panel is displayed:

- **Drag to reposition**: Drag the handle at the top-right corner of the panel to move it to a different position within the application window.
- **Minimize to button**: Click the × icon at the top-right corner of the panel to minimize it to a button.

3.4 Refresh Monitors


Click Refresh Monitors on the left side of the main interface to refresh the detected monitor information and update the display status.

Use this function if the monitor information or display configuration is not correctly reflected in the application.

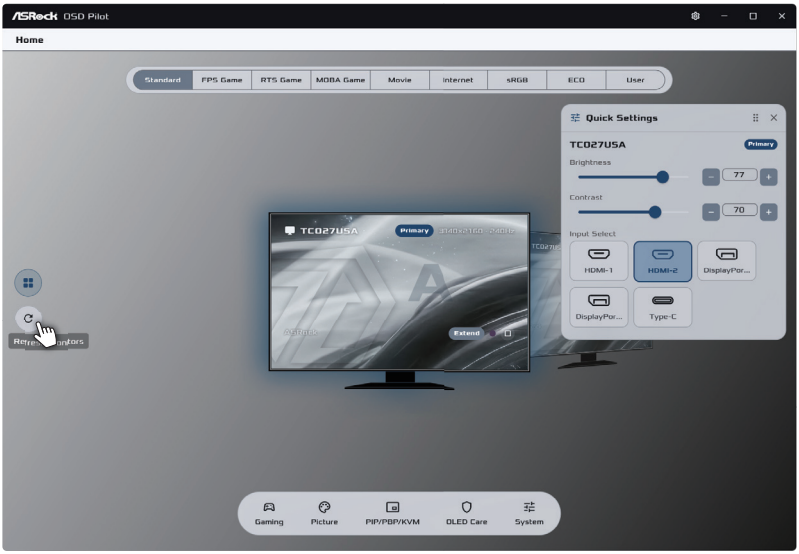

3.5 Preferences

Click the Preferences icon in the upper-right corner of the application to open the Preferences page.

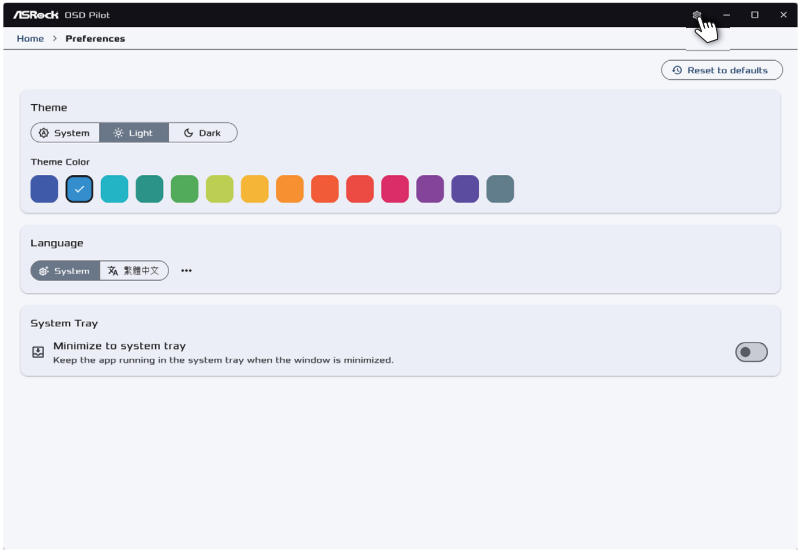

The following options are available:

- **Theme**: Select **System**, **Light**, or **Dark** to change the application's appearance. Select **System** to follow the Windows theme settings.
- **Theme Color**: Select your preferred accent color for the application interface.
- **Language**: Select **System** to use the Windows display language, or choose a preferred language. Click the **More languages (...)** button to view additional language options.
- **Minimize to system tray**: When enabled, minimizing the application moves it to the system tray in the lower-right corner of the Windows taskbar. When disabled, the application remains on the taskbar when minimized.
- **Reset to defaults**: Restore the application preferences to their default settings.

Chapter 4 Display Presets

The display presets are located at the top of the main interface.



Click a preset to apply the corresponding display settings to the monitor.

The available presets may include:

- Standard
- FPS Game
- RTS Game
- MOBA Game
- Movie
- Internet
- sRGB
- ECO
- User

For detailed information about these display presets, refer to the Image Setup section of your monitor's user manual.

Chapter 5 OSD Settings

The toolbar at the bottom of the main interface provides access to various monitor OSD settings.



Click a category to open its settings panel, then use the available buttons, sliders, or options to adjust the desired settings.

The main categories may include:

- Gaming
- Picture:
- PIP/PBP/KVM
- OLED Care
- System

For detailed descriptions of individual settings and their functions, refer to the corresponding sections of your monitor's user manual.

NOTE

Available features, settings, and options in ASRock OSD Pilot vary depending on the connected monitor model. The interface and settings shown in this guide are for reference only and may differ from those displayed on your system.

English

5.1 Gaming

Provides access to gaming-related features and display enhancements, such as aiming assistance, refresh rate information, and gaming picture adjustments.



For detailed descriptions of individual OSD functions, available options, and model-specific features, refer to your monitor's user manual.

English

5.2 Picture


Allows you to adjust picture quality and color settings, including brightness, contrast, sharpness, and color temperature.



For detailed descriptions of individual OSD functions, available options, and model-specific features, refer to your monitor's user manual.

5.3 PIP/PBP/KVM

Provides access to Picture-in-Picture (PIP), Picture-by-Picture (PBP), and Keyboard, Video, Mouse (KVM) functions for managing multiple input sources and connected devices.

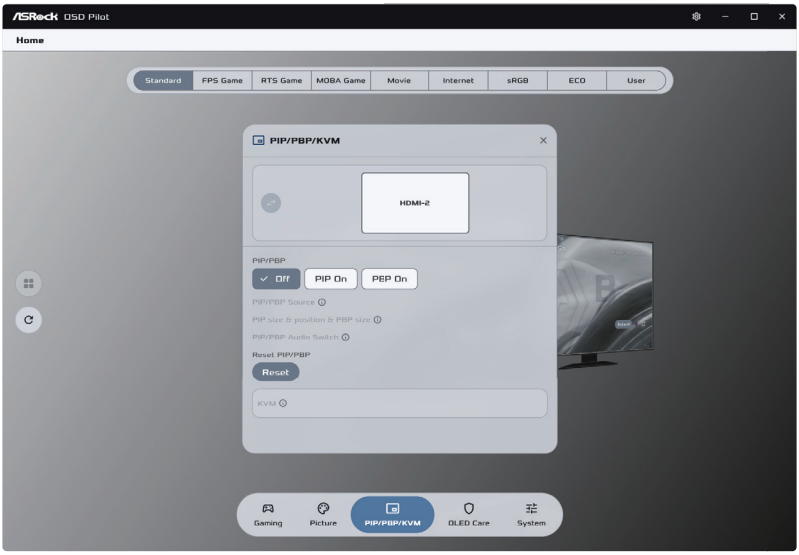

For detailed descriptions of individual OSD functions, available options, and model-specific features, refer to your monitor's user manual.

English

5.4 OLED Care

Provides access to OLED panel protection and maintenance features designed to help maintain display performance and reduce the risk of image retention.



For detailed descriptions of individual OSD functions, available options, and model-specific features, refer to your monitor's user manual.

5.5 System

Allows you to configure general monitor settings, including audio controls, OSD display preferences, and power-related options.



For detailed descriptions of individual OSD functions, available options, and model-specific features, refer to your monitor's user manual.

Additional Notes

- ASRock OSD Pilot allows you to adjust supported monitor OSD settings using a mouse instead of the monitor's physical buttons.
- Settings adjusted through OSD Pilot are applied to the corresponding monitor OSD settings.
- If the displayed monitor information is not up to date, click Refresh Monitors to update the detected monitor status.
- For detailed information about individual OSD functions and their available settings, refer to your monitor's user manual.

Copyright Notice

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer

Because the specifications and the firmware might be updated, the content of this documentation will be subject to change without notice. In case any modifications of this documentation occur, the updated version will be available on ASRock's website without further notice. If you require technical support related to this monitor, please visit our website for specific information about the model you are using. You may find the latest monitor support list on ASRock's website as well.

ASRock Website: http://www.asrock.com

Version 1.0
Published October 2026
Copyright©2026 ASRock INC. All rights reserved.