



IMB-X1317-10G

User Manual

Version 1.1

Published December 16, 2025

Copyright©2025 ASRockInd INC. All rights reserved.

Version 1.0

Published December 10, 2025

Copyright©2025 ASRockInd INC. All rights reserved.

Copyright Notice:

No part of this documentation may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRockInd Inc.

Products and corporate names appearing in this documentation may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this documentation are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRockInd. ASRockInd assumes no responsibility for any errors or omissions that may appear in this documentation.

To the extent permitted by law, with respect to the contents of this documentation, ASRockInd does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall ASRockInd, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRockInd has been advised of the possibility of such damages arising from any defect or error in the documentation or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The terms HDMI® and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.





WARNING

THIS PRODUCT CONTAINS A BUTTOON BATTERY

If swallowed, a button battery can cause serious injury or death.

Please keep batteries out of sight or reach of children.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

“Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate”

AUSTRALIA ONLY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage caused by our goods. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASRockInd Tel : +886-2-28965588 ext.123 (Standard International call charges apply)





ASRockInd follows the green design concept to design and manufacture our products, and makes sure that each stage of the product life cycle of ASRockInd product is in line with global environmental regulations. In addition, ASRockInd disclose the relevant information based on regulation requirements.



DO NOT throw the motherboard in municipal waste. This product has been designed to enable proper reuse of parts and recycling. This symbol of the crossed out wheeled bin indicates that the product (electrical and electronic equipment) should not be placed in municipal waste. Check local regulations for disposal of electronic products.

Button Battery Safety Notice

 WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH of CHILDREN• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.	

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery type: CR2032
- Battery voltage: 3V
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- This product contains an irreplaceable battery.
- This icon indicates that a swallowed button battery can cause serious injury or death. Please keep batteries out of sight or reach of children.

Contents

Chapter 1 Introduction	1
1.1 Package Contents	1
1.2 Specifications	2
1.3 Motherboard Layout	5
1.4 I/O Panel	8
1.5 Block Diagram	10
Chapter 2 Installation	11
2.1 Screw Holes	11
2.2 Pre-installation Precautions	11
2.3 Installation of Memory Modules (LONG-DIMM)	12
2.4 Expansion Slots	14
2.5 Jumpers Setup	15
2.6 Onboard Headers and Connectors	19
Chapter 3 UEFI SETUP UTILITY	28
3.1 Introduction	28
3.1.1 Entering BIOS Setup	28
3.1.2 UEFI Menu Bar	29
3.1.3 Navigation Keys	30
3.2 Main Screen	31
3.3 Advanced Screen	32
3.3.1 CPU Configuration	33
3.3.2 Chipset Configuration	36
3.3.3 Storage Configuration	40

3.3.4	Thunderbolt (TM) Configuration	41
3.3.5	Super IO Configuration	42
3.3.6	AMT Configuration	44
3.3.7	ACPI Configuration	46
3.3.8	USB Configuration	47
3.3.9	Trusted Computing	48
3.4	Hardware Health Event Monitoring Screen	50
3.5	Security Screen	52
3.6	Boot Screen	53
3.7	Exit Screen	54

Chapter 1 Introduction

Thank you for purchasing ASRockInd **IMB-X1317-10G** motherboard, a reliable motherboard produced under ASRockInd's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRockInd's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 contains the configuration guide to BIOS setup.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRockInd website without further notice. You may find the latest CPU support lists on ASRockInd website as well.

ASRockInd website <https://www.asrockind.com/IMB-X1317-10G>

If you require technical support related to this motherboard, please visit our website for specific information about the model you are using.

<https://www.asrockind.com/zh-tw/technical-support>

1.1 Package Contents

ASRockInd **IMB-X1317-10G** Motherboard (Micro-ATX (9.6-in x 9.6-in x 1.81-in, 24.4 cm x 24.4 cm x 4.61 cm))

ASRockInd **IMB-X1317-10G** Jumper Setting Instruction

Gift Package:

- 2 x SATA Cable
- 1 x I/O Shield
- 3 x SCREW M3*2.5

Bulk Package:

- 1 x I/O Shield
- 3 x SCREW M3*2.5

Option:

- 2 x DIMM BRACKET (13G03P003000AI)

*Please contact regional Sales for the inquiry.

1.2 Specifications

Form Factor	Dimensions	Micro-ATX (9.6-in x 9.6-in x 1.81-in, 24.4 cm x 24.4 cm x 4.61 cm)
Processor System	CPU	Intel® Core™ Ultra processors (Arrow Lake-S), up to 125W
	Chipset	W880
	Socket	LGA1851
	BIOS	AMI SPI 256 Mbit
Memory	Technology	Dual Channel ECC/non-ECC DDR5 6400/5600 MHz
	Capacity	256GB (64GB per DIMM)
	Socket	4 x 288-pin Long-DIMM
Graphics	Controller	Intel® X ^e LPG Graphics
	HDMI	HDMI 2.1 Max resolution up to 7680x4320@60Hz
	DisplayPort	DisplayPort 2.1/1.4a, DP++ Max resolution up to 4096x2160@60Hz
	LVDS	Dual channel 24 bit up to 1920x1200@60Hz (Connector shared with eDP)
	eDP	Max resolution up to 1920x1200@60Hz (Connector shared with LVDS)
	Multi Display	Quad display (Included 2 output from Type-C)
Expansion Slot	PCIe	2 x PCIe Gen5 Slots (PCIe1/PCIe4:single at x16 (PCIe1); dual at x8 (PCIe1)/x8 (PCIe4)) (PCIe1: Support Riser card x8/x8) 2 x PCIe x4 (Gen4)
	M.2	1 x M.2 (Key E, 2230) with PCIe Gen4 x1, USB 2.0 and CNVio/CNVio2 for Wireless
Audio	Interface	Realtek ALC897 HD, High Definition Audio. Line-In, Line-Out, Mic-In
Ethernet	Controller/ Speed	LAN1: Intel® I210ATwith10/100/1000Mbps LAN2: Intel® I210ATwith10/100/1000Mbps LAN3: Intel® I219LM with 10/100/1000 Mbps, supports vPro LAN4: Intel® I226V with 10/100/1000/2500 Mbps LAN5: Marvell AQC113 with 10/100/1000/2500/5000/10000 Mbps
	Controller	5 x RJ-45


Rear I/O	HDMI	1 x HDMI 2.1
	DisplayPort	1 x DP 1.4a++
	Ethernet	3 x 1 Gigabit LAN 1 x 2.5 Gigabit LAN 1 x 10 Gigabit LAN
	USB	7 x USB 3.2 Gen2 1 x USB4/Thunderbolt™4 (5V/3A, supports DP 2.1 display output) * For Thunderbolt support, please refer to support list.
	Audio	3 (Mic-in, Line-in, Line-out)
	COM	COM1 (RS-232/422/485)
Internal Connector	USB	1 x USB 2.0 (1 x 2.00 pitch header) 2 x USB 3.2 Gen2 (1 x USB 3.2 header) 1 x USB 3.2 Gen2 vertical connector 1 x USB4/Thunderbolt™4 vertical connector (5V/3A, supports DP 2.1 display output) * For Thunderbolt support, please refer to support list.
	COM	COM2 (RS-232/422/485) COM3 (RS-232/TTL 5V/ccTalk) (Switch by Jumper setting) COM4, COM5, COM6 (RS-232)
	Parallel	1 (shared with GPIO)
	GPIO	8 x GPI, 8 x GPO (shaerd with LPT header)
	LVDS	1 (Connector with LVDS/eDP signal, switch by BIOS) *To use an eDP panel, set Active LVDS to [Enable] and Panel Type Selection to [eDP Bypass Mode] to enable output.
	Speaker Header	1
	Thunderbolt header	1
Storage	M.2	1 x M.2 (Key M, 2242/2280) with PCIe Gen5 x4 for SSD 1 x M.2 (Key M, 2242/2280) with PCIe Gen4 x4 for SSD
	SATA	8 x SATA3 (6Gb/s)
	RAID	Intel® VMD RAID 0/1/5/10 **supported by identical interface (PCIe or SATA) PCIe interface: 2 x M.2 Key M SATA interface: SATA port

Security	TPM	TPM 2.0 onboard IC
Watchdog	Output	From Super I/O to drag RESETCON#
Timer	Interval	256 Segments, 0, 1, 2, ...255 sec
Power Requirements	Input PWR	ATX PWR (24+8+8-pin)
	Power On	AT/ATX Supported - AT: Directly PWR on as power input ready - ATX: Press button to PWR on after power input ready
Environment	Operating Temperature	-20°C ~ 70°C
	Storage Temperature	-40°C ~ 85°C
	Operating Humidity	5% ~ 90%
	Storage Humidity	5% ~ 90%

- 1 : COM Port PWR Setting Jumper
PWR_COM1 (For COM Port1)
- 2 : LAN LED Header
LAN1_2_LED (For LAN1, LAN2 Ports)
- 3 : 8-pin ATX 12V Power Connectors (ATX12V1, ATX12V2)
- 4 : M.2 Key-M Socket (M2_M1)
- 5 : Chassis FAN Connector (+12V) (CHA_FAN1)
- 6 : CPU FAN Connectors (+12V) (CPU_FAN1)
- 7 : Chassis FAN Connector (+12V) (CHA_FAN2)
- 8 : Chassis Intrusion Header (CI1)
- 9 : PWR LOSS Header (PWR_LOSS1)
- 10 : 24-pin ATX Power Input Connector (ATXPWR1)
- 11 : USB 3.0 Type-A Port (Vertical) (USB3_8)
- 12 : USB 2.0 Header (USB2_13)
- 13 : SATA3 Connector (SATA3_0~SATA3_3)
- 14 : HEATER1 Header (HEATER1) (Preheat function)
- 15 : USB 3.2 Header (USB3_5_6)
- 16 : PSU_SMB1
- 17 : Brightness Control Mode (BLT_PWM1)
- 18 : Brightness Control Voltage Mode (BLT_PWM2)
- 19 : ATX/AT Mode Jumper (SIO_AT1)
- 20 : LVDS Panel Connector (LVDS1)
- 21 : Inverter Power Control Wafer (BLT_PWR1)
- 22 : Backlight Volume Control (BLT_VOL1)
- 23 : SATA3 Connector (SATA3_4~SATA3_7)
- 24 : Backlight Power Select (LCD_BLT_VCC) (BKT_PWR1)
- 25 : COM3_CC_TTL_SEL1
- 26 : Panel Power Select (PNL_PWR1)
- 27 : System Panel Header (PANEL1)
- 28 : M.2 Key-M Socket (M2_M2)
- 29 : COM Port PWR Setting Jumpers
PWR_COM2 (For COM Port2)
PWR_COM3 (For COM Port3)
PWR_COM4 (For COM Port4)
PWR_COM5 (For COM Port5)
PWR_COM6 (For COM Port6)
- 30 : ESPI Header (ESPI1)
- 31 : COM Port Headers
COM2 (RS232/422/485)
COM3~COM6 (RS232)
- 32 : Printer Port/GPIO Header (LPT_GPIO1)

- 33 : Digital Input/Output Default Value Setting (JGPIO_SET1)
- 34 : Digital Input/Output Power Select (JGPIO_PWR) (JGPIO_PWR1)
- 35 : Front Panel Audio Header (HD_AUDIO1)
- 36 : SPDIF Header (SPDIF1)
- 37 : 3W Audio Output Wafer (SPEAKER1)
- 38 : Buzzer Header (BUZZ2)
- 39 : Clear CMOS Header (CLRMOS2_CLRMOS1)
- 40 : PWR_BAT1
- 41 : LAN LED Header
 - LAN3_4_LED (For LAN3, LAN4 Ports)
 - LA5_LED1 (For LAN5 Port)
- 42 : DACC1
- 43 : M.2 Key-E Socket (M2_E1)
- 44 : Chassis FAN Connector (+12V) (CHA_FAN3)
- 45 : Thunderbolt Type-C Port (TC_TB_2)
- 46 : Socket LGA1851 RL-ILM
 - *35LB thermal solution load required.

1.4 I/O Panel

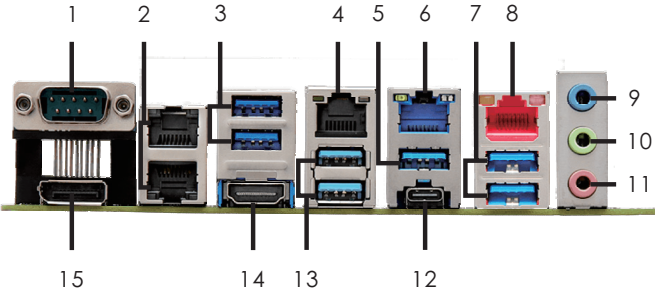

- | | | | |
|---|----------------------------------|----|-----------------------------------|
| 1 | COM Port (COM1) (RS232/422/485)* | 7 | USB 3.2 Gen2 Ports |
| 2 | RJ45 LAN Ports | | Top: USB3_10 |
| | Top: LAN1 (1G)** | | Bottom: USB3_9 |
| | Bottom: LAN2 (1G)** | 8 | RJ45 LAN Port (LAN5) (10G)**** |
| 3 | USB 3.2 Gen2 Ports | 9 | Audio Jack : Blue - Line In |
| | Top: USB3_4 | 10 | Audio Jack : Green - Line Out |
| | Bottom: USB3_3 | 11 | Audio Jack : Pink - Mic In |
| 4 | RJ45 LAN Port (LAN3) (1G)** | 12 | Thunderbolt Type-C Port (TC_TB_1) |
| | (supports Vpro) | 13 | USB 3.2 Gen2 Ports |
| 5 | USB 3.2 Gen2 Port (USB3_7) | | Top: USB3_2 |
| 6 | RJ45 LAN Port (LAN4) (2.5G)*** | | Bottom: USB3_1 |
| | | 14 | HDMI Port (HDMI1) |
| | | 15 | DisplayPort (DP1) |

* This motherboard supports RS232/422/485 on COM1 port. Please refer to the table below for the pin definition. In addition, COM1 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our user manual for details.


COM1 Port Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	NA
4	DTR	RX-	NA
5	GND	GND	GND
6	DSR	NA	NA
7	RTS	NA	NA
8	CTS	NA	NA
9	PWR	PWR	PWR

** There are two LEDs next to the LAN1~3 ports. Please refer to the table below for the LAN1~3 ports LED indications.

LAN1~3 Ports LED Indications


Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10 Mbps connection
Blinking	Data Activity	Orange	100 Mbps connection
On	Link	Green	1 Gbps connection

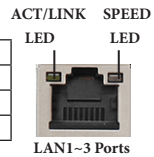

*** There are two LEDs next to the LAN4 port. Please refer to the table below for the LAN4 port LED indications.

LAN4 Port LED Indications


Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Off	10/100 Mbps connection
Blinking	Data Activity	Orange	1 Gbps connection
On	Link	Green	2.5 Gbps connection

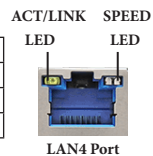


**** There are two LEDs next to the LAN5 port. Please refer to the table below for the LAN5 port LED indications.

LAN5 Port LED Indications

Activity/Link LED		SPEED LED	
Status	Description	Status	Description
Off	No Link	Orange	10 Mbps/100 Mbps/1 Gbps/
Blinking	Data Activity		2.5 Gbps/5 Gbps connection
On	Link	Green	10 Gbps connection

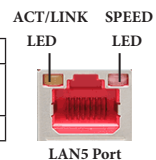

1.5 Block Diagram

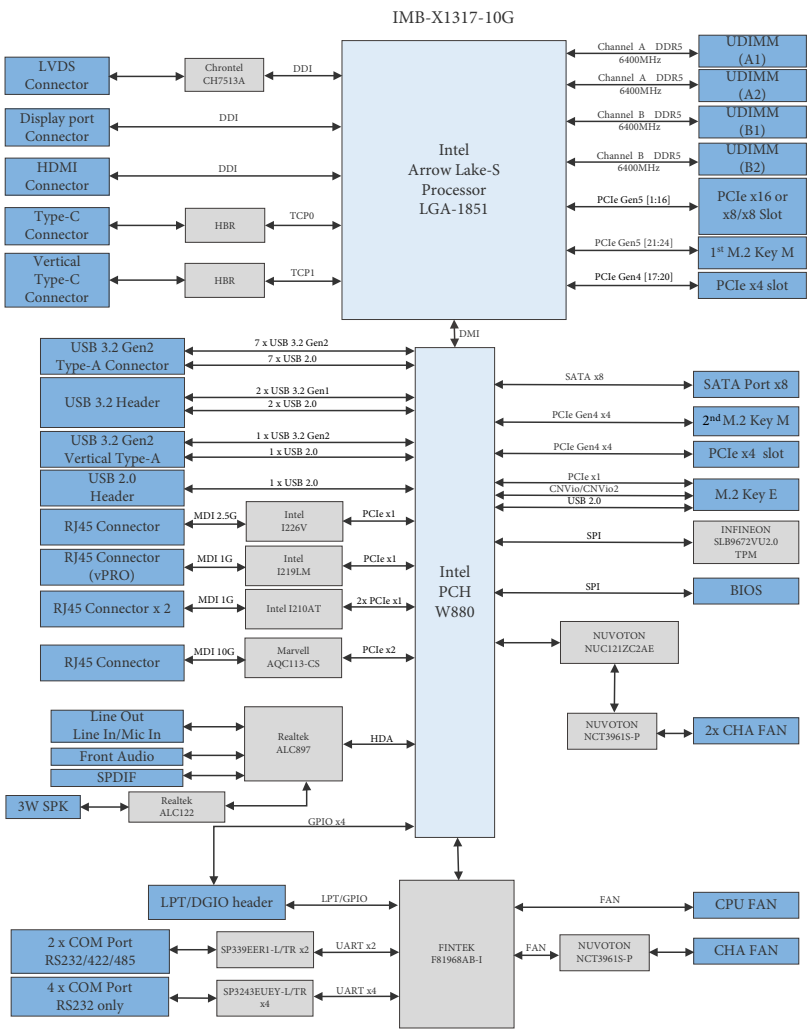

Chapter 2 Installation

This is a Micro-ATX (9.6-in x 9.6-in x 1.81-in, 24.4 cm x 24.4 cm x 4.61 cm) form factor motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.
5. Heatsink (The thermal solution of whole system needs to be designed additionally.)



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 Installation of Memory Modules (LONG-DIMM)

IMB-X1317-10G provides four 288-pin DDR5 (Double Data Rate 5) Long-DIMM slots.



1. For dual channel configuration, you always need to install identical (the same brand, speed, size and chip-type) DDR5 DIMM pairs.
2. It is unable to activate Quad Channel Memory Technology with only one memory module installed.
3. It is not allowed to install a DDR, DDR2, DDR3 or DDR4 memory module into a DDR5 slot; otherwise, this motherboard and DIMM may be damaged.




The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot in the incorrect orientation.


Recommended Memory Configuration

Priority	DDR5_A1	DDR5_A2	DDR5_B1	DDR5_B2
1		Populated		Populated
2	Populated	Populated	Populated	Populated


- 1 Open the DIMM slot latches.

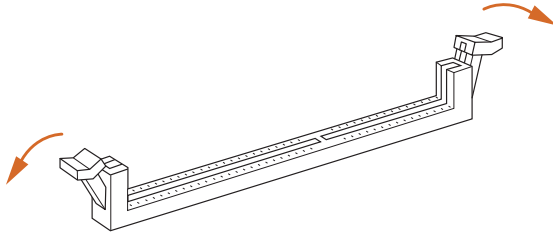

- 2 Align the notch. Carefully press down until the DIMM slides into the slot.

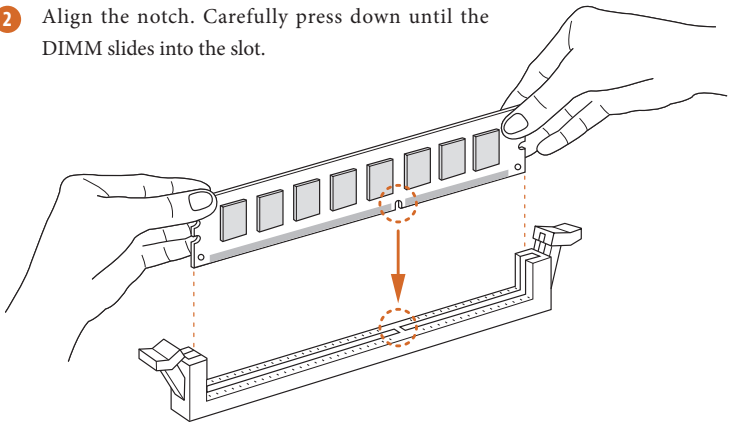

- 3 The latches snap back into place.

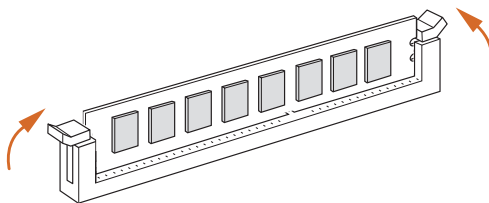

2.4 Expansion Slots

There are four PCI Express slots and three M.2 sockets on this motherboard.

PCIe slot: 2 x PCIe Gen5 Slots (PCIe1/PCIe4:single at x16 (PCIe1); dual at x8 (PCIe1)/x8 (PCIe4)) (PCIe1: Support Riser cadr x8/x8)
2 x PCIe x4 (Gen4)

M.2 sockets: 1 x M.2 (Key E, 2230) with PCIe Gen4 x1, USB 2.0 and CNVio/CNVio2 for Wireless
1 x M.2 (Key M, 2242/2280) with PCIe Gen5 x4 for SSD
1 x M.2 (Key M, 2242/2280) with PCIe Gen4 x4 for SSD

M.2 Key-E Socket
(M2_E1)


Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	USB_D+	+3.3V	4
5	USB_D-	NA	6
7	GND	PCMCLK	8
9	CNV_WGR_D1-	CNV_RF_RESET	10
11	CNV_WGR_D1+	PCMIN	12
13	GND	MODEM_CLKREQ	14
15	CNV_WGR_D0-	NA	16
17	CNV_WGR_D0+	GND	18
19	GND	NA	20
21	CNV_WGR_CLK-	CNV_BRI_RSP	22
23	CNV_WGR_CLK+		
		CNV_BGI_DT	32
33	GND	CNV_RGI_RSP	34
35	PETp	CNV_BRI_DT	36
37	PETn	CL_RST#	38
39	GND	CL_DATA	40
41	PERp	CL_CLK	42
43	PERn	CNV_PA_ BLANKING	44
45	GND	CNV_MFUART2_ TXD	46
47	PEFCLKp	CNV_MFUART2_ RXD	48
49	PEFCLKn	SUSCLK	50
51	GND	PERST0#	52
53	CLKREQ#	BT_OFF#	54
55	NA	WIFI_OFF#	56
57	GND	SMB_DATA	58
59	CNV_WT_D1-	SMB_CLK	60
61	CNV_WT_D1+	NA	62
63	GND	NA	64
65	CNV_WT_D0-	NA	66
67	CNV_WT_D0+	NA	68
69	GND	NA	70
71	CNV_WT_CLK-	+3.3V	72
73	CNV_WT_CLK+	+3.3V	74
75	GND		

M.2 Key-M Sockets
(M2_M1, M2_M2)

Pin	Signal Name	Signal Name	Pin
1	GND	+3.3V	2
3	GND	+3.3V	4
5	PERn3	NA	6
7	PERp3	NA	8
9	GND	SATA_LED	10
11	PETn3	+3.3V	12
13	PETp3	+3.3V	14
15	GND	+3.3V	16
17	PERn2	+3.3V	18
19	PERp2	NA	20
21	GND	NA	22
23	PETn2	NA	24
25	PETp2	NA	26
27	GND	NA	28
29	PERn1	NA	30
31	PERp1	NA	32
33	GND	NA	34
35	PETn1	NA	36
37	PETp1	NA	38
39	GND	SMB_CLK	40
41	PERn0	SMB_DATA	42
43	PERp0	NA	44
45	GND	NA	46
47	PETn0	NA	48
49	PETp0	PERST#	50
51	GND	CLKREQ#	52
53	PEFCLKn	WAKE#	54
55	PEFCLKp	NA	56
57	GND	NA	58
67	NA	SUS_CLK	68
69	PEDET	+3.3V	70
71	GND	+3.3V	72
73	GND	+3.3V	74
75	GND		

2.5 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “Short.” If no jumper cap is placed on pins, the jumper is “Open.” The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when jumper cap is placed on these 2 pins.

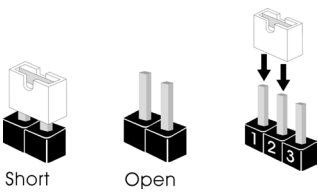

COM Port Pin9 PWR Setting Jumpers

(3-pin PWR_COM1 (For COM Port1))
(see p. 5, No. 1)



Setting	Description
Open	+0V
1-2	+5V (Default)
2-3	+12V

(3-pin PWR_COM2 (For COM Port2),
PWR_COM3 (For COM Port3),
PWR_COM4 (For COM Port4),
PWR_COM5 (For COM Port5),
PWR_COM6 (For COM Port6))
(see p. 5, No. 29)

The maximum current for per port is 1A, and the power supply is either 5V or 12V. Use the jumpers to set the power for COM port pin 9.

Chassis Intrusion Header

(2-pin CI1)
(see p. 5, No. 8)



Setting	Description
Open	Normal (Default)
Short	Active Case Open

This motherboard supports CASE OPEN detection feature that detects if the chassis cover has been removed. This feature requires a chassis with chassis intrusion detection design.

PWR LOSS Header

(2-pin PWR_LOSS1)
(see p. 5, No. 9)



Setting	Description
Open	No Power Loss
Short	Power Loss (Default)

Brightness Control Mode

(3-pin BLT_PWM1)

(see p. 5, No. 17)



Setting	Description
1-2	From eDP PWM to CON_LBKLT_CTL
2-3	From LVDS PWM to CON_LBKLT_CTL (Default)

Please set to 1-2 when adjusting brightness by Brightness Control bar under OS.

Please set to 2-3 when adjusting brightness by BLT_VOL1.

Brightness Control Voltage Mode

(3-pin BLT_PWM2)

(see p. 5, No. 18)



Setting	Description
1-2	+3V (Default)
2-3	+5V

ATX/AT Mode Jumper

(3-pin SIO_AT1)

(see p. 5, No. 19)



Setting	Description
1-2	AT Mode
2-3	ATX Mode (Default)

Backlight Power Select (LCD_BLT_VCC)

(3-pin BKT_PWR1)

(see p. 5, No. 24)




Setting	Description
1-2	LCD_BLT_VCC : +5V (Default)
2-3	LCD_BLT_VCC : +12V

Use this header to set up the backlight power of the LVDS connector and the panel backlight power of BLT_PWM1.

Panel Power Select

(5-pin PNL_PWR1)

(see p. 5, No. 26)



Setting	Description
1-2	+3V (Default)
2-3	+5V
4-5	+12V

Use this to set up the VDD power of the LVDS connector.

Digital Input/Output Power Select

(3-pin JGPIO_SET1)

(see p. 5, No. 33)




Setting	Description
1-2	Pull-High (Default)
2-3	Pull-Low

The header is used for GPIO default value setting for either pull high or pull low. Pulling the header to a high/low value means the voltage is anchored to VCC/GND, in a stable, non-floating state.

Digital Input/Output Power Select (JGPIOPWR)

(5-pin JGPIO_PWR1)

(see p. 5, No. 34)




Setting	Description
1-2	+12V
2-3	+5V (Default)
3-4	+5V
4-5	GND

The maximum current JGPIO_PWR1 provides is 1A.

Clear CMOS Header

(5-pin CLRMOS2_CLRMOS1)

(see p. 4, No. 39)



Setting	Description
1-2	Open : Normal (Default) Short : Auto Clear CMOS (Power Off)
3-4	Normal (Default)
4-5	Clear CMOS

NOTE: CLRMOS1 allows you to clear the data in CMOS. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action. Please be noted that the password, date, and time will be cleared only if the CMOS battery is removed.

Note: CLRMOS2 allows you to clear the data in CMOS automatically when AC power on. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord, then use a jumper cap to short the pins on CLRMOS2.

PWR_BAT1
(2-pin PWR_BAT1)
(see p. 5, No. 40)



Setting	Description
Open	Normal (Default)
Short	Charge Battery*

*Only supported by chargeable battery.

DACC Jumper
(2-pin DACC1)
(see p. 5, No. 42)



Setting	Description
Open	No ACC
Short	ACC (Default)

Auto clear CMOS when system boot improperly.


2.6 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

LAN LED Headers


(8-pin LAN1_2_LED
(For LAN1, LAN2 Ports))
(see p. 5, No. 2)



LAN1_2_LED:

LAN2 LED		LAN1 LED	
Pin	Signal Name	Signal Name	Pin
1	LED_ACT+	LED_ACT+	2
3	LED_ACT-	LED_ACT-	4
5	LED_100-/LED_1000+	LED_100-/LED_1000+	6
7	LED_100+/LED_1000-	LED_100+/LED_1000-	8


(8-pin LAN3_4_LED
(For LAN3, LAN4 Ports))
(see p. 5, No. 41)



LAN3_4_LED:

LAN4 LED		LAN3 LED	
Pin	Signal Name	Signal Name	Pin
1	LED_ACT+	LED_ACT+	2
3	LED_ACT-	LED_ACT-	4
5	LED_100-/LED_1000+	LED_100-/LED_1000+	6
7	LED_100+/LED_1000-	LED_100+/LED_1000-	8

(4-pin LAN5_LED1
(For LAN5 Port))
(see p. 5, No. 41)




LAN5_LED1 :

Pin	Signal Name
1	LED_ACT+
2	LED_ACT-
3	LED_2500-/LED_10000+
4	LED_2500+/LED_10000-

8-Pin ATX 12V Power Connectors

(8-pin ATX12V1, ATX12V2)
(see p. 5, No. 3)




Pin	Signal Name	Signal Name	Pin
1	GND	ATX12V	2
3	GND	ATX12V	4
5	GND	ATX12V	6
7	GND	ATX12V	8

This motherboard provides an 8-pin ATX 12V power connector. To use a 4-pin ATX power supply, please plug it along Pin 1 and Pin 5.

Chassis FAN Connector (+12V)

(4-pin CHA_FAN1)


(see p. 5, No. 5)



Pin	Signal Name
1	GND
2	+12V
3	CHA_FAN_SPEED
4	FAN_SPEED_CONTROL

(4-pin CHA_FAN2)

(see p. 5, No. 7)



(4-pin CHA_FAN3)

(see p. 5, No. 44)




The board offers three 4-pin chassis fan (Smart Fan) connectors which are compatible with 3-pin chassis fan. If you connect a 3-pin chassis fan to the chassis fan connector on this motherboard, please connect it to pin 1-3. The maximum current is 1A.

CPU FAN Connector (+12V)

(4-pin CPU_FAN1)

(see p. 5, No. 6)



Pin	Signal Name
1	GND
2	+12V
3	CPU_FAN_SPEED
4	FAN_SPEED_CONTROL




The board offers three 4-pin CPU fan (Smart Fan) connectors which are compatible with 3-pin CPU fan. If you connect a 3-pin CPU fan to the CPU fan connector on this motherboard, please connect it to pin 1-3. The maximum current is 1A.

24-pin ATX Power Input Connector

(24-pin ATXPWR1)

(see p. 5, No. 10)




Pin	Signal Name	Signal Name	Pin
1	+3V	+3V	13
2	+3V	-12V	14
3	GND	GND	15
4	+5V	PSON#	16
5	GND	GND	17
6	+5V	GND	18
7	GND	GND	19
8	PWROK_PS	NA	20
9	ATX+5VSB	+5V	21
10	+12V	+5V	22
11	+12V	+5V	23
12	+3V	GND	24

This motherboard provides a 24-pin ATX power connector. To use a 20-pin ATX power supply, please plug it along Pin 1 and Pin 13.

USB 3.0 Type-A Port (Vertical)

(9-pin USB3_8)

(see p. 5, No. 11)




Pin	Signal Name
1	USB_PWR
2	USB_D-
3	USB_D+
4	GND
5	SSRX-
6	SSRX+
7	GND
8	SSTX-
9	SSTX+

The board provides one internal USB 3.0 header, which is Type-A vertical connector. The maximum current per port is 0.5A.

USB 2.0 Header

(5-pin USB2_13)

(see p. 5, No. 12)



Pin	Signal Name
1	USB_PWR
2	USB_D-
3	USB_D+
4	GND
5	NC

The board provides one internal USB 2.0 header. The maximum current per port is 0.5A.

SATA3 Connectors

(7-pin SATA3_0~SATA3_3)

(see p. 5, No. 13)



Pin	Signal Name
1	GND
2	SATA-A+
3	SATA-A-
4	GND
5	SATA-B-
6	SATA-B+
7	GND

(7-pin SATA3_4~SATA3_7)

(see p. 5, No. 23)



The Serial ATA3 (SATA3) connector supports SATA data cables for internal storage devices. The current SATA3 interface allows up to 6.0 Gb/s data transfer rate.

HEATER1 Header (Preheat function)

(3-pin HEATER1)

(see p. 5, No. 14)



Pin	Signal Name
1	Heater_PWR (5V/1A)
2	GND
3	NTC (Negative Temperature Coefficient) thermistors

* The 10k Ohm NTC thermistors is suggested.

* Deep mode is not supported when the preheat function is enabled.


Refer to the following Preheat Target Temperature list.

Preheat Target Temperature	
+20 °C / +68 °F	
+15 °C / +59 °F	
+10 °C / +50 °F	
+5 °C / +41 °F	
0 °C / +32 °F	
-5 °C / +23 °F	
-10 °C / +14 °F	
-15 °C / 5 °F	
-20 °C / -4 °F	
-25 °C / -13 °F	
-30 °C / -22 °F	
-35 °C / -31 °F	
-40 °C / -40 °F	

USB 3.2 Header

(19-pin USB3_5_6)

(see p. 5, No. 15)

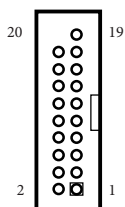


Pin	Signal Name	SiSignal Name	Pin
1	DUMMY	IntA_PA_D+	2
3	IntA_PB_D+	IntA_PA_D-	4
5	IntA_PB_D-	GND	6
7	GND	IntA_PA_SSTX+	8
9	IntA_PB_SSTX+	IntA_PA_SSTX-	10
11	IntA_PB_SSTX-	GND	12
13	GND	IntA_PA_SSRX+	14
15	IntA_PB_SSRX+	IntA_PA_SSRX-	16
17	IntA_PB_SSRX-	Vbus	18
19	Vbus		20
11	+12V	+5V	23
12	+3V	GND	24

There is one USB 3.2 connector on the motherboard. This header can support one USB 3.2 port with maximum power current 0.9A.

PSU_SMB1

(5-pin PSU_SMB1)

(see p. 5, No. 16)




Pin	Signal Name
1	SMB_CLK
2	SMB_DATA
3	SMBALERT#
4	GND
5	+3V

The SMBus connector is for power supply unit.

LVDS Panel Connector

(40-pin LVDS1)

(see p. 5, No. 20)



Pin	Signal Name	Signal Name	Pin
1	LCD_VCC	LCD_VCC	2
3	+3.3V	N/A	4
5	N/A	LVDS_A_ DATA0#	6
7	LVDS_A_ DATA0	PD (Panel Detection)	8
9	LVDS_A_ DATA1#	LVDS_A_ DATA1	10
11	GND	LVDS_A_ DATA2#	12
13	LVDS_A_ DATA2	GND	14
15	LVDS_A_ DATA3#	LVDS_A_ DATA3	16
17	GND	LVDS_A_ CLK#	18
19	LVDS_A_ CLK	GND	20
21	LVDS_B_ DATA0#	LVDS_B_ DATA0	22
23	GND	LVDS_B_ DATA1#	24
25	LVDS_B_ DATA1	GND	26
27	LVDS_B_ DATA2#	LVDS_B_ DATA2	28
29	DPLVDD_EN	LVDS_B_ DATA3#	30
31	LVDS_B_ DATA3	GND	32
33	LVDS_B_ CLK#	LVDS_B_ CLK	34
35	GND	CON_LBKLT_ EN	36
37	CON_LBKLT_ CTL	LCD_BLT_VCC	38
39	LCD_BLT_VCC	LCD_BLT_VCC	40

* PD (Panel Detection): Connect this pin to LVDS Panel's Ground pin to detect Panel detection.

Inverter Power Control Wafer

(6-pin BLT_PWR1)

(see p. 5, No. 21)




Pin	Signal Name
1	GND
2	GND
3	CON_LBKLT_ CTL
4	CON_LBKLT_ EN
5	LCD_BLT_VCC
6	LCD_BLT_VCC

Backlight Volume Control

(7-pin BLT_VOL1)

(see p. 5, No. 22)




Pin	Signal Name
1	GPIO_VOL_UP
2	GPIO_VOL_DW
3	PWRDN
4	BLT_UP
5	BLT_DW
6	GND
7	GND

COM3_CC_TTL_SEL1

(9-pin COM3_CC_TTL_SEL1)

(see p. 5, No. 25)



Pin	Signal Name	Signal Name	Pin
1	+5V	GND	2
3		NA	4
5	TTXD_3_TTL	RRXD_3_TTL	6
7	TTXD_3	RRXD_3	8
9	TTXD_3_RS232	RRXD_3_RS232	10

COM_CC_TTL_SEL1:79



MINI_JUMPER

COM_CC_TTL_SEL1:80




MINI_JUMPER

Open: CCTALK function


- Supported by CCTALK Card (optional)

<https://www.asrockind.com/UART-CCTALK>

5-7 + **6-8**: TTL function




7-9 + **8-10**: COM (RS232)
(Default)



System Panel Header

(9-pin PANEL1)

(see p. 5, No. 27)



Pin	Signal Name	Signal Name	Pin
1	HDLED+	PLED+	2
3	HDLED-	PLED-	4
5	GND	PWRBTN#	6
7	RESET#	GND	8
9	GND		10

This header accommodates several system front panel functions.



Connect the power switch, reset switch and system status indicator on the chassis to this header according to the pin assignments below. Note the positive and negative pins before connecting the cables.

PWRBTN (Power Switch):

Connect to the power switch on the chassis front panel. You may configure the way to turn off your system using the power switch.

RESET (Reset Switch):

Connect to the reset switch on the chassis front panel. Press the reset switch to restart the computer if the computer freezes and fails to perform a normal restart.

PLED (System Power LED):

Connect to the power status indicator on the chassis front panel. The LED is on when the system is operating. The LED keeps blinking when the system is in S1 sleep state. The LED is off when the system is in S3/S4 sleep state or powered off (S5).

HDLED (Hard Drive Activity LED):

Connect to the hard drive activity LED on the chassis front panel. The LED is on when the hard drive is reading or writing data.

The front panel design may differ by chassis. A front panel module mainly consists of power switch, reset switch, power LED, hard drive activity LED, speaker and etc. When connecting your chassis front panel module to this header, make sure the wire assignments and the pin assign-ments are matched correctly.

ESPI Header

(20-pin ESPI1)
(see p. 5, No. 30)




The header is reserved for Port 80 code.
display and debugging purposes.

Pin	Signal Name
1	GND
2	ESPI_CLK
3	NA
4	ESPI_CS#
5	ESPI_RESET#
6	GND
7	+3V
8	ESPI_CS#1
9	PLTRST#
10	COM_RST#
11	ESPI_IO0
12	ESPI_IO1
13	ESPI_IO2
14	ESPI_IO3
15	ALERT#1
16	+3VSB
17	Internal Use
18	+5VSB
19	ESPI_ALERT#
20	GND

COM Port Headers

(9-pin COM2 (RS232/422/485)*
COM3~6 (RS232))
(see p. 5, No. 31)



Pin	Signal Name	Signal Name	Pin
1	DDCD#	RRXD	2
3	TTXD	DDTR#	4
5	GND	DDSR#	6
7	RRTS#	CCTS#	8
9	PWR		10

There are five 2.00mm-pitch internal COM port headers (COM2~COM6), with COM3~COM6 only supporting RS-232, and with COM2 supporting RS232/422/485. The maximum current is 1A per port. The power supply of pin 9 is either 5V or 12V; use the COM Port Pin 9 PWR Setting Jumper to control it.



* This motherboard supports RS232/422/485 on COM2 port. Please refer to the table below for the pin definition. In addition, COM2 port (RS232/422/485) can be adjusted in BIOS setup utility > Advanced Screen > Super IO Configuration. You may refer to our user manual for details.


COM2 Port Pin Definition

Pin	RS232	RS422	RS485
1	DCD	TX-	RTX-
2	RXD	TX+	RTX+
3	TXD	RX+	NA
4	DTR	RX-	NA
5	GND	GND	GND
6	DSR	NA	NA
7	RTS	NA	NA
8	CTS	NA	NA
9	PWR	PWR	PWR

Printer Port/GPIO Header

(25-pin LPT_GPIO1)

(see p. 5, No. 32)



Printer Port

Pin	Signal Name	Signal Name	Pin
1	STB#	AFD#	2
3	SPD0	ERROR#	4
5	SPD1	PINIT#	6
7	SPD2	SLIN#	8
9	SPD3	GND	10
11	SPD4	GND	12
13	SPD5	GND	14
15	SPD6	GND	16
17	SPD7	GND	18
19	ACK#	GND	20
21	BUSY	GND	22
23	PE	GND	24
25	SLCT		

GPIO

Pin	Signal Name	Signal Name	Pin
1	SIO_GP77	SIO_GP76	2
3	SIO_GP80	SIO_GP75	4
5	SIO_GP81	SIO_GP74	6
7	SIO_GP82	SIO_GP73	8
9	SIO_GP83	JGPIOPWR	10
11	SIO_GP84	JGPIOPWR	12
13	SIO_GP85	GND	14
15	SIO_GP86	GND	16
17	SIO_GP87/ GPP_SD01	GND	18
19	SIO_G72/ GPP_SD00	GND	20
21	SIO_G71/GPP_ I02	GND	22
23	SIO_G70/GPP_ I03	GND	24
25	NA	NC	24

The header functions as printer port and GPIO. To use the printer port function, please short pin4 and pin5 on Digital Input/Output Power Select (JGPIO_PWR1). This motherboard provides two SMI GPIO pins for interruption and two Timed GPIO pins for time synchronization purpose.


Pin 1-8 on GPIO are used for Input control while Pins 9, 11, 13, 15, 17, 19, 21 and 23 are used for Output control.

Parameter	Range
GPIO input Low voltage	Max: 0.8 V
GPIO input High voltage	Min: 2.4 V
GPIO output Low voltage	Max: 0.4 V
GPIO output High voltage	Min: 2.5 V
Note: LPT_GPIO1 Pin 10, Pin12 - JGPIOPWR, Current Max. 1A	

Front Panel Audio Header

(9-pin HD_AUDIO1)

(see p. 5, No. 35)




Pin	Signal Name	Signal Name	Pin
1	MIC2_L	GND	2
3	MIC2_R		4
5	OUT2_R	MIC_RET	6
7	J_SENSE		8
9	OUT2_L	OUT_RET	10

SPDIF Header

(3-pin SPDIF1)

(see p. 5, No. 36)




Pin	Signal Name
1	+5V
2	
3	SPDIF OUT
4	GND

SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. Please connect the SPDIF connector of HDMI VGA card to this header.

3W Audio Output Wafer

(4-pin SPEAKER1)

(see p. 5, No. 37)



Pin	Signal Name
1	OUTLN
2	OUTLP
3	OUTRP
4	OUTRN

Buzzer Header

(2-pin BUZZ2)

(see p. 5, No. 38)



Pin	Signal Name
1	+5V
2	BUZZ

This header provides additional external Buzzer for boot up debugging.

Thunderbolt Type-C Port

(TC_TB_2)

(see p. 5, No. 45)



Chapter 3 UEFI SETUP UTILITY

3.1 Introduction

ASRock Industrial UEFI (Unified Extensible Firmware Interface) is a BIOS utility which offers tweak-friendly options in an advanced viewing interface. The UEFI system works with a USB mouse and offers users a faster, sleeker experience.

This BIOS utility can perform the Power-On Self-Test (POST) during system startup, record hardware parameters of the system, load operating system, and so on. The battery on the motherboard supplies the power needed to the CMOS when the system power is turned off, and the values configured in the UEFI utility are kept in the CMOS.

Please note that inadequate BIOS settings may cause system instability, malfunction or boot failure. We strongly recommend that you do not alter the UEFI default configurations or change the settings only with the assistance of a trained service person.

If the system becomes unstable or fails to boot after you change the setting, try to clear the CMOS values and reset the board to default values. See your motherboard manual for instructions.

3.1.1 Entering BIOS Setup

You may run the UEFI SETUP UTILITY by pressing <F2> or <Delete> right after you power on the computer; otherwise, the Power-On-Self-Test (POST) will continue with its test routines. If you wish to enter the UEFI SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.

This setup guide explains how to use the UEFI SETUP UTILITY to configure all the supported system. The screenshots in this manual are for reference only. UEFI Settings and options may vary owing to different BIOS release versions or CPU installed. Please refer to the actual BIOS version of the motherboard you purchased for detailed screens, settings and options.

3.1.2 UEFI Menu Bar

The top of the screen has a menu bar with the following selections:

Main	For setting system time/date information
Advanced	For advanced system configurations
H/W Monitor	Displays current hardware status
Security	For security settings
Boot	For configuring boot settings and boot priority
Exit	Exit the current screen or the UEFI Setup Utility



Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions for reference purpose only, and may vary from the latest BIOS and do not exactly match what you see on your screen.

3.1.3 Navigation Keys


Use <←> key or <→> key to choose among the selections on the menu bar, and use <↑> key or <↓> key to move the cursor up or down to select items, then press <Enter> to get into the sub screen. You can also use the mouse to click your required item.

Please check the following table for the descriptions of each navigation key.

Navigation Key(s)	Description
+ / -	To change option for the selected items
<Tab>	Switch to next function
<PGUP>	Go to the previous page
<PGDN>	Go to the next page
<HOME>	Go to the top of the screen
<END>	Go to the bottom of the screen
<F1>	To display the General Help Screen
<F7>	Discard changes and exit the SETUP UTILITY
<F9>	Load optimal default values for all the settings
<F10>	Save changes and exit the SETUP UTILITY
<F12>	Print screen
<ESC>	Jump to the Exit Screen or exit the current screen

3.2 Main Screen


When you enter the UEFI SETUP UTILITY, the Main screen will appear and display the system overview.

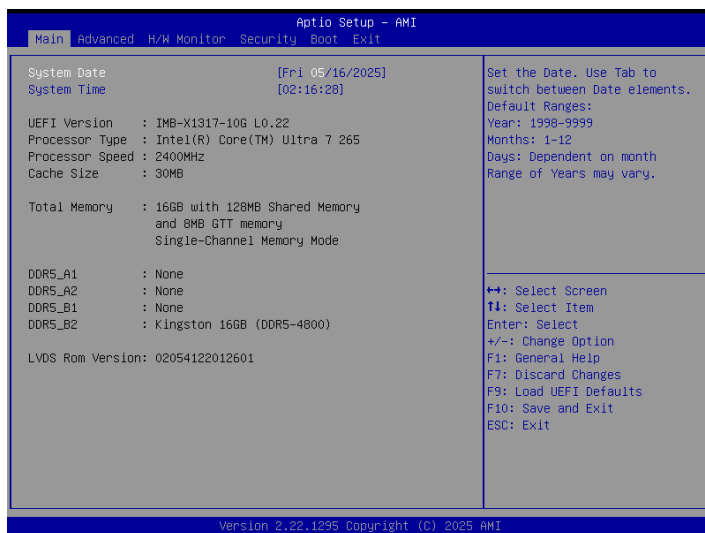

Because the UEFI software is constantly being updated, the following UEFI setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen. Options may also vary depending on the features of your motherboard.

3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, Storage Configuration, Thunderbolt (TM) Configuration, Super IO Configuration, AMT Configuration, ACPI Configuration, USB Configuration, and Trusted Computing.

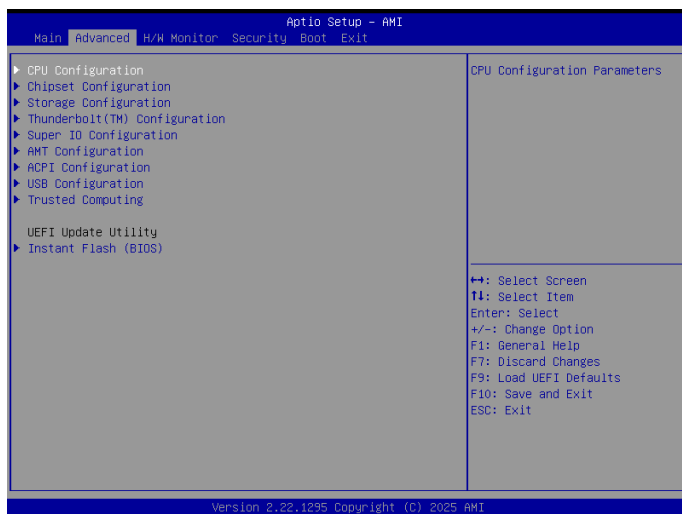


Setting wrong values in this section may cause the system to malfunction.

Instant Flash (BIOS)

Instant Flash is a UEFI flash utility embedded in Flash ROM. This convenient UEFI update tool allows you to update system UEFI without entering operating systems first like Windows®. Just launch this tool and save the new UEFI file to your USB flash drive, floppy disk or hard drive, and then you can update your UEFI in only a few clicks without preparing an additional floppy diskette or other complicated flash utility. Please be noted that the USB flash drive or hard drive must use FAT32/16/12 file system. If you execute Instant Flash utility, the utility will show the UEFI files and their respective information. Select the proper UEFI file to update your UEFI, and reboot your system after UEFI update process completes.

3.3.1 CPU Configuration

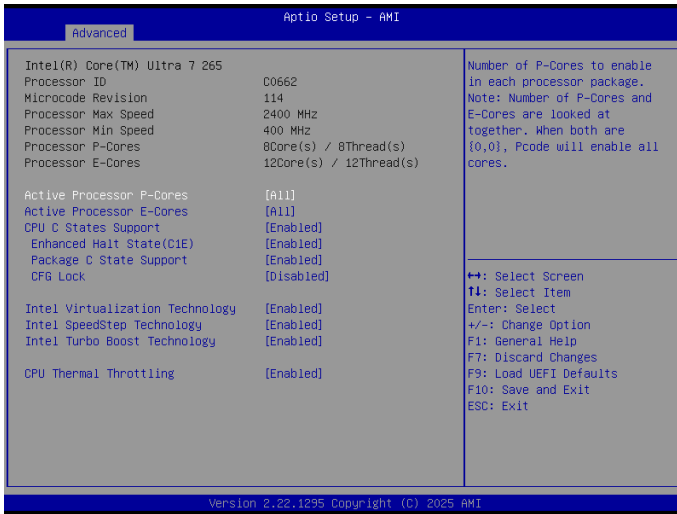

Active Processor P-Cores

This allows you to select the number of cores to enable in each processor package.

Active Processor E-Cores

Allows you to select the number of E-Cores to enable in each processor package. Note: Number of P-Cores and E-Cores are looked at together. When both are {0,0}, Pcode will enable all cores.

CPU C States Support

Allows you to enable CPU C States Support for power saving. It is recommended to keep C3, C6 and C7 all enabled for better power saving.

Configuration options: [Enabled] [Disabled]

Enhanced Halt State (C1E)

The option allows you to enable Enhanced Halt State (C1E) for lower power consumption.

Configuration options: [Enabled] [Disabled]

Package C States Support

The option allows you to enable CPU, PCIe, Memory, Graphics C State Support for power-saving.

Configuration options: [Auto] [Enabled] [Disabled]

CFG Lock

The option allows you to enable or disable the CFG Lock.

Configuration options: [Enabled] [Disabled]

Intel Virtualization Technology

Intel Virtualization Technology allows a platform to run multiple operating systems and applications in independent partitions, so that one computer system can function as multiple virtual systems.

Configuration options: [Enabled] [Disabled]

Intel SpeedStep Technology

Intel SpeedStep technology allows processors to switch between multiple frequencies and voltage points for better power saving and heat dissipation. CPU turbo ratio can be fixed when Intel SpeedStep Technology is set to [Disabled].

Configuration options: [Enabled] [Disabled].

If you install Windows® 10 and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel SpeedStep technology.



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issues with some power supplies. Please set this item to [Disabled] if above issues occur.

Intel Turbo Boost Technology

Intel Turbo Boost Technology enables the processor to run above its base operating frequency when the operating system requests the highest performance state. The default value is [Enabled].



Configuration options: [Enabled] [Disabled]

CPU Thermal Throttling

CPU Thermal Throttling allows you to enable CPU internal thermal control mechanisms to keep the CPU from overheating.

Configuration options: [Enabled] [Disabled]

3.3.2 Chipset Configuration

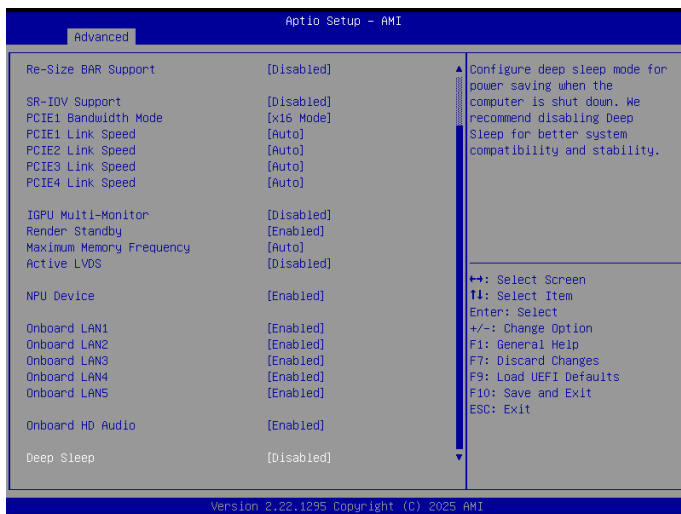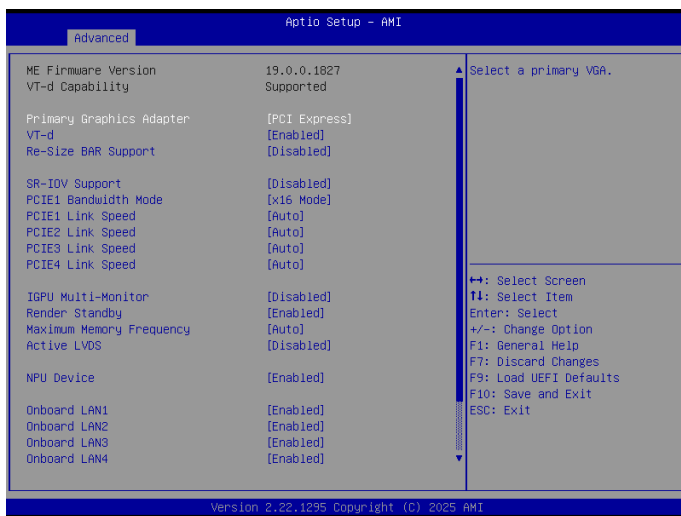

Primary Graphics Adapter

The option allows you to select a primary VGA.

Configuration options: [Onboard] [PCI Express] (Options vary when you have installed a graphics card on your motherboard.)

VT-d

Intel® Virtualization Technology for Directed I/O helps your virtual machine monitor better utilize hardware by improving application compatibility and reliability, and providing additional levels of manageability, security, isolation, and I/O performance.

Configuration options: [Enabled] [Disabled]

Re-Size BAR Support

If system has Resizable BAR capable PCIe Devices, this option enables or disables Resizable BAR Support.

SR-IOV Support

If system has SR-IOV capable PCIe Devices, this option Enables or Disables Single Root IO Virtualization Support.

Configuration options: [Enabled] [Disabled]

PCIe1 Bandwidth Mode

Select PCIe1 Bandwidth. Select [PCIe4] when using PCIe4 slot. Select [x8 / x8 Mode]

when using Riser card on PCIe1 slot. (PCIe4 slot will be disabled)

PCIe1 Link Speed

The option allows you to configure PCIe1 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] [Gen4] [Gen5] (Options vary depending on your motherboard.)

PCIe2 Link Speed

The option allows you to configure PCIe2 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

PCIE3 Link Speed

The option allows you to configure PCIE3 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

PCIE4 Link Speed

The option allows you to configure PCIE4 Slot Link Speed. Auto mode is optimizing for overclocking.

Configuration options: [Auto] [Gen1] [Gen2] [Gen3] (Options vary depending on your motherboard.)

IGPU Multi-Monitor

Select [Disabled] to disable the integrated graphics when an external graphics card is installed. Select [Enabled] to keep the integrated graphics enabled at all times.

Configuration options: [Auto] [Enabled] [Disabled]

Render Standby

Power down the render unit when the GPU is idle for lower power consumption.

Maximum Memory Frequency

Selections in Mhz.

Active LVDS

Use this to enable or disable the LVDS. The default value is [Disabled]. Set the item to [Enabled]. Then press <F10> to save the setting and restart the system. Now the default value of Active LVDS is changed to [Enabled] (F9 load default is also set to [Enabled]).

Change the setting from [Enabled] to [Disabled], and then press <F10> to save the setting and restart the system. Likewise, the default value of Active LVDS is changed to [Disabled] (F9 load default is also set to [Disabled]).

*To use an eDP panel, set Active LVDS to [Enable] and Panel Type Selection to [eDP Bypass Mode] to enable output.

NPU Device

This allows you to enable or disable NPU (Neural Processing Unit) Device.

Configuration options: [Enabled] [Disabled]

Onboard LAN1

This allows you to enable or disable the Onboard LAN1 feature.

Onboard LAN2

This allows you to enable or disable the Onboard LAN2 feature.

Onboard LAN3

This allows you to enable or disable the Onboard LAN3 feature.

Onboard LAN4

This allows you to enable or disable the Onboard LAN4 feature.

Onboard LAN5

This allows you to enable or disable the Onboard LAN5 feature.

Onboard HD Audio


Onboard HD Audio allows you to enable or disable the onboard HD audio controller. Set this item to [Auto] to enable the onboard HD and automatically disable it when a sound card is installed.

Configuration options: [Auto] [Enabled] [Disabled]

Deep Sleep

Configure deep sleep mode for power saving when the computer is shut down. We recommend disabling Deep Sleep for better system compatibility and stability.

3.3.3 Storage Configuration

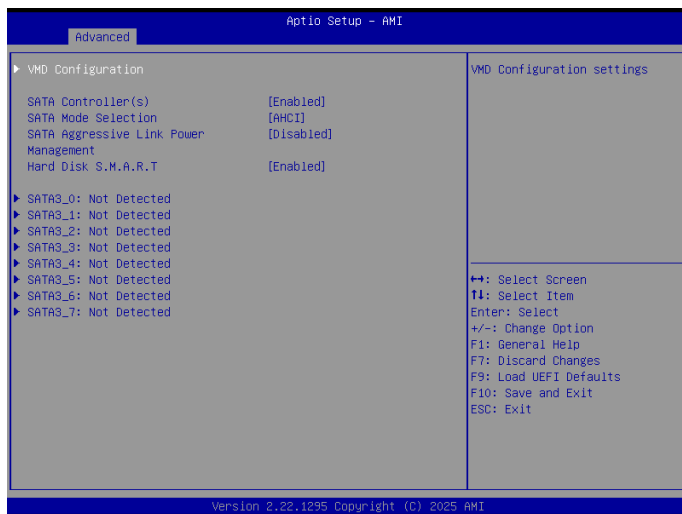

VMD Configuration

This item allows you to enable or disable the Intel VMD support function.

SATA Controller(s)

Allows you to enable or disable the SATA controllers.

Configuration options: [Enabled] [Disabled]

SATA Mode Selection

AHCI: Supports new features that improve performance.

Configuration option: [AHCI]

SATA Aggressive Link Power Management

SATA Aggressive Link Power Management allows SATA devices to enter a low power state during periods of inactivity to save power. It is supported only by AHCI mode.


Configuration options: [Enabled] [Disabled]

Hard Disk S.M.A.R.T.


S.M.A.R.T stands for Self-Monitoring, Analysis, and Reporting Technology. It is a monitoring system for computer hard disk drives to detect and report on various indicators of reliability.

Configuration options: [Enabled] [Disabled]

3.3.4 Thunderbolt (TM) Configuration

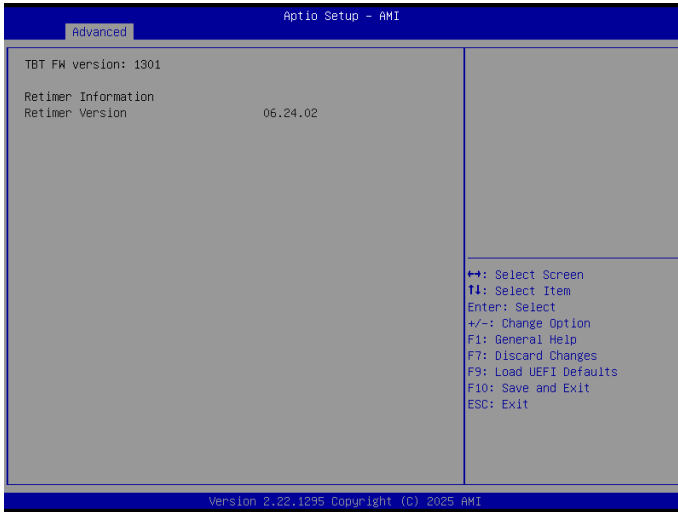

3.3.5 Super IO Configuration

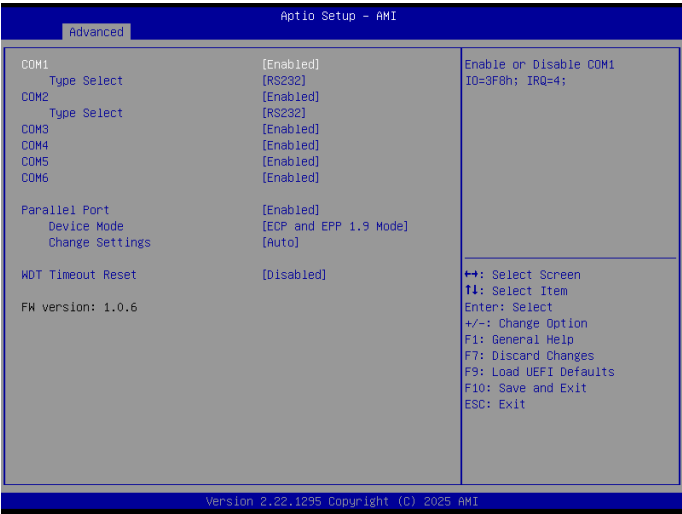

COM1 Configuration

Use this to set parameters of COM1.

Type Select

Use this to select COM1 port type: [RS232], [RS422] or [RS485].

COM2 Configuration

Use this to set parameters of COM2.

Type Select

Use this to select COM2 port type: [RS232], [RS422] or [RS485].

COM3 Configuration

Use this to set parameters of COM3.

COM4 Configuration

Use this to set parameters of COM4.

COM5 Configuration

Use this to set parameters of COM5.

COM6 Configuration

Use this to set parameters of COM6.

Parallel Port

The option enables or disables the Parallel port.

Device Mode

Select the device mode according to your connected device.


Change Settings

Select the address of the Parallel port.

WDT Timeout Reset

Use this to set the Watch Dog Timer.

3.3.6 AMT Configuration

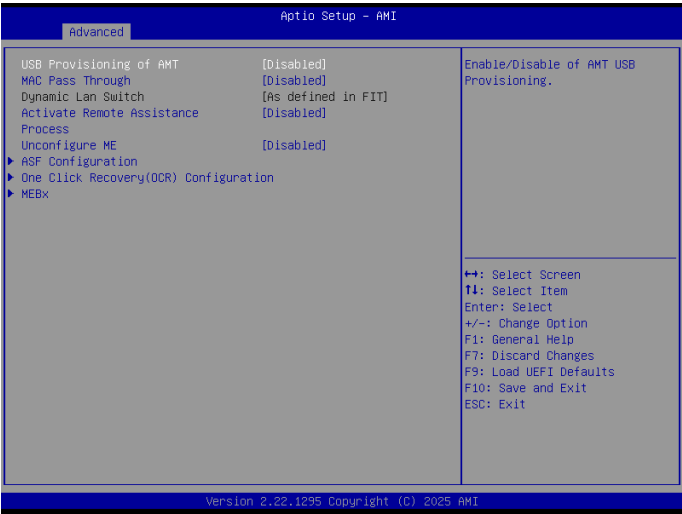

USB Provisioning of AMT

Use this to enable or disable AMT USB Provisioning. The default is [Disabled].

MAC Pass Through

The option enables or disables MAC Pass Through function.

Dynamic Lan Switch

The option allows switching AMT support from Integrated LAN to Discrete LAN.

Activate Remote Assistance Process

Trigger CIRA boot. The default is [Disabled].

Un-Configure ME

Un-Configure ME without password. The default is [Disabled].

ASF Configuration

The option allows you to configure Alert Standard Format parameters.


One Click Recovery(OCR) Configuration

Configuration setting for One Click Recovery. This allows access for AMT to boot a recovery OS application

MEBx

This Formset contains forms for configuring MEBx.

3.3.7 ACPI Configuration

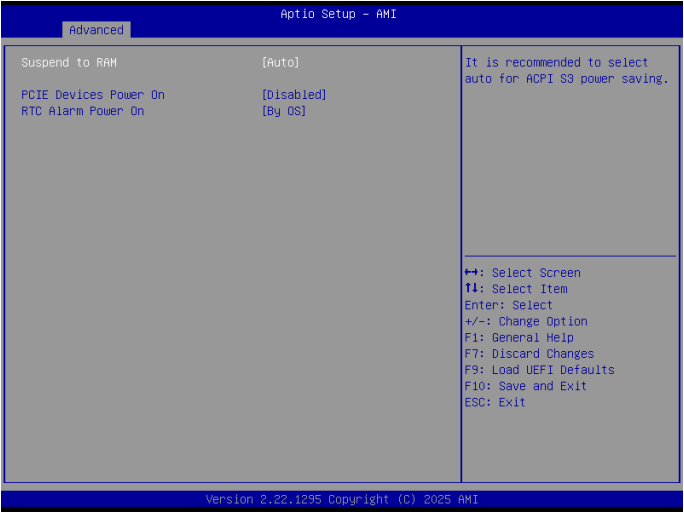

Suspend to RAM

Suspend to RAM allows you to select [Disabled] for ACPI suspend type S1. It is recommended to select [Auto] for ACPI S3 power saving.

Configuration options: [Auto] [Disabled]

PCIE Devices Power On

Use this item to enable or disable PCIE devices to turn on the system from the power-soft-off mode.

RTC Alarm Power On

RTC Alarm Power On allows the system to be waked up by the real time clock alarm. Set it to By OS to let it be handled by your operating system.

Configuration options: [Enabled] [Disabled] [By OS]


3.3.8 USB Configuration



USB Power Control

Use this option to control USB power.

3.3.9 Trusted Computing

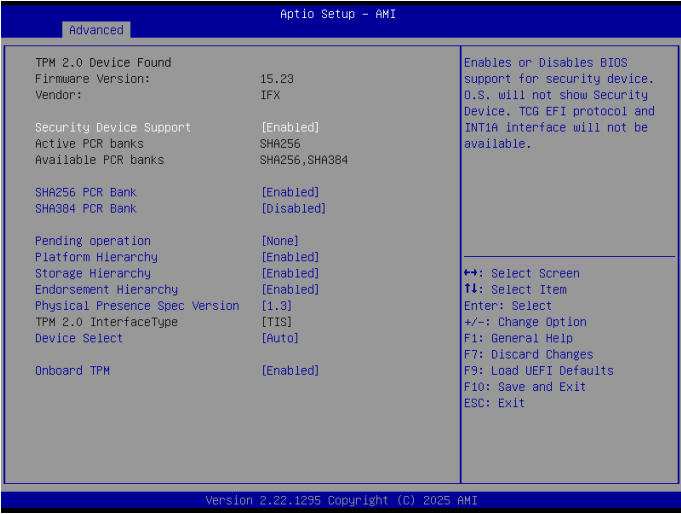

NOTE: Options vary depending on the version of your connected TPM module.

Security Device Support

Security Device Support allows you to enable or disable BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.

Configuration options: [Enabled] [Disabled]

Active PCR banks

This item displays active PCR Banks.

Available PCR Banks

This item displays available PCR Banks.

SHA256 PCR Bank

SHA256 PCR Bank allows you to enable or disable SHA256 PCR Bank.

Configuration options: [Enabled] [Disabled]

SHA384 PCR Bank

SHA384 PCR Bank allows you to enable or disable SHA384 PCR Bank.

Configuration options: [Enabled] [Disabled]

Pending Operation

Pending Operation allows you to schedule an Operation for the Security Device.

NOTE: Your computer will reboot during restart in order to change State of the Device.

Configuration options: [None] [TPM Clear]

Platform Hierarchy

This item allows you to enable or disable Platform Hierarchy.

Configuration options: [Enabled] [Disabled]

Storage Hierarchy

This item allows you to enable or disable Storage Hierarchy.

Configuration options: [Enabled] [Disabled]

Endorsement Hierarchy

This item allows you to enable or disable Endorsement Hierarchy.

Configuration options: [Enabled] [Disabled]

Physical Presence Spec Version

Select this item to tell OS to support PPI spec version 1.2 or 1.3. Please note that some HCK tests might not support version 1.3.

Configuration options: [1.2] [1.3]

TPM 2.0 InterfaceType

This item allows you to view the Communication Interface to TPM 2.0 Device: CRB or ITS.

Device Select

This item allows you to select the TPM device to be supported.

[TPM 1.2] restricts support to TPM 1.2 devices.

[TPM 2.0] restricts support to TPM 2.0 devices.


[Auto] supports both TPM 1.2 and TPM 2.0 devices with the default set to TPM 2.0 devices. If TPM 2.0 devices are not found, TPM 1.2 devices will be enumerated.

Onboard TPM

Enable/disable Intel PTT in ME. Disable this option to use discrete TPM Module.

3.4 Hardware Health Event Monitoring Screen

This section allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed and the critical voltage.

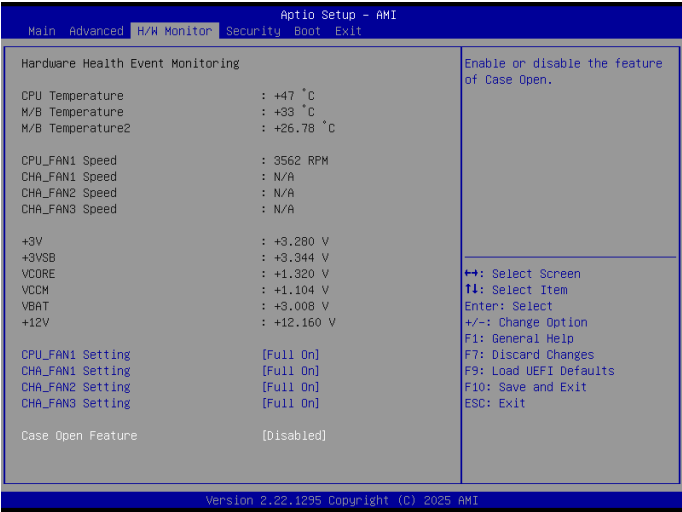

NOTE: Options vary depending on the features of your motherboard.

CPU_Fan 1 Setting

This item allows you to select a fan mode for CPU Fan 1. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 1 Setting

This allows you to set chassis fan 1's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 2 Setting

This allows you to set chassis fan 2's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

CHA_Fan 3 Setting

This allows you to set chassis fan 3's speed. The default value is [Full On].

Configuration options: [Full On] [Automatic Mode]

Case Open Feature


This item allows you to enable or disable case open detection feature. The default is value [Disabled].

Clear Status

This option appears only when the case open has been detected. Use this option to keep or clear the record of previous chassis intrusion status.

3.5 Security Screen

In this section you may set or change the supervisor/user password for the system. You may also clear the user password.

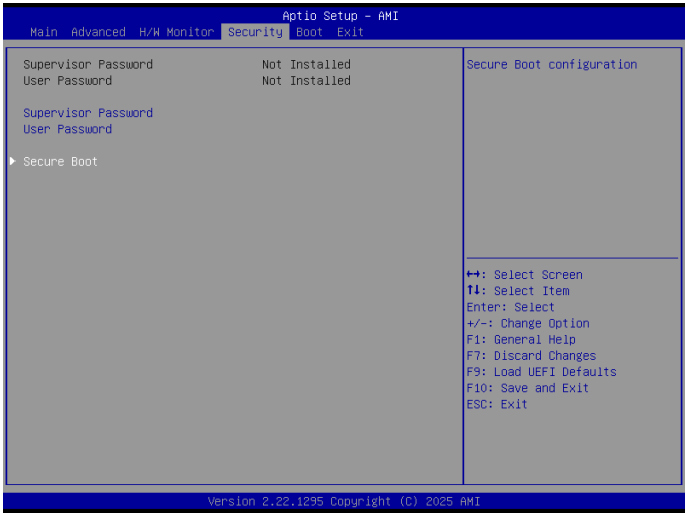

Supervisor Password

Set or change the password for the administrator account. Only the administrator has authority to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

User Password


Set or change the password for the user account. Users are unable to change the settings in the UEFI Setup Utility. Leave it blank and press enter to remove the password.

Secure Boot

Press [Enter] to configure the Secure Boot Settings. The feature protects the system from unauthorized access and malwares during POST.

3.6 Boot Screen

This section displays the available devices on your system for you to configure the boot settings and the boot priority.

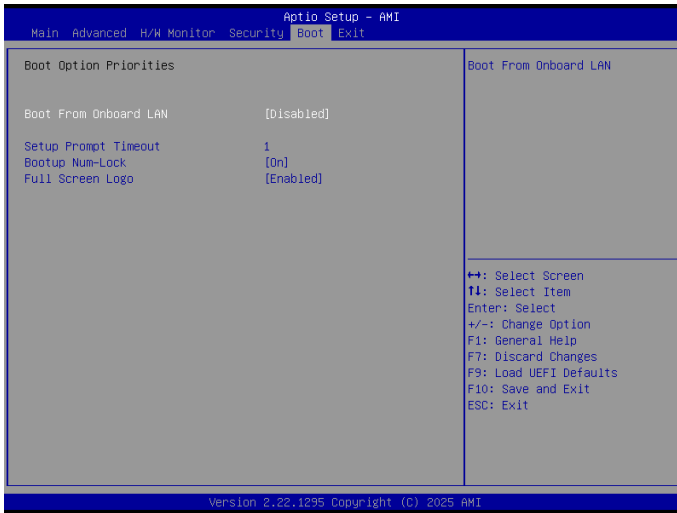

Boot From Onboard LAN

The item allows the system to be waked up by the onboard LAN.

Configuration options: [Enabled] [Disabled]

Setup Prompt Timeout

The item allows you to configure the number of seconds to wait for the UEFI setup utility.

Configuration options: [1] - [65535]

Bootup Num-Lock

The item allows you to select whether Num Lock should be turned on or off when the system boots up.


Configuration options: [On] [Off]

Full Screen Logo

[Enabled] Select this item to display the boot logo.

[Disabled] Select this item to show normal POST messages.

3.7 Exit Screen

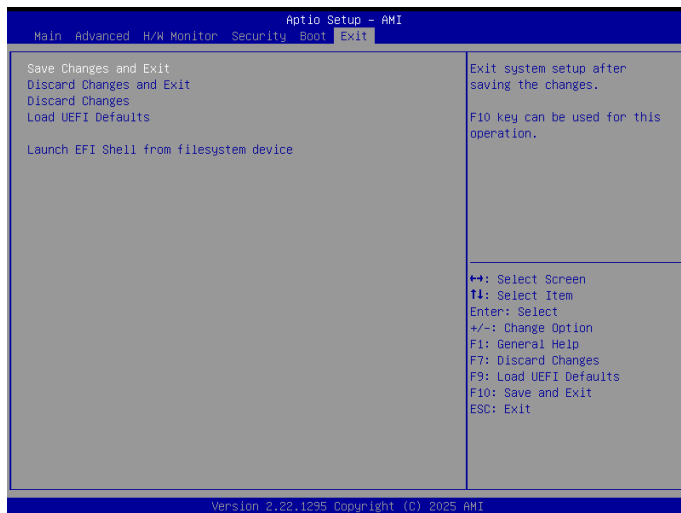

Save Changes and Exit

When you select this option, the following message “Save configuration changes and exit setup?” will pop out. Press <F10> key or select [Yes] to save the changes and exit the UEFI SETUP UTILITY.

Discard Changes and Exit

When you select this option, the following message “Discard changes and exit setup?” will pop out. Press <ESC> key or select [Yes] to exit the UEFI SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, the following message “Discard changes?” will pop out. Press <F7> key or select [Yes] to discard all changes.

Load UEFI Defaults

Allows you to load UEFI default values for all options. The F9 key can be used for this operation.

Launch EFI Shell from filesystem device

The item allows you to copy shellx64.efi to the root directory to launch EFI Shell.