



P/N: 15G065332001AK V1.1

Quick Installation Guide

SP2C741D16-2T

ASRock
Rack
www.asrockrack.com



SP2C741D16-2T

The server board User's Manual is available for download from the ASRock Rack's official website at <http://www.asrockrack.com>.


Take note of the following precautions before you install server board components or change any server board settings.

1. Unplug the power cord from the wall socket before touching any components.
2. To avoid damaging the server board's components due to static electricity, NEVER place your server board directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle the components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded anti-static pad or in the bag that comes with the component.
5. When placing screws into the screw holes to secure the server board to the chassis, please do not over-tighten the screws! Doing so may damage the server board.


1 Install the Server Board

- 1 Insert the server board into the chassis.

- 2 Affix the screws clockwise into the mounting holes in all of the corners of the server board.
Do not over-tighten the screws

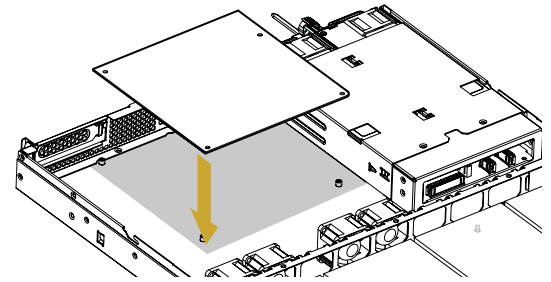


2 Motherboard Layout

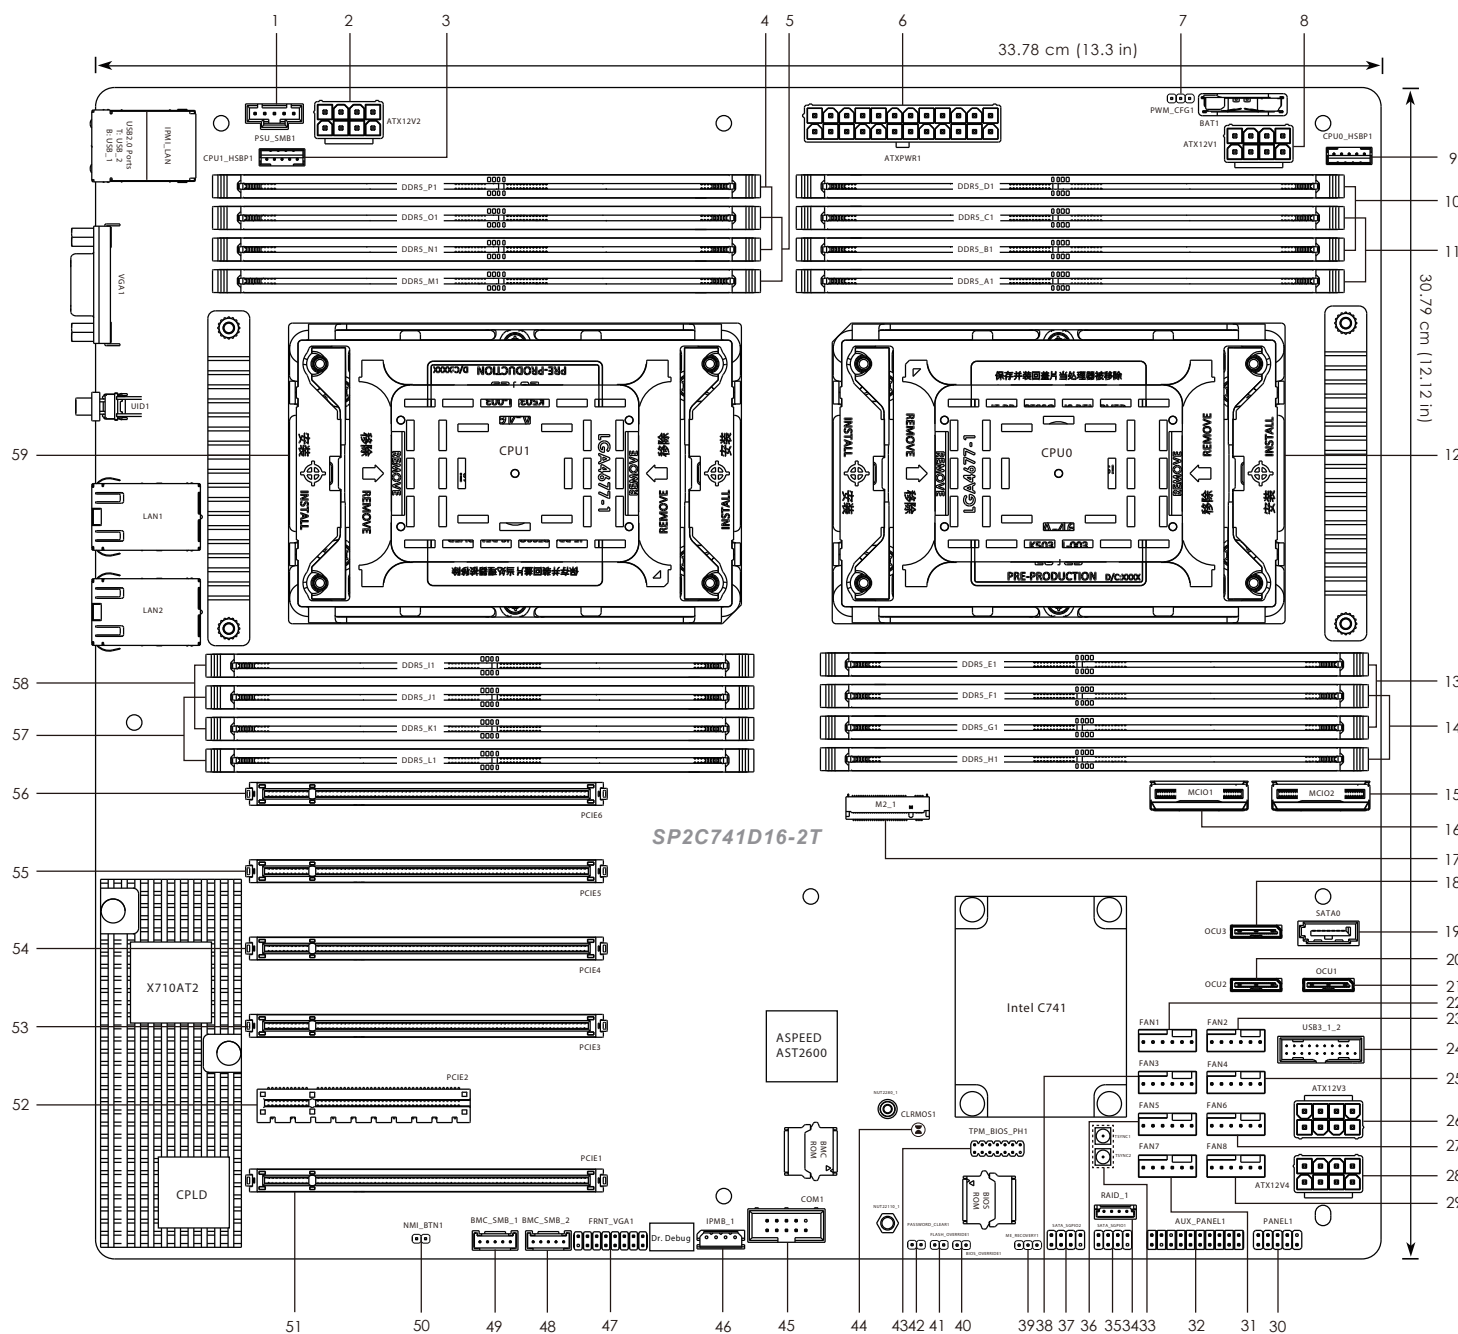

No.	Description
1	PSU SMBus Header (PSU_SMB1)
2	ATX 12V Power Connector (ATX12V2)
3	Backplane PCI Express Hot-Plug Connector (CPU1_HSBP1)
4	2 x 288-pin DDR5 DIMM Slots (DDR5_N1, DDR5_P1)
5	2 x 288-pin DDR5 DIMM Slots (DDR5_M1, DDR5_O1)
6	ATX Power Connector (ATXPWR1)
7	PWM Configuration Header (PWM_CFG1)
8	ATX 12V Power Connector (ATX12V1)
9	Backplane PCI Express Hot-Plug Connector (CPU0_HSBP1)
10	2 x 288-pin DDR5 DIMM Slots (DDR5_B1, DDR5_D1)
11	2 x 288-pin DDR5 DIMM Slots (DDR5_A1, DDR5_C1)
12	LGA 4677 CPU Socket (CPU0)
13	2 x 288-pin DDR5 DIMM Slots (DDR5_E1, DDR5_G1)
14	2 x 288-pin DDR5 DIMM Slots (DDR5_F1, DDR5_H1)
15	Mini Cool Edge IO Connector (MCIO2)
16	Mini Cool Edge IO Connector (MCIO1)
17	M-key M.2 Socket (M2_1) (Type 2280/22110)
18	OCuLink Connector (4 SATA 6Gb/s) (OCU3)
19	SATA Connector (SATA0)
20	OCuLink Connector (4 SATA 6Gb/s) (OCU2)
21	OCuLink Connector (4 SATA 6Gb/s) (OCU1)
22	System Fan Connector (FAN1)
23	System Fan Connector (FAN2)
24	USB 3.2 Gen1 Header (USB3_1_2)
25	System Fan Connector (FAN4)
26	ATX 12V Power Connector (ATX12V3)
27	System Fan Connector (FAN6)
28	ATX 12V Power Connector (ATX12V4)
29	System Fan Connector (FAN8)
30	System Panel Header (PANEL1)
31	System Fan Connector (FAN7)
32	Auxiliary Panel Header (AUX_PANEL1)
33	TGPIO Headers (TSYNC1, TSYNC2)
34	Virtual RAID On CPU Header (RAID_1)
35	SATA SGPIO Connector (SATA_SGPIO1)
36	System Fan Connector (FAN5)
37	SATA SGPIO Connector (SATA_SGPIO2)
38	System Fan Connector (FAN3)
39	ME Recovery Jumper (ME_RECOVERY1)
40	BIOS Swap Override Jumper (BIOS_OVERRIDE1)
41	Flash Override Jumper (FLASH_OVERRIDE1)
42	Password Reset Jumper (PASSWORD_CLEAR1)
43	TPM-SPI Header (TPM_BIOS_PH1)

3 I/O Panel

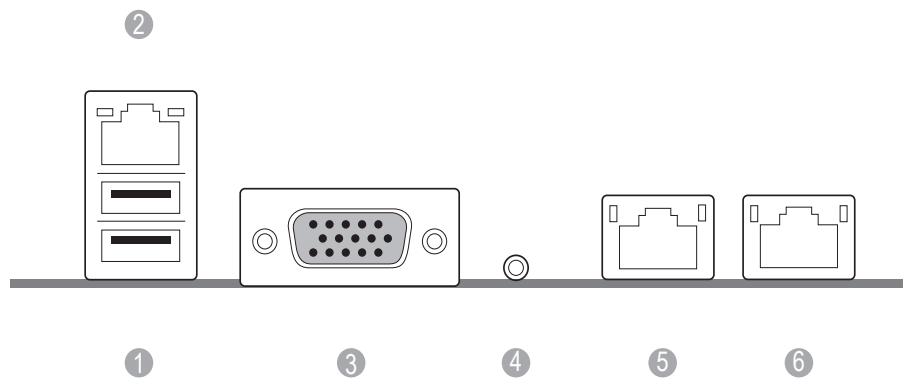


No.	Description	No.	Description
1	USB 2.0 Ports (USB_1_2)	4	UID Switch (UID1)
2	LAN RJ-45 Port (IPMI_LAN)	5	10G LAN RJ-45 Port (LAN1, shared NIC)
3	VGA Port (VGA1)	6	10G LAN RJ-45 Port (LAN2)

No.	Description
44	Clear CMOS Pad (CLRMOS1)
45	COM Header (COM1)
46	Intelligent Platform Management Bus Header (IPMB_1)
47	Front VGA Header (FRNT_VGA1)
48	BMC SMBus Header (BMC_SMB_2)
49	BMC SMBus Header (BMC_SMB_1)
50	Non Maskable Interrupt Button (NMI_BTN1)
51	PCI Express 5.0 x16 Slot (PCIE1)
52	PCI Express 5.0 x8 Slot (PCIE2)
53	PCI Express 5.0 x16 Slot (PCIE3)
54	PCI Express 5.0 x16 Slot (PCIE4)
55	PCI Express 5.0 x16 Slot (PCIE5)
56	PCI Express 5.0 x16 Slot (PCIE6)
57	2 x 288-pin DDR5 DIMM Slots (DDR5_J1, DDR5_L1)
58	2 x 288-pin DDR5 DIMM Slots (DDR5_I1, DDR5_K1)
59	LGA 4677 CPU Socket (CPU1)




4 Install the Processor and Heatsink


Remove the CPU socket cover and open the socket lever.

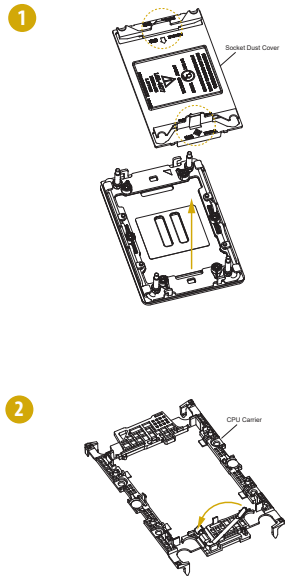


Align and install the processor on the carrier and make sure the arrow is located in the correct direction. Close the socket lever.

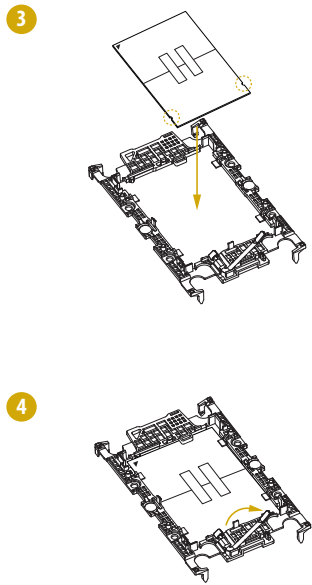


Carefully flip the carrier assembly. Apply a thermal paste.

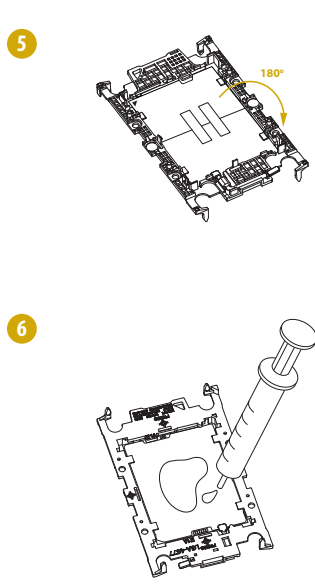

Install the heatsink to the CPU carrier.
Then install the heatsink and CPU carrier
to the socket.

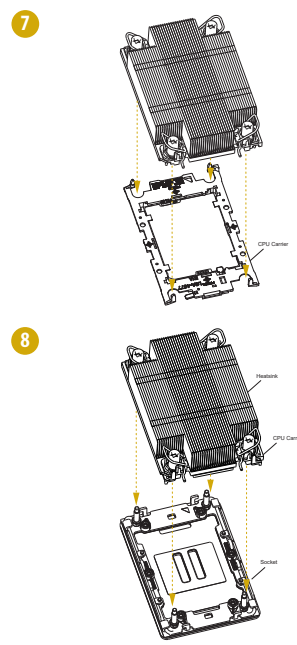


Tighten the corner fasteners. Secure the heastink to the motherboard with a screwdriver.

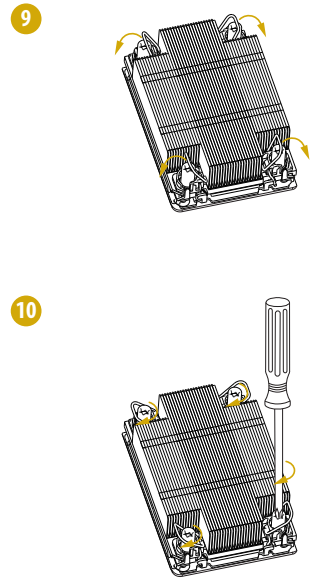

We recommend using the CPU Installation tool to avoid CPU pin-bent problem.


5 LAN Port LED Indications

IPMI LAN Port

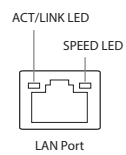

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	10Mbps connection or no link
Blinking Yellow	Data Activity	Yellow	100Mbps connection
On	Link	Green	1Gbps connection


10G LAN Port

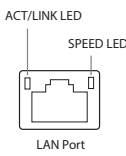

Activity / Link LED		Speed LED	
Status	Description	Status	Description
Off	No Link	Off	100Mbps connection or no link
Blinking Yellow	Data Activity	Orange	1Gbps connection
On	Link	Green	10Gbps connection


7 Install the PCIE Card

- 1 Remove the bracket facing the slot that intending to use. Keep the screw for later use.
- 2 Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- 3 Fasten the card to the chassis with the screw.

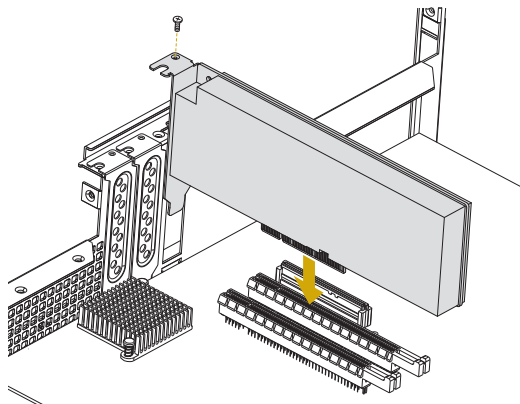

**Image shown is for illustrative purpose only and may differ depending on model.*

8 Jumper Settings

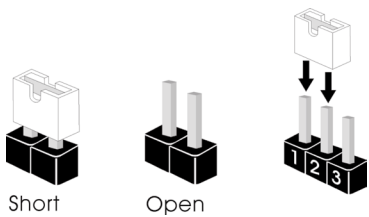


When the jumper cap is placed on the pins, the jumper is “Short”. If no jumper cap is placed on the pins, the jumper is “Open”.


The illustration shows a 3-pin jumper whose pin1 and pin2 are “Short” when a jumper cap is placed on these 2 pins.

9 Headers


System Panel

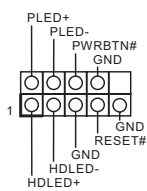

Auxiliary Panel

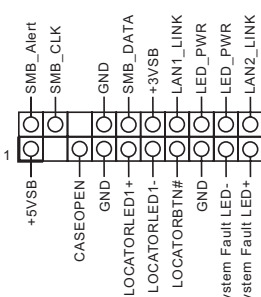

SPI TPM Header

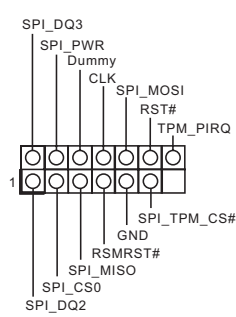

10 Install the Memory

- 1 Unlock a DIMM slot by pressing the module clips outward.
- 2 Insert the memory module.
- 3 Lock the clips.

